


Modicon 484 Programmable Controller Maintenance Manual

ML-C484-MTN Rev B

AEG

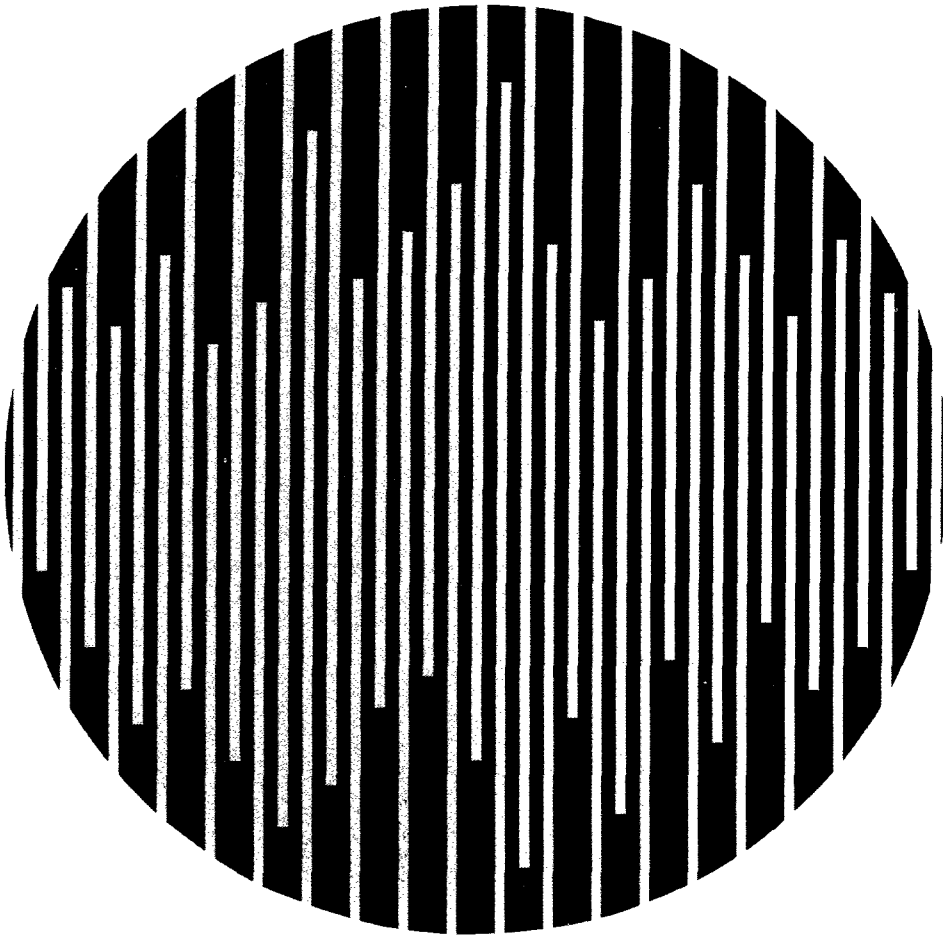

MODICON



TABLE OF CONTENTS

SECTION I - 484 GENERAL INFORMATION		Page
1.0	Introduction.....	I-1
1.1	General System Definition.....	I-1
1.2	Components: System Description.....	I-3
1.2.1	Processor.....	I-4
1.2.2	Power Supply.....	I-5
1.2.3	Input/Output I/O Section.....	I-5
1.2.4	CRT Programming Panel.....	I-6
1.2.5	Peripherals.....	I-6
1.3	Summary.....	I-7
 SECTION II - INSTALLATION		
2.0	Introduction.....	II-1
2.1	System Configuration.....	II-1
2.1.1	Mainframe Code.....	II-1
2.1.2	Hardware Configuration.....	II-1
2.1.3	Processor/Power Supply.....	II-2
	o LED Indicators.....	II-4
	o Memory Protect.....	II-5
	o Interface Connector.....	II-5
	o AC Power Connections.....	II-6
2.1.4	Input/Output (I/O) Channels.....	II-6
2.1.5	Input/Output (I/O) Bus Connector Cable.....	II-7
2.1.6	I/O Module Fuses and Bus Connections.....	II-9
2.1.7	I/O Addressing.....	II-10
2.1.8	I/O Field Wiring.....	II-11
2.2	System Installation.....	II-12
2.2.1	Mounting Procedures.....	II-14
 SECTION III - OPERATION		
3.0	Introduction.....	III-1
3.1	Important Machine Concepts.....	III-2
3.1.1	Programming Format.....	III-2
3.1.2	Controller Reference Numbers.....	III-5
3.1.3	Scan.....	III-5
3.1.4	Memory Protect.....	III-6
3.1.5	Disable/Enable.....	III-6

TABLE OF CONTENTS (Continued)

	Page
3.2	Basic Programming..... III- 8
3.2.1	Relays..... III- 8
3.2.2	Latches..... III-11
3.2.3	Extended Logic..... III-11
3.2.4	Timers..... III-12
3.2.5	Counters..... III-14
3.2.6	Cascaded Counters/Timers..... III-14
3.2.7	Arithmetic Operations..... III-15
3.2.8	Register I/O..... III-17
3.2.9	Transitional Contacts..... III-17
3.2.10	Sequencers..... III-18
3.2.11	BCD Convert..... III-19
3.2.12	Enhanced II Instruction Set Option..... III-19
3.2.13	Binary Convert..... III-19
3.2.14	Move Function..... III-20
3.2.15	Table-to-Register Move (T→R)..... III-21
3.2.16	Skip..... III-21
3.2.17	By-Pass I/O..... III-21
3.2.18	MODBUS Communication Capability..... III-22
3.3	Use of Pl80 CRT Programming Panel.... III-22
3.3.1	Introduction..... III-22
3.3.2	CRT Display..... III-24
3.4	Programming Instructions..... III-26
3.4.1	Network Controls..... III-26
3.4.2	Relay Contact Controls..... III-28
3.4.3	Numerical Entry..... III-28
3.4.4	Entry Controls..... III-29
3.5	Use of Model Tl58 Telephone Interface..... III-32
3.5.1	Description..... III-32
3.5.2	Operating Procedure..... III-33
3.6	Model L206 Program Tape Loader..... III-34
3.6.1	Description..... III-35
3.6.2	Specifications..... III-35
3.6.3	Controls and Indicators..... III-36
3.6.4	Operating Procedures..... III-37
3.6.5	Functional Description..... III-40

TABLE OF CONTENTS (Continued)

	Page	
3.7	J474 Communication Interface -	
	MODBUS.....	III-40
3.7.1	Description.....	III-40
3.7.2	Installation.....	III-42
3.7.3	Specification.....	III-42
3.7.4	Indicators.....	III-42
3.7.5	Connections.....	III-43
3.7.6	Self-Test.....	III-46

SECTION IV - TROUBLESHOOTING

4.0	Introduction.....	IV-1
4.1	Indicator Lights.....	IV-1
	4.1.1 Power Supply.....	IV-2
	4.1.2 Processor.....	IV-4
	4.1.3 Input/Output Section.....	IV-7
4.2	Fault Isolation Flow Charts.....	IV-10
4.3	Pl80 Error Messages.....	IV-16
	4.3.1 484 Error Code.....	IV-16
	4.3.2 Error Messages.....	IV-17

SECTION V - SERVICE CENTER

5.0	Introduction.....	V- 1
5.1	Forms.....	V- 1

SECTION VI - 500 SERIES I/O DEVICES

6.0	Introduction.....	VI- 1
6.1	Discrete I/O System.....	VI- 4
	6.1.1 Modules.....	VI- 4
6.2	Register I/O Descriptions.....	VI-26

SECTION VII - J470 ADAPTER

7.0	Introduction.....	VII-1
-----	-------------------	-------

TABLE OF CONTENTS (Continued)

	Page
SECTION VIII - J471 I/O EXPANDER	
8.0	Introduction.....VIII-1
8.1	Connections and Mounting.....VIII-1
8.2	Dimensions.....VIII-1
8.3	Electrical Characteristics.....VIII-1
8.4	Indicators.....VIII-2
8.5	Addressing.....VIII-2
APPENDIX A - EXTERNAL CABLES..... A-1	
GLOSSARY OF TERMS G-1	

LIST OF ILLUSTRATIONS

Figure	Title	Page
I-1	484 Controller System.....	I- 3
I-2	Basic Block Diagram.....	I- 3
I-3	484 Components.....	I- 4
I-4	Pl80 CRT Programming Panel.....	I- 6
II-1	Typical System Layout.....	II- 2
II-2	Half-Housing-Configuration.....	II- 3
II-3	Mainframe Controls and Indicators.....	II- 5
II-4	Mainframe AC Power Connections.....	II- 5
II-5	Typical 484 with Single I/O Channel.....	II- 7
II-6	Processor I/O Connection Options.....	II- 8
II-7	Typical I/O Module.....	II- 8
II-8	Input/Output Module Indicators.....	II- 9
II-9	Input/Output Bus Connections.....	II- 9
II-10	Address Selecting of I/O Housings.....	II-10
II-11	Field Wiring in I/O Housing Conduit.....	II-11
II-12	Installation of I/O Housing into I/O Duct.....	II-14
II-13	Processor-Internal Components.....	II-16
II-14	Processor with Memory Module Removed.....	II-17
II-15	Installation of I/O Modules.....	II-18
II-16	Installation of I/O Module Labels.....	II-19
III-1	Relay Contact Types.....	III- 1
III-2	Mainframe Block Diagram.....	III- 2
III-3	Multi-Node Program Format.....	III- 3
III-4	Relay Contacts with and without Verticals.....	III- 9
III-5	Relay Logic Example.....	III- 9
III-6	Assumed I/O Wiring Logic in Figure III-5.....	III-10
III-7	484 Program Equivalent to Assumed I/O Wiring in Figure III-6.....	III-10
III-8	484 Latched Coil Program.....	III-11
III-9	484 Extended Logic Program.....	III-12
III-10	Timer Format.....	III-12
III-11	Sample Timer/Counter Cascaded Logic.....	III-14
III-12	General Format for Arithmetic Option.....	III-15
III-13	Transitional Contacts.....	III-17
III-14	Twelve-Step Sequencer and Equivalent Circuit.....	III-18
III-15	Move Format.....	III-20
III-16	Pl80 CRT Programming Panel.....	III-22
III-17	Pl80 Keyboard.....	III-23
III-18	General CRT Screen Format.....	III-24
III-19	Typical Programmed Networks.....	III-25
III-20	Tl58 Telephone Interface.....	III-32
III-21	Controls on Telephone Interface.....	III-33
III-22	L206 Tape Loader.....	III-34
III-23	Controls and Indicators.....	III-36
III-24	J474 Interface.....	III-41
III-25	Typical J474 Connections.....	III-44

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page
IV-1	Indicators on Mainframe.....	IV- 2
IV-2	Power Supply - Location of Fuses.....	IV- 3
IV-3	Memory Module with Batteries.....	IV- 5
IV-4	Wiring of Batteries.....	IV- 6
IV-5	J471 Expander Installation.....	IV- 9
IV-6	DC Power Lamp Fault Isolations Flowchart.....	IV-11
IV-7	BATT OK Lamp Fault Isolation Flowchart.....	IV-12
IV-8	RUN Lamp Fault Isolation Flowchart.....	IV-13
IV-9	RUN Lamp Fault Isolation Flowchart (Continuation of A from IV-8).....	IV-14
IV-10	I/O Section Fault Isolation Flowchart.....	IV-15
VI-1	B550 115 VAC Output Module Simplified Schematic.....	VI- 5
VI-2	B550 115 VAC Output Module Terminal Numbering and Connections.....	VI- 6
VI-3	B551 115 VAC Input Module Simplified Schematic.....	VI- 7
VI-4	B551 115 VAC Input Module Terminal Numbering and Connections.....	VI- 8
VI-5	B552 Universal DC Output Module (True High) Simplified Schematic.....	VI- 9
VI-6	B552 Universal DC Output Module (True High) Terminal Numbering and Connections.....	VI-10
VI-7	B553 Universal DC Input Module (True High) Simplified Schematic.....	VI-11
VI-8	B553 Universal DC Input Module (True High) Terminal Numbering and Connections.....	VI-12
VI-9	B554 220 VAC Output Module Simplified Schematic.....	VI-13
VI-10	B554 220 VAC Output Module Terminal Numbering and Connections.....	VI-14
VI-11	B555 220 VAC Input Module Simplified Schematic.....	VI-15
VI-12	B555 220 VAC Input Module Terminal Numbering and Connections.....	VI-15
VI-13	B556 VDC TTL Output Module Simplified Schematic.....	VI-16
VI-14	B556 VDC TTL Output Module Terminal Numbering and Connections.....	VI-16
VI-15	B557 VDC TTL Input Module Simplified Schematic.....	VI-18
VI-16	B557 VDC TTL Input Module Terminal Numbering and Connections.....	VI-19
VI-17	B558 Universal DC Output Module (True Low) Simplified Schematic.....	VI-21

LIST OF ILLUSTRATIONS (Continued)

Figure	Title	Page
VI-18	B558 Universal DC Output Module (True Low) Terminal Numbering and Connections.....	VI-21
VI-19	B559 Universal DC Input Module (True Low) Simplified Schematic.....	VI-23
VI-20	B559 Universal DC Input Module (True Low) Terminal Numbering and Connections.....	VI-23
VI-21	B577 Analog Input Module Typical Connections.....	VI-25
VII-1	J470 Adapter.....	VII-1
VII-2	Option Selector on J470 Adapter.....	VII-2
VII-3	J470 Block Diagram, External Connections.....	VII-3
VIII-1	J471 Block Diagram.....	VIII-4
VIII-2	J471 Mounting.....	VIII-4
VIII-3	J471 Installation.....	VIII-5
VIII-4	J471 Configuration.....	VIII-6

LIST OF TABLES

Table	Title	Page
I-1	Basic 484 Controller Specifications.....	I-2
II-1	C484 Mainframe Code.....	II-1
II-2	Summary of Required AC Power.....	II-4
II-3	C484 Controller Installation Specifications.....	II-13
II-4	I/O Module Colors.....	II-20
III-1	I/O Reference Configuration.....	III-4
III-2	484 Memory Configuration.....	III-6
III-3	J474 Functions.....	III-44
VI-1	Signal Conditioning Module Options.....	VI-3
VI-2	Input/Output Module Terminal Assignments.....	VI-3
VII-1	Setting of J470 Adapter Option Swps.....	VII-2
VIII-1	Address Listings.....	VIII-3