SpaceLogic Room Controllers

SE8000 Samsung SmartThings App Integration Guide Connecting the Room Controller to the

Samsung SmartThings App





Table of Contents

Introduction	3
Samsung SmartThings App	
Samsung SmartThings Hub	
SmartThings Groovy IDE	
Room Controllers	3
Step 1: SmartThings Hub Installation	4
Step 2: Adding the Room Controller to the Network	5
Get your Hub's ZigBee Network Information	5
Adding the Room Controller to the Hub	7
Step 3: Using the SmartThings Apps	9
SmartThings Classic App	9
SmartThings App	11
SmartThings App Automation and Notifications	12

Introduction

This integration guide is applicable to the Room Controllers that follow:

- SE8350 Low Voltage (24VAC) Fan Coil Unit (FCU) and Zone Control.
- SER8350 Line Voltage Fan Coil Unit (FCU).
- SE8650 Rooftop Unit (RTU), Heat Pump and Indoor Air Quality (IAQ).

Samsung SmartThings App

SmartThings is a smart home ecosystem of hubs and products developed by Samsung and other third parties.

With SmartThings, you can connect and control multiple devices quicker and easier. From your smartphone, you can monitor, control and automate your SmartThings compatible devices. To get started, simply purchase the SmartThings Hub, download the free SmartThings app, then add your connected devices.

There are two apps, the new "SmartThings" app, and the older "SmartThings Classic" app. You can use both to see which one you prefer. However, if you are a new user of SmartThings, it is recommended to start with the "SmartThings" app instead of the "SmartThings Classic" app.

Key features:

- From your smartphone, control and check the status of devices registered through a SmartThings Hub.
- Group multiple devices into a Mode and operate them simultaneously.
- Configure the settings of devices, including the time and operating conditions, and operate them automatically.
- Invite other users so they can view and operate the device.
- The notification feature allows you to receive status information about your device.
- · Receive alerts from connected devices when there's unexpected activity.
- Integrates with IFTTT (If This Then That) easily for total home control.

Note: The SmartThings app, the Samsung account and their related services are owned by SmartThings, Inc. and Samsung Electronics Co., Ltd. respectively. Their products and services may change over time and may differ from the contents of this document. For more information go to <u>www.smartthings.com</u>.

Samsung SmartThings Hub

While the SmartThings App is compatible with various Wi-Fi products, adding the SmartThings Hub allows you to control ZigBee and Z-Wave products. The SmartThings Hub requires the free SmartThings app for Android or iPhone.

Key features:

- Compatible across a wide range of devices and brands, eliminating the need to buy multiple hubs.
- Wireless connection to your internet router's Wi-Fi network, using the Samsung cloud to communicate between the SmartThings app and the Hub.
- · Connect to a wide range of wireless smart devices and make them work together.
- Control connected devices in your home with voice commands using SmartThings and Amazon Alexa or Google Home.
- Protocols: ZigBee, ZigBee 3.0, Z-Wave, Cloud-to-Cloud, LAN and Wi-Fi.

SmartThings Groovy IDE

The SmartThings Groovy IDE (Integrated Development Environment) allows you to integrate devices directly with the SmartThings Hub using ZigBee, Z-Wave, or LAN/HTTP protocols. The SmartThings Hub ZigBee settings are located in the Groovy IDE website, accessed preferably using a PC/laptop. A Samsung account is required to login to the IDE website located at https://graph.api.smartthings.com.

Room Controllers

The Room Controller is connected to the Samsung SmartThings Hub using the ZigBee wireless protocol. The Room Controller's ZigBee Network settings must be configured with the Hub's ZigBee settings (located in the Groovy IDE) before you can connect to the SmartThings app.


Note: For more information go to www.schneider-electric.com/buildings.

Note: The Hub's Pan ID is in hexadecimal format while the Room Controller's Pan ID is in decimal format. Search the internet for a Hexadecimal to Decimal Converter to do the conversion.

Step 1: SmartThings Hub Installation

Note: For more information and instructions to complete the steps below, go to SmartThings Support at <u>https://support.</u> <u>smartthings.com/hc/en-us</u>, scroll down to Additional Support, click on Guide to SmartThings, then click on Setting up an account, the Hub, and Things.

1. Install the SmartThings App onto your smartphone.

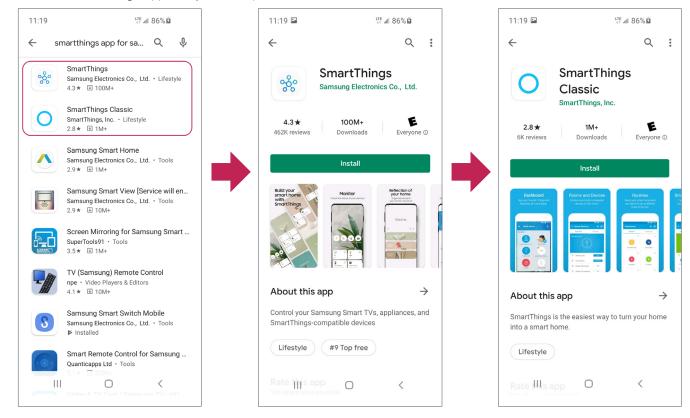

- 2. Sign up for SmartThings in the SmartThings app:
 - SmartThings uses your Samsung account.
 - Sign in if you already have an account, or touch Create account to make one.

Note: Login info for your Samsung Account will be sent by email.

- 3. Set Up a SmartThings Hub:
 - Follow the instructions in SmartThings Support. Go to the link in the note above.

Note: You can change the Wi-Fi network that the SmartThings Hub is connected to in the SmartThings app. You can also connect the Hub via Wi-Fi after setting it up via Ethernet. This will not affect any devices connected to the Hub, and does not require a factory reset.

Step 2: Adding the Room Controller to the Network

Get your Hub's ZigBee Network Information

The Room Controller must be configured manually with the SmartThings Hub ZigBee network Pan ID and Channel, located in the SmartThings Groovy IDE website.

- 1. Go to the SmartThings Groovy IDE website at <u>https://graph.api.smartthings.com</u>, then login with your Samsung account.
- 2. Click on My Locations (sometimes the My Hubs list is empty until you click on My Locations first).
- 3. Click on your Hub's location. Example: My home.

🔁 🖅 💽 Location List	× + ~				– a ×
$\leftarrow \rightarrow$ O \textcircled{a} A https	//graph-na04-useast2.api.smartthing	gs.com/location/list		□ ±	在几份…
My Locations My Hubs	My Devices My SmartAp	ps My Device Handlers My Publication Re	quests Live Logging Doc	umentation Velcome back, ettore.coli	cchio@gmail.com
Locations					New Location
Name	Events	Notifications	Devices	Installed SmartApps	
My home	events	notifications	devices	smartapps	
© 2020 SmartThings, Inc. All right			Benefits	Shop Blog Developers Support Terms of	Use Privacy Policy
🛯 🔎 O H 🖿 🧕 🚺	🔷 🔹 🖀 🛄	83 83 😰 X8 🗎 🧕 🤨 👄 🚸			🖿 🍂 Q0) ENG 3:37 PM

4. Scroll down to Hubs, then click on your SmartThings Hub.

Temperature Scale	С	
Alarm System Status	Disarmed	
Current Mode	Night	
Modes (create new)	- Away	
	Home	
	- Night	
Hubs 🔶	SmartThings Hub (ACTIVE)	
Groups	Main Entrance	
	Dinette - Patio Door	
	Living room	
	Garage	
	Basement	
	Exercise Room	
Devices	List Devices	
Events	List Events	
Notifications	List Notifications	
Installed SmartApps	List SmartApps	
Favorites	List Favorites	
Scenes	List Scenes	

- 5. Scroll down to ZigBee to see your Hub's Channel and Pan ID numbers.
- 6. Convert the Pan ID from hexadecimal to decimal.

« My home Location	
SmartThings Hub	
Name	SmartThings Hub
Hub ID	D052A8B382290001
Status	ACTIVE
Firmware Version	000.029.00008
Hardware Version	
Location	My home
Last Activity At	2020-04-08 7:40 PM UTC
Last Ping From Hub At	2020-04-08T19:40:25.423Z
Date Created	2019-04-13 1:39 AM UTC
Last Updated	2020-03-04 6:38 PM UTC
IP Address	192.168.2.57
MAC Address	28:6D:97:75:2E:A9
Last Booted	2020-04-07 12:32 AM UTC
Battery	On battery power: false
Settings	Presence sensor timeout: 2
ZigBee	 State: Functional Version: 3.0.16 EUI: 2860970002015B97 Channe: 25 Node ID: 0000 Pan ID: 081A OTA: disabled Unsecure Rejoin: true

7. On your Room Controller, go into the hidden configuration menu.



-Touch and hold this point for 3 seconds to enter set-up mode


Note: If a configuration/installer password is activated to prevent unauthorized access to the configuration menu parameters, you will be prompted to enter your password before proceeding.

- 8. Touch Network, then go to the ZigBee Network screen.
- 9. Change the Node type to Router, then change the Channel and PAN ID decimal numbers so that they are the same as the Hub's numbers.


1/2 Setup	Netw	ork	1/2 ZigBee No	etwo
etwork	Onboard prot	Zigbee	Node type	Ro
uration	Optional prot	None	PAN ID	55
s	Wired protoco	None	Channel	25
			Security	Lo
N			Network Status	Jo
uts			Permit join	Of
নি	<u>ଜ</u> ଲ୍ (

Adding the Room Controller to the Hub

1. In your SmartThings app, touch +, Add Device, then Scan nearby to detect your Room Controller. **Note**: Make sure the Room Controller is in ZigBee range of the Hub.

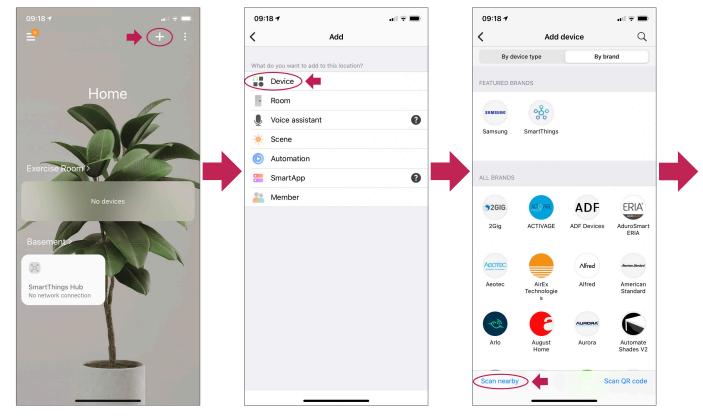

- 2. The scan can take up to a minute. If it fails, just scan again.
- 3. Your Room Controller will be added to your Home screen. Touch < in the top-left corner a few times to return to the Home screen where the Room Controller will appear at the bottom.
- 4. You can move your Room Controller to another location. Example: Living Room.

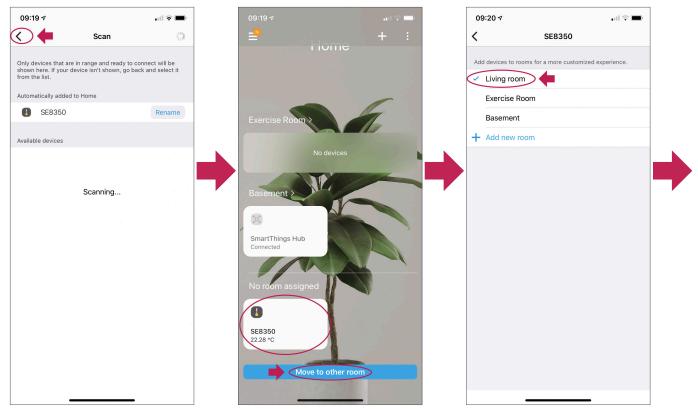

5. On your Home screen, touch your Room Controller to view its user interface.

09:21-7	09:21 7
≞ ⁰ + :	K SE8350 Home - Living room
	Fan speed
Home	Max
Living room	Temperature and humidity III 17.1 °C 71.0 %
Exercise Room >	Set temperature + + Heating temperature 22.28 °C Cooling temperature 23.94 °C -
No devices	Mode
Basement >	Auto 🗢
	State
SmartThings Hub	Heating
Connected	Controls History

6. The Room Controller will show Online in the ZigBee Network status parameter.

1/2 ZigBee Ne	twork
Node type	Router
PAN ID	55322
Channel	25
Security	Low
Network Status	Online
Permit join	Off

Step 3: Using the SmartThings Apps


SmartThings Classic App

Room Controller parameters that are visible and/or configurable on the user interface:

- Room Temperature.
- Relative Humidity.
- System Mode.
- Occupancy Command and Status.
- Occupied and Unoccupied Heating and Cooling Setpoints.

Change the Room Controller system settings by touching the following:

- System Mode button toggles between Off, Auto, Cool and Heat.
- Occupancy Command button toggles between Local occupancy, Occupied and Unoccupied.
- Up/Down arrows adjust the temperature setpoints by 1°F (0.5°C).
- Reload button requests the Hub to poll.
- Configure button requests a poll and binding.
- 1. To add your Room Controller to your Home screen, use the Manage Favorites menu. Tap to add favorites, select your Room Controller, then Save.
- 2. On your Home screen, touch your Room Controller to view its user interface.

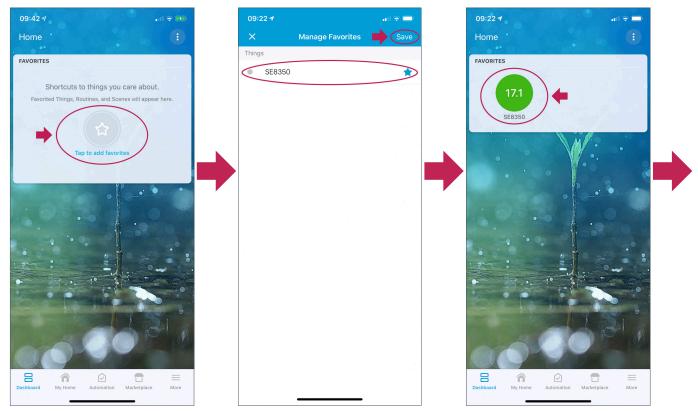



3. The color of the Room Temperature background changes based on effective system mode (heating = orange, cooling = blue, idle = green).



SmartThings App


Room Controller parameters that are visible and/or configurable:

- Fan Speed (SE8350, SER8350).
- Fan Mode (SE8650).
- Room Temperature.
- Relative Humidity.
- Occupied Heating and Cooling Setpoints.
- System Mode.
- Effective System State (Heating, Cooling, Idle).

Change the Room Controller system settings by touching the following:

- System Mode settings button brings up a menu to change between Auto, Cool, Heat and Off.
- Fan Speed slide settings on the SE8350 and SER8350 are as follows:
 - Off and Max set the fan mode to Auto.
 - Low, Medium and High set the fan speeds directly.
 - Fan Mode button settings on the SE8650 selects between On, Auto and Circulate (smart).
- +/- buttons adjust the temperature setpoints by 1°F (1°C).
- 09:27 🗸 09:27 🗸 09:28 1 all 🕆 🔳 ul 🕆 🔳 SE8350 SE8350 SE8350 < < < : ÷ Цc Fan speed Fan speed Fan speed Max Max Max Temperature and humidity Temperature and humidity 16.8 °c 16.8 ∘c 16.8 ∘c 69.0 % 69.0 69.0 % Mode Set temperature Set temperature Auto + + + + Cooling temperature Heating temperature Heating temperature Cooling temperature Heat 19.39 ∘c 17.72 °c 16.3 ∘c 15 11 °c Off _ _ Cance Mode Mode Heat \$ Heat \$ \$ Auto State State Heating Cooling Cooling History Control Controls History Controls
- 1. To change the System Mode, touch the Mode settings button, then select the mode from the list.

2. To change the Fan Mode on the SE8650, touch one of the three Fan Mode buttons at the bottom of the screen.

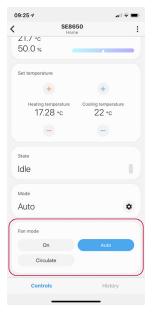

SmartThings App Automation and Notifications

Automations is a fun feature that allows you to create notifications, control other devices and change your home's status (Home, Night, Away) based on different conditions. These conditions include Time events (at 12:00 set Occupancy to Away), Device status (Motion detected in basement), Member location (I am home) and Location (home is set to Away). The format of an automation is IFTTT (If This Then That). Example: If SE8650 temperature is equal to or above 21.0° C, then send a notification to all members.


Setting up an automation in the SmartThings App (Example: When SE8650 is heating, trigger notification):

- 1. Add condition:
 - a. In your SmartThings app, touch + (or touch the menu, then Automations), Add Automation, then Add condition.
 - b. Choose the type of condition that triggers an action. Example: Device status.

Add What do you want to add to this location? Image: Room Image:	What do you want to add to this location? Image: Device Image: Room Image: Voice assistant Image: Scene Image: Scene Image: Automation Image: SmartApp	
Add conditions that will activate this automation. Room Voice assistant Scene Add condition Add condition Scene Add conditions that will activate this automation. Add condition Add condition Member loace opens Conditions that will activate this automation. Add condition Add condition Add condition	Add conditions that will activate this automation. Room Voice assistant Add condition Condent action Add conditions that will activate this automation. Add condition Add condition Example: when the door opens Example: when the door opens Example: when the mode is set to Example: when the mode is set to	
Add conditions that will activate this automation. Room Voice assistant Scene Automation Audaction Add action Add conditions that will activate this automation. Device status Example: when the door opens Member location Example: when the mode is set to Away	Add conditions that will activate this automation. Add conditions that will activate this automation. Add condition Add condition Add condition Add condition Chevice status Example: when the door opens Member location Example: when the atome Example: when the mode is set to Chevice status Example: when the mode is set to Chevice status Example: when the mode is set to Chevice status Chevice status Example: when the mode is set to Chevice status Chevice st	
 koom Voice assistant Scene Automation SmartApp SmartApp 	 koom Voice assistant Scene Automation SmartApp SmartApp 	
Scene Imention Automation Add action SmartApp Imention Imention Add action Imention Imention Imention Imention Imention Select an action from the options below. Imention Imention <td> Scene Automation SmartApp Automation </td> <td>•</td>	 Scene Automation SmartApp Automation 	•
Scene Scene Select an action from the options below. Add action Control Contr	Scene Select an action from the options below. Add action Add action Carton mode Example: when the mode is set to	
Automation Add action SmartApp Image: Add action	Add action Image: SmartApp Add action Image: SmartApp Image: Sm	
		Away
Member	Member	

- c. Select the device. Example: SE8650.
- d. Select the condition. Example: State.
- e. Select the state. Example: Heating.
- f. Touch Save in the top right corner to save the condition.

g. Touch Done to return to the If-Then screen.

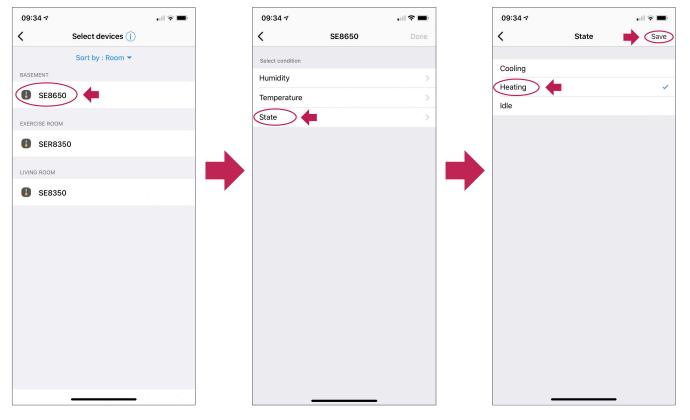

2. Add action:

- a. Touch the Add action button.
- b. Touch Notify someone.
- c. Touch Send notification to members.
- d. Enter a message. Example: SE8650 in heating mode.
- e. Touch Done to return to the If-Then screen.

Cancel Add automation Done Add action (i)
If Notify someone
SE8650 (Basement) State: Heating O Control devices
Change this location's mode
Add condition
Then
Select an action from the options below.

f. Touch Done again, give the Automation a name, then Touch OK. The automation will be saved.

09:36 🕫		.ul 🕈 🔳
Cancel	Add automation	Done
lf		
	50 (Basement) Heating	۲
Add conditic	n	
Then		
	notification to members 50 in heating mode	۲
Add action		5.

g. A notification will be sent when the SE8650 is heating.

Note: There could be a delay of up to 10 minutes due to the Hub's polling.

3. Add Control devices:

The same steps can be repeated to control other devices. Instead of choosing "Notify someone", choose "Control devices".

- a. Touch Control devices.
- b. Select the device. Example: SE8650.
- c. Choose a parameter to control (like Fan Speed or Mode).
- d. Choose the parameter value that triggers the action.

09:35 🕫		uli 🕈 🖿
<	Add action (i)	
- Net	fy someone	
	trol devices	
오 Cha	nge this location's mode	
		1 - N.

Technical Support



For any issues with SmartStruxure Solution or SmartStruxure Lite, contact Schneider Electric Technical Support according to your region.

North America (NAM) Product Support Building Management Systems (BMS): nam.esxp.partner-led@se.com

Global Product Support Building Management Systems (BMS): productsupport.BMS@schneider-electric.com

Schneider Electric CS 30323 F-92506 Rueil-Malmaison Cedex France

Schneider Electric is leading the Digital Transformation of Energy Management and Automation in Homes, Buildings, Data Centers, Infrastructure and Industries.

With global presence in over 100 countries, Schneider is the indisputable leader in Power Management – Medium Voltage, Low Voltage and Secure Power, and in Automation Systems. We provide integrated efficiency solutions, combining energy, automation and software.

In our global Ecosystem, we collaborate with the largest Partner, Integrator and Developer Community on our Open Platform to deliver real-time control and operational efficiency.

We believe that great people and partners make Schneider a great company and that our commitment to Innovation, Diversity and Sustainability ensures that Life Is On everywhere, for everyone and at every moment.

www.schneider-electric.com