




STP120/ STP620

Immersion pipe temperature sensor
Dykrörs temperaturgivare
Einschraubtemperatursensor
Sonde de plonge
Sensor de temperatura entornillado
Sensore temperatura testa DIN



OFL-4352-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

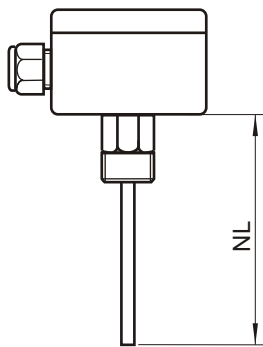


2.

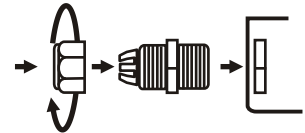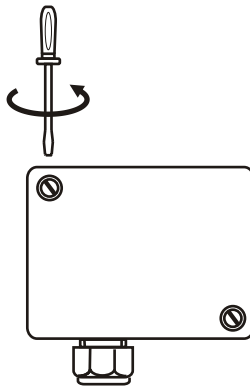

3.

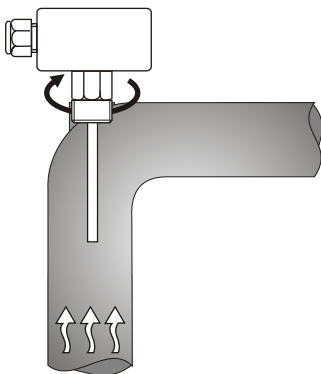

4.

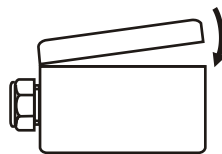

5.

