Depth Adapter for Galaxy PX and Easy UPS 3-Phase Modular (SP3OPT002, SP3OPT003)

Specifications

Depth Adapter Weight and Dimensions

| Commercial reference | Weight kg | Height mm | Width mm | Depth mm |
|----------------------|-----------|-----------|----------|----------|
| SP3OPT002 | 35 | 1991 | 600 | 250 |
| SP3OPT003 | 40 | 1991 | 600 | 350 |

Torque Specifications

| Bolt size | Torque |
|-----------|---------|
| M4 | 1.7 Nm |
| M6 | 5 Nm |
| M8 | 17.5 Nm |
| M10 | 30 Nm |
| M12 | 50 Nm |

Environment

| | Operating | Storage | |
|-------------------|----------------------|-----------------------|--|
| Temperature | 0 °C to 40 °C | -25 °C to 55 °C | |
| Relative humidity | 0-95% non-condensing | 10-80% non-condensing | |
| Protection class | IP20 | | |
| Color | Black | | |

reserved.

 


www.se.com

Install the Depth Adapter with the Easy UPS 3-Phase Modular or the Galaxy PX UPS


1. Remove the rear panel from the UPS.

Rear View



- 2. Option: For easier movement of the depth cabinet, you can remove the front door of the depth adapter.
- 3. Rotate the depth adapter if necessary to make sure the rear side of the depth adapter faces the rear side of the UPS. Align and push the UPS and the depth adapter together UPS in front of the depth adapter.
- 4. Reinstall the front door of the depth adapter, if removed earlier.
- 5. Interconnect the UPS and the depth adapter with eight screws in the left and right side.

Rear View

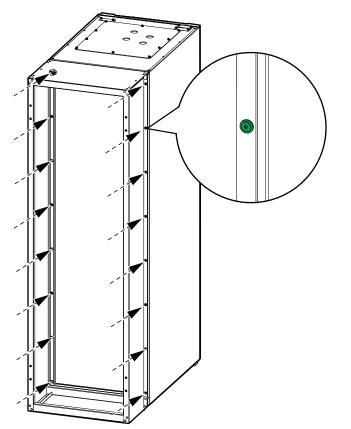

- 6. Push the UPS with depth adapter into final position.
- 7. Lower the front and rear leveling feet on the UPS and on the depth adapter with a wrench until they connect with the floor. The casters must not have contact with the floor. Use a bubble-leveler to check that the UPS is level.
- 8. Follow the UPS installation manual to complete the installation.