



Basic / Intermediate / Expert

# Alexa Voice control

## In Wiser for KNX (W4K)

### Application note

LSS100100

11/2020



# Legal Information

The Schneider Electric brand and any registered trademarks of Schneider Electric Industries SAS referred to in this guide are the sole property of Schneider Electric SA and its subsidiaries. They may not be used for any purpose without the owner's permission, given in writing. This guide and its content are protected, within the meaning of the French intellectual property code (Code de la propriété intellectuelle français, referred to hereafter as "the Code"), under the laws of copyright covering texts, drawings and models, as well as by trademark law. You agree not to reproduce, other than for your own personal, noncommercial use as defined in the Code, all or part of this guide on any medium whatsoever without Schneider Electric's permission, given in writing. You also agree not to establish any hypertext links to this guide or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the guide or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.

## Trademarks

- Microsoft Windows®, Windows 7®, Windows 10® and Internet Explorer® are trademarks or registered trademarks of the Microsoft Corporation in the USA and/or other countries.
- iTunes™ is a registered or unregistered trademark of the Apple Inc. in the USA and/or other countries.
- Google Chrome™, Google Play™, Google Maps™ and YouTube™ are trademarks or registered or unregistered trademarks of the Google Inc. in the USA and/or other countries.
- Firefox® is a trademark or registered trademark of the Mozilla Corporation in the USA and/or other countries.

# Important Safety Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

## **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

## **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

## **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

## **NOTICE**

NOTICE is used to address practices not related to physical injury.

## Further information



The information provided must be complied with, otherwise program or data errors may occur.



You will find additional information here to make your work easier

---

# Table of Contents


1	Introduction .....	7
1.1	Preconditions .....	7
2	Voice control configuration.....	7
2.1	Registration of a new W4K remote app account .....	7
3	Cloud connector, IoT T3 API and Touch 3 installation .....	8
3.1	Check Cloud connector connection and enable IoT T3 API .....	8
4	Amazon configuration .....	9
4.1	Amazon Alexa account registration .....	9
4.2	Enable Alexa Skill .....	9
5	Touch 3 .....	10
5.1	Widgets compatible with Voice Control.....	10
5.2	Enabling Voice control in the Widgets .....	10
6	Alexa Voice Control application .....	12
6.1	Wiser for KNX Skill .....	12
6.2	Devices discovery process .....	12
6.3	Widgets control through Voice commands .....	13
6.3.1	Switches (Light switch, General switch, AC switch, Fan switch, Socket switch) .....	13
6.3.2	Dimmers (Horizontal dimmer, Vertical dimmer, Rotary dimmer).....	13
6.3.3	Shutter (Horizontal shutter, Vertical shutter, Rotary shutter).....	14
6.3.4	Scene.....	14
6.4	Troubleshooting: .....	14

## Please note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

## Safety Precautions

 <b>WARNING</b>
<p><b>HAZARD OF INCORRECT INFORMATION</b></p> <ul style="list-style-type: none"><li>• Do not incorrectly configure the software, as this can lead to incorrect reports and/or data results.</li><li>• Do not base your maintenance or service actions solely on messages and information displayed by the software.</li><li>• Do not rely solely on software messages and reports to determine if the system is functioning correctly or meeting all applicable standards and requirements.</li><li>• Consider the implications of unanticipated transmission delays or failures of communications links.</li></ul> <p><b>Failure to follow these instructions can result in death, serious injury, or equipment damage.</b></p>



**Attention** - the information provided must be complied with, otherwise program or data errors may occur.



**Note** - You will find additional information here to make your work easier.

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information that is contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2020 Schneider Electric. All rights reserved

# 1 Introduction

This application note describes Alexa voice control setup to be used by end users.

## 1.1 Preconditions


- Wiser for KNX remote app account - If you have not account yet, follow steps in chapter 2.
- Wiser for KNX controller with Touch3 application (Widget based visualization)
- Alexa mobile application or Alexa Echo device, speaker (optional)

# 2 Voice control configuration

If you already have Wiser for KNX registered with your email address (for Wiser for KNX remote APP) you can skip registration part in chapter 2.1.

## 2.1 Registration of a new W4K remote app account

- Download Wiser for KNX remote app from the Google Play or Apple App Store

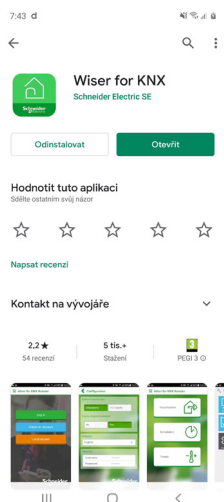


### 3 Cloud connector, IoT T3 API and Touch 3 installation


- Access the Marketplace in the Wiser for KNX controller and install the latest versions of the “**Cloud connector app**”, “**IoT T3 API**” app and “**Touch 3**”



Note: We recommend to back-up your current **Touch 3** project

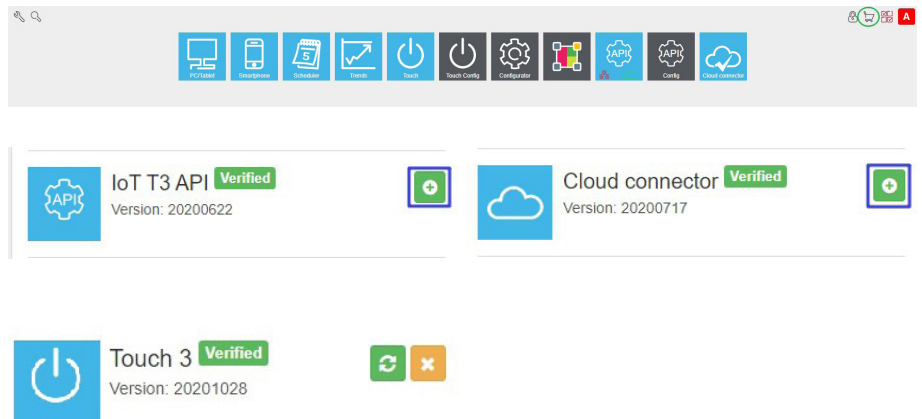


- Downloaded applications are available on start page of the controller

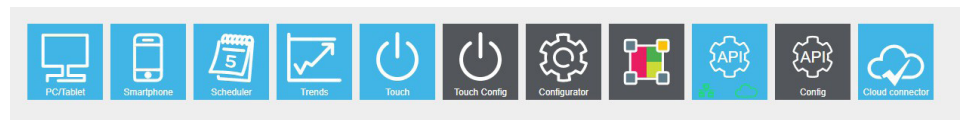


#### 3.1 Check Cloud connector connection and enable IoT T3 API

 - Cloud connector
  - » Open Cloud connector application and enable it




- Cloud connector Icon statuses:
  - » Blue icon with checkmark - Cloud connector is connected
  - » Blue icon without checkmark - Cloud connector is in the connection process
  - » Red icon - Cloud connector is not able to connect
  - » Grey icon - Cloud connector is disabled

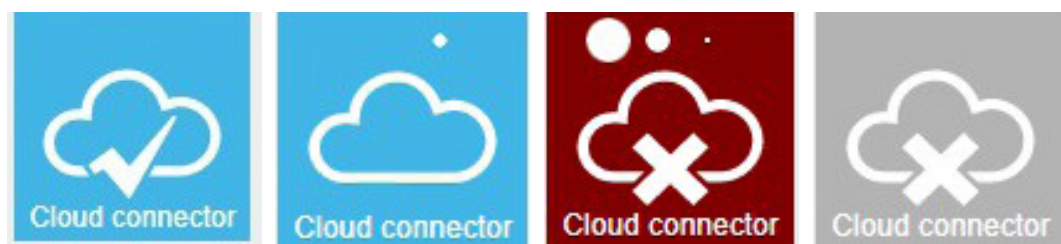




 - IoT T3 API
  - » Open IoT T3 API application and enable it for cloud connection



- IoT T3 API icon statuses:
  - » Green icon of the cloud or network on the IoT T3 API application - remote or local access to the IoT T3 API is enabled
  - » Red icon of the cloud or network on the IoT T3 API application - remote or local access to the IoT T3 API is disabled

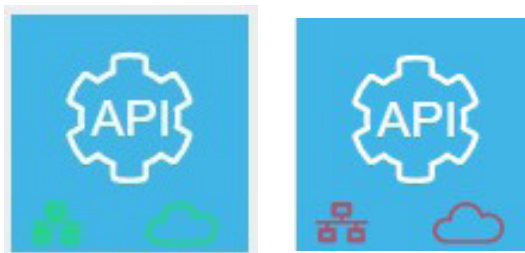


## 4 Amazon configuration

### 4.1 Amazon Alexa account registration

- If you already have Amazon account just Log-in.
- If you do not have an Amazon account, create it on [www.amazon.com](http://www.amazon.com) or through the Amazon Alexa mobile application in your iOS or Android device

### 4.2 Enable Alexa Skill

- **Pre-condition:** To enable alexa Skill you need to have activated W4K Remote app account.
- Log-in to your Alexa account
- Click “Skills“ and search for the “**Wiser for KNX**”
- Click skill and Enable to use
- You will be redirected to the Schneider log-in page Introduce the same credential that you use to login to the Wiser for KNX remote app

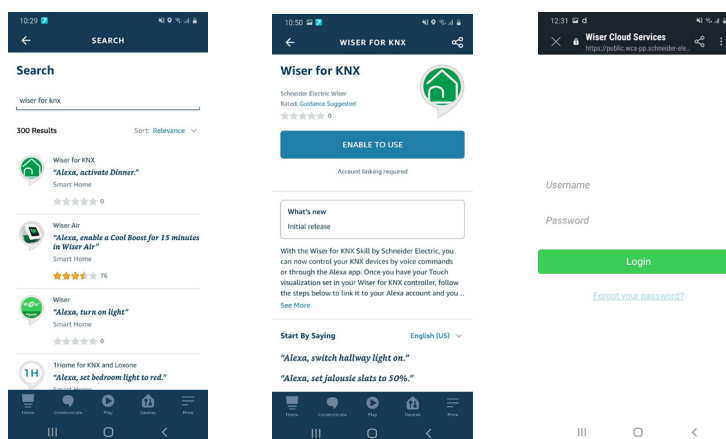

## 5 Touch 3

**Precondition:** Having installed the latest version available of the Touch visualization and having created the Widgets to control your installation.



Notes:

- More widgets can be added later.
- Existing names of Widgets are used for identification in the voice commands. We recommend you using simple names for your Widgets
- If you change the name of the Widget in the Alexa App only, that will be the name Alexa will recognize for voice control. Keep in mind that if you don't change the name in the Widget in Touch and run the discovery process again, the name you have set in the Alexa app will be overwritten with the name of the Widget

### 5.1 Widgets compatible with Voice Control

The list of all current Widgets supporting Voice Control is the following:


- Light switch
- General switch
- AC switch
- Fan switch
- Socket switch
- Dimmer Horizontal
- Dimmer Vertical
- Dimmer Rotary
- Shutter Horizontal
- Shutter Vertical
- Shutter Rotary
- Scene



Note: Voice control support of another widgets is going to be extend in next releases of Wisier for KNX skill.


### 5.2 Enabling Voice control in the Widgets

Voice control is enabled or disabled by Voice control checkbox in general tab under each widget.

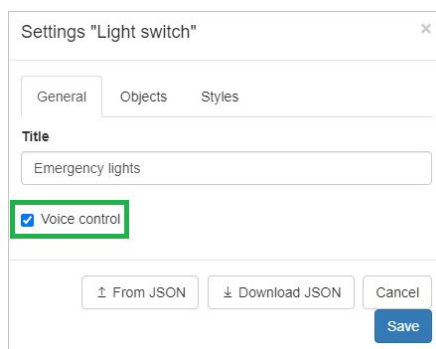

Note: By default, all compatible Voice Control compatible widgets have the checkbox disabled.

- To enable voice control for all compatible Widgets, access the Settings in the Touch Config. and click on the “Enable Voice Control for all Widgets” button.

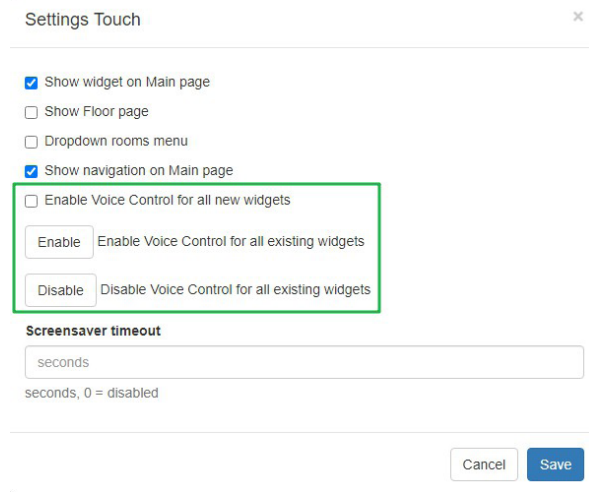

Note: All new Widgets created after this date, will need to be manually enabled for Voice Control, either individually or by pressing the “Enable Voice Control for all Widgets” button Apply to all button mentioned above (depending on your needs).


If you want to enable or disable voice control on specific widget, open it and uncheck Voice control checkbox

If you would like to disable all at once, from settings you can press the “Disable Voice Control for all Widgets” button.



Note: Keep in mind that when voice control is disabled:

- A widget/s are not anymore discoverable as a device in Alexa App
- Device is not possible to control by voice neither manually by Alexa App
- When widget is enabled for voice control it can be rediscovered and used in Alexa app or voice control again.

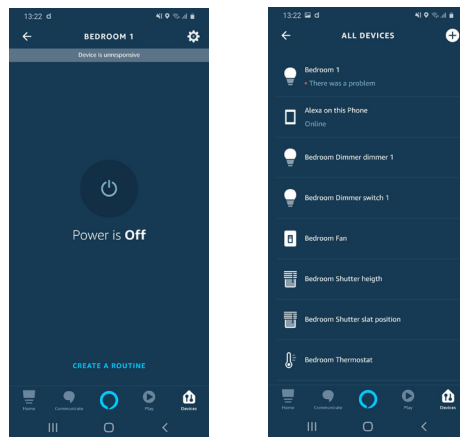

**Important.** Make sure that the Widget has their feedback objects set. If those fields are not set, the Widget won't be discoverable)

Switch object 1 \*\*

Status feedback object 1 \*\*

## 6 Alexa Voice Control application

### 6.1 Wisier for KNX Skill

The first release of the Wisier for KNX Skill supports English, German and Spanish. During the validation process, when having the Alexa Echo device set in a different language from the ones supported, it was identified that Alexa recognized the commands for Voice Control in both English and that other language even they're not officially supported yet.

In future releases of the Wisier for KNX skill, support for other languages will be added.

### 6.2 Devices discovery process

#### Preconditions:


- Created visualization with voice control ready widgets.
- Having enabled the "Voice control" checkbox of all supported Widgets you would like to control through Alexa




#### Notes:

A structure of Touch visualization (floors, rooms) is not supported by Alexa. Create groups in Alexa App to mirror Touch structure.

Once the desired Widgets have been enabled for Voice Control, start discovery procedure by saying: "Alexa, discover my devices ", or in the Alexa app by "adding devices"

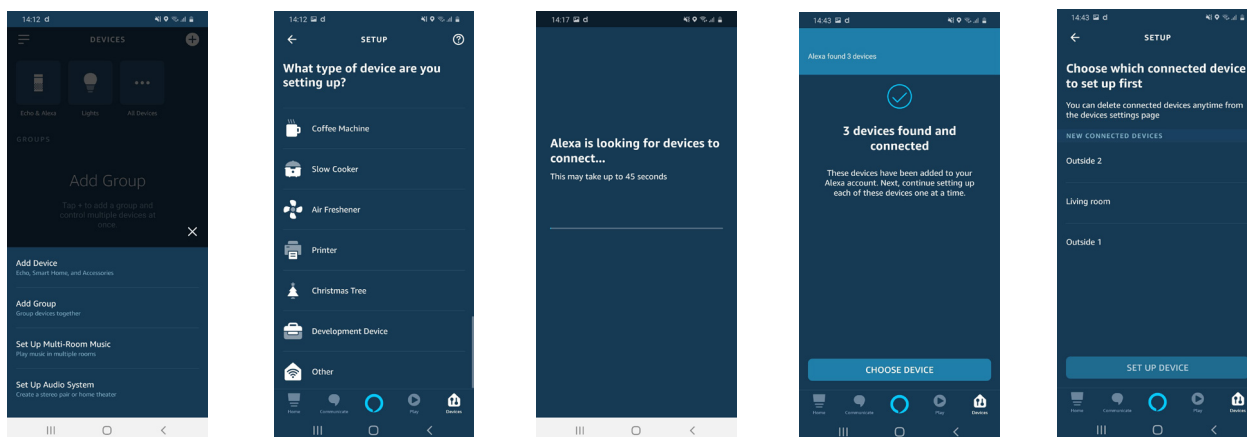

**Amazon Alexa Groups:** Discovered devices can be sorted out to groups. The groups can be used also for control all devices assigned in the specific group. You can find more detailed information [here](#).

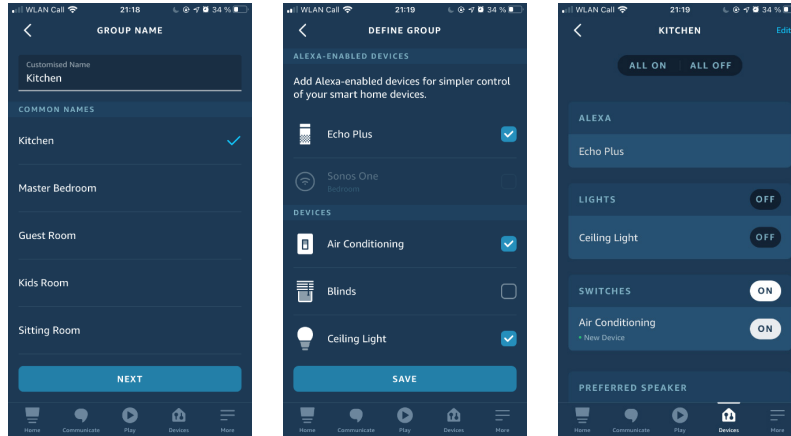

When the discovery process is done you can control your devices by Alexa app or voice command.



Important:

- Some special multi-widget as Light switch, socket switch are displayed as separate widgets in Alexa with same name and suffix number.

Example: A socket widget named “Socket garage” controls 3 different sockets are displayed in Alexa app as: Garage socket 1, Garage socket 2 and Garage socket 3 so they can be controlled independently.

- A shutter vertical and horizontal widgets are discovered by Alexa and displayed as two separate widgets. First for control a position of the blind (up/down) and the second for slats angle..

Example: A shutter vertical widget named “Jalousie Kitchen” is displayed in Alexa app as Jalousie Kitchen (controlling the position of the blinds) and Jalousie Kitchen slats (controlling the angle). The name of the second widget can be customized in Alexa app.

**Alexa Routines:** Define your routines in the Alexa app and trigger different actions in sequence by calling a voice command that you define. Example: “Alexa good morning” (It could tell you the weather, followed by switching all lights in the bedroom, followed by playing music). More information [here](#).

## 6.3 Widgets control through Voice commands

### 6.3.1 Switches (Light switch, General switch, AC switch, Fan switch, Socket switch)

Accepted commands:

- switch On/Off, turn On/Off, activate/deactivate, enable/disable

Example:

“Alexa, switch ceiling light On”

“Alexa, turn the fan Off”

“Alexa, activate the kitchen light”

“Alexa, disable the main switch”

### 6.3.2 Dimmers (Horizontal dimmer, Vertical dimmer, Rotary dimmer)

Accepted commands:

- Same commands as in switch (switch On/Off, turn On/Off, activate/deactivate, enable/disable)
- Set, increase by, decrease by

Example:

“Alexa, switch ceiling light On”

“Alexa, set the kitchen light to 60%”

“Alexa, decrease the kitchen light by 25%”

### 6.3.3 Shutter (Horizontal shutter, Vertical shutter, Rotary shutter)

Accepted commands:

- Move up/down, Set,

Example:

“Alexa, move the kitchen blinds Up”

“Alexa, set the kitchen jalousie slats to 50%”

“Alexa, increase the kitchen light by 25%”

### 6.3.4 Scene

Accepted commands:

- Activate/deactivate, switch On/Off, enable/disable,

Example:

“Alexa, enable scene 1”

“Alexa, activate “Party””

“Alexa, Switch On “Away””:

## 6.4 Troubleshooting:

Problem:

1. I have done the Discovery process and some (or all) of the Widgets have not been discovered by Alexa.

Try:

- The Widgets have the Voice Control checkbox enabled
- Check your Widgets and make sure the feedback objects are set (If they are not selected, the Widget won't be discoverable)
- The Cloud Connector and the IoT T3 AP are enabled and are connected (as explained in section 3)
- The Wiser for KNX Skill is enabled
- Run the Discovery process again

Problem:

2. I have changed a name of the device in Alexa app. After discovery, devices are not available anymore.

Try:

Widget names are during discovery procedure send to Alexa.  
Recommended procedure is to change widget names in Touch application and run discovery procedure again.

Problem:

3. I want to delete devices from the Alexa app. I have disabled voice control in the Touch application but the devices are still available in Alexa app.

Try:

If you would like to delete devices in Alexa, on top of disabling the Widgets in the Touch Visu, devices have to be deleted from Alexa app manually.

Problem:

4. Alexa app discovered more devices. Some of them have number postfix.

Try:

Touch has some special multi-widget as Light switch, socket switch. They are displayed as separate widgets in Alexa with same name and suffix number. More information in section 6.





## Schneider Electric

35 rue Joseph Monier

92500 Rueil Malmaison – France

Phone: +33 (0) 1 41 29 70 00

[www.schneider-electric.com](http://www.schneider-electric.com)

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

© 2014-2018 Schneider Electric. All rights reserved.

LSS100200 Rev. 1



This document has been  
printed on recycled paper.