


Instructions for :
**Grid Range
Rocker Switch Assembly**

AR1623 Ed B

PLEASE READ THE FULL INSTRUCTIONS PRIOR TO ASSEMBLE

1. Before starting to fit the rocker cap to the switch base check that the colours/styles are correct for your requirement.
2. Place the switch base on a flat surface (sideways) with wording face down and the 'Schneider Electric' logo to the left side of the base. (See Fig 1)

Fig. 1

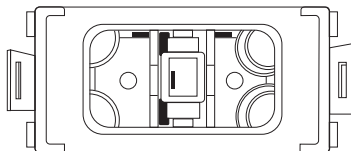


2

3. The base unit will have the centre square pocket angled to either the right or left of the switch centre. Before pushing the rocker cap into place, the centre spigot should be lined up with the base pocket at the same angle. (See Fig 2)

IMPORTANT: If the rocker cap has wording i.e. 'Washing machine'. This must be fitted to the opposite end of the switch marked to that of the 'Schneider Electric' logo.

Fig. 2

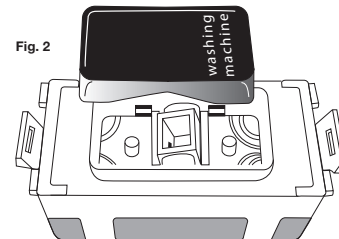

3

4. When both are lined up at the same angle push the rocker cap downwards using two fingers to steady the cap as it's pushed down. As the spigot engages in the base pocket a 'click' will be heard. (See Fig 3)

Fig. 3



4

5. To check the unit is correctly assembled move assembled rocker in a see/saw motion. Each time the direction is changed a click should again be heard.
6. The completed switch should now be fitted as standard Instructions.

5