

Schneider Electric Altivar HVAC ATH600 DTM Library V1.1.3

- Read Me -

This document contains important information about the Altivar HVAC ATH600 DTM Library software component.

Please read the complete document before you start the installation and operation of the product.

1. Overview

The Altivar HVAC ATH600 DTM Library is a software component which represents a package of Altivar HVAC ATH600 DTM.

Altivar HVAC ATH600 DTM Library Installer



Altivar HVAC ATH600 DTM

2. Altivar HVAC ATH600 DTM Library referenced DTM

Software Component Name	Version
Schneider Electric Altivar HVAC ATH600 DTM Library	V1.1.3
Altivar HVAC ATH600	V1.1.3.0

3. System Requirements

3.1 Supported operating systems

This software can be installed on the following operating systems:

> Microsoft Windows 10 32/64-bit

> Microsoft Windows 11 64-bit

3.2 Recommended PC Requirements

Equipment	Recommended
Processor	Intel(R) Core(TM) i3
RAM	4 GB
Free Hard Disk Space	2 GB
Display	Resolution: 1920 x 1080 pixels with 32 bit colors DPI: 96(100%)

4. Software Pre Requisites

1. Microsoft .NET Framework 3.5 SP1 MUST be installed, before installing DTM Library.

This is downloadable from the Microsoft website at below link

<http://download.microsoft.com/download/2/0/e/20e90413-712f-438c-988e-fdaa79a8ac3d/dotnetfx35.exe>

2. Acrobat reader DC 32 bit must be installed in the PC

5. Installation

5.1 Administrator Privileges

In order to install Altivar HVAC ATH600 DTM Library software component, you must have administrative privileges to install and uninstall programs.

5.2 Re-installing or Uninstalling

You can uninstall the installer from the Add/Remove Programs Control Panel.

If you have already installed Altivar HVAC ATH600 DTM Library, the installer gives you options to Update, Remove Altivar HVAC ATH600 DTM Library.

Note: To Repair, Altivar HVAC ATH600 DTM Library installer should be available.