

Schneider Electric Altivar Machine ATV320 DTM Library V3.9.1

- Read Me -

This document contains important information about the Altivar Machine ATV320 DTM Library software component.

Please read the complete document before you start the installation and operation of the product.

1. Overview

The Altivar Machine ATV320 DTM Library is a software component which represents a package of Altivar Machine ATV320 DTM.

Altivar Machine ATV320 DTM Library Installer



Altivar Machine ATV320 DTM

2. Altivar Machine ATV320 DTM Library referenced DTM

Software Component Name	Version
Schneider Electric Altivar Machine ATV320 DTM Library	V3.9.1
ATV320	V3.9.1.0

3. System Requirements

3.1 Supported operating systems

This software can be installed on the following operating systems:

> Microsoft Windows 10 32/64-bit

> Microsoft Windows 11 64-bit

3.2 Minimum PC Requirements

Equipment	Minimum
Processor	Pentium 4 / Core 2 Duo, 2 GHz
RAM	2 GB
Free Hard Disk Space	1 GB
Display	Resolution: 1366 x 768, 1600 x 900 and 1920 x 1080 pixels. DPI: 96dpi (100%), 120dpi (125%).

3.3 Recommended PC Requirements

Equipment	Recommended
-----------	-------------

Processor	Intel(R) Core(TM) i3
RAM	4 GB
Free Hard Disk Space	2 GB
Display	Resolution: 1920 x 1080 pixels. DPI: 96dpi (100%), 120dpi (125%).

4. Software Pre Requisites

1. Microsoft .NET Framework 3.5 SP1 MUST be installed, before installing DTM Library.
This is downloadable from the Microsoft website at below link
<http://download.microsoft.com/download/2/0/e/20e90413-712f-438c-988e-fdaa79a8ac3d/dotnetfx35.exe>
2. Acrobat reader DC 32 bit must be installed in the PC

5. Installation

5.1 Administrator Privileges

In order to install Altivar Machine ATV320 DTM Library software component, you must have administrative privileges to install and uninstall programs.

5.2 Re-installing or Uninstalling

You can uninstall the installer from the Add/Remove Programs Control Panel.

If you have already installed Altivar Machine ATV320 DTM Library, the installer gives you options to Repair and Remove Altivar Machine ATV320 DTM Library.

Note: To Repair, Altivar Machine ATV320 DTM Library installer should be available.