




Cat 952 Plug

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords

STRIPPING
DETAIL
(FULL SIZE)

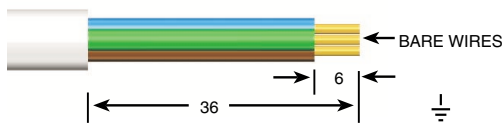


WIRING INSTRUCTIONS

Note: All wires are clamped between the terminal screw and the fixed terminal.

DO NOT wrap wires under head of screw.

- 1 Unscrew the RCD access lid screws and open the access lid.
- 2 Strip the insulation as illustrated and twist bare conductor strands.
- 3 Loosen the terminal screws.
- 4 Connect the Earth wire (GREEN//YELLOW or GREEN) to the terminal marked 'E' and tighten the screw.
- 5 Connect the Active (Live) wire (BROWN or RED) to the terminal marked 'A' and tighten the screw.
- 6 Connect the Neutral wire (BLUE or BLACK) to the terminal marked 'N' and tighten the screw.
- 7 Check the wires are in their correct position as illustrated and the terminal screws are tight.
- 8 Place the outer sheath of flexible cord on the cord clamp. Note: 5mm of sheath minimum must be past the end of the cord clamp.
- 9 Place the RCD access lid into position and ensure the access lid screws are fully tightened.

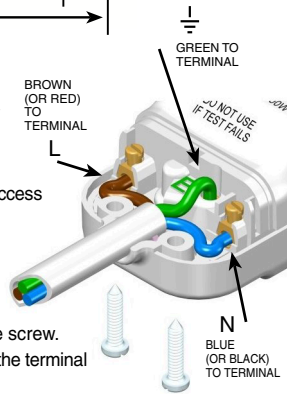

New Zealand Head Office:
PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz




PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre
Baulkham Hills NSW 2153 Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61 29851 2666, Fax: +61 29851 2695
www.pdl.com.au



Cat 952 Plug

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords

STRIPPING
DETAIL
(FULL SIZE)

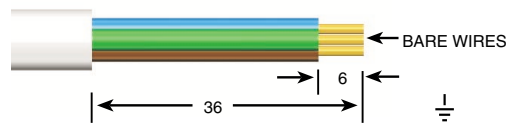


WIRING INSTRUCTIONS

Note: All wires are clamped between the terminal screw and the fixed terminal.

DO NOT wrap wires under head of screw.

- 1 Unscrew the RCD access lid screws and open the access lid.
- 2 Strip the insulation as illustrated and twist bare conductor strands.
- 3 Loosen the terminal screws.
- 4 Connect the Earth wire (GREEN//YELLOW or GREEN) to the terminal marked 'E' and tighten the screw.
- 5 Connect the Active (Live) wire (BROWN or RED) to the terminal marked 'A' and tighten the screw.
- 6 Connect the Neutral wire (BLUE or BLACK) to the terminal marked 'N' and tighten the screw.
- 7 Check the wires are in their correct position as illustrated and the terminal screws are tight.
- 8 Place the outer sheath of flexible cord on the cord clamp. Note: 5mm of sheath minimum must be past the end of the cord clamp.
- 9 Place the RCD access lid into position and ensure the access lid screws are fully tightened.

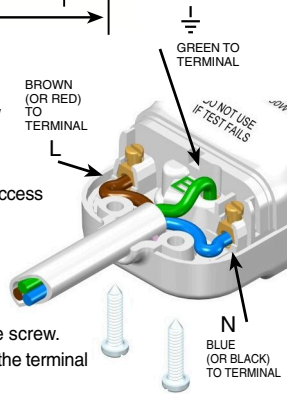

New Zealand Head Office:
PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz




PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre
Baulkham Hills NSW 2153 Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61 29851 2666, Fax: +61 29851 2695
www.pdl.com.au



Cat 952 Plug

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords

STRIPPING
DETAIL
(FULL SIZE)

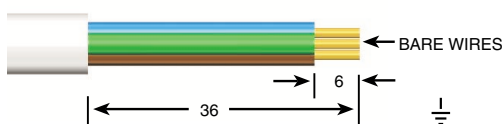


WIRING INSTRUCTIONS

Note: All wires are clamped between the terminal screw and the fixed terminal.

DO NOT wrap wires under head of screw.

- 1 Unscrew the RCD access lid screws and open the access lid.
- 2 Strip the insulation as illustrated and twist bare conductor strands.
- 3 Loosen the terminal screws.
- 4 Connect the Earth wire (GREEN//YELLOW or GREEN) to the terminal marked 'E' and tighten the screw.
- 5 Connect the Active (Live) wire (BROWN or RED) to the terminal marked 'A' and tighten the screw.
- 6 Connect the Neutral wire (BLUE or BLACK) to the terminal marked 'N' and tighten the screw.
- 7 Check the wires are in their correct position as illustrated and the terminal screws are tight.
- 8 Place the outer sheath of flexible cord on the cord clamp. Note: 5mm of sheath minimum must be past the end of the cord clamp.
- 9 Place the RCD access lid into position and ensure the access lid screws are fully tightened.

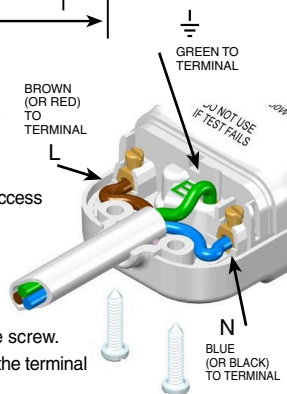

New Zealand Head Office:
PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz




PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre
Baulkham Hills NSW 2153 Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61 29851 2666, Fax: +61 29851 2695
www.pdl.com.au



Cat 952 Plug

Recommended for use with 0.75mm² to 1.5mm²
PVC insulated ordinary duty 3 core circular flexible cords

STRIPPING
DETAIL
(FULL SIZE)

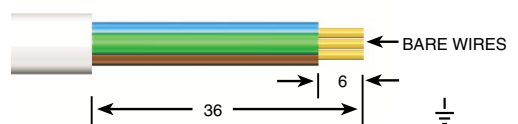


WIRING INSTRUCTIONS

Note: All wires are clamped between the terminal screw and the fixed terminal.

DO NOT wrap wires under head of screw.

- 1 Unscrew the RCD access lid screws and open the access lid.
- 2 Strip the insulation as illustrated and twist bare conductor strands.
- 3 Loosen the terminal screws.
- 4 Connect the Earth wire (GREEN//YELLOW or GREEN) to the terminal marked 'E' and tighten the screw.
- 5 Connect the Active (Live) wire (BROWN or RED) to the terminal marked 'A' and tighten the screw.
- 6 Connect the Neutral wire (BLUE or BLACK) to the terminal marked 'N' and tighten the screw.
- 7 Check the wires are in their correct position as illustrated and the terminal screws are tight.
- 8 Place the outer sheath of flexible cord on the cord clamp. Note: 5mm of sheath minimum must be past the end of the cord clamp.
- 9 Place the RCD access lid into position and ensure the access lid screws are fully tightened.

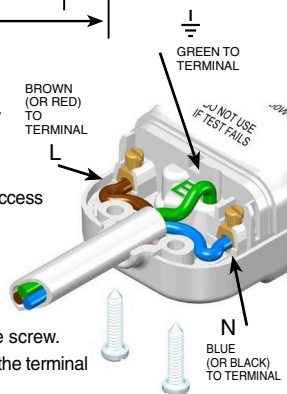

New Zealand Head Office:
PO Box 15 355, New Lynn, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.pdl.co.nz



PDL Industries Australia Pty Ltd
Locked Bag 5500, Baulkham Hills Business Centre
Baulkham Hills NSW 2153 Australia
Freephone 1300 735 266, Freefax 1300 735 329
Telephone +61 29851 2666, Fax: +61 29851 2695
www.pdl.com.au