

Benefits at a glance:

Easy ordering

Comprehensive range

Optimized inventory



Harmony, innovation provider

Go to www.schneider-electric.com/control

Schneider Electric Industries SAS

35, rue Joseph Monier - CS 30323 F92506 Rueil-Malmaison Cedex FRANCE

www.schneider-electric.com

©2013 Schneider Electric. All Rights Reserved. Schneider Electric and ShoreBoX are trademarks owned by Schneider Electric Industries SAS or its affiliated companies. All other trademarks are property of their respective owners • 998-1232744_GMA-GB

Are you sure your emergency stop complies with the IEC safety standards?

Harmony XB4/XB5, the 2 in 1 pushbutton that covers emergency stop and emergency switching off functions







Harmony XB4/5 E.stop are part of the comprehensive 22mm metal and plastic Harmony range:







Pushbutton



Selector switch

Multiple head & harsh





here are two types of emergency functions defined by the IEC 60204 directive: emergency stop for mechanical risks and emergency switching off for other risks.

But knowing which one is right for your installation is not always easy

To help you make the right choice, Schneider Electric introduces Harmony XB4 and XB5 22mm trigger action emergency stops that combine both functions in one device.

Harmony XB4 metal

Emergency stop, trigger action, 20mm hole, 40mm mushroom head			
Contact	NO+NC Push-pull	NO + NC Turn to release	NO + NC Key release
Connection		Screw clamp terminals	
Complete product	XB4AT845	XB4BS8445	XB4BS9445
Body	ZB4BZ105	ZB4BZ105	ZB4BZ105
Head	ZB4BT84	ZB4BS844	ZB4BS944

Harmony XB5 plastic

Emergency stop, trigger action, 20mm hole, 40mm mushroom head			
Contact	NO+NC Push-pull	NO + NC Turn to release	NO + NC Key release
Connection		Screw clamp terminals	
Complete product	XB5AT845	XB5AS8445	XB5AS9445
Body	ZB5AZ105	ZB5AZ105	ZB5AZ105
Head	ZB5AT84	ZB5AS844	ZB5AS944