

Altivar

Variable Speed Drives ATV610

Installation Manual

04/2026

EAV64381.12



Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

| | |
|--|-----|
| Safety Information..... | 5 |
| About the document | 7 |
| Introduction | 15 |
| Verifying the Absence of Hazardous Voltage..... | 16 |
| Drive Overview..... | 18 |
| Accessories and Options..... | 24 |
| Altivar Efficiency Calculator | 25 |
| Steps for setting up the drive | 26 |
| Preliminary Instructions..... | 27 |
| Technical Data..... | 29 |
| Environment Data..... | 30 |
| Temperature Conditions | 31 |
| Altitude Conditions | 32 |
| Chemical and Mechanical Conditions | 32 |
| Dimensions and Weights..... | 33 |
| Electrical Data - Drive Ratings | 42 |
| Drive Ratings in Normal Duty | 43 |
| Drive Ratings in Heavy Duty | 45 |
| Electrical Data - Upstream Protective Device | 47 |
| Upstream Protective Device – Introduction..... | 48 |
| Prospective Short-Circuit Current..... | 51 |
| IEC Type Circuit-Breaker — with enclosure..... | 54 |
| IEC Fuses | 56 |
| Drive Mounting | 57 |
| Mounting Conditions | 58 |
| Derating Curves | 63 |
| Mounting Procedures..... | 69 |
| Drive wiring | 75 |
| Wiring Instructions | 76 |
| Cable Length Instructions..... | 81 |
| General Wiring Diagrams | 83 |
| Relay Contacts Wiring | 85 |
| Output Relay with Inductive AC Loads | 86 |
| Output Relay with Inductive DC loads | 87 |
| Digital Inputs Wiring Depending on Sink / Source Switch Configuration | 89 |
| Characteristics of the Power Part Terminals..... | 91 |
| Wiring The Power Part | 102 |
| Electromagnetic Compatibility | 111 |
| Operation on an IT or Corner Grounded System..... | 113 |
| Disconnecting The Built-in EMC Filter | 114 |
| Arrangement and Characteristics of Control Block Terminals and Communication and I/O Ports..... | 118 |
| Control Terminals Electrical Data | 120 |
| Wiring The Control Part..... | 123 |
| Check List Before Switching On | 128 |
| Maintenance | 130 |

| | |
|---------------------------|-----|
| Scheduled Servicing | 131 |
| Long-term Storage..... | 133 |
| Decommissioning | 134 |
| Additional Support | 135 |
| Glossary | 137 |

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in death or serious injury**.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in death or serious injury**.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury**.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Qualification of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product. In addition, these persons must have received safety training to recognize and avoid hazards involved. These persons must have sufficient technical training, knowledge and experience and be able to foresee and detect potential hazards that may be caused by using the product, by changing the settings and by the mechanical, electrical and electronic equipment of the entire system in which the product is used. All persons working on and with the product must be fully familiar with all applicable standards, directives, and accident prevention regulations when performing such work.

Intended Use

This product is intended for industrial use according to this manual.

The product may only be used in compliance with all applicable safety standard and local regulations and directives, the specified requirements and the technical data. The product must be installed outside the hazardous Ex zone. Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety measures must be implemented. Since the product is used as a component in an entire system, you must ensure the safety of persons by means of the design of this entire system (for example, machine design). Any use other than the use explicitly permitted is prohibited and can result in hazards.

About the document

Document Scope

The purpose of this document is:

- to give you mechanical and electrical information related to the drive,
- to show you how to install and wire this drive.

Validity Note

Original instructions and information given in the present document have been written in English (before optional translation).

This documentation is valid for the ATV610 drives.

The characteristics of the products described in this document are intended to match the characteristics that are available on www.se.com. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on www.se.com, consider www.se.com to contain the latest information.

Product Related Information

Read and understand these instructions before performing any procedure with this device.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this device system.
- Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Only use properly rated, electrically insulated tools and measuring equipment.
- Do not touch unshielded components or terminals with voltage present.
- Prior to performing any type of work on the device system, block the motor shaft to prevent rotation.
- Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Before performing work on the device system:

- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not de-energize all circuits.
- Place a “Do Not Turn On” label on all power switches related to the device system.
- Lock all power switches in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge.
- Verify the absence of hazardous voltage. (1)

Before applying voltage to the device system:

- Verify that the work has been completed and that the entire installation cannot cause hazards.
- If the mains input terminals and the motor output terminals have been grounded and short-circuited, remove the ground and the short circuits on the mains input terminals and the motor output terminals.
- Verify proper grounding of all equipment.
- Verify that all protective equipment such as covers, doors, grids is installed and/or closed.

Failure to follow these instructions will result in death or serious injury.

(1) Refer to the Verify the Absence of Voltage section, page 16.

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

⚡ ⚠ DANGER**ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION**

Do not use damaged products or accessories.

Failure to follow these instructions will result in death or serious injury.

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

⚠ DANGER**POTENTIAL FOR EXPLOSION**

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the device being just one part of the application. The device by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.

As a designer/manufacturer of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.

The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the device cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

| |
|--|
| ▲ WARNING |
| <p>INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/OR UNINTENDED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> • Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application. • Use redundant components and/or control paths for all critical control functions identified in your risk assessment. • Implement all monitoring functions required to avoid any type of hazard identified in your risk assessment, for example, slipping or falling loads. • Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application. • Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards. • Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p> |

Product may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

| |
|--|
| ▲ WARNING |
| <p>UNANTICIPATED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> • Carefully install the wiring in accordance with the EMC requirements. • Do not operate the product with unknown or unsuitable settings or data. • Perform a comprehensive commissioning test. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p> |

⚠ WARNING**LOSS OF CONTROL**

- The designer of any control scheme must consider the potential failure modes of control paths and, for critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop, overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines (1).
- Each implementation of the product must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(1) For USA: Additional information, refer to NEMA ICS 1.1 (latest edition), Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control and to NEMA ICS 7.1 (latest edition), Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems.

The temperature of the products described in this manual may exceed 80°C (176°F) during operation.

⚠ WARNING**HOT SURFACES**

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE**DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE**

Before switching on and configuring the product, verify that it is approved for the mains voltage.

Failure to follow these instructions can result in equipment damage.

General Cybersecurity Information

In recent years, the growing number of networked machines and production plants has seen a corresponding increase in the potential for cyber threats, such as unauthorized access, data breaches, and operational disruptions. You must, therefore, consider all possible cybersecurity measures to help protect assets and systems against such threats.

To help keep your Schneider Electric products secure and protected, it is in your best interest to implement the cybersecurity best practices as described in the Cybersecurity Best Practices document.

Schneider Electric provides additional information and assistance:


- Subscribe to the Schneider Electric security newsletter.
- Visit the Cybersecurity Support Portal web page to:
 - Find Security Notifications.
 - Report vulnerabilities and incidents.
- Visit the Schneider Electric Cybersecurity and Data Protection Posture web page to:
 - Access the cybersecurity posture.
 - Learn more about cybersecurity in the cybersecurity academy.
 - Explore the cybersecurity services from Schneider Electric.

Environmental Data

The Environmental Data Program is a framework for how we measure, categorize, and compare the environmental attributes and footprint of our products.

Using a rigorous, fact-based methodology, the program provides environmental data from across the product lifecycle.

Five data categories across the product lifecycle

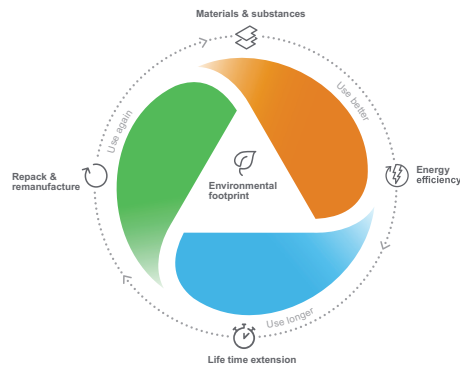

Use Better: How sustainable a product is, including environmental footprint, materials and substances, packaging, and energy efficiency.

Use Longer: How a product's life time can be effectively extended in terms of reparability and updatability.

Use Again: How a product can be reused, from dismantling and remanufacturing to recyclability and manufacturer take back.

With this transparent, verified data, customers and partners are empowered to make conscious environmental choices and accurately evaluate and report on sustainability performance.

All our hardware offers have an associated environmental data available on se.com product pages.

Refer to Environmental Data Program for more information.

Related Documents

Use your tablet or your PC to quickly access detailed and comprehensive information on all our products on www.se.com.

The internet site provides the information you need for products and solutions:

- The whole catalog for detailed characteristics and selection guides,
- The CAD files to help design your installation, available in over 20 different file formats,
- All software and firmware to maintain your installation up to date,
- A large quantity of White Papers, Environment documents, Application solutions, Specifications... to gain a better understanding of our electrical systems and equipment or automation,
- And finally all the User Guides related to your drive, listed below:

To find documents online, visit the Schneider Electric download center (www.se.com/ww/en/download/).

| Title of Documentation | Reference number |
|--|--|
| Altivar ATV610 Catalog | DIA2ED2140702EN (English) |
| Altivar ATV610 Getting Started | EAV64374 (English) EAV64379 (Chinese) |
| Altivar ATV610 Installation Manual | EAV64381 (English) EAV64386 (Chinese) |
| Altivar ATV610 Programming Manual | EAV64387 (English) EAV64393 (Chinese) |
| Altivar ATV610 Communication Parameters File | EAV64394 (English) |
| Altivar ATV610 Modbus Manual | EAV64395 (English) EAV64395CN (Chinese) |
| Altivar ATV610 PROFIBUS DP manual | EAV64396 (English) |
| Recommended Cybersecurity Best Practices | CS-Best-Practices-2019-340 (English) |

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Electronic product data sheet

Scan the QR code in front of the drive to get the product data sheet.

Terminology used in this document

The technical terms, terminology, and the corresponding descriptions in this manual normally use the terms or definitions in the relevant standards.

Among others, these standards include:

- ISO 13849: The Foundation of Functional Safety in the Machinery
- IEC 60204-1: Safety of machinery - Electrical equipment of machines – Part 1: General requirements.
- IEC 61010: Safety requirements for electrical equipment for measurement, control, and laboratory use.
- IEC 61158 series: Industrial communication networks - Fieldbus specifications
- IEC 61508 Ed.2 series: Functional safety of electrical/electronic/programmable electronic safety-related.
- IEC 61784 series: Industrial communication networks - Profiles.
- IEC 61784-5-3: Industrial communication networks - Profiles - Part 5-3: Installation of fieldbuses - Installation profiles for CPF 3
- IEC 61800 series: Adjustable speed electrical power drive systems.
- IEC 61918: Industrial communication networks - Installation of communication networks in industrial premises.
- IEC 62443: Security for industrial automation and control systems.

In the area of drive systems this includes, but is not limited to, terms such as **error**, **error message**, **failure**, **fault**, **fault reset**, **protection**, **safe state**, **safety function**, **warning**, **warning message**, and so on.

In addition, the term **zone of operation** is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.

Contact us

Select your country on www.se.com/contact.

Schneider Electric Industries SAS

35, rue Joseph Monier

92500 Rueil-Malmaison

France

Introduction

What's in This Part

| | |
|--|----|
| Verifying the Absence of Hazardous Voltage | 16 |
| Drive Overview | 18 |
| Accessories and Options | 24 |
| Altivar Efficiency Calculator | 25 |
| Steps for setting up the drive | 26 |
| Preliminary Instructions | 27 |

Verifying the Absence of Hazardous Voltage

Instructions

The DC bus voltage level is determined by measuring the voltage between the DC bus terminals PA/+ and PC/-.

The location of the DC bus terminals depends on the drive model.

Identify your drive model by referring to the nameplate of the drive.

Then, refer to the chapter for the location of the DC bus terminals PA/+ and PC/-.

Then, refer to the chapter *Wiring The Power Part*, page 102 for the location of the DC bus terminals PA/+ and PC/-.

Read and understand these instructions before performing any procedure with this device.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this device system.
- Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Only use properly rated, electrically insulated tools and measuring equipment.
- Do not touch unshielded components or terminals with voltage present.
- Prior to performing any type of work on the device system, block the motor shaft to prevent rotation.
- Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.

Failure to follow these instructions will result in death or serious injury.

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Before performing work on the device system:

- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not de-energize all circuits.
- Place a “Do Not Turn On” label on all power switches related to the device system.
- Lock all power switches in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge.
- Verify the absence of hazardous voltage. (1)

Before applying voltage to the device system:

- Verify that the work has been completed and that the entire installation cannot cause hazards.
- If the mains input terminals and the motor output terminals have been grounded and short-circuited, remove the ground and the short circuits on the mains input terminals and the motor output terminals.
- Verify proper grounding of all equipment.
- Verify that all protective equipment such as covers, doors, grids is installed and/or closed.

Failure to follow these instructions will result in death or serious injury.

(1) Refer to the procedure in the present document, page 17.

Procedure

Perform the following actions to verify the absence of hazardous voltage:



| Step | Action |
|------|--|
| 1 | The red LED near PA+ and PC/- is lighting when voltage is present between PA+ and PC/-. If there is no light, measure the voltage on the DC bus between the DC bus terminals (PA/+ and PC/-) using a properly rated voltmeter to verify that the voltage is less than 42 Vdc |
| 2 | If the DC bus capacitors do not discharge properly, contact your local Schneider Electric representative. Do not repair or operate the product. |
| 3 | Verify that no other voltage is present in the drive system. |



Drive Overview



Frame Sizes for IP20 Products

The family of ATV610 includes 5 frame sizes of IP20 products.

| Frame Size 1 | |
|---|--|
| 3-phase 380...460 V, 0.75...7.5 kW, 1...10 HP | |
|  |  |
| ATV610U07N4...U75N4 | ATV610U07N4Z...U75N4Z• |
| Frame Size 2 | |
| 3-phase 380...460 V, 11 and 15 kW, 15 and 20 HP | |
|  |  |
| ATV610D11N4 and ATV610D15N4 | ATV610D11N4Z• and ATV610D15N4Z• |



| Frame Size 3 | |
|--|--|
| 3-phase 380...460 V, 18.5 and 22 kW, 25 and 30 HP | |
|  <p>ATV610D18N4 and ATV610D22N4</p> |  <p>ATV610D18N4Z and ATV610D22N4Z</p> |




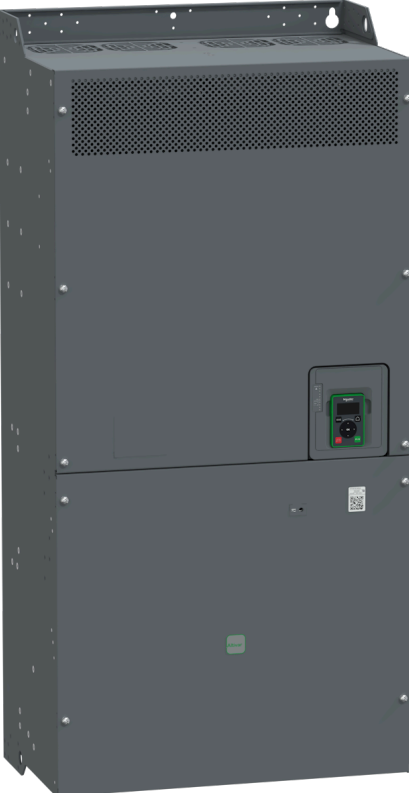
| Frame Size 4 | |
|--|--|
| 3-phase 380...460 V, 30...45 kW, 40...60 HP | |
|  <p>ATV610D30N4...D45N4</p> |  <p>ATV610D30N4Z...D45N4Z</p> |

| Frame Size 5 | |
|---|--|
| 3-phase 380...460 V, 55...90 kW, 75... 125 HP | |
|  |  |
| ATV610D55N4...D90N4 | ATV610D55N4Z...D90N4Z• |

Frame Sizes for IP00 Products

The family of ATV610 includes 4 frame sizes of IP00 products.

| Frame Size 6 | |
|---|--|
| 3-phase 380...460 V, 110...160 kW, 150...250 HP | |
|  |  |
| ATV610C11N4...C16N4 | ATV610C11N4Z...C16N4Z• |


| Frame Size 7 | |
|---|---|
| 3-phase 380...460 V, 220...250 kW, 350...400 HP | |
|  |  |
| ATV610C22N4, ATV610C25N4 | ATV610C22N4ZC, ATV610C25N4ZC |
| Frame Size 8A | Frame Size 8B |
| 3-phase 380...460 V, 315 kW, 500 HP | 3-phase 380...460 V, 355 and 400 kW, 550 and 600 HP |
|  |  |
| ATV610C31N4 | ATV610C35N4 and ATV610C40N4 |

Catalog Number Description

| | | ATV | 610 | D | 75 | N4 |
|--|--|-----|-----|---|----|----|
| Product range | | | | | | |
| ATV | Altivar Drive | | | | | |
| Product type | | | | | | |
| 610 | Standard product | | | | | |
| Factor for power rating | | | | | | |
| U | power x 0.1 | | | | | |
| D | power x 1 | | | | | |
| C | power x 10 | | | | | |
| Power rating | | | | | | |
| 07 - 11 - 13 - 15 - 16 - 18 - 22 - 25 - 30 - 31 - 35 - 37 - 40 - 45 - 55 - 75 - 90 | | | | | | |
| Power part supply | | | | | | |
| N4 | 380 Vac (380...460 Vac) 3 phase | | | | | |
| N4Z | 380 Vac (380...460 Vac) 3 phase, Embedded Modbus Serial Link, Product without Plain Text Display Terminal | | | | | |
| N4ZC | 380 Vac (380...460 Vac) 3 phase, Embedded Modbus RS485 Terminal, Product without Plain Text Display Terminal | | | | | |

Nameplate example

The nameplate contains the following data:

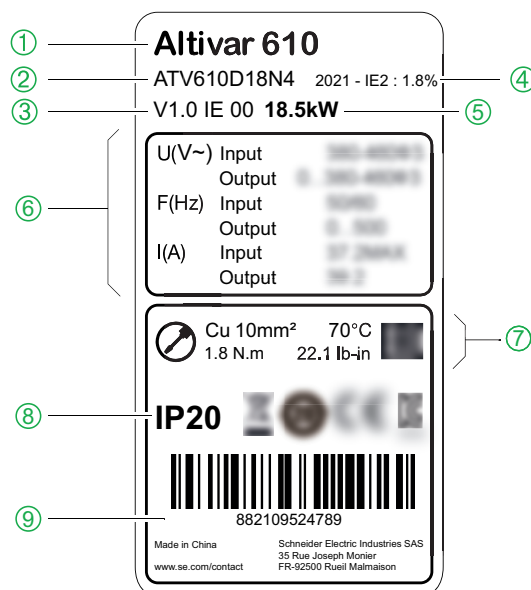

- | | | |
|--------------------|-----------------------------|--------------------------------|
| ① Product type | ④ Ecodesign regulation code | ⑦ Power part cable information |
| ② Catalog number | ⑤ Power rating | ⑧ Degree of protection |
| ③ Firmware version | ⑥ Power part information | ⑨ Serial number |

Manufacturing Date

Use the serial number ⑨ of the drive to retrieve its manufacturing date.

In the nameplate example illustrated above **882109524789**, the manufacturing date is year 2021, week 09.

Manufacturing Plant

Use the serial number ⑨ of the drive to retrieve its manufacturing plant.

In the nameplate example illustrated above **882109524789**, the manufacturing plant is 88.

Accessories and Options

Introduction

Drives are designed to take numerous accessories and options to increase their functionality. For a detailed description and catalog numbers, refer to the Catalog on www.se.com.

All accessories and options come with an instruction sheet to help installation and commissioning. Therefore you will only find here a short product description.

Accessories

Graphic display terminal

- Remote mounting kit for mounting on enclosure door

IP upgrade

- Metal conduit box for frame sizes 6, 7, 8A and 8B product for IP21 degree of protection on bottom side

Filters

dv/dt filters

Passive filters

Altivar Efficiency Calculator

Description

This tool calculates the level of energy efficiency of your variable speed drive according to the Ecodesign standard EN/IEC 61800-9-2.

In 2 specific cases :

- **Drive Efficiency** (CDM Complete Drive Module) :
Performance is determined according to 8 operating points taking into account torque and speed.
- **System Efficiency** (PDS Power Drive System) :
This includes the efficiency of the variable speed drive and its motor.
Performance is determined according to 8 operating points taking into account torque and speed.

Easy access to the tool

The tool is available at the address: altivar-efficiency-calculator.se.app

Steps for setting up the drive

INSTALLATION

1 Receive and inspect the drive controller

- Check that the catalog number printed on the label is the same as that on the purchase order.
- Remove the drive from its packaging and check that it has not been damaged.

2 Verify the supply mains

- Verify that the supply mains is compatible with the power part supply range of the drive.

3 Mount the drive

- Mount the drive in accordance with the instructions in this document.
- Install the transformer(s), if any.
- Install any internal and external options.

4 Wire the drive

- Connect the motor, ensuring that its connections correspond to the voltage.
- Connect the supply mains, after making sure that the power is off.
- Connect the control.

Steps 1 to 4 must be performed with the power off.



5 PROGRAMMING

Refer to the Programming Manual

Preliminary Instructions

Inspecting the product

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

DANGER

ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION

Do not use damaged products or accessories.

Failure to follow these instructions will result in death or serious injury.

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

| Step | Action |
|------|--|
| 1 | Verify that the catalog number printed on the nameplate corresponds to the purchase order. |
| 2 | Before performing any installation work, inspect the product for visible damage. |

Handling

⚠ WARNING

INCORRECT HANDLING

- Lifting and handling must be performed by qualified personnel in accordance with the requirements of the site and in compliance with all pertinent regulations.
- Verify that there are no persons or obstructions in the area of operation of the lifting and handling equipment.
- Use lifting and handling equipment appropriate for the load and take all necessary measures to avoid swinging, inclination, toppling and any other potentially hazardous conditions.
- Follow all handling instructions provided in this manual and in all associated product documentation.
- Take all measures required to avoid damage to the product and other hazards when handling or opening the packaging.
- Handle and store the product in its original packaging.
- Do not handle and store the product if the packaging is damaged or appears to be damaged.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

To help protect the product before installation, handle and store it in its packaging.

Ensure that the specified ambient conditions are followed.

ATV610 drives of frame sizes 1 up to 3 can be removed from their packaging and installed without a handling device.

Higher frame size drives require a handling device. These drives are equipped with lifting lugs.

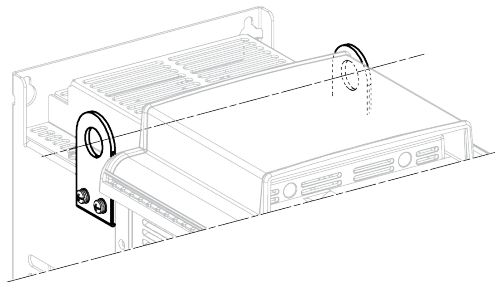

Technical Data

What's in This Part

| | |
|--|----|
| Environment Data | 30 |
| Dimensions and Weights | 33 |
| Electrical Data - Drive Ratings | 42 |
| Electrical Data - Upstream Protective Device | 47 |

Environment Data

What's in This Chapter

| | |
|--|----|
| Temperature Conditions..... | 31 |
| Altitude Conditions | 32 |
| Chemical and Mechanical Conditions | 32 |

Temperature Conditions

Climatic Environmental Conditions for Transportation and Storage

The environment during transportation and storage must be dry and free from dust.

| | | | |
|----------------------------|--------------------------|----|-----------|
| Storage Temperature | Frame size 1 to size 6 | °C | -40...70 |
| | | °F | -40...158 |
| | Frame sizes 7, 8A and 8B | °C | -25...70 |
| | | °F | -13...158 |
| Transportation Temperature | Frame size 1 to size 6 | °C | -40...70 |
| | | °F | -40...158 |
| | Frame sizes 7, 8A and 8B | °C | -25...70 |
| | | °F | -13...158 |
| Relative humidity | | % | 5...95 |

Climatic Environmental Conditions for Operation

The maximum permissible ambient temperature during operation depends on the mounting distances between the devices and on the required power. Observe the pertinent instructions in the chapter *Drive Mounting*, page 57.

NOTE: The drive is designed to be used in a controlled indoor environment.

| | | | |
|--------------------------|--|----|-----------|
| Frame sizes 1...6 | Temperature without derating | °C | -15...45 |
| | | °F | 5...113 |
| | Temperature with derating of output power (1) | °C | Up to 60 |
| | | °F | Up to 140 |
| | Temperature with derating of output power (1) and control without Graphic display terminal | °C | Up to 70 |
| | | °F | Up to 158 |
| Frame sizes 7, 8A and 8B | Temperature without derating | °C | -10...40 |
| | | °F | 14...104 |
| | Temperature with derating of output power (1) | °C | Up to 60 |
| | | °F | Up to 140 |
| | Temperature with derating of output power (1) and control without Graphic display terminal | °C | Up to 60 |
| | | °F | Up to 140 |
| All products | Relative humidity without condensing | % | 5...95 |

(1) Refer to Derating Curves section , page 63.

Altitude Conditions

Operating Altitude

Frame sizes 1 to 6

| Altitude | Supply voltage | Supply Electrical Network | | | Derating |
|----------------------------------|----------------|---------------------------|----|-----------------|----------|
| | | TT/TN | IT | Corner-Grounded | |
| Up to 1000 m (3300 ft) | 380...460V | ✓ | ✓ | ✓ | o |
| 1000...2000 m (3300...6600 ft) | 380...460 V | ✓ | ✓ | ✓ | ✓ |
| 2000...3800 m (6600...12400 ft) | 380...460 V | ✓ | ✓ | – | ✓ |
| 3800...4800 m (12400...15700 ft) | 380...460 V | ✓ | – | – | ✓ |

Frame sizes 7, 8A and 8B

| Altitude | Supply voltage (1) | Supply Electrical Network | | Derating |
|--------------------------------|--------------------|---------------------------|----|----------|
| | | TT/TN | IT | |
| Up to 1000 m (3300 ft) | 380...460 V | ✓ | ✓ | o |
| 1000...3000 m (3300...9800 ft) | 380...460 V | ✓ | ✓ | ✓ |

Legend:

✓: Derate the nominal current of the drive by 1% for each additional 100 m.

o: Without derating

–: Not applicable

Chemical and Mechanical Conditions

Withstand to harsh environments, conforming to IEC/EN 60721-3-3

| Drive | Chemical active substances | Mechanical active substances | Mechanical conditions |
|--------------------------|----------------------------|------------------------------|-----------------------|
| Frame sizes 1...6 | class 3C3 | class 3S3 | class 3M3 |
| Frame sizes 7, 8A and 8B | class 3C2 | class 3S2 | class 3M3 |


Dimensions and Weights

About the drawings

All drawings CAD files can be downloaded from www.se.com

Frame Size 1

IP20 Drives - Rear and Side View With Top Cover - Side View Without Top Cover

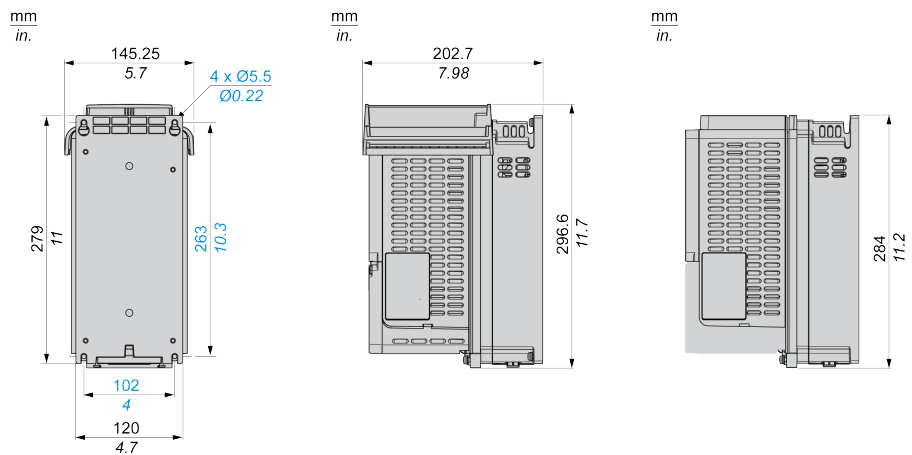


Weights

| Catalog Number | Weight in kg (lb) |
|----------------------------|-------------------|
| ATV610U07N4•...U30N4• | 3.1 (6.9) |
| ATV610U40N4• | 4.0 (8.9) |
| ATV610U55N4•, ATV610U75N4• | 4.6 (10.1) |

Frame size 2

IP20 Drives - Rear and Side View With Top Cover - Side View Without Top Cover

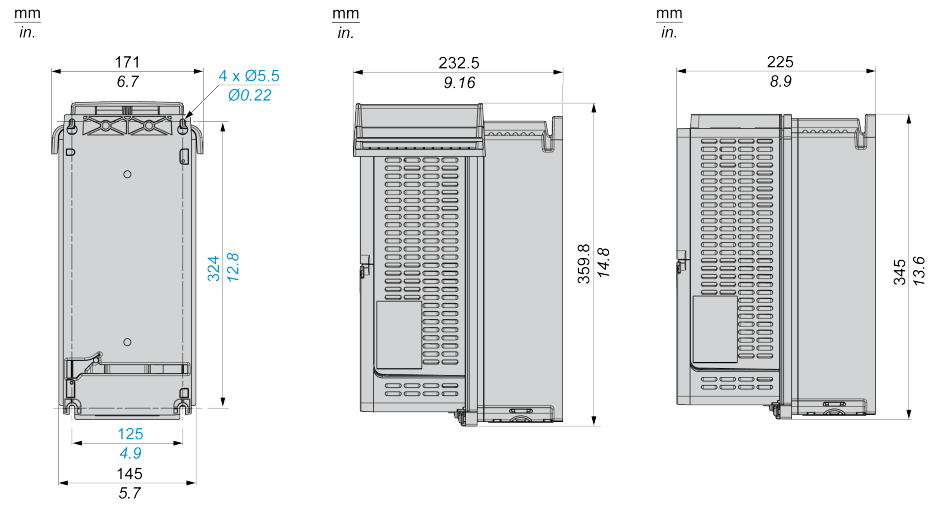


Weights

| Catalog Number | Weight in kg (lb) |
|-------------------------------|-------------------|
| ATV610D11N4• and ATV610D15N4• | 7.7 (17.0) |

Frame size 3

IP20 Drives - Rear and Side View With Top Cover - Side View Without Top Cover



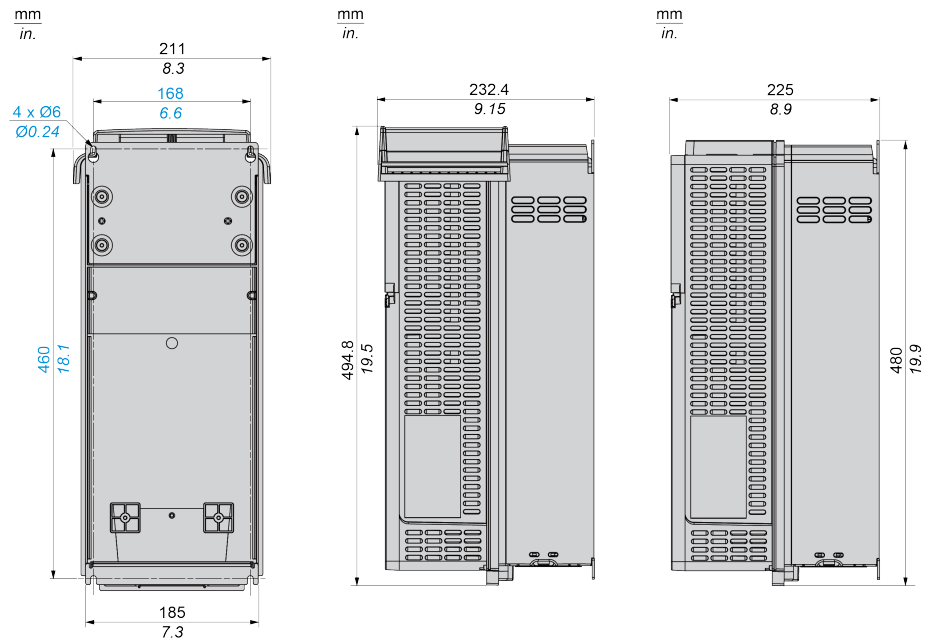


Weights

| Catalog Number | Weight in kg (lb) |
|-------------------------------|-------------------|
| ATV610D18N4• and ATV610D22N4• | 13.5 (29.8) |

Frame size 4

IP20 Drives - Rear and Side View With Top Cover - Side View Without Top Cover

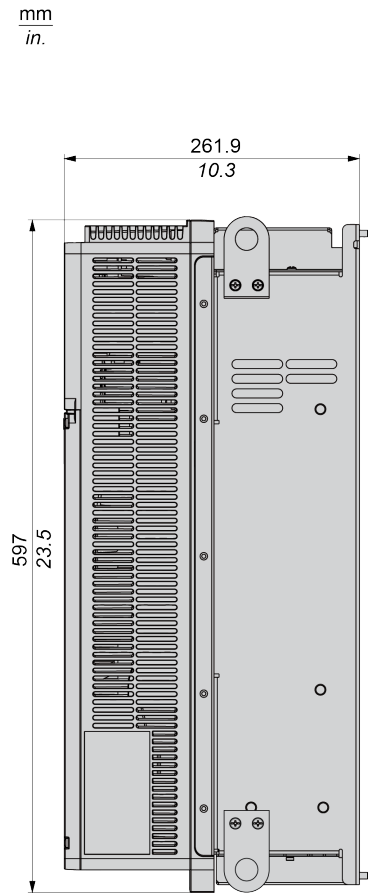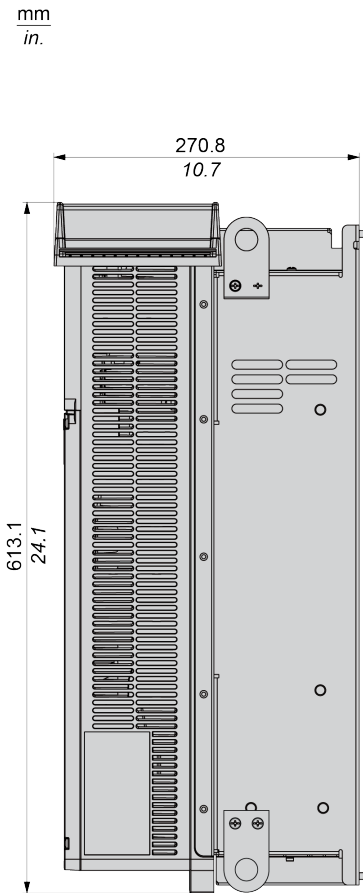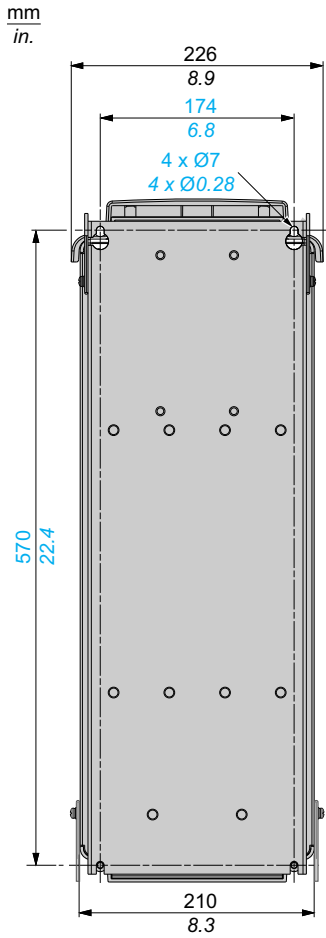


Weights

| Catalog Number | Weight in kg (lb) |
|---|-------------------|
| ATV610D30N4•, ATV610D37N4• and ATV610D45N4• | 25.5 (56.2) |

Frame size 5

IP20 Drives - Rear and Side View With Top Cover - Side View Without Top Cover


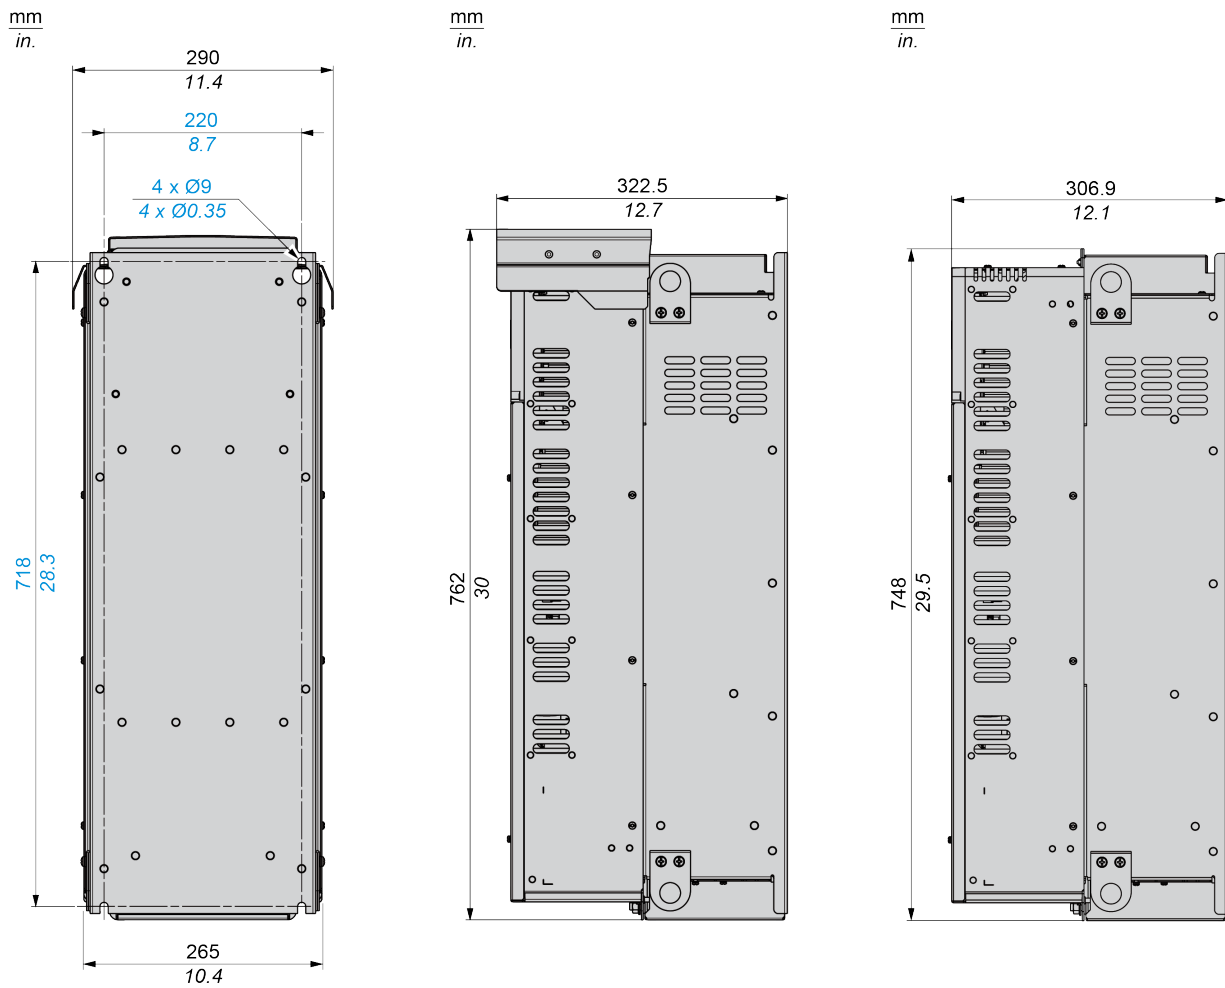


Weights

| Catalog Number | Weight in kg (lb) |
|-----------------------------|-------------------|
| ATV610D55N4•...ATV610D90N4• | 53.0 (116.8) |


Frame size 6

IP20 on Upper Part and IP00 on Lower Part Drives - Rear and Side View

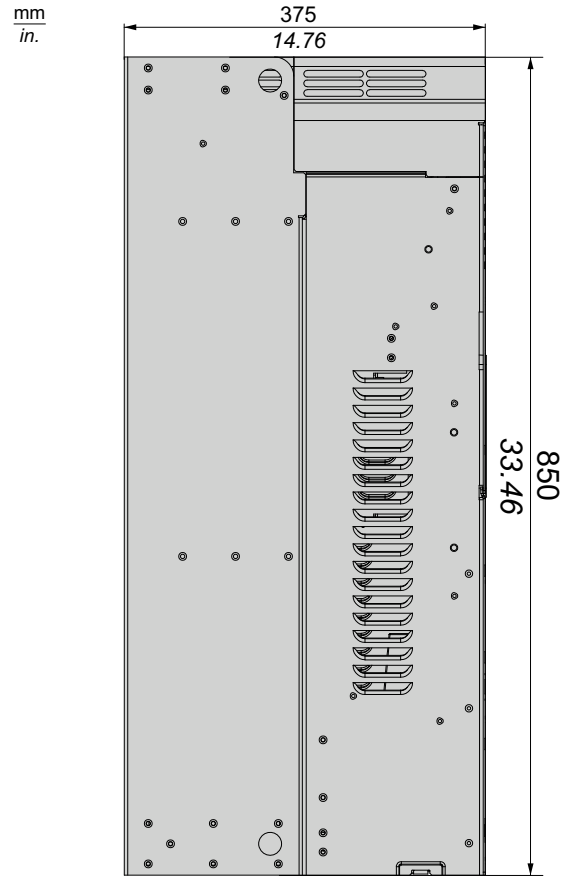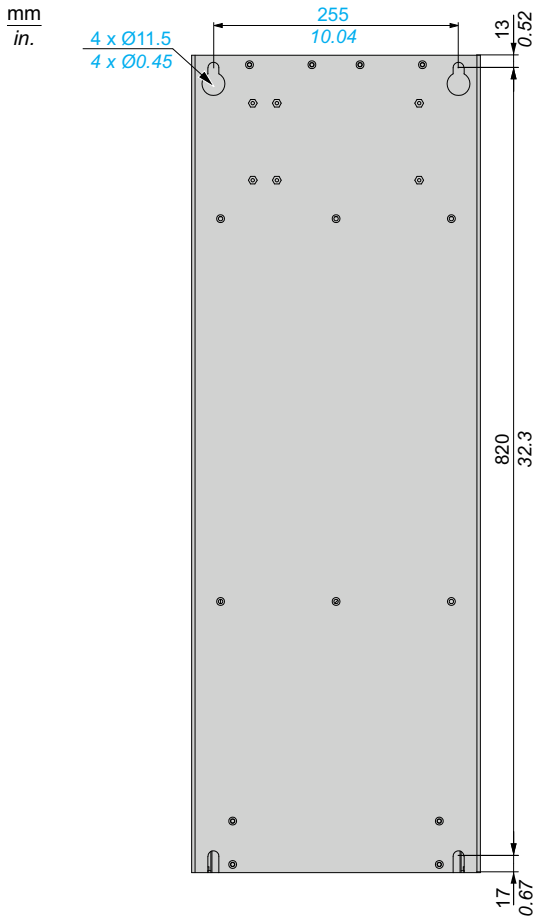


IP20 Drives - Front and Rear View With Conduit Box

mm
in.

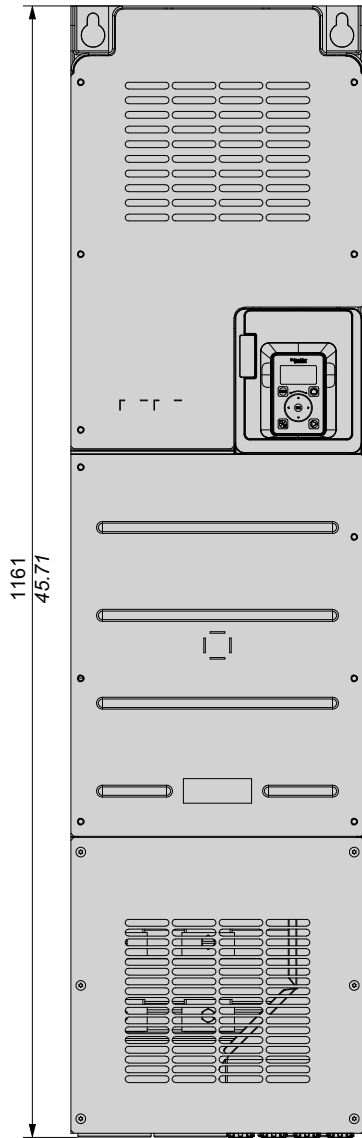

mm
in.

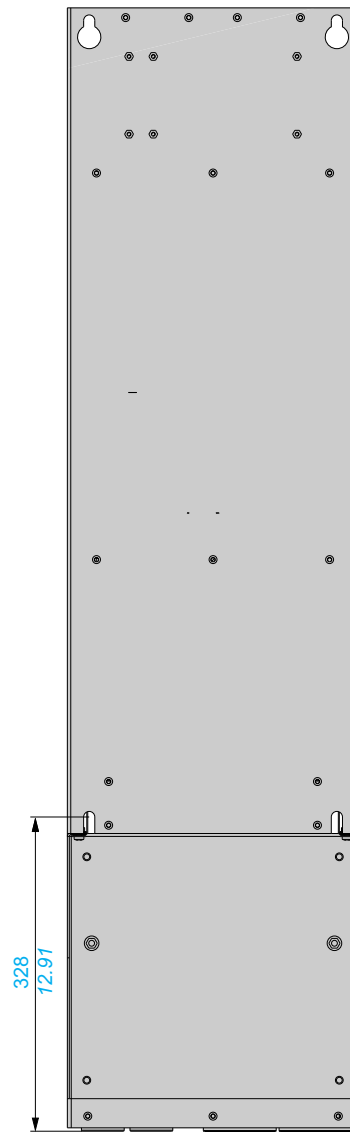


Weights

| Catalog Number | Weight in kg (lb) |
|-----------------------------|-------------------|
| ATV610C11N4•...ATV610C16N4• | 85.5 (188.5) |

Frame Size 7

IP20 on Upper Part and IP00 on Lower Part Drives - Front, Side and rear View

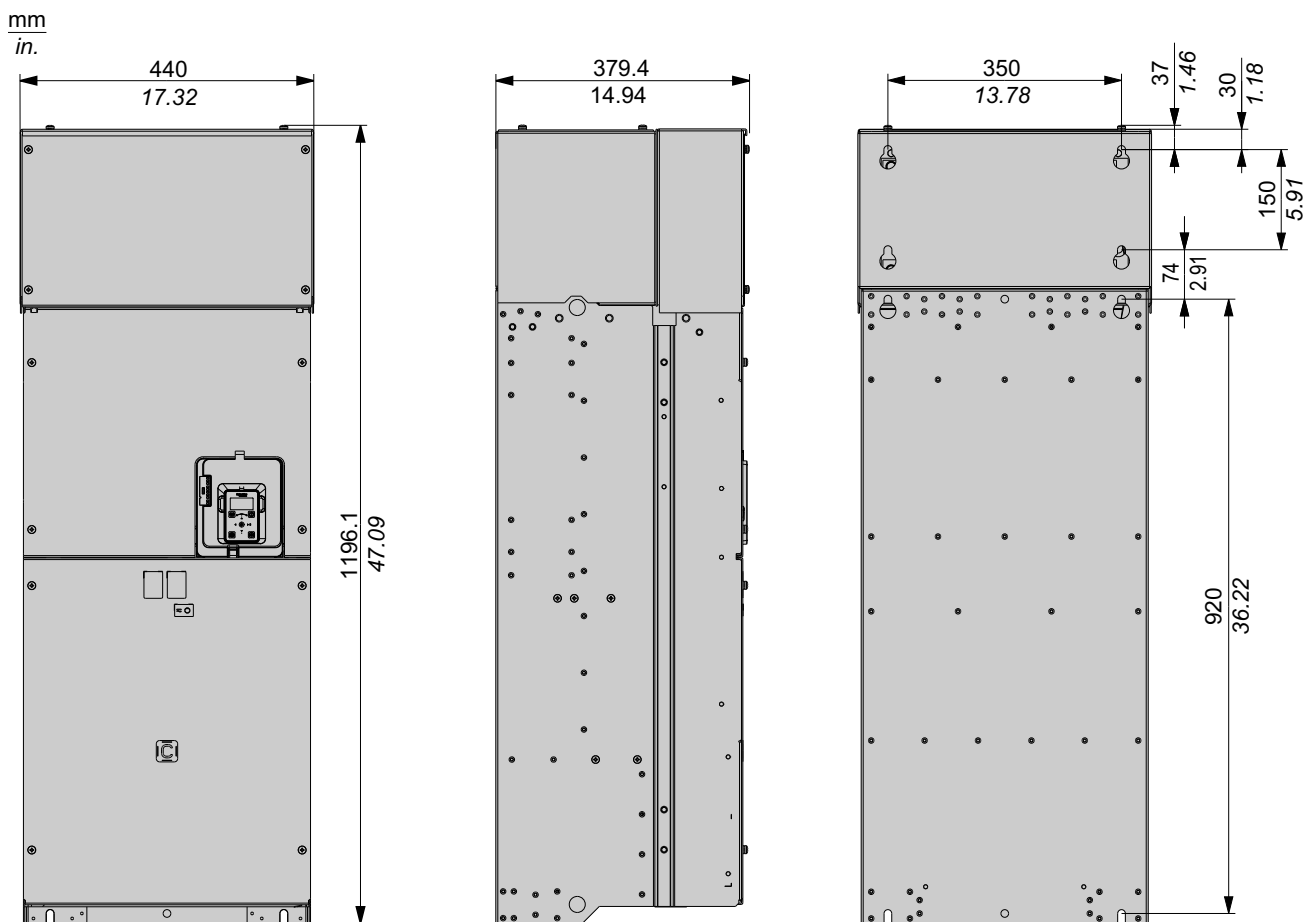

NOTE: Lower Conduit Box part sold separately. This part enables wall mounting of the product. It provides IP21 protection degree on the bottom side.


Weights

| Catalog Number | Weight in kg (lb) |
|--------------------------|-------------------|
| ATV610C22N4, ATV610C25N4 | 173 (381) |

Frame Size 8A

IP20 on Upper Part and IP00 on Lower Part Drives - Front, Side and rear View

mm
in.

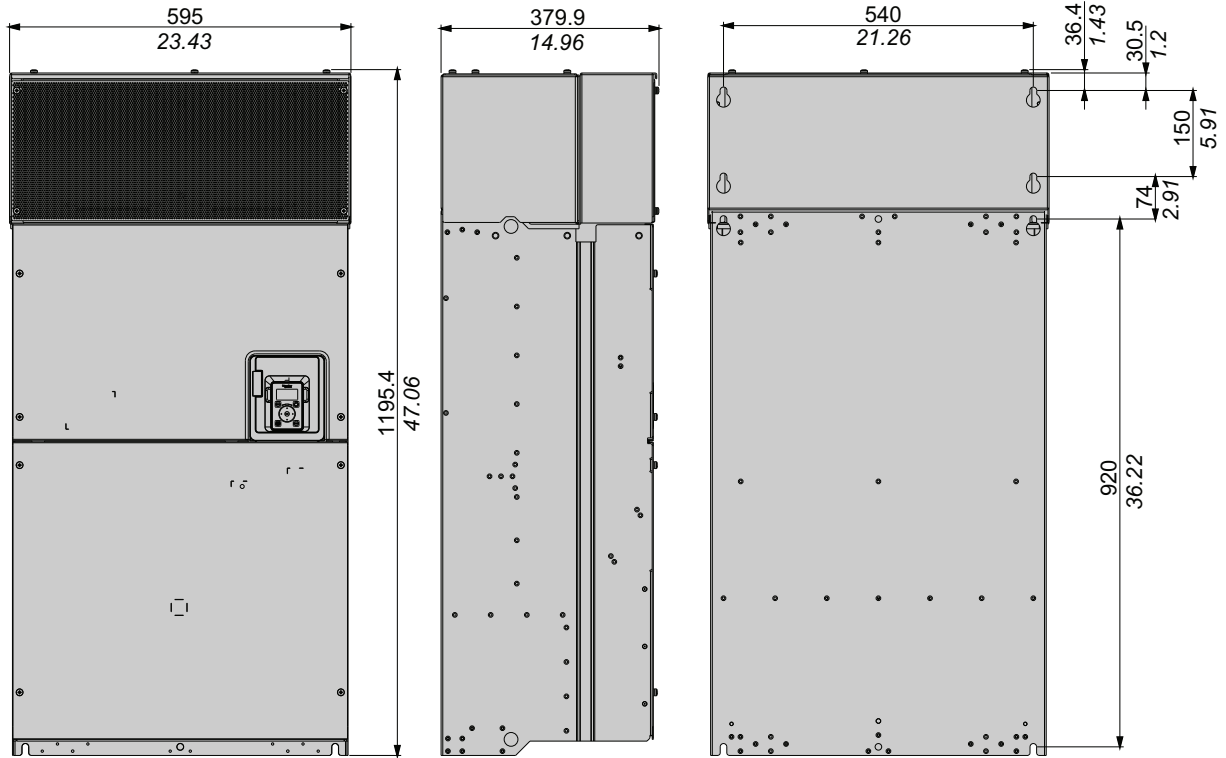


NOTE: Lower Conduit Box part sold separately. This part enables wall mounting of the product. It provides IP21 protection degree on the bottom side.

Weights

| Catalog Number | Weight in kg (lb) |
|----------------|-------------------|
| ATV610C31N4 | 180 (397) |

Frame Size 8B

IP20 on Upper Part and IP00 on Lower Part Drives - Front, Side and rear View

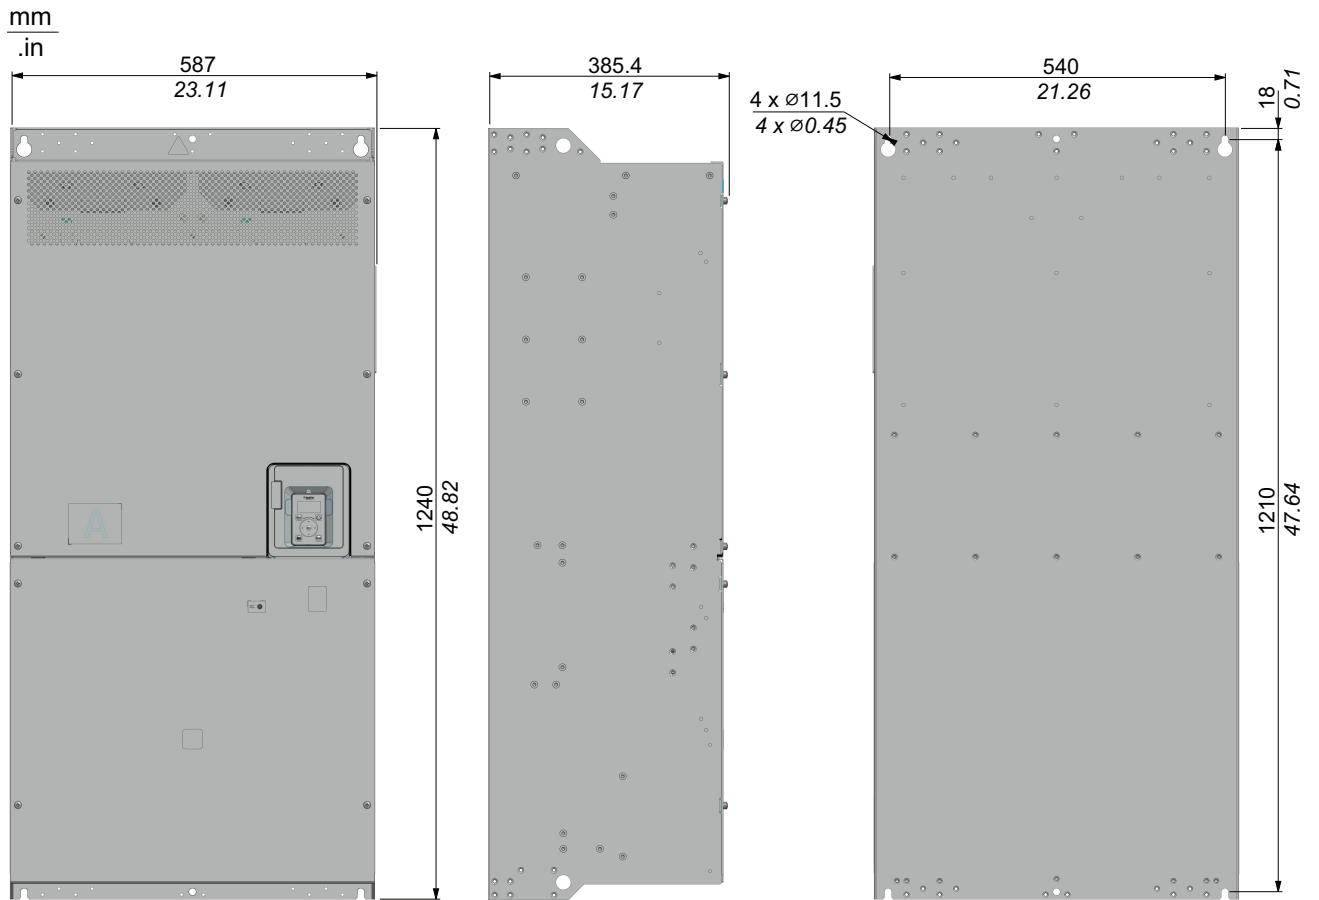

NOTE: Lower Conduit Box part sold separately. This part enables wall mounting of the product. It provides IP21 protection degree on the bottom side.

Weights

| Catalog Number | Weight in kg (lb) |
|--------------------------|-------------------|
| ATV610C35N4, ATV610C40N4 | 196 (432) |

Electrical Data - Drive Ratings

What's in This Chapter

| | |
|------------------------------------|----|
| Drive Ratings in Normal Duty | 43 |
| Drive Ratings in Heavy Duty..... | 45 |

Drive Ratings in Normal Duty

Normal duty values are given for applications requiring a slight overload (up to 110 % for 60 s or 120% for 20 s).

NOTE:

- Refer to the catalog for the fuse coordination table.
- For motor overload and drive thermal monitoring functions, refer to the ATV610 Programming manual.

3-Phase Power Part Supply 380(-15%)...460 Vac(+10%) 50/60 Hz

| Catalog Number | Frame Size [•] | Nominal Power (1) | | Power Part Supply | | | | Drive (output) | |
|----------------|----------------|-------------------|-------|--------------------|------------|----------------|-------------------------|---------------------|--------------------------------|
| | | | | Max. Input Current | | Apparent Power | Max. Inrush Current (2) | Nominal Current (1) | Max. Transient Current (1) (3) |
| | | kW | HP | at 380 Vac | at 460 Vac | | | | |
| | | | | A | A | kVA | A | A | A |
| ATV610U07N4 | [1] | 0.75 | 1 | 3.1 | 2.6 | 2.1 | 8 | 2.2 | 2.4 |
| ATV610U15N4 | [1] | 1.5 | 2 | 5.7 | 4.8 | 3.8 | 8 | 4 | 4.4 |
| ATV610U22N4 | [1] | 2.2 | 3 | 7.8 | 6.5 | 5.2 | 8 | 5.6 | 6.2 |
| ATV610U30N4 | [1] | 3 | - | 10.1 | 8.4 | 6.7 | 34 | 7.2 | 7.9 |
| ATV610U40N4 | [1] | 4 | 5 | 8.8 | 7.9 | 6.3 | 33 | 9.3 | 10.2 |
| ATV610U55N4 | [1] | 5.5 | 7 1/2 | 11.6 | 10.5 | 8.4 | 34 | 12.7 | 14.0 |
| ATV610U75N4 | [1] | 7.5 | 10 | 14.7 | 12.8 | 10.2 | 34 | 15.8 | 17.4 |
| ATV610D11N4 | [2] | 11 | 15 | 22.0 | 19.6 | 15.6 | 40 | 23.5 | 25.9 |
| ATV610D15N4 | [2] | 15 | 20 | 29.4 | 26.0 | 20.7 | 40 | 31.7 | 34.9 |
| ATV610D18N4 | [3] | 18.5 | 25 | 37.2 | 33.5 | 26.7 | 76 | 39.2 | 43.1 |
| ATV610D22N4 | [3] | 22 | 30 | 41.9 | 36.2 | 28.8 | 76 | 46.3 | 50.9 |
| ATV610D30N4 | [4] | 30 | 40 | 62.5 | 55.8 | 44.5 | 91 | 61.5 | 67.7 |
| ATV610D37N4 | [4] | 37 | 50 | 76.6 | 68.3 | 54.4 | 101 | 74.5 | 82.0 |
| ATV610D45N4 | [4] | 45 | 60 | 92.9 | 82.7 | 65.9 | 124 | 88 | 96.8 |
| ATV610D55N4 | [5] | 55 | 75 | 111.5 | 99.7 | 79.4 | 167 | 120 | 132.0 |
| ATV610D75N4 | [5] | 75 | 100 | 147.9 | 130.2 | 103.7 | 186 | 145 | 159.5 |
| ATV610D90N4 | [5] | 90 | 125 | 177.8 | 159.9 | 127.4 | 240 | 173 | 190.3 |
| ATV610C11N4 | [6] | 110 | 150 | 201 | 175.7 | 140.0 | 325 | 211 | 232 |
| ATV610C13N4 | [6] | 132 | 200 | 237 | 203.8 | 162.4 | 325 | 250 | 275 |
| ATV610C16N4 | [6] | 160 | 250 | 284 | 249.5 | 198.8 | 325 | 302 | 332 |
| ATV610C22N4 | [7] | 220 | 350 | 403 | 341 | 271.7 | 436 | 427 | 470 |
| ATV610C25N4 | [7] | 250 | 400 | 454 | 383 | 305.2 | 436 | 481 | 529 |
| ATV610C31N4 | [8A] | 315 | 500 | 570.9 | 480.5 | 383 | 547 | 616 | 678 |
| ATV610C35N4 | [8B] | 355 | 550 | 622 | 523 | 416.5 | 692 | 660 | 726 |
| ATV610C40N4 | [8B] | 400 | 600 | 697 | 583 | 464.6 | 692 | 730 | 803 |

- (1) The switching frequency is adjustable:
- From 2...12 kHz for drive frame sizes 1 to 4, rated value: 4 kHz
 - From 1...8 kHz for drive frame sizes 5 to 8B, rated value: 2.5 kHz
- For operation at switching frequencies higher than the rated value. Derating must be applied to the drive (output) current, page 63. In this case, switching frequency can be reduced if an excessive temperature rise occurs.
- (2) Peak current when power is switched On, for the maximum supply mains voltage.
- (3) The drive is designed to run up to 60 s at 110% of nominal current.

Drive Ratings in Heavy Duty

Heavy-duty values are given for applications requiring a significant overload (up to 150 % for 60 s).

NOTE:

- Refer to the catalog for the fuse coordination table.
- For motor overload and drive thermal monitoring functions, refer to the ATV610 Programming manual.

3-Phase Power Part Supply 380(-15%)...460 Vac(+10%) 50/60 Hz

| Catalog Number | Frame Size [°] | Nominal Power (1) | | Power Part Supply | | | | Drive (output) | |
|----------------|----------------|-------------------|-------|--------------------|------------|----------------|-------------------------|---------------------|--------------------------------|
| | | | | Max. Input Current | | Apparent Power | Max. Inrush Current (2) | Nominal Current (1) | Max. Transient Current (1) (3) |
| | | kW | HP | at 380 Vac | at 460 Vac | | | | |
| | | | | A | A | kVA | A | A | A |
| ATV610U07N4 | [1] | 0.37 | 1/2 | 1.7 | 1.4 | 1.1 | 8 | 1.5 | 2.3 |
| ATV610U15N4 | [1] | 0.75 | 1 | 3.1 | 2.6 | 2.1 | 8 | 2.2 | 3.3 |
| ATV610U22N4 | [1] | 1.5 | 2 | 5.6 | 4.6 | 3.7 | 8 | 4 | 6.0 |
| ATV610U30N4 | [1] | 2.2 | 3 | 7.6 | 6.4 | 5.1 | 34 | 5.6 | 8.4 |
| ATV610U40N4 | [1] | 3 | - | 7.2 | 6.2 | 4.9 | 33 | 7.2 | 10.8 |
| ATV610U55N4 | [1] | 4 | 5 | 8.9 | 7.9 | 6.3 | 34 | 9.3 | 14.0 |
| ATV610U75N4 | [1] | 5.5 | 7 1/2 | 11.3 | 10.2 | 8.1 | 34 | 12.7 | 19.1 |
| ATV610D11N4 | [2] | 7.5 | 10 | 16.4 | 14.6 | 11.6 | 40 | 16.5 | 24.8 |
| ATV610D15N4 | [2] | 11 | 15 | 23 | 20.8 | 16.6 | 40 | 23.5 | 35.3 |
| ATV610D18N4 | [3] | 15 | 20 | 31.6 | 28.3 | 22.5 | 76 | 31.7 | 47.6 |
| ATV610D22N4 | [3] | 18.5 | 25 | 36 | 31.6 | 25.2 | 76 | 39.2 | 58.8 |
| ATV610D30N4 | [4] | 22 | 30 | 49.7 | 42.5 | 33.9 | 91 | 46.3 | 69.5 |
| ATV610D37N4 | [4] | 30 | 40 | 65.8 | 56.8 | 45.3 | 101 | 59.6 | 89.4 |
| ATV610D45N4 | [4] | 37 | 50 | 80.5 | 69.6 | 55.5 | 124 | 74.5 | 112 |
| ATV610D55N4 | [5] | 45 | 60 | 95.9 | 84.0 | 66.9 | 167 | 88 | 132.0 |
| ATV610D75N4 | [5] | 55 | 75 | 115.8 | 101.7 | 81.0 | 186 | 106 | 159.0 |
| ATV610D90N4 | [5] | 75 | 100 | 155.8 | 138.1 | 110.0 | 240 | 145 | 217.5 |
| ATV610C11N4 | [6] | 90 | 125 | 170 | 149.1 | 118.8 | 325 | 173 | 259.5 |
| ATV610C13N4 | [6] | 110 | 150 | 201 | 174.2 | 138.8 | 325 | 211 | 317 |
| ATV610C16N4 | [6] | 132 | 200 | 237 | 205.9 | 164.0 | 325 | 250 | 375 |
| ATV610C22N4 | [7] | 160 | 250 | 302 | 260 | 205.6 | 436 | 302 | 453 |
| ATV610C25N4 | [7] | 200 | 300 | 369 | 313 | 249.4 | 436 | 370 | 555 |
| ATV610C31N4 | [8A] | 250 | 400 | 460 | 390.9 | 312 | 547 | 481 | 722 |
| ATV610C35N4 | [8B] | 355 | 550 | 498 | 422.3 | 336.5 | 692 | 550 | 825 |
| ATV610C40N4 | [8B] | 400 | 600 | 556 | 469.0 | 373.7 | 692 | 616 | 924 |

- (1) The switching frequency is adjustable:
- From 2...12 kHz for drive frame sizes 1 to 4, rated value: 4 kHz
 - From 1...8 kHz for drive frame sizes 5 to 8B, rated value: 2.5 kHz
- For operation at switching frequencies higher than the rated value. Derating must be applied to the drive (output) current, page 63. In this case, switching frequency can be reduced if an excessive temperature rise occurs.
- (2) Peak current when power is switched On, for the maximum supply mains voltage.
- (3) The drive is designed to run up to 60 s at 150% of nominal current.

Electrical Data - Upstream Protective Device

What's in This Chapter

| | |
|---|----|
| Upstream Protective Device – Introduction | 48 |
| Prospective Short-Circuit Current | 51 |
| IEC Type Circuit-Breaker — with enclosure | 54 |
| IEC Fuses..... | 56 |

Upstream Protective Device – Introduction

Overview

⚡⚠ DANGER

INSUFFICIENT PROTECTION AGAINST OVERCURRENTS CAN CAUSE FIRE OR EXPLOSION

- Use properly rated overcurrent protection devices.
- Use the fuses/circuit breakers specified.
- Do not connect the product to a supply mains whose prospective short circuit current rating (current that flows during a short circuit) exceeds the specified maximum permissible value.
- When rating the upstream mains fuses and the cross sections as well as the lengths of the mains cables, take into account the minimum required prospective short-circuit current (Isc). Refer to the Upstream Protection Device section in the installation manual.
- If the minimum required prospective short-circuit current (Isc) is not available, increase the power of the transformer or decrease the length of the cables.

Failure to follow these instructions will result in death or serious injury.

The values and products for IEC compliance are specified in the present manual.

General

- The Short Circuit Protective Device (SCPD) rated to the drive will help protect the upstream installation in case of a short-circuit internal to the drive and mitigate the damage to the drive and its surrounding area.
- The SCPD rated to the drive is mandatory to help ensuring the safety of the Power Drive System.
It comes in addition to the upstream branch circuit protection which is in compliance with the local regulation for electrical installation.
- The SCPD shall mitigate the damage in case of detected error condition such as an internal short-circuit of the drive.
- The SCPD must take into account both following characteristics...
 - a maximum prospective short-circuit current
 - a minimum required prospective short-circuit current (Isc).

If the minimum required prospective short-circuit current (Isc) is not available, increase the power of the transformer or decrease the length of the cables

In other cases, contact your Schneider Electric Customer Care Center (CCC) www.se.com/CCC for specific selection of Short Circuit Protective Device (SCPD).

Note: The electronic power output short-circuit protection circuitry meets the requirements of IEC 60364-4-41:2005/AMD1 — Clause 411.

Protection Devices & Certified Associations

Using protection devices that are unsuitable, not certified, or not validated can lead to severe hazards such as **electric shock, explosion, arc flash, or fire**. These risks may occur when equipment is combined in configurations that have not been tested or certified according to the applicable standards.

The specified **short circuit protection devices and associations** are **not optional** – they are **mandatory**. Only these configurations have been tested and certified to ensure that applicable standards are fully covered.

Using alternative devices – such as a circuit breaker or fuses that differs from the specified model – may compromise:

- system selectivity,
- breaking capacity,
- thermal and mechanical withstand,
- overall system compliance,
- and ultimately, the safety of persons and equipment.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, ARC FLASH OR FIRE

Any association other than those provided, validated, or officially specified must undergo:

- complete normative testing,
- performed by a Certified Competent Body,
- confirming that 100% of the applicable standards remain fully covered.

Failure to follow these instructions will result in death or serious injury.


Without such testing and validation, system compliance can no longer be guaranteed, and Schneider Electric cannot be held responsible for any situation resulting from the customer's own choices or actions, including but not limited to:

- the use of protection devices or associations that are not validated,
- any substitution or modification involving components that are not certified,
- cases where normative testing has not been performed and approved by a recognized certified body.

It is the customer's responsibility to ensure that any alternative association is fully tested and certified in accordance with the applicable standards.

Wiring Diagram

This diagram shows an example of installation with both SCPD types, Circuit-breaker and Fuse link rated to the drive.

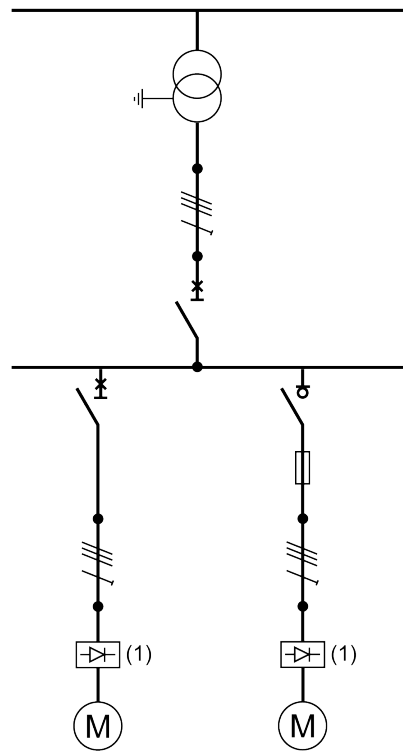

(1) Drive

Prospective Short-Circuit Current

Calculation

The prospective short-circuit current shall be computed at the drive connection points.

We recommend using the Schneider Electric tool Ecodial Advance Calculation



available on www.se.com/en/product-range-presentation/61013-ecodial-advance-calculation/

The following equations allow to estimate the value of the symmetrical three-phase prospective short-circuit current (I_{sc}) at the drive connection points.

$$X_t = \frac{U^2}{S_n} \cdot usc$$

$$Z_{cc} = \sqrt{\left(\rho \cdot \frac{l}{S} + R_f\right)^2 + (X_t + X_c \cdot l + X_f)^2}$$

$$I_{sc} = \frac{U}{\sqrt{3}} \cdot \frac{1}{Z_{cc}}$$

| | |
|------------------------------|---|
| I_{sc} | Symmetrical three-phase prospective short-circuit current (kA) |
| X_t | Transformer reactance |
| U | No-load phase to phase voltage of the transformer (V) |
| S_n | Apparent transformer power (kVA) |
| usc | Short-circuit voltage, according to the transformer data sheet (%) |
| Z_{cc} | Total short-circuit impedance (m Ω) |
| ρ | Conductor resistivity e.g. Cu: 0.01851 m Ω .mm |
| l | Conductor length (mm) |
| S | Conductor cross section (mm ²) |
| X_c | Conductor lineic reactance (0.0001 m Ω /mm) |
| R_f, X_f | Resistance and reactance of the line filter (m Ω) , page 53 |

Example of Calculation with Copper Cable (without line filter)

| Transformer 50 Hz | U 400 Vac Usc | Cable Cross Section | Isc depending on cable length in m(ft) | | | | | | | |
|----------------------|---------------------|------------------------|--|------------|-------------|-------------|--------------|--------------|--------------|----------------|
| | | | 10 (33) | 20 (66) | 40 (131) | 80 (262) | 100 (328) | 160 (525) | 200 (656) | 320 (1,050) |
| kVA | % | mm ² (AWG) | kA | kA | kA | kA | kA | kA | kA | kA |
| 100 | 4 | 2.5 (14) | 2.3 | 1.4 | 0.8 | 0.4 | 0.3 | 0.2 | 0.2 | 0.1 |
| | | 4 (12) | 2.9 | 2.0 | 1.2 | 0.6 | 0.5 | 0.3 | 0.2 | 0.2 |
| | | 6 (10) | 3.2 | 2.6 | 1.6 | 0.9 | 0.7 | 0.5 | 0.4 | 0.2 |
| | | 10 (8) | 3.4 | 3.1 | 2.3 | 1.4 | 1.2 | 0.8 | 0.6 | 0.4 |
| | | 25 (4) | 3.5 | 3.4 | 3.1 | 2.5 | 2.2 | 1.6 | 1.4 | 0.9 |
| | | 50 (0) | 3.5 | 3.5 | 3.3 | 3.0 | 2.8 | 2.3 | 2.1 | 1.5 |
| | | 70 (00) | 3.5 | 3.5 | 3.4 | 3.1 | 2.9 | 2.6 | 2.3 | 1.8 |
| | | 120 (250 MCM) | 3.6 | 3.5 | 3.4 | 3.2 | 3.1 | 2.8 | 2.6 | 2.1 |
| 250 | 4 | 6 (10) | 5.7 | 3.4 | 1.8 | 0.9 | 0.7 | 0.5 | 0.4 | 0.2 |
| | | 10 (8) | 7.1 | 5.0 | 2.9 | 1.5 | 1.2 | 0.8 | 0.6 | 0.4 |
| | | 25 (4) | 8.4 | 7.4 | 5.5 | 3.4 | 2.8 | 1.8 | 1.5 | 0.9 |
| | | 50 (0) | 8.6 | 8.1 | 7.0 | 5.2 | 4.5 | 3.2 | 2.7 | 1.8 |
| | | 70 (00) | 8.6 | 8.2 | 7.3 | 5.8 | 5.2 | 3.9 | 3.3 | 2.3 |
| | | 120 (250 MCM) | 8.7 | 8.3 | 7.6 | 6.5 | 6.0 | 4.8 | 4.2 | 3.0 |
| 400 | 4 | 6 (10) | 6.6 | 3.6 | 1.8 | 0.9 | 0.7 | 0.5 | 0.4 | 0.2 |
| | | 10 (8) | 9.2 | 5.6 | 3.0 | 1.5 | 1.2 | 0.8 | 0.6 | 0.4 |
| | | 25 (4) | 12 | 9.9 | 6.5 | 3.6 | 2.9 | 1.9 | 1.5 | 1.0 |
| | | 50 (0) | 13 | 12 | 9.3 | 6.1 | 5.1 | 3.4 | 2.8 | 1.8 |
| | | 70 (00) | 13 | 12 | 10 | 7.2 | 6.2 | 4.4 | 3.6 | 2.4 |
| | | 120 (250 MCM) | 13 | 13 | 11 | 8.6 | 7.6 | 5.7 | 4.9 | 3.4 |
| 800 | 6 | 6 (10) | 6.9 | 3.7 | 1.9 | 0.9 | 0.7 | 0.5 | 0.4 | 0.2 |
| | | 10 (8) | 10 | 5.8 | 3.0 | 1.5 | 1.2 | 0.8 | 0.6 | 0.4 |
| | | 25 (4) | 15 | 11 | 6.9 | 3.7 | 3.0 | 1.9 | 1.5 | 1.0 |
| | | 50 (0) | 17 | 15 | 11 | 6.5 | 5.4 | 3.5 | 2.9 | 1.8 |
| | | 70 (00) | 17 | 15 | 12 | 7.9 | 6.7 | 4.6 | 3.7 | 2.4 |
| | | 120 (250 MCM) | 17 | 16 | 13 | 9.8 | 8.6 | 6.2 | 5.2 | 3.5 |
| 1,000 | 6 | 6 (10) | 7.1 | 3.7 | 1.9 | 0.9 | 0.7 | 0.5 | 0.4 | 0.2 |
| | | 10 (8) | 11 | 6.0 | 3.1 | 1.5 | 1.2 | 0.8 | 0.6 | 0.4 |
| | | 25 (4) | 18 | 12 | 7.1 | 3.7 | 3.0 | 1.9 | 1.5 | 1.0 |
| | | 50 (0) | 21 | 17 | 12 | 6.7 | 5.5 | 3.6 | 2.9 | 1.8 |
| | | 70 (00) | 21 | 18 | 13 | 8.4 | 7.0 | 4.7 | 3.8 | 2.4 |
| | | 120 (250 MCM) | 22 | 19 | 16 | 11 | 9.3 | 6.5 | 5.4 | 3.6 |

Additional Line Filter Option

If a line input filter option is required for the installation such as a line reactor or a passive harmonic filter, the minimum prospective short-circuit current capability of the source is reduced at the drive connection point and shall be estimated (see Calculation, page 51) with the impedance values given in the table below.

Then, the SCPD type shall be selected according to the drive. If no selection is available, Schneider Electric Customer Care Center (CCC) www.se.com/CCC should be contacted.

EMC filter series have no significant effect on the minimum prospective short-circuit current capability of the main source.

Through the line option, the I_{sc} will be limited to a maximum value independent of the transformer and cable. **Therefore the below equations can be used to estimate the minimum prospective short-circuit current capability.**

$$10 \text{ m}\Omega \leq Xf \leq 400 \text{ m}\Omega \Rightarrow I_{sc_{\max i}} (\text{kA}) = 4.7 - 0.7 \cdot \text{Log}(Xf)$$

$$400 \text{ m}\Omega \leq Xf \leq 2000 \text{ m}\Omega \Rightarrow I_{sc_{\max i}} (\text{kA}) = 2.05 - 0.26 \cdot \text{Log}(Xf)$$

Log: Natural logarithm

Line Choke Filters Impedance Values

| Line Choke Filter | Xf in mΩ |
|-----------------------|----------|
| VZ1L004M010, VW3A4551 | 700 |
| VZ1L007UM50, VW3A4552 | 300 |
| VZ1L018UM20, VW3A4553 | 100 |
| VW3A4554 | 70 |
| VW3A4555 | 30 |
| VW3A4556 | 20 |

IEC Type Circuit-Breaker — with enclosure

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR FIRE

The opening of the branch-circuit protective device is able to be an indication that a fault current has been interrupted.

- Current-carrying parts and other components of the controller should be examined and replaced if damaged.
- If burnout of the current element of an overload relay occurs, the complete overload relay must be replaced.

Failure to follow these instructions will result in death or serious injury.

Function

The circuit-breaker offers enhanced features versus fuse-link since it cumulates 3 functionalities:

- insulation with lock,
- switch (full load interruption),
- downstream short-circuit protection without replacement.

Altivar Process Short Circuit Current Ratings: Selection Table

The amp rating of the short circuit protection devices in the table are maximum values **with Enclosure**, in **Normal Duty**.

Smaller amp sizes may be used; particularly for Heavy Duty ratings.

NOTE: Integral solid state short circuit protection in the drive does not provide branch circuit protection. Branch circuit protection must be provided in accordance with any local codes.

NOTE:

First, calculate prospective short-circuit current (ISC) in Calculation section, page 51.

Then, verify that ISC value is within the range of SCCR given in the following table.

Circuit-Breaker Selection Table

Schneider Electric circuit-breaker, setting and limits shall be selected according to the following table:

| Catalog Number | Circuit-Breaker | I _r m | Minimum I _{sc} |
|---------------------------------------|-----------------|------------------|-------------------------|
| | to IEC 60947-2 | (A) | (A) |
| ATV610U07N4 | GV2L08 | 74 | 100 |
| ATV610U15N4 | GV2L10 | 91 | 200 |
| ATV610U22N4 | GV2L14 | 149 | 300 |
| ATV610U30N4, ATV610U40N4, ATV610U55N4 | GV2L16 | 253.4 | 300 |
| ATV610U75N4 | GV2L20 | 223 | 400 |
| ATV610D11N4 | GV2L22 | 327 | 600 |
| ATV610D15N4 | GV3L32 | 448 | 700 |

| Catalog Number | Circuit-Breaker | I _{r m} | Minimum I _{sc} |
|--------------------------|-----------------------------|------------------|-------------------------|
| | to IEC 60947-2 | (A) | (A) |
| ATV610D18N4 | GV3L40 | 560 | 900 |
| ATV610D22N4 | GV3L50 | 700 | 1100 |
| ATV610D30N4 | GV3L65 | 910 | 1800 |
| ATV610D37N4 | GV4L80 | 480 | 1800 |
| ATV610D45N4 | GV4L115 | 690 | 2500 |
| ATV610D55N4, ATV610D75N4 | NSX160-MA150 | 1350 | 3200 |
| ATV610D90N4, ATV610C11N4 | NSX250-MA220 | 1980 | 4700 |
| ATV610C13N4, ATV610C16N4 | NSX400-1.3M320 | 4800 | 6300 |
| ATV610C22N4, ATV610C25N4 | NSX630● Micrologic 1.3-M500 | 6500 | 9000 |
| ATV610C31N4 | NS800●micrologic 2 or 5 | 1600 | 11000 |
| ATV610C35N4 | | 1600 | 20000 |
| ATV610C40N4 | | 1600 | 20000 |

IEC Fuses

gR-aR Category Fuses Selection Table

Current limiting fuses can be chosen as SCPD according to the following table:

| Catalog Number | Fuse gR-aR to IEC 60269-4 | |
|--------------------------|---------------------------|-------------------------|
| | Rating | Minimum I _{sc} |
| 380...460 Vac | (A) | (A) |
| ATV610U07N4 | 8 | 100 |
| ATV610U15N4 | 10 | 100 |
| ATV610U22N4 | 12.5 | 200 |
| ATV610U30N4 | 20 | 200 |
| ATV610U40N4 | 16 | 200 |
| ATV610U55N4 | 20 | 200 |
| ATV610U75N4 | 25 | 300 |
| ATV610D11N4 | 40 | 500 |
| ATV610D15N4 | 50 | 800 |
| ATV610D18N4 | 63 | 1000 |
| ATV610D22N4 | 80 | 1500 |
| ATV610D30N4 | 100 | 1500 |
| ATV610D37N4 | 125 | 2000 |
| ATV610D45N4, ATV610D55N4 | 160 | 2500 |
| ATV610D75N4, ATV610D90N4 | 250 | 4000 |
| ATV610C11N4 | 315 | 6000 |
| ATV610C13N4 | 350 | 7000 |
| ATV610C16N4 | 400 | 9000 |
| ATV610C22N4 | 630 | 10000 |
| ATV610C25N4 | 700 | 10000 |
| ATV610C31N4 | 900 | 11000 |
| ATV610C35N4 | 1000 | 12000 |
| ATV610C40N4 | 1000 | 12000 |

Drive Mounting

What's in This Part

| | |
|---------------------------|----|
| Mounting Conditions..... | 58 |
| Derating Curves..... | 63 |
| Mounting Procedures | 69 |

Mounting Conditions

Before You Begin

DANGER

RISK OF FIRE

The device is suitable for mounting on concrete or other non-combustible surfaces only.

Failure to follow these instructions will result in death or serious injury.

Conductive foreign objects may cause parasitic voltage.

DANGER

ELECTRIC SHOCK AND/OR UNANTICIPATED EQUIPMENT OPERATION

- Keep foreign objects such as chips, screws or wire clippings from getting into the product.
- Verify correct seat of seals and cable entries in order to avoid deposits and humidity.

Failure to follow these instructions will result in death or serious injury.

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

WARNING

HOT SURFACES

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Power Drive Systems (PDS) can generate strong local electrical and magnetic fields. This can cause interference in electromagnetically sensitive devices.

WARNING


ELECTROMAGNETIC FIELDS

- Keep persons with electronic medical implants, such as pacemakers, away from the equipment.
- Do not place electromagnetically sensitive devices in the vicinity of the equipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.




Attaching A Label With Safety Instructions

A label kit is provided with the drive.


| Step | Action |
|------|---|
| 1 | Observe the safety regulations in the target country |
| 2 | Select the label suitable for the target country |
| 3 | <p>Attach the label to the front of the device so that it is clearly visible. Below is the English version. The label can vary depending on the frame size of the product.</p> <div data-bbox="635 481 853 788" style="border: 1px solid black; padding: 5px; margin: 10px 0;">  <p>DANGER</p> <p>ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH.</p> <p>To service, remove all power. - Wait 15 minutes - Verify no voltage is present.</p> <p>Failure to comply will result in death or serious injury</p> </div> <p>NOTE: Products used in Canada according to CSA C22.2 no.274 must comply with the requirement defined by the Canadian Advisory council of Electrical Safety (CACES).</p> <p>It defines that dual language (French and English) safety labeling is required on all products for use in Canada.</p> <p>To fulfill this requirement, add the French language safety label on the front panel of the product.</p> |

Mounting Types

This table shows the possible mounting types and the resulting IP degree of protection.
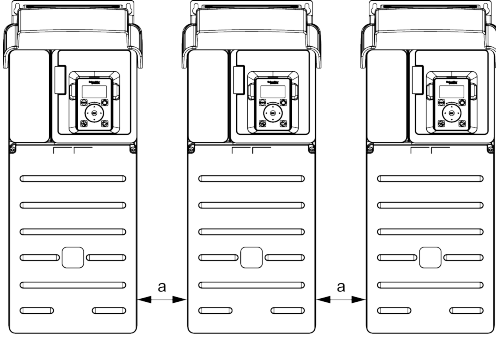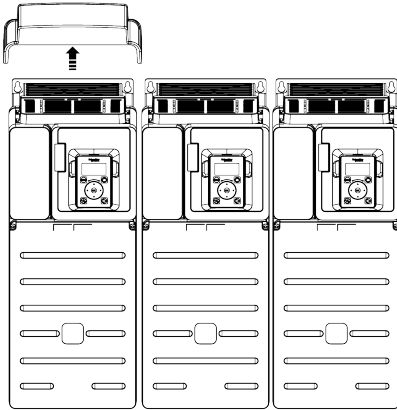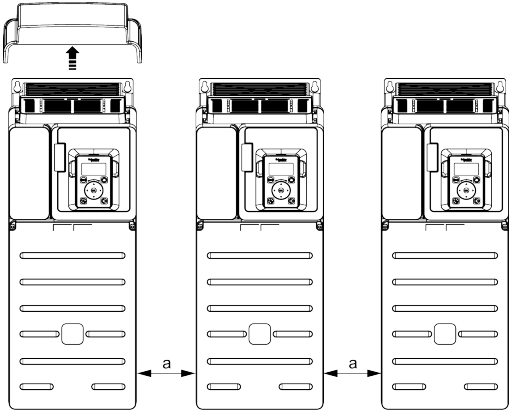
| Mounting | | Figure |
|----------|--------------|---|
| No | Type / IP | |
| A | Individual |  <p>Frame sizes 1, 2 and 3: $a \geq 100 \text{ mm (3.9 in.)}$ Frame sizes 4, 5 and 6: $a \geq 110 \text{ mm (4.33 in.)}$</p> |
| B | Side by side |  <p>Frame sizes 1, 2, 3, 7, 8A and 8B: possible Frame sizes 4 and 5: possible, 2 drives only Frame size 6: only at ambient temperature lower than $40 \text{ }^\circ\text{C (104 }^\circ\text{F)}$</p> |
| C | Individual |  <p>Frame sizes 1, 2, 3, 7, 8A and 8B: possible Frame sizes 4, 5 and 6: $a \geq 110 \text{ mm (4.33 in.)}$</p> |

Clearances and Mounting Position - Wall Mounting

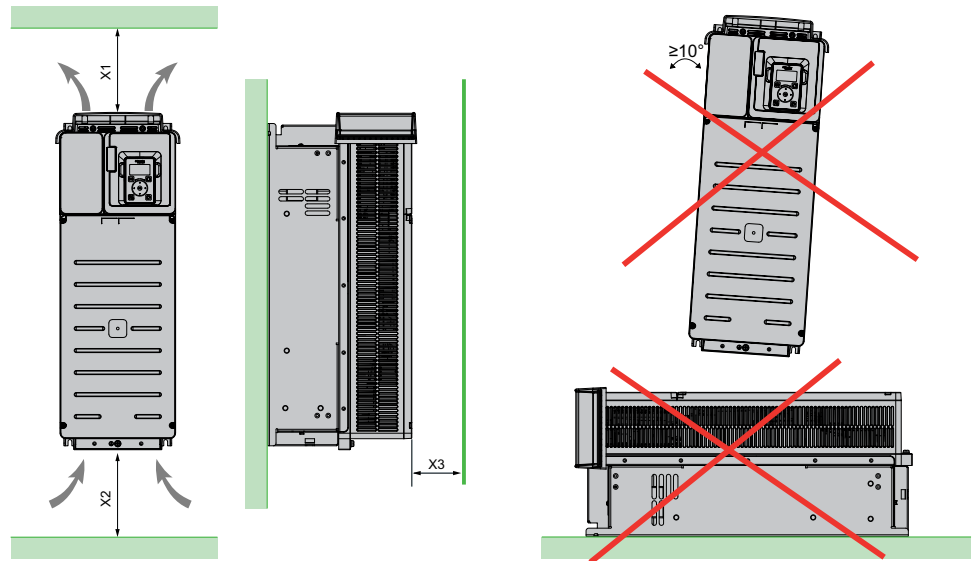

Minimum clearance regarding the drive frame size

| Frame Size | X1 | X2 | X3 |
|--------------|---------------------|---------------------|---------------------|
| 1...5 | ≥ 100 mm (3.94 in.) | ≥ 100 mm (3.94 in.) | ≥ 10 mm (0.39 in.) |
| 6 | ≥ 250 mm (10 in.) | ≥ 250 mm (10 in.) | ≥ 100 mm (3.94 in.) |
| 7, 8A and 8B | ≥ 200 mm (7.87 in.) | ≥ 150 mm (5.90 in.) | ≥ 10 mm (0.39 in.) |

X1: free space in top of the drive

X2: free space in lower part of the drive

X3: free space in front of the drive.

General Mounting Instructions

- Mount the device in a vertical position. This is required for cooling the device.
- Attach it on the mounting surface in compliance with standards, using 4 screws with captive washer according to the table given in *Mounting Procedures*, page 69.
- The use of washers is required with all mounting screws.
- Tighten the fixation screws.
- Do not mount the device close to heat sources.
- Avoid environmental effects like high temperatures and high humidity as well as dust, dirt and conductive gases.
- Adhere to the minimum installation distances for required cooling.
- Do not mount the device on flammable materials.

Power Dissipated For Enclosed Drives and Required Air Flow

| Catalog Number | Frame Size | Power Dissipated (1) | | | Minimum air flow rate required | |
|----------------|------------|----------------------|---------------------|-------|--------------------------------|------------------------|
| | | Forced Cooled Area | Natural Cooled Area | Total | (m ³ /hour) | (ft ³ /min) |
| | | (W) | (W) | (W) | | |
| ATV610U07N4 | 1 | 19 | 23 | 42 | 38 | 22 |
| ATV610U15N4 | 1 | 40 | 25 | 65 | 38 | 22 |
| ATV610U22N4 | 1 | 54 | 27 | 81 | 38 | 22 |
| ATV610U30N4 | 1 | 74 | 29 | 103 | 38 | 22 |
| ATV610U40N4 | 1 | 128 | 32 | 160 | 38 | 22 |
| ATV610U55N4 | 1 | 171 | 35 | 206 | 38 | 22 |
| ATV610U75N4 | 1 | 216 | 42 | 258 | 103 | 61 |
| ATV610D11N4 | 2 | 310 | 54 | 364 | 103 | 61 |
| ATV610D15N4 | 2 | 408 | 62 | 470 | 215 | 127 |
| ATV610D18N4 | 3 | 410 | 64 | 474 | 215 | 127 |
| ATV610D22N4 | 3 | 492 | 72 | 564 | 215 | 127 |
| ATV610D30N4 | 4 | 649 | 91 | 740 | 240 | 141 |
| ATV610D37N4 | 4 | 842 | 109 | 951 | 240 | 141 |
| ATV610D45N4 | 4 | 1000 | 121 | 1121 | 240 | 141 |
| ATV610D55N4 | 5 | 969 | 131 | 1100 | 295 | 174 |
| ATV610D75N4 | 5 | 1460 | 177 | 1637 | 295 | 174 |
| ATV610D90N4 | 5 | 1745 | 199 | 1944 | 295 | 174 |
| ATV610C11N4 | 6 | 2060 | 230 | 2290 | 600 | 353 |
| ATV610C13N4 | 6 | 2620 | 260 | 2880 | 600 | 353 |
| ATV610C16N4 | 6 | 3410 | 300 | 3710 | 600 | 353 |
| ATV610C22N4 | 7 | 3337 | 720 | 4057 | 860 | 506 |
| ATV610C25N4 | 7 | 3861 | 818 | 4679 | 860 | 506 |
| ATV610C31N4 | 8A | 5206 | 1079 | 6285 | 1290 | 759 |
| ATV610C35N4 | 8B | 5369 | 1128 | 6497 | 1200 | 706 |
| ATV610C40N4 | 8B | 6082 | 1256 | 7338 | 1200 | 706 |


(1) First value is the power dissipated at nominal current in the forced cooled area of the drive. The second value is the power dissipated at nominal current in the natural cooled area. If the drive is installed in a standard cabinet, the sum of both values is to be taken into account.

Derating Curves

Description


Derating curves for the nominal drive current (I_n) as a function of temperature and switching frequency. Refer to the Mounting Conditions chapter, page 60 for the mounting types description.

Frame Size 1

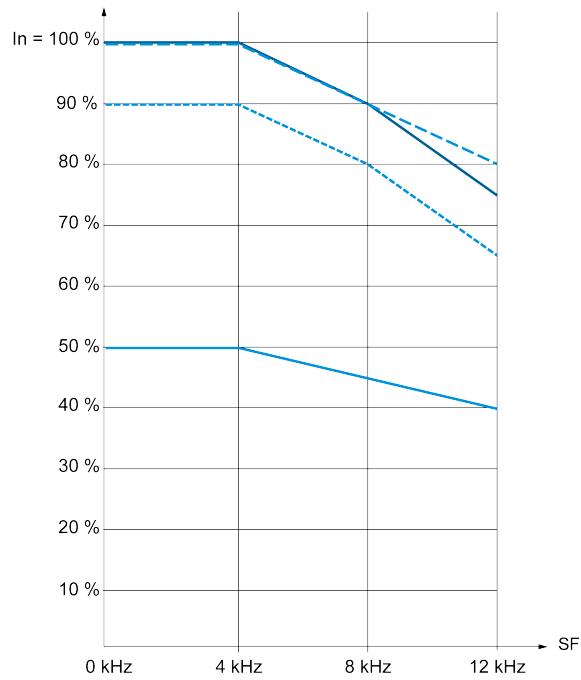

- 40 °C (104 °F) - Mounting type A, B and C
- 45 °C (A) (113 °F) - Mounting type A and C
-** 45 °C (B) (113 °F) - Mounting type B
- 60 °C (140 °F) - Mounting type B and C


Frame Size 2

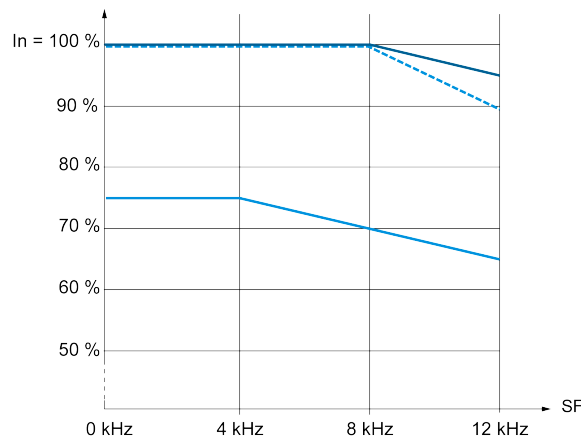

- 40 °C (104 °F) - Mounting type A, B and C
- - - 45 °C (113 °F) - Mounting type A, B and C
- 60 °C (140 °F) - Mounting type B and C


Frame Size 3

Mounting type A:

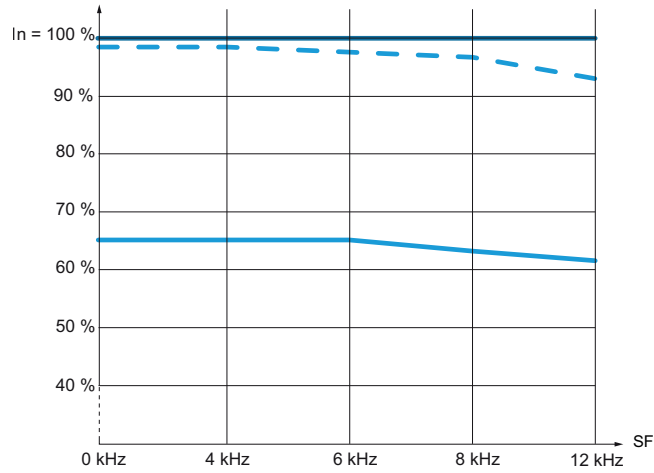


- 40 °C (104 °F)
- - - 45 °C (113 °F)
- 60 °C (140 °F)

Mounting type B:

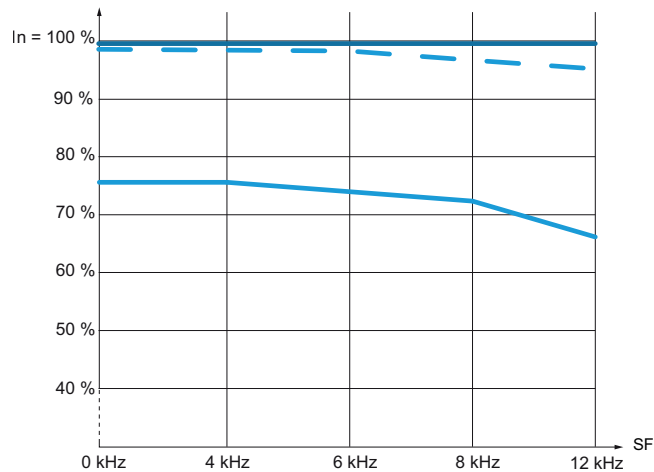


- 40 °C (104 °F)
- - - 45 °C (113 °F)
- 60 °C (140 °F)

Mounting type C:

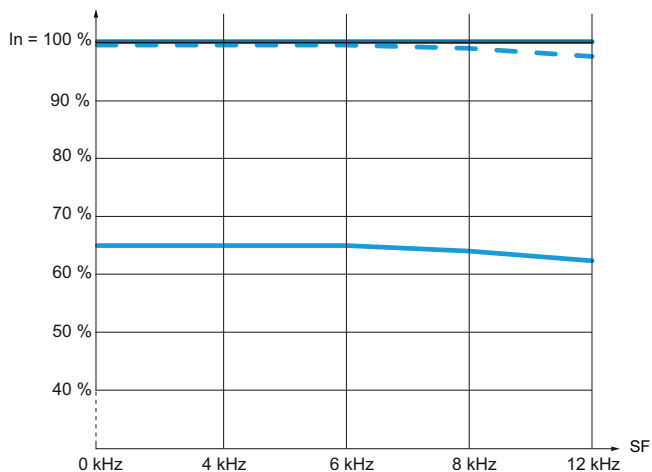


- 40 °C (104 °F)
- - - 45 °C (113 °F)
- 60 °C (140 °F)

Frame Size 4

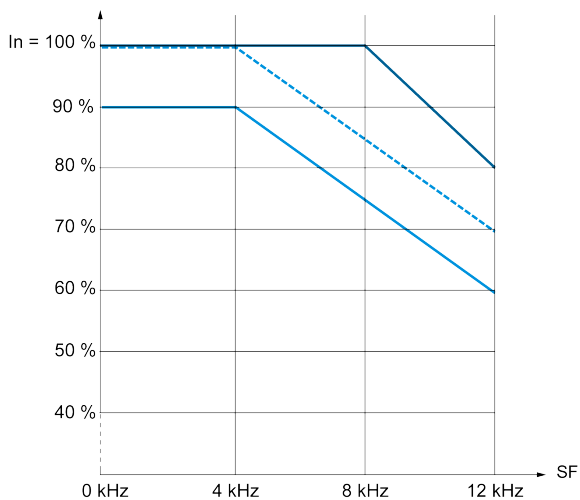


- 40 °C (104 °F) - Mounting type A, B and C
- - - 45 °C (113 °F) - Mounting type A, B and C
- 60 °C (140 °F) - Mounting type B and C


Frame Size 5

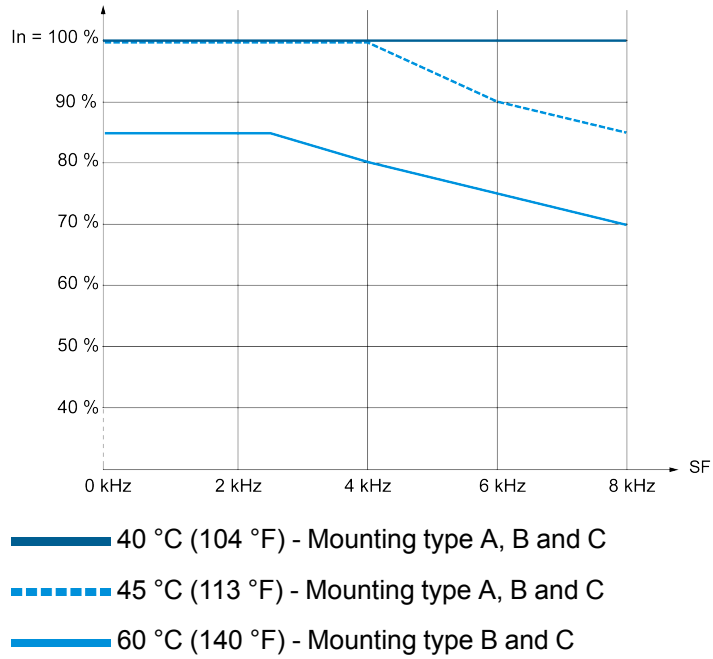


Frame Size 6

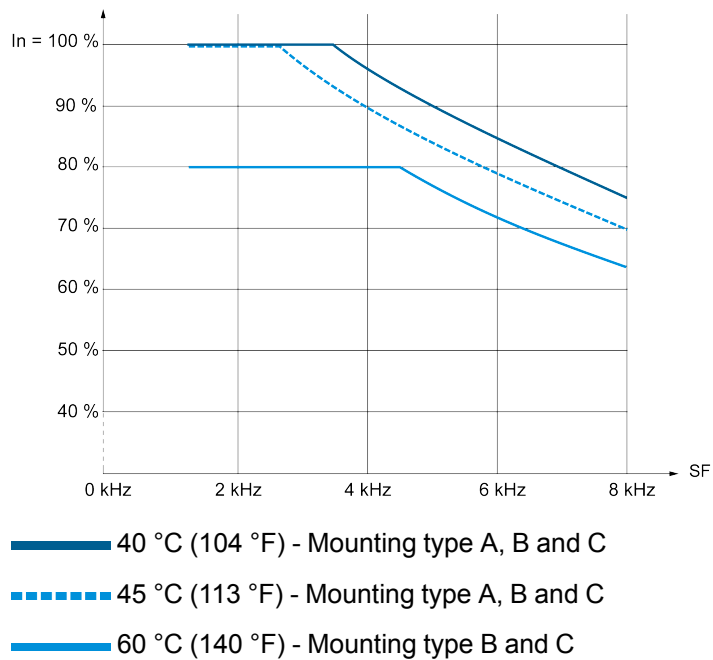


Frame Size 7

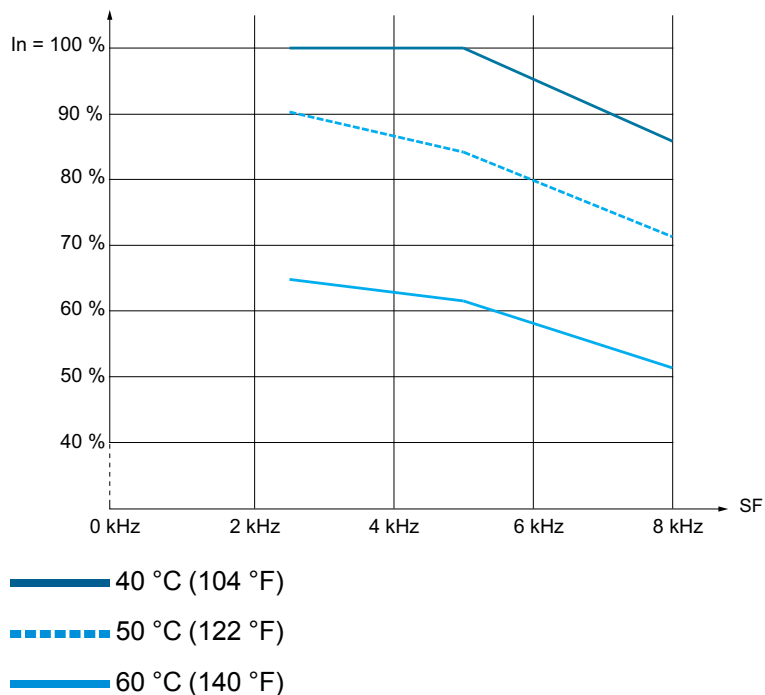

Frame Size 8A

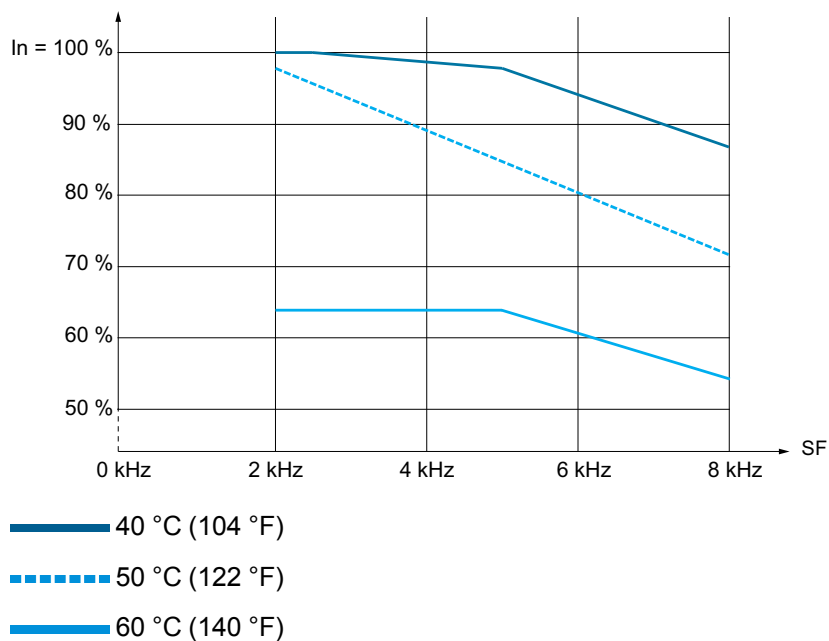

Frame Size 8B

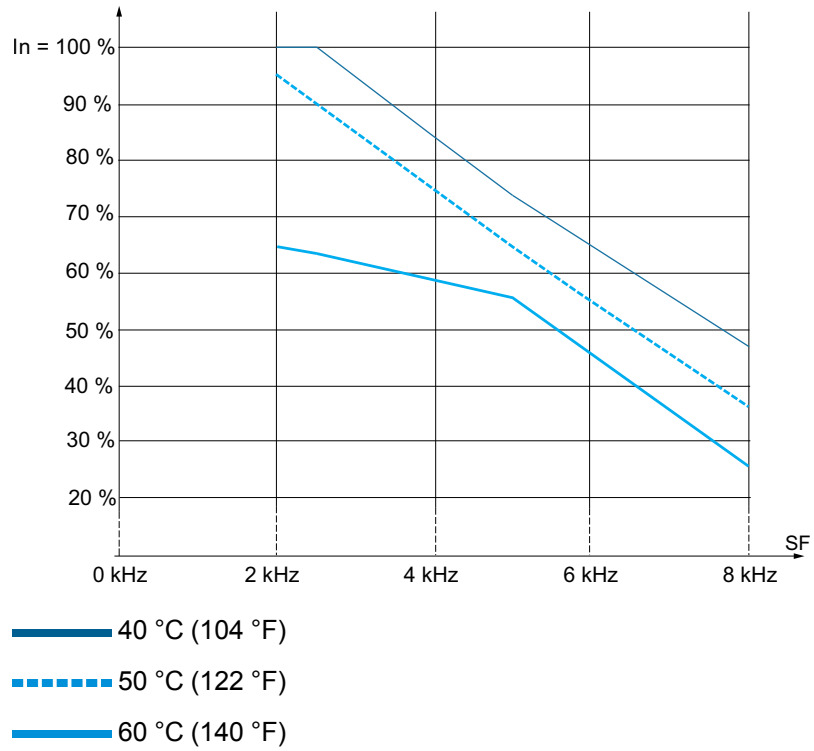


Mounting Procedures

Mounting Screws

| Frame Size | Screw diameter | Hole diameter |
|-----------------|----------------|-------------------|
| 1, 2 and 3 | 5 mm (0.2 in) | 6 mm (0.24 in) |
| 4 | 6 mm (0.24 in) | 7 mm (0.28 in) |
| 5 | 8 mm (0.31 in) | 9 mm (0.35 in) |
| 6, 7, 8A and 8B | 10 mm (0.4 in) | 11.5 mm (0.45 in) |

Mounting Procedure For Frame Sizes 1 to 4

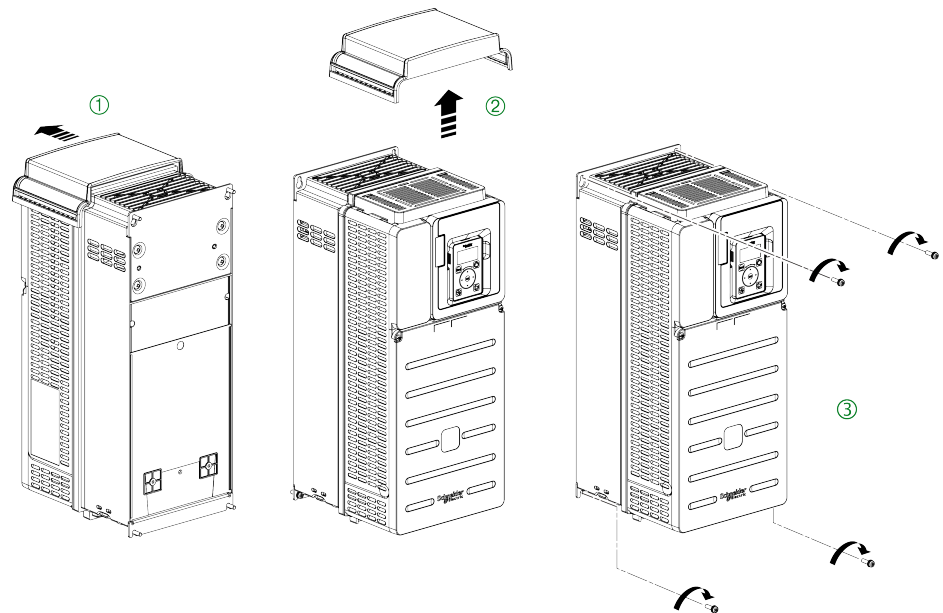


Perform the following instructions

| Step | Action |
|------|--|
| 1 | Slide the top cover from back to front |
| 2 | Remove the top cover |
| 3 | Attach the drive the mounting surface using the M5 screws with captive washer. |
| 4 | Refit the top cover to help prevent extra parts to fall into the drive during wiring operation or if IP20 degree of protection is requested. |

Mounting Frame Size 5 Drives


Mounting of the drive does not require any preliminary procedure. Just Screw the drive on the mounting surface using the M8 screws with captive washer.

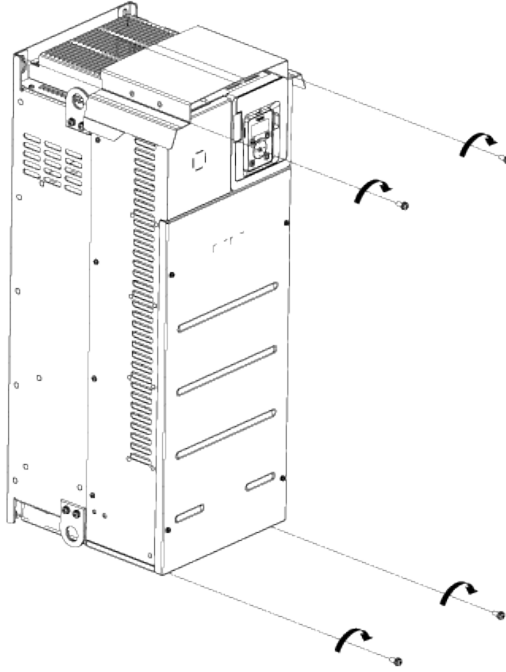

Mounting Procedure For Frame Size 6

NOTE: Due to accessible live parts on their lower part, these drives must be installed in enclosures or located behind enclosures or barriers, which comply at least with the requirements of IP2•, as per IEC61800-5-1.

Mounting the drive does not require preliminary dismantling operation. Just screw the drive on the mounting surface using the M10 screws with captive washer.


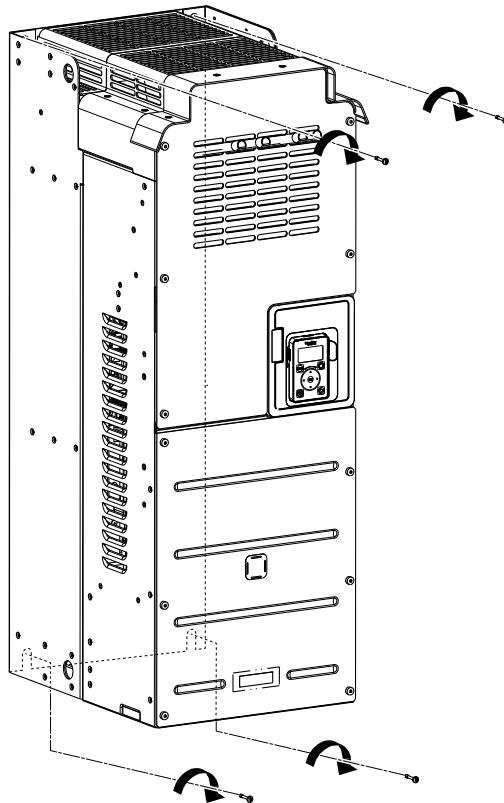


Mounting Procedure For Frame Size 7 and 8A

NOTE: Due to accessible live parts on their lower part, these drives must be installed in enclosures or located behind enclosures or barriers, which comply at least with the requirements of IP2*, as per IEC61800-5-1.







Prepare the DC Choke For Frame Size 7 and 8A

Before mounting the drive, please do the preliminary dismantling operation for DC choke, details see below table. Then simply mount the drive to its support using the 8 screws with captive washer, according to the table above, page 69.
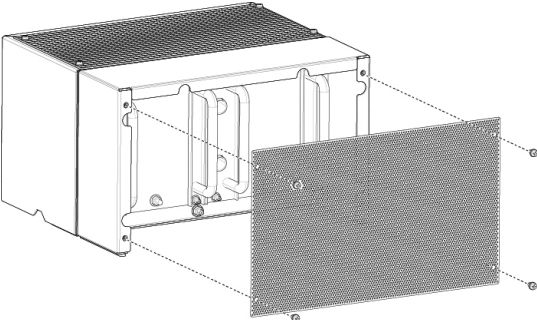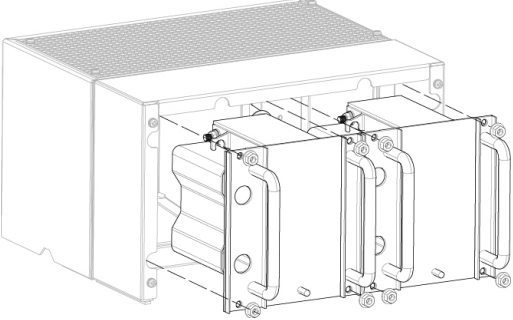
| Step | Action |
|------|---|
| 1 | <p>Remove the front panel from the DC choke.</p>  |
| 2 | <p>Remove the screws securing the DC choke from DC choke housing and take out the DC choke.</p>  <p>Remove 8 screws and 2 ground screws of the DC choke.</p> |


Installing the DC choke on Frame Size 7 and 8A

This must be performed after mounting the drive and before wiring it. During installation, ensure that no liquid, dust or conductive objects fall into the drive. Perform the following instructions to install the DC chokes:
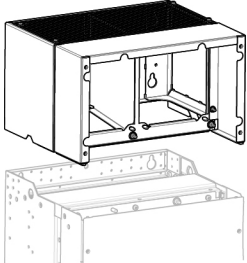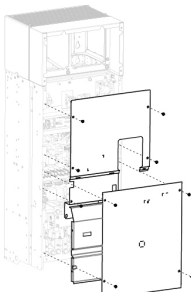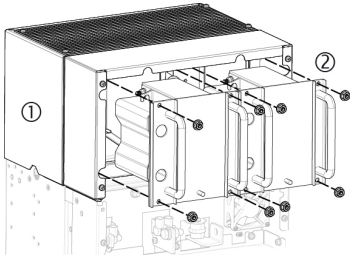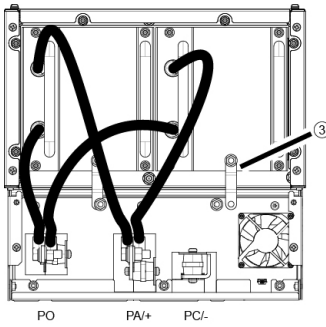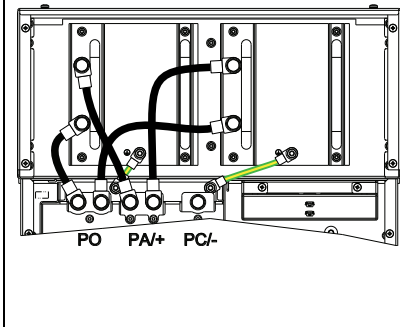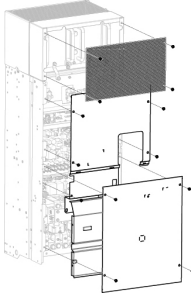
| Step | Action |
|------|--|
| 1 | <p>Mount the DC choke housing on the wall, on top of the drive, using the 4 screws with captive washer, according to the table above. Ensure that the housing is tightly secured to the drive to maintain the IP54 seal of the ventilation duct.</p>  |
| 2 | <p>Remove all the front covers.</p>  |
| 3 | <p>Install the DC choke ② in the housing ① using the 8 x M6 nuts provided. Tighten the nuts to 5.5 N·m (48.7 lbf.in).</p>  |
| 4 | <p>Connect the choke between the PO and PA/+ terminals on the drive using M12 screws. Tighten the screws to 45 N·m (398 lbf.in).</p> <p>Connect the grounding strips ③ between the DC choke housing ① and the drive using M8 nuts. Tighten the nuts to 13.5 N·m (119.5 lbf.in).</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="659 1326 1059 1720"> <p>Size 7</p>  </div> <div data-bbox="1059 1326 1460 1720"> <p>Size 8A</p>  </div> </div> |
| 5 | <p>Refit all the front covers.</p> <p>Tighten the M6 screws to 5.5 N.m (48.7 lbf.in).</p> <p>NOTE: Once the choke has been installed, the degree of protection of the top of the drive is IP31.</p>  |

Mounting Procedure For Frame Size 8B

Attach the drive to the mounting surface using the M10 screws with captive washer.

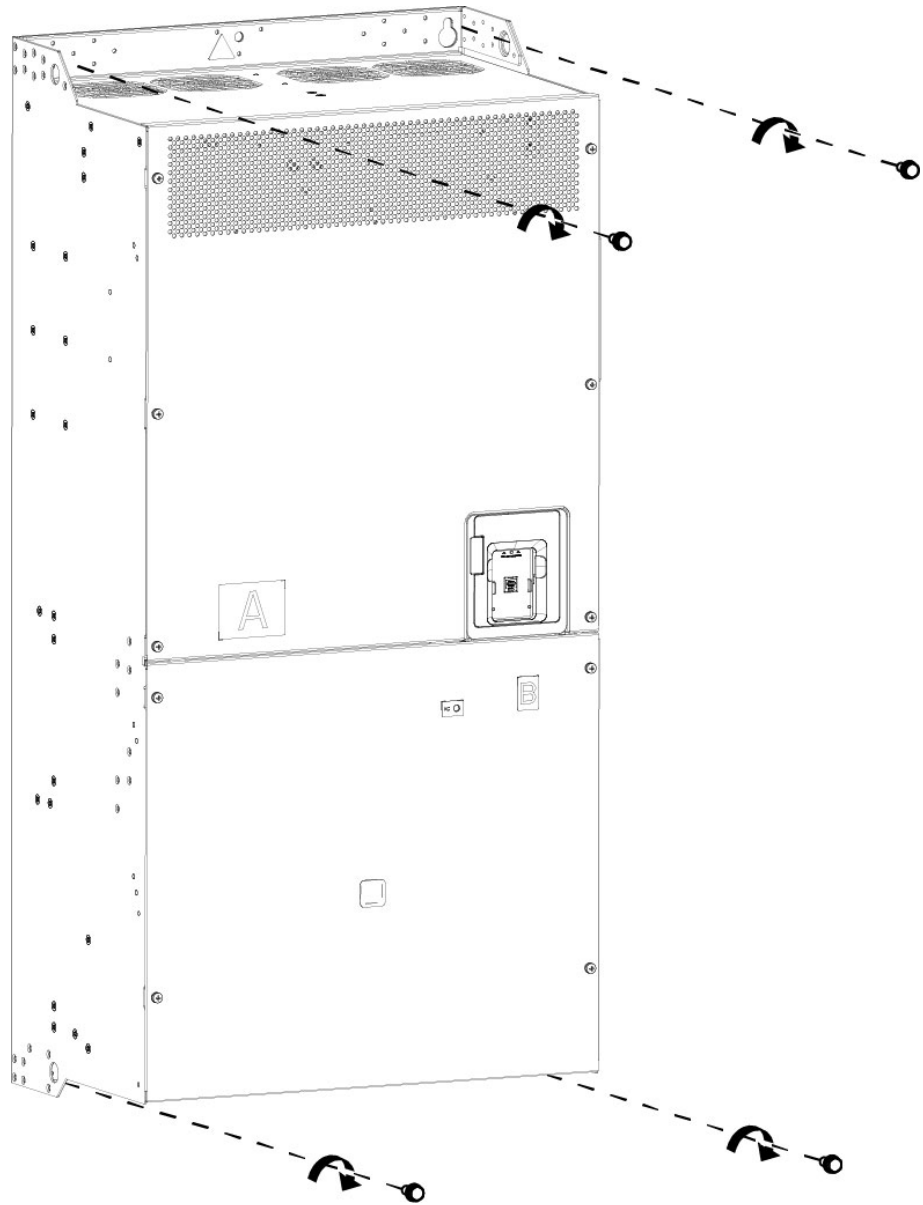

Drive wiring

What's in This Part

| | |
|--|-----|
| Wiring Instructions..... | 76 |
| Cable Length Instructions | 81 |
| General Wiring Diagrams..... | 83 |
| Relay Contacts Wiring | 85 |
| Digital Inputs Wiring Depending on Sink / Source Switch Configuration | 89 |
| Characteristics of the Power Part Terminals..... | 91 |
| Wiring The Power Part..... | 102 |
| Electromagnetic Compatibility | 111 |
| Operation on an IT or Corner Grounded System | 113 |
| Disconnecting The Built-in EMC Filter | 114 |
| Arrangement and Characteristics of Control Block Terminals and Communication and I/O Ports..... | 118 |
| Control Terminals Electrical Data | 120 |
| Wiring The Control Part | 123 |

Wiring Instructions

General Instructions

The entire installation procedure must be performed without voltage present.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Before applying voltage to and configuring the product, verify that it is properly wired.

Failure to follow these instructions will result in death or serious injury.

The product has a leakage current greater than 3.5 mA. If the protective ground connection is interrupted, a hazardous touch current may flow if the product is touched.

DANGER

ELECTRIC SHOCK CAUSED BY HIGH LEAKAGE CURRENT

Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of the entire drive system installation.

Failure to follow these instructions will result in death or serious injury.

Product systems may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

WARNING

UNANTICIPATED EQUIPMENT OPERATION

- Follow all applicable standards and directives such as NFPA 79 and EN 60204 for proper control circuit grounding practices.
- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Cable Characteristics

Only use cables with insulator heat resistance of 75°C (167°F) min.

NOTE: for Frame Size 0, 1 and 2, when the ambient temperature exceeds 50°C, cables requiring a temperature above 85°C (185°F) are necessary.

If you are using cables longer than 150 m (492 ft) between the drive and the motor, add output filters (for more details refer to the catalog).

Use a shielded cable to meet the requirements of Category C2 or C3 according to the standard IEC 61800-3, except when using a sinus filter. In this case, the use of a non-shielded motor cable is possible.

To limit the currents in common mode, use common mode output filters (ferrite) in order to reduce the circulating currents in the motor windings.

Standard linear capacity cables can be used. Use of cables with lower linear capacity could increase cable length performances.

The overvoltage limitation function **[Motor surge limit.] SVL** enables you to increase the cable length while decreasing the torque performances (refer to Programming manual).

Power Part Cables Stripping lengths

| Catalog Number and Frame Size [•] | | Cable Stripping Length |
|-----------------------------------|-----|------------------------|
| | | Input and Output |
| | | mm (in.) |
| ATV610U07N4...U75N4 | [1] | 11 ± 1 (0.43 ± 0.04) |
| ATV610UD11N4, D15N4 | [2] | 11 ± 1 (0.43 ± 0.04) |
| ATV610D18N4, D22N4 | [3] | 20 ± 2 (0.79 ± 0.08) |
| ATV610D30N4...D45N4 | [4] | 26 ± 2 (1.02 ± 0.08) |
| ATV610D55N4...D90N4 | [5] | 32 ± 3 (1.26 ± 0.12) |

Control Part Cables Stripping lengths

| IO terminal | Cable Stripping Length in mm (in.) |
|--|------------------------------------|
| R1A, R1B, R1C | 7.5 ± 0.5 (0.29 ± 0.02) |
| R2A, R2C | |
| R3A, R3C | |
| COM, AO1, AO2 | |
| P24, 0V, DI1, DI2, DI3, DI4, DI5, DI6, +24 | |
| 10V, AI1, COM, AI2, AI3 | |

For more information about the control block, refer to Arrangement and Characteristics of Control Block Terminals and Communication and I/O Ports, page 118.

Control Part

▲ WARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that the digital and analog inputs and outputs are wired with the shielded, twisted pair cables specified in the present manual.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

- Keep the control circuits away from the power cables. For digital and analog inputs/outputs, use shielded twisted cables with a pitch of 25...50 mm (1 in. and 2 in.)
- It is advisable to use cable ends, available on www.se.com.

NOTE:

- Analog inputs and outputs AIx, AQx, COM use shielded cable and each analog input and output has its own COM line.
- Each PTC input has its own COM line, not shared with other Inputs/Outputs.
- All digital inputs DIx use one common +24V line in source mode or one common COM line in sink mode. This +24V or COM line is used only for DIx.

Residual Current Device

Direct current can be introduced in the protective ground conductor of this device. If a residual current device (RCD / GFCI) or a residual current monitor (RCM) is used for additional protection against direct or indirect contact, the following specific types must be used:

▲ WARNING

DIRECT CURRENT CAN BE INTRODUCED INTO THE PROTECTIVE GROUND CONDUCTOR

- Use a Type A or Type F Residual Current Device (RCD / GFCI) or a Residual Current Monitor (RCM) for single-phase devices connected to a phase and to the neutral conductor.
- Use a Type B Residual Current Device (RCD / GFCI) or a Residual Current Monitor (RCM) that has approval for use with frequency inverters and is sensitive to all types of current for three-phase devices and for single-phase devices not connected to a phase and the neutral conductor.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

▲ WARNING

DIRECT CURRENT CAN BE INTRODUCED INTO THE PROTECTIVE GROUND CONDUCTOR

Use a Type B Residual Current Device (RCD / GFCI) or a Residual Current Monitor (RCM) that has approval for use with frequency inverters and is sensitive to all types of current.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Further conditions for use of a residual current device:

- The device has an increased leakage current at the moment power is applied. Use a residual current device (RCD / GFCI) or a residual current monitor (RCM) with a response delay.
- High-frequency currents must be filtered.

Due to high leakage current in standard operation, it is advisable to choose at least a 300 mA device.

If the installation requires a residual current device less than 300 mA, it can be possible to use a device lower than 300 mA by removing the screws according to the instructions given in the *Operation on an IT System* section, page 113.

If the installation includes several drives, provide one residual current device per drive.

Equipment Grounding

⚡⚠ DANGER

ELECTRIC SHOCK CAUSED BY INSUFFICIENT GROUNDING

- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of the entire device.
- Ground the device before applying voltage.
- The cross section of the protective ground conductor must comply with the applicable standards.
- Do not use conduits as protective ground conductors; use a protective ground conductor inside the conduit.
- Do not consider cable shields to be protective ground conductors.

Failure to follow these instructions will result in death or serious injury.

Tighten the grounding screws according to the instructions given in the Ground Cables section, page 91.

Connection Instructions

The product has a leakage current greater than 3.5 mA. If the protective ground connection is interrupted, a hazardous touch current may flow if the product is touched.


⚡⚠ DANGER

ELECTRIC SHOCK CAUSED BY HIGH LEAKAGE CURRENT

Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of the entire drive system installation.

Failure to follow these instructions will result in death or serious injury.

- Ensure that the resistance to Ground is 1 Ohm or less.
- When grounding several drives, you must connect each one directly, as shown in the above figure.
- Do not loop Ground cables or connect them in series.

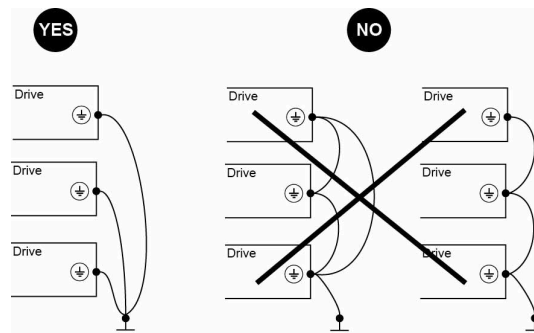

Cable Length Instructions

Long Cable Lengths Consequences

When drives are used with motors, a combination of fast switching transistors and long motor cables can even cause peak voltages up to twice the DC link voltage. This high peak voltage can cause premature aging of motor winding insulation which leads to motor breakdown.

The overvoltage limitation function will enable to increase the cable length while decreasing the torque performances.

Length Of Motor Cables

Because of the permitted mains disturbances, the allowed overvoltages at the motor, the occurring bearing currents and the permitted heat losses the distance between inverter and motor(s) is limited.


The maximum distance heavily depends on the used motors (insulation material), the type of motor cable used (shielded / unshielded), the cable laying (cable channel, underground installation...) as well as from the used options.

Dynamic Voltage Load Of The Motor

Overvoltages at the motor terminals result from reflection in the motor cable. Basically the motors are stressed with measurable higher voltage peaks from a motor cable length of 10 m. With the length of the motor cable also the value of overvoltage increases.

The steep edges of the switching impulses at the output side of the frequency inverter lead to a further load of the motors. The slew rate of the voltage is typically over 5 kV/μs but it decreases with the length of the motor cable

Load of the motor with overvoltage and slew rate when using conventional drive

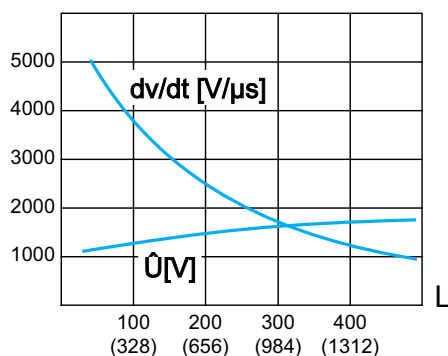

L Length of motor cables in meters (feet)

Corrective Actions Overview

A number of simple measures can be taken to help enhance the motor life time:

- Specification of a motor designed for speed drive applications (IEC60034-25 B or NEMA MG1 Part 31 should be prescribed).
- Specification of drives that integrate voltage reflection superimposition software suppression.

Refer to **[Volt surge limit. opt]** $5 \sigma P$ parameter in the Programming manual.

- Reduce to a minimum the distance between motor and drive.
- Use unshielded cables.
- Reduce the drive switching frequency (a reduction to 2.5 kHz is advisable.)

Preventive Measures Suitable for Wall Mounting Drives According to IEC60034-25

The preventive measures will depend on motor characteristics and cable length.

| Motor cable length (unshielded cable) | Motor conforming to IEC60034-25 | Motor NOT-conforming to IEC60034-25 |
|--|---------------------------------|-------------------------------------|
| 1 m (3 ft) < L < 50 m (164 ft) | Filter not required | dV/dt filter |
| 50 m (164 ft) < L < 100 m (328 ft) | Filter not required | Sinus filter |
| 100 m (328 ft) < L < 300 m (984 ft) | Filter not required | Sinus filter |
| 300 m (984 ft) < L < 500 m (1640 ft) | dV/dt filter | Sinus filter |
| 500 m (1640 ft) < L < 1000 m (3281 ft) | Sinus filter | Sinus filter |


NOTE: When calculating cable lengths for the purpose of guarding against these overvoltage situations, a shielded cable should count as twice the length of an unshielded cable. For example, if a shielded cable is 100 m (328 ft) in actual length, it should be considered to be equal to a 200 m (656 ft) length standard cable in the calculation.

Additional Information

Further detailed technical information is available in the following white paper *An Improved Approach for Connecting VSD and Electric Motors* (998-2095-10-17-13ARO_EN) available on www.se.com.

General Wiring Diagrams

Control Block Wiring Diagram

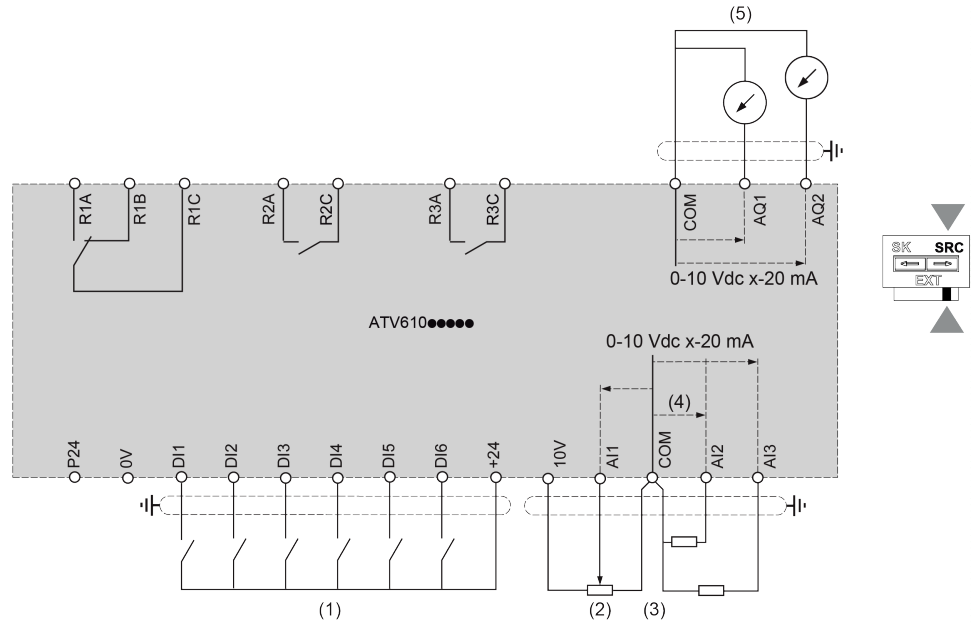

(1) Digital Inputs - Shielding instructions are given in the Electromagnetic Compatibility section, page 111.


(3) Analog inputs

(5) Analog outputs

(2) Reference potentiometer (ex. SZ1RV1002)

(4) -10...+10 Vdc

Three-phase Power Supply - Diagram With Line Contactor

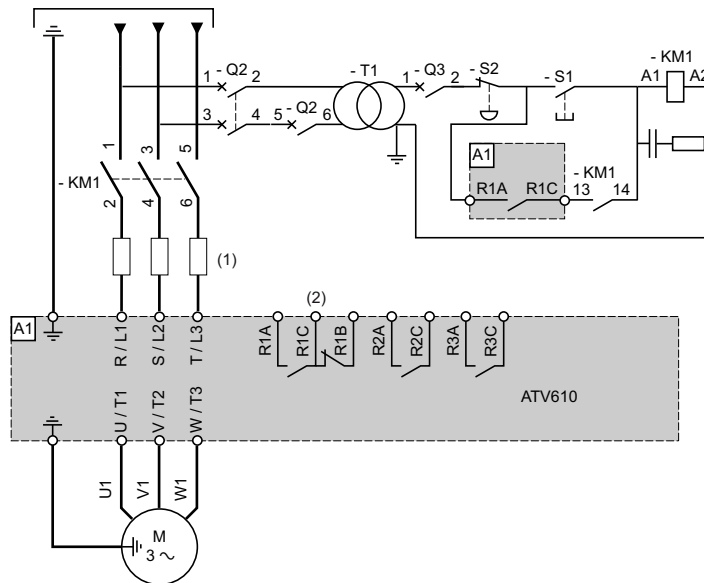


(1) Line choke (if used).

(2) Use relay output R1 set to operating state Fault to switch Off the product once an error is detected.


PT100 — PT1000 — KTY Sensor Connection

It is possible to connect 1 thermal sensor on terminals AI2 or AI3.

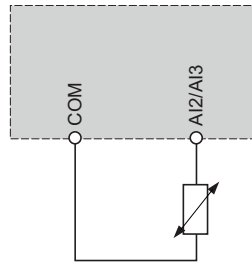

PTC Sensor Connection

It is possible to connect either 1 thermal sensor or 3 thermal sensors or 6 thermal sensors on terminals AI2 or AI3.

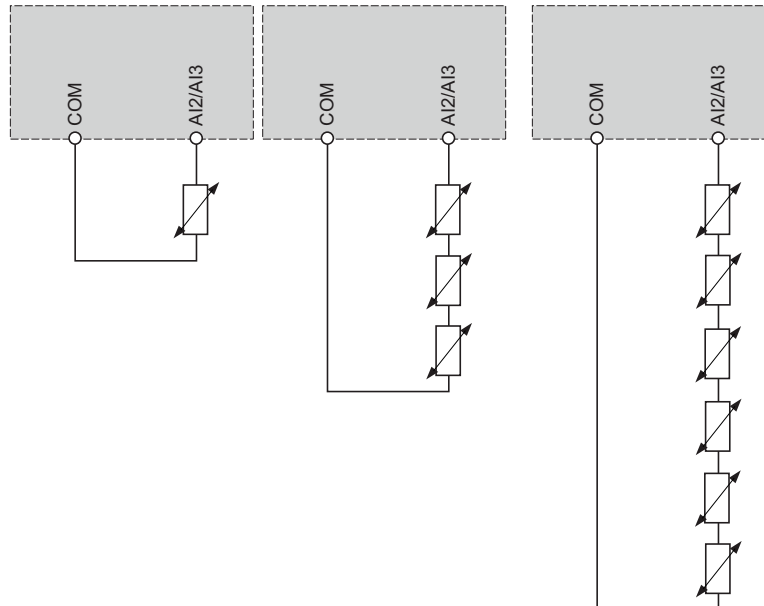

Relay Contacts Wiring

What's in This Chapter

| | |
|--|----|
| Output Relay with Inductive AC Loads | 86 |
| Output Relay with Inductive DC loads | 87 |

Output Relay with Inductive AC Loads


General

The AC voltage source must be of overvoltage category II (OVC II) according to IEC 61800-5-1.

If it is not the case, an isolation transformer must be used.

Contactors with AC Coil

If controlled by a relay, a resistor-capacitor (RC) circuit must be connected in parallel to the coil of the contactor as shown on the diagram below:

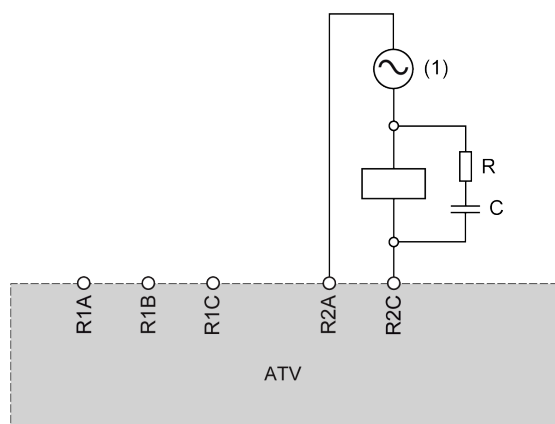

(1) AC 250 Vac maximum.

Schneider Electric AC contactors have a dedicated area on the housing to plug easily the RC device. Refer to the Motor control and protection components catalog MKTED210011EN available on se.com to find the RC device to be associated with the contactor used.

Example: With a 48 Vac source, contactors LC1D09E7 or LC1DT20E7 have to be used with LAD4RCE voltage suppression device.

Other Inductive AC Loads


For other inductive AC loads:

- Use an auxiliary contactor connected on the product to control the load.
Example: with a 48 Vac source, auxiliary contactors CAD32E7 or CAD50E7 with LAD4RCE voltage suppression device.
- When using a third party inductive AC load, request the supplier to provide information on the voltage suppression device, in order to avoid overvoltage above 375 V during relay opening.

Output Relay with Inductive DC loads

Contactors with DC Coil

If controlled by a relay, a bidirectional transient voltage suppression (TVS) diode, also called transil, must be connected in parallel to the coil of the contactor as shown on the diagram below:

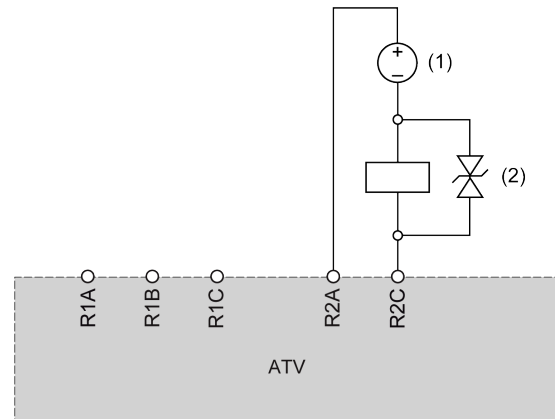

(1) DC 30 Vdc maximum.

(2) TVS diode

Schneider Electric contactors with DC coil include the TVS diode. No additional device is required.

Refer to the Motor control and protection components catalog MKTED210011EN available on se.com for more information.

Other Inductive DC Loads

Other inductive DC loads without embedded TVS diode must use one of the following voltage suppression device:


- A bidirectional TVS device as shown on the diagram above, defined by:
 - TVS break-down voltage greater than 35 Vdc,
 - TVS clamping voltage $V(\text{TVS})$ less than 50 Vdc
 - TVS peak power dissipation greater than load rated current, $I(\text{load}) \times V(\text{TVS})$.

Example: with $I(\text{load}) = 0.9 \text{ A}$ and $V(\text{TVS}) = 50 \text{ Vdc}$, TVS peak power must be greater than 45 W

- TVS average power dissipation greater than the value calculated by the following $0.5 \times I(\text{load}) \times V(\text{TVS}) \times \text{load time constant} \times \text{number of operation per second}$.

Example: with $I(\text{load}) = 0.9 \text{ A}$ and $V(\text{TVS}) = 50 \text{ Vdc}$, load time constant = 40 ms (load inductance divided by load resistance) and 1 operation every 3 s, the TVS average power dissipation must be greater than $0.5 \times 0.9 \times 50 \times 0.04 \times 0.33 = 0.3 \text{ W}$.

- A fly-back diode as shown in the diagram below:

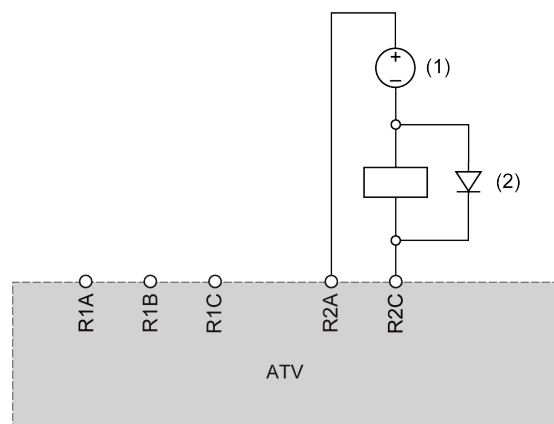

(1) DC 30 Vdc maxi.

(2) Flyback diode

The diode is a polarized device. The fly-back diode must be defined by:

- a reverse voltage greater than 100 Vdc,
- a rated current greater than two times the load rated current,
- a thermal resistance: junction to ambient temperature (in K/W) less than $90 / (1.1 \times I(\text{load}))$ to operate at maximum 60°C (140°F) ambient temperature.

Example: with $I(\text{load}) = 1.5 \text{ A}$, select a 100 V, 3 A rated current diode with a thermal resistance from junction to ambient less than $90 / (1.1 \times 1.5) = 54.5 \text{ K/W}$.

Using a flyback diode, the relay opening time will be longer than with a TVS diode.

NOTE: Use diodes with leads for easy wiring and keep at least 1 cm (0.39 in.) of leads on each side of the case of the diode for a correct cooling.

Digital Inputs Wiring Depending on Sink / Source Switch Configuration

About the Switch


| ⚠ WARNING |
|--|
| <p>UNANTICIPATED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> • If the device is set to SK or EXT, do not connect the 0 V terminal to ground or to protective ground. • Verify that accidental grounding of digital inputs configured for sink logic, caused, for example, by damage to the signal cables, cannot occur. • Follow all applicable standards and directives such as NFPA 79 and EN 60204 for proper control circuit grounding practices. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p> |

The switch is used to adapt the operation of the logic inputs to the technology of the programmable controller outputs. To access the switch, follow the Access to control Terminals procedure , page 102. The switch is located below the control terminals, page 118.


- Set the switch to Source (factory setting) if using PLC outputs with PNP transistors.
- Set the switch to Ext if using PLC outputs with NPN transistors.

Wiring With Use of the Output Power Supply for the Digital Inputs

Switch set to **SRC** (Source) position

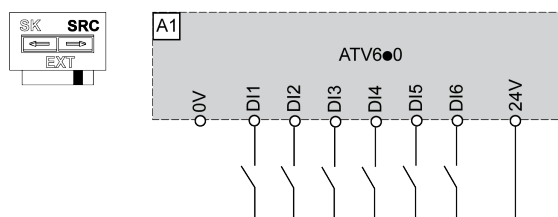

Switch set to **SK** (Sink) position

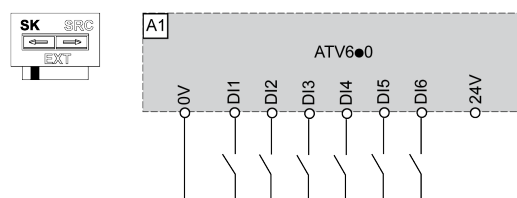

Wiring With Use of an External Power Supply for the Digital Inputs

⚡⚠ DANGER


ELECTRIC SHOCK CAUSED BY INCORRECT POWER SUPPLY UNIT

The +24 Vdc supply voltage is connected with many exposed signal connections in the drive system.


- Use a power supply unit that meets the PELV (Protective Extra Low Voltage) requirements.

Failure to follow these instructions will result in death or serious injury.

Switch set to **EXT** (Sink External) position **without functional isolation** on digital inputs

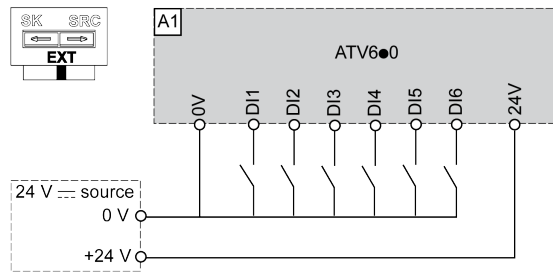

Switch set to **SRC** (Source) position

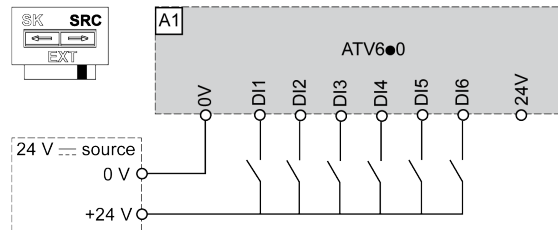

Characteristics of the Power Part Terminals

⚠ ⚠ DANGER

HAZARD OF FIRE OR ELECTRIC SHOCK

- Wire cross sections and tightening torques must comply with the specifications provided in this document.
- If you use flexible multi-wire cables for a connection with a voltage higher than 25 Vac, you must use ring type cable lugs or wire ferrules, depending on the wire gauge and the specified stripping length of the cable.


Failure to follow these instructions will result in death or serious injury.

Ground Cables

Ground cable cross sections of input and output ground cables are the same as those given for the input and output cables. Minimum cross section of protective ground cable is 10 mm² (AWG 8) and 16 mm² (AWG 6) for AL cable.


Tightening torques according to frame size

- Frame sizes 1...3: 2.5 N·m (22.1 lb.in)
- Frame size 4: 12 N·m (106.2 lb.in)
- Frame size 5: 25 N·m (221.3 lb.in)
- Frame size 6:
 - ①: 27 N·m (239 lb.in)
 - ②: 13.5 N·m (119.5 lb.in)

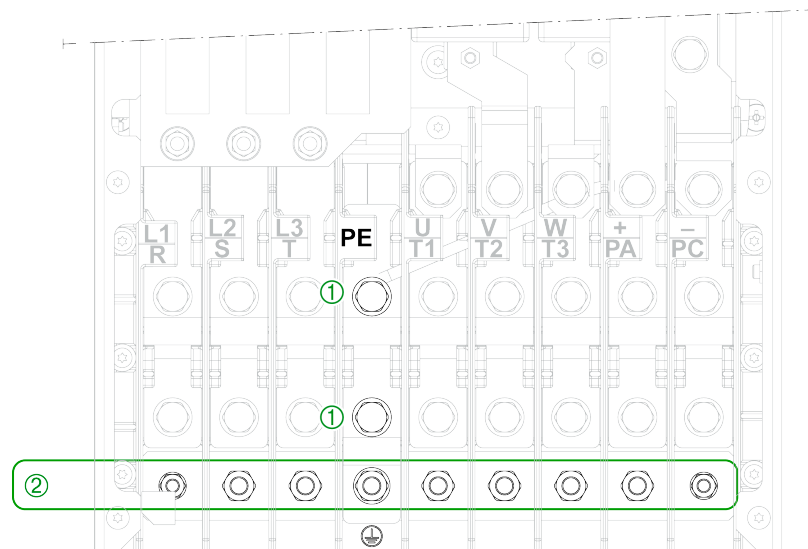

- Frame size 7, size 8A and size 8B: 41N.m (360 lb.in)

Description of the Power Terminals

| Terminal | Function |
|---|---|
| PE or  | Protective Earth Ground connection terminal |
| R/L1 S/L2 T/L3 | AC supply mains |
| U/T1 V/T2 W/T3 | Outputs to the motor |

Cross Section: Electrical and Mechanical characteristics

DANGER

HAZARD OF FIRE OR ELECTRIC SHOCK

If the product is used below its rated power and you choose to reduce the wire cross section compared to the specified minimum wire cross section given at rated condition, ensure that the selected wire cross section is compliant with the duty cycle and current load of the application.

Failure to follow these instructions will result in death or serious injury.

DANGER

HAZARD OF FIRE OR ELECTRIC SHOCK

Do not use tin cables.

Failure to follow these instructions will result in death or serious injury.

Frame Size 1

Electrical characteristics (*)

| | | |
|---|---|--|
| ATV610 | Minimum Wire Cross Section at rated condition | |
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | mm ² (AWG) | |
| U07N4...U55N4 | 1.5 (16) | |
| U75N4 | 2.5 (14) | |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | | |

Mechanical characteristics (*)

| | | | | |
|--|--------------------------------|-------------------------|---------------------------|-------------------------|
| ATV610 | Supply Terminals (L1, L2, L3) | | | |
| | Output Terminals (U, V, W) | | | |
| | Minimum (*) | | Maximum | |
| | Permissible Cross Section (**) | Rated Tightening Torque | Permissible Cross Section | Rated Tightening Torque |
| | mm ² (AWG) | N·m (lbf.in) | mm ² (AWG) | N·m (lbf.in) |
| U07N4...U75N4 | 0.5 (20) | 1.3 (11.5) | 6 (10) | 1.3 (11.5) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | | | |
| (**) Minimum permissible cross section are provided, if the product is used below its rated power. In this case, ensure that the wire cross section is compliant with the duty cycle and current load. | | | | |

NOTE: Only use cables with solid wires or rigid stranded wires.

Frame Size 2

Electrical characteristics (*)

| | | |
|---|---|--|
| ATV610 | Minimum Wire Cross Section at rated condition | |
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | mm ² (AWG) | |
| D11N4 | 4 (12) | |
| D15N4 | 6 (10) | |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | | |

Mechanical characteristics (*)

| | | | | |
|--|--------------------------------|-------------------------|---------------------------|-------------------------|
| ATV610 | Supply Terminals (L1, L2, L3) | | | |
| | Output Terminals (U, V, W) | | | |
| | Minimum (*) | | Maximum | |
| | Permissible Cross Section (**) | Rated Tightening Torque | Permissible Cross Section | Rated Tightening Torque |
| | mm ² (AWG) | N·m (lbf.in) | mm ² (AWG) | N·m (lbf.in) |
| D11N4, D15N4 | 0.5 (20) | 1.5 (13.3) | 10 (8) | 1.5 (13.3) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | | | |
| (**) Minimum permissible cross section are provided, if the product is used below its rated power. In this case, ensure that the wire cross section is compliant with the duty cycle and current load. | | | | |

NOTE: Only use cables with solid wires or rigid stranded wires.

Frame Size 3

Electrical characteristics (*)

| | | |
|---|---|--|
| ATV610 | Minimum Wire Cross Section at rated condition | |
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | mm ² (AWG) | |
| D18N4, D22N4 | 10 (8) | |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | | |

Mechanical characteristics (*)

| | | | | |
|--|--------------------------------|-------------------------|---------------------------|-------------------------|
| ATV610 | Supply Terminals (L1, L2, L3) | | | |
| | Output Terminals (U, V, W) | | | |
| | Minimum (*) | | Maximum | |
| | Permissible Cross Section (**) | Rated Tightening Torque | Permissible Cross Section | Rated Tightening Torque |
| | mm ² (AWG) | N·m (lbf.in) | mm ² (AWG) | N·m (lbf.in) |
| D18N4, D22N4 | 0.5 (20) | 2.5 (22.1) | 16 (6) | 2.5 (22.1) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | | | |
| (**) Minimum permissible cross section are provided, if the product is used below its rated power. In this case, ensure that the wire cross section is compliant with the duty cycle and current load. | | | | |

NOTE: Only use cables with solid wires or rigid stranded wires.

Frame Size 4

Electrical characteristics (*)

| ATV610 | Minimum Wire Cross Section at rated condition | |
|---|---|--|
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | mm ² (AWG) | |
| D30N4 | 16 (6) | |
| D37N4 | 25 (4) | |
| D45N4 | 35 (2) | |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | | |

Mechanical characteristics (*)

| ATV610 | Supply Terminals (L1, L2, L3) | | | |
|--|--------------------------------|-------------------------|---------------------------|-------------------------|
| | Output Terminals (U, V, W) | | | |
| | Minimum (*) | | Maximum | |
| | Permissible Cross Section (**) | Rated Tightening Torque | Permissible Cross Section | Rated Tightening Torque |
| mm ² (AWG) | N·m (lbf.in) | mm ² (AWG) | N·m (lbf.in) | |
| D30N4...D45N4 | 16 (6) | 12 (106.2) | 50 (1-1/0) | 12 (106.2) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | | | |
| (**) Minimum permissible cross section are provided, if the product is used below its rated power. In this case, ensure that the wire cross section is compliant with the duty cycle and current load. | | | | |

NOTE: Only use cables with solid wires or rigid stranded wires.

Frame Size 5

Electrical characteristics (*)

| ATV610 | Minimum Wire Cross Section at rated condition | |
|---|---|--|
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | mm ² (AWG) | |
| D55N4 | 50 (1-1/0) | |
| D75N4 | 70 (2/0) | |
| D90N4 | 95 (3/0) | |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | | |

Mechanical characteristics (*)

| ATV610 | Supply Terminals (L1, L2, L3) | | | |
|--|--------------------------------|-------------------------|---------------------------|-------------------------|
| | Output Terminals (U, V, W) | | | |
| | Minimum (*) | | Maximum | |
| | Permissible Cross Section (**) | Rated Tightening Torque | Permissible Cross Section | Rated Tightening Torque |
| | mm ² (AWG) | N·m (lbf.in) | mm ² (AWG) | N·m (lbf.in) |
| D55N4...D90N4 | 16 (4) | 25 (221.3) | 120 (4/0) | 25 (221.3) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | | | |
| (**) Minimum permissible cross section are provided, if the product is used below its rated power. In this case, ensure that the wire cross section is compliant with the duty cycle and current load. | | | | |

NOTE: Only use cables with solid wires or rigid stranded wires.

Frame Size 6

Electrical characteristics (*)

| ATV610 | Minimum Wire Cross Section at rated condition |
|---|---|
| | Supply Terminals (L1, L2, L3) |
| | Output Terminals (U, V, W) |
| | mm ² (AWG) |
| C11N4 | 2 x 50 (2 x 1/0) |
| C13N4 | 2 x 70 (2 x 2/0) |
| C16N4 | 2 x 95 (2 x 3/0) |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | |

Mechanical characteristics (*)

| ATV610 | Rated Tightening Torque (with Screw size M10) |
|--|---|
| | Supply Terminals (L1, L2, L3) |
| | Output Terminals (U, V, W) |
| | N·m (lbf.in) |
| C11N4...C16N4 | 27 (239) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | |

NOTE:

- If used with ring tongue: selection criteria are compatible with screw M10, width 24 mm (0.94 in.), following DIN 46234.
- If used with lugs: selection criteria are compatible with standard cable lug according to DIN 46234. You may also use lug kit DZ2FH6 and DZ2FH1 available on se.com.

Frame Size 7

Electrical characteristics (*)

| ATV610 | Minimum Wire Cross Section at rated condition | |
|---|---|--|
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | mm ² (AWG) | |
| C22N4 | 2 x 150 (2 x 300MCM) | |
| C25N4 | 2 x 185 (2 x 350MCM) | |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | | |

Mechanical characteristics (*)

| ATV610 | Rated Tightening Torque (with Screw size M12) | |
|--|---|--|
| | Supply Terminals (L1, L2, L3) | |
| | Output Terminals (U, V, W) | |
| | N·m (lbf.in) | |
| C22N4, C25N4 | 41 (363) | |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | |

NOTE:

- If used with ring tongue: selection criteria are compatible with screw M12, width 36 mm (1.42 in.), following DIN 46234.
- If used with lugs: selection criteria are compatible with standard cable lug according to DIN 46234.

Frame Size 8A

Electrical characteristics (*)

| ATV610 | Minimum Wire Cross Section at rated condition |
|---|---|
| | Supply Terminals (L1, L2, L3) |
| | Output Terminals (U, V, W) |
| | mm ² (AWG) |
| C31N4 | 2 x 240 (2 x 500MCM) |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | |

Mechanical characteristics (*)

| ATV610 | Rated Tightening Torque (with Screw size M12) |
|--|---|
| | Supply Terminals (L1, L2, L3) |
| | Output Terminals (U, V, W) |
| | N·m (lbf.in) |
| C31N4 | 41 (363) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | |

NOTE:

- If used with ring tongue: selection criteria are compatible with screw M12, width 38 mm (1.50 in.), following DIN 46234.
- If used with lugs: selection criteria are compatible with standard cable lug according to DIN 46234.

Frame Size 8B

Electrical characteristics (*)

| | |
|---|---|
| ATV610 | Minimum Wire Cross Section at rated condition |
| | Supply Terminals (L1, L2, L3) |
| | Output Terminals (U, V, W) |
| | mm ² (AWG) |
| C35N4, C40N4 | 4 x 150 (2 x 300MCM) |
| (*) Minimum wire cross section to be applied when the product is used at rated power. | |

Mechanical characteristics (*)

| | | | |
|--|--|-----------------------------------|---|
| ATV610 | Supply Terminals (L1, L2, L3) | | |
| | Output Terminals (U, V, W) | | |
| | Minimum Permissible Cross Section (**) | Maximum Permissible Cross Section | Rated Tightening Torque (with Screw size M10) |
| | mm ² (AWG) | mm ² (AWG) | N·m (lbf.in) |
| C35N4, C40N4 | 2x10 (2x8) | 4x150 (2x300MCM) | 41 (363) |
| (*) The mechanical characteristics concern power terminal only and do not take into account the cabling equipment (cable clamp, cable gland,...) that are designed for the rated conditions. | | | |
| (**) Minimum permissible cross section are provided, if the product is used below its rated power. In this case, ensure that the wire cross section is compliant with the duty cycle and current load. | | | |

NOTE:

- If used with ring tongue: selection criteria are compatible with screw M12, width 38 mm (1.50 in.), following DIN 46234.
- If used with lugs: selection criteria are compatible with standard cable lug according to DIN 46234.

Wiring The Power Part


Access To The Terminals For Frame Size 1...3

⚡ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

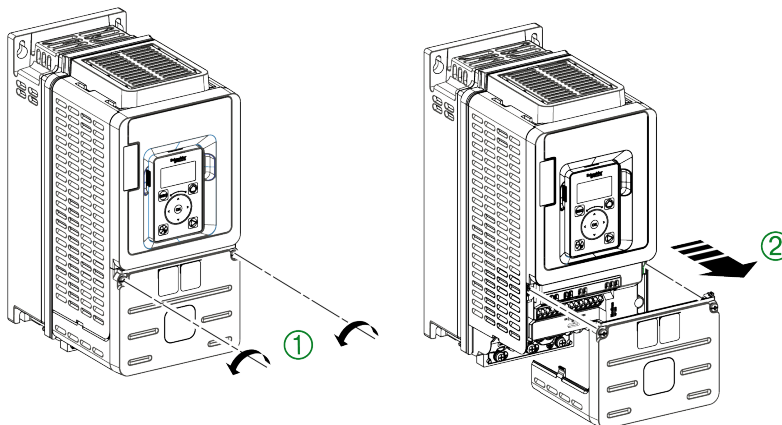


Apply the following instructions to access the terminals on **frame size 3** drives

| Step | Action |
|------|--|
| 1 | Unscrew the 2 screws attaching the housing |
| 2 | Remove the front cover |
| 3 | Refit the front cover on completion of wiring. Tighten the screws to 1.5 N•m / 13.3 lb-in. |


Frame Sizes 1 and 2 Cable Path

Wire the power cables as shown below.

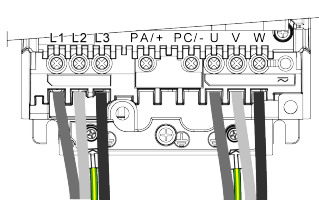

Frame Size 3 Cable Path

Wire the power cables as shown below.

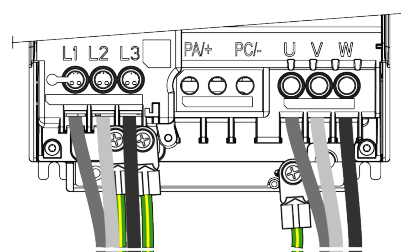


Access To The Terminals For Frame Sizes 4 and 5

⚠️ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

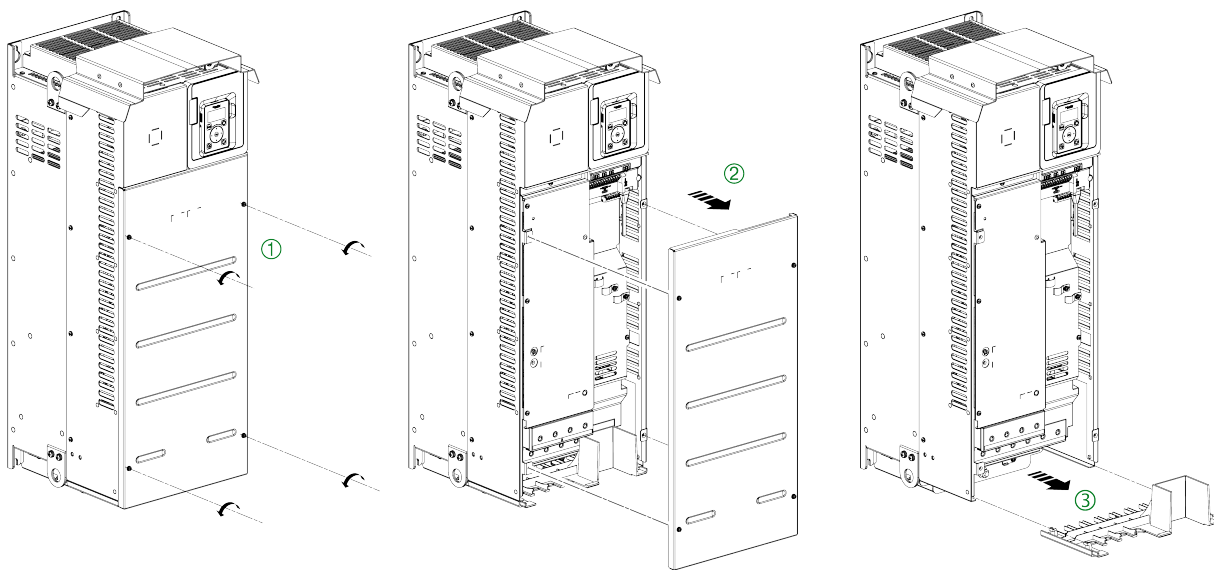


Apply the following instructions to the terminals on **frame sizes 4 and 5** drives

| Step | Action |
|------|---|
| 1 | Unscrew the 4 screws attaching the front cover |
| 2 | Remove the front cover |
| 3 | Remove the power terminal cover |
| 4 | On completion of wiring... <ul style="list-style-type: none"> • Refit the power terminal cover • Refit the front cover Tighten the front cover screws to... <ul style="list-style-type: none"> • 1.1 N•m / 9.7 lb-in for frame size 4 • 2.6 N•m / 23 lb-in for frame size 5 |

Frame Size 4 And 5 Cable Path

Wire the power cables as shown below.

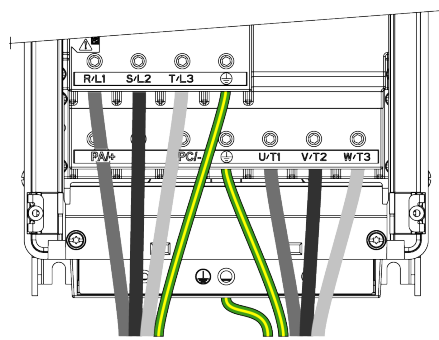


Access To The Terminals - Frame Size 6

⚡ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

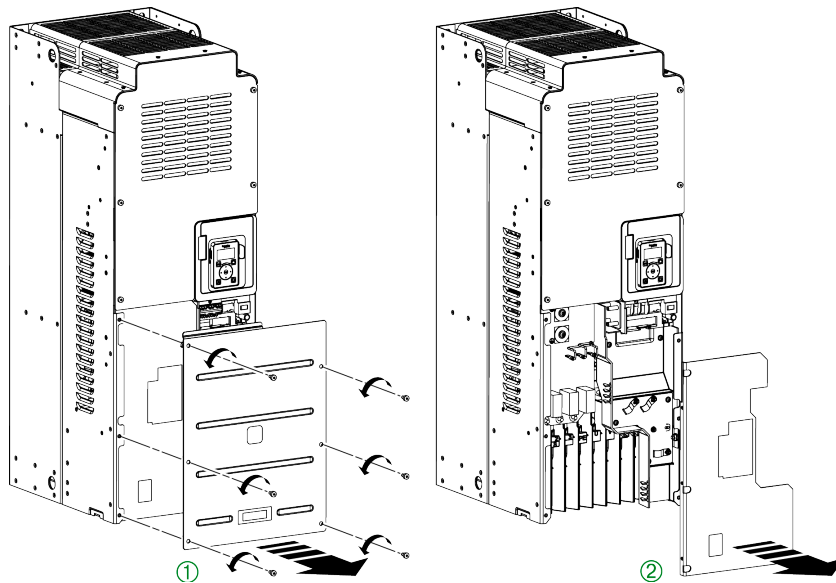

Apply the following instructions to access the terminals on **frame size 6** drives

| Step | Action |
|------|--|
| 1 | Unscrew the 6 screws attaching the bottom front cover and remove it |
| 2 | Remove the terminal cover |
| 3 | Refit the front cover on completion of wiring. Tighten the screws to 3.3 N•m / 29.3 lb-in. |

Frame Size 6 Cable Path


NOTE: Due to accessible live parts on their lower part, these drives should be installed in enclosures or located behind enclosures or barriers, which comply at least with the requirements of IP2•, as per IEC61800-5-1.

Use 1 or 2 connection cables per terminal, depending on the cable characteristics. Refer to standard IEC 60364-5-52 for cable selection. Permissible cable cross sections are given in Characteristics of the Power Part Terminals, page 91.


For 2 connection cable wiring:

| Step | Action |
|------|---|
| 1 | Connect the first cable on the lower terminal |
| 2 | Connect the other cable on the upper terminal |


For 2 cable connection, wire the power cables as shown below.

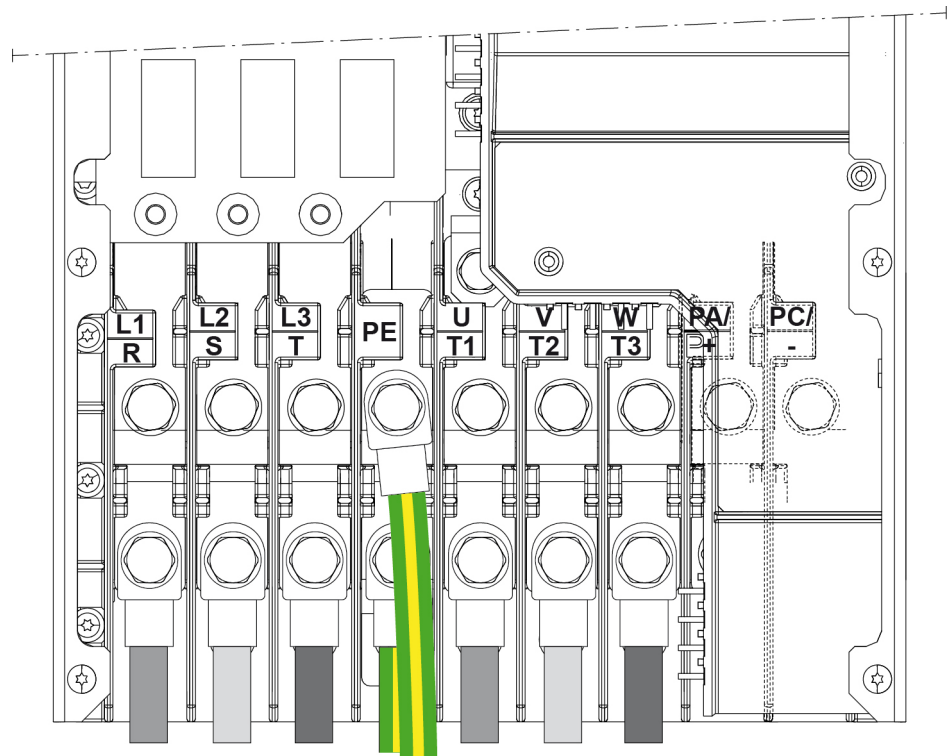

NOTE: A conduit box is available as an option. It enables an IP21 degree of protection at the bottom side of the drive. See NHA52502 available on www.se.com.

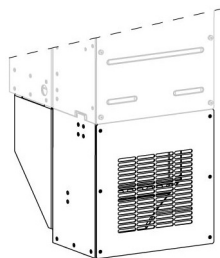

For 4 cable connection, wire the power cables as shown below.

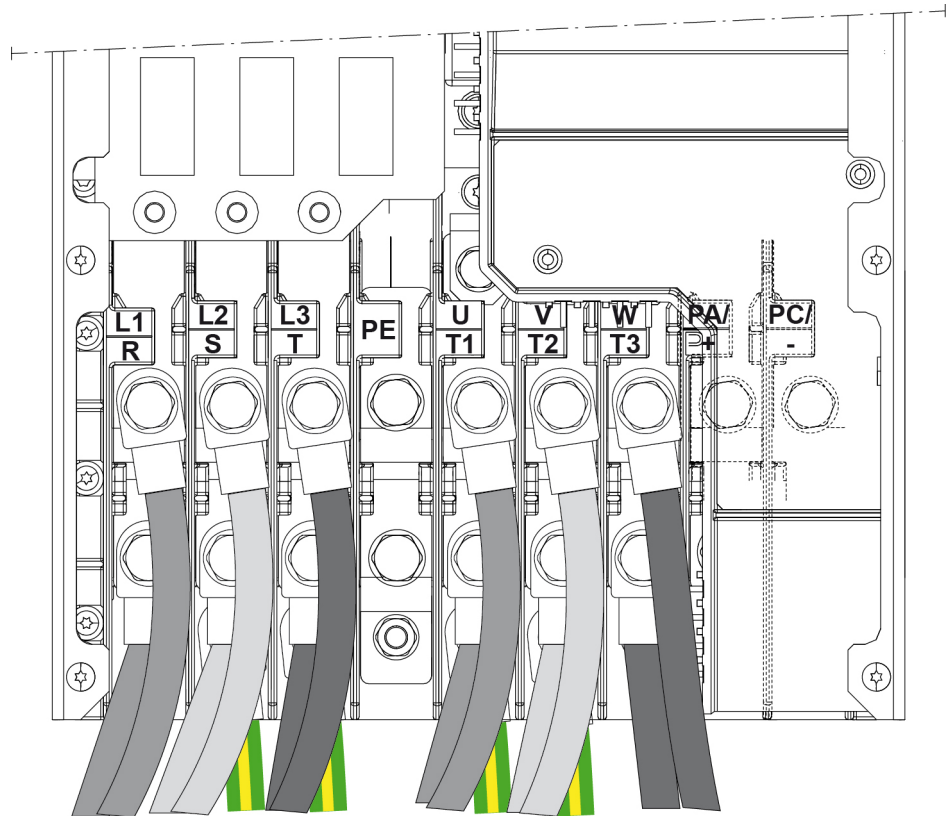


Access To The Terminals - Frame Sizes 7, 8A and 8B

⚠️ ⚠️ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

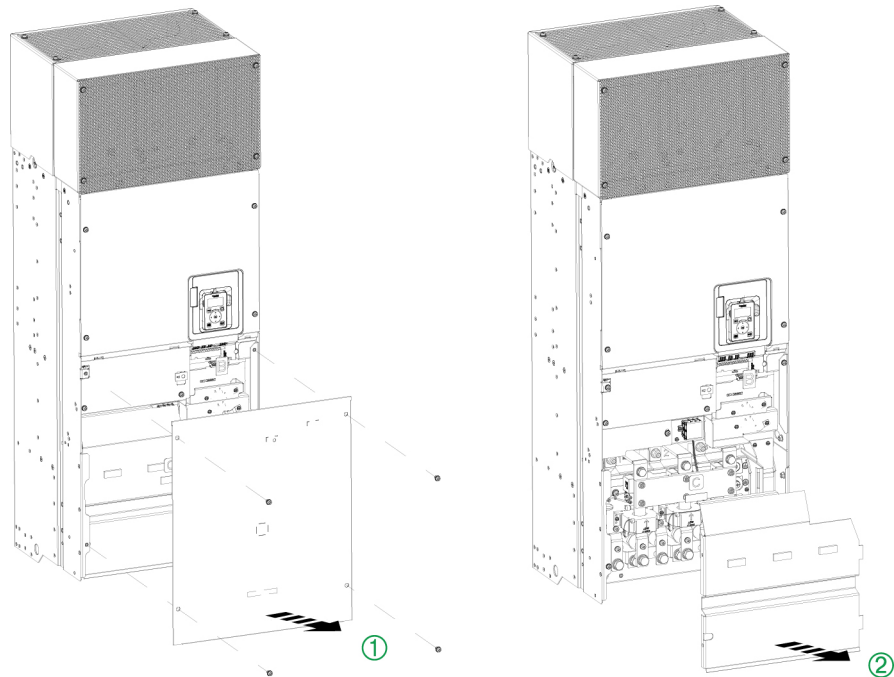

Apply the following instructions to access the terminals on **frame sizes 7, 8A and 8B** drives


| Step | Action |
|------|---|
| 1 | Unscrew the 4 screws attaching the bottom front cover and remove it |
| 2 | Remove the terminal cover |
| 3 | Refit the front cover on completion of wiring. Tighten the screws to 4.2 N•m / 37.17 lb-in. |

Frame Size 7 Cable Path

NOTE: Due to accessible live parts on their lower part, these drives should be installed in enclosures or located behind enclosures or barriers, which comply at least with the requirements of IP2*, as per IEC61800-5-1.

Refer to standard IEC 60364-5-52 for cable selection. Permissible cable cross sections are given in the Power Terminals section, page 99.

Wire the power cables as shown below.

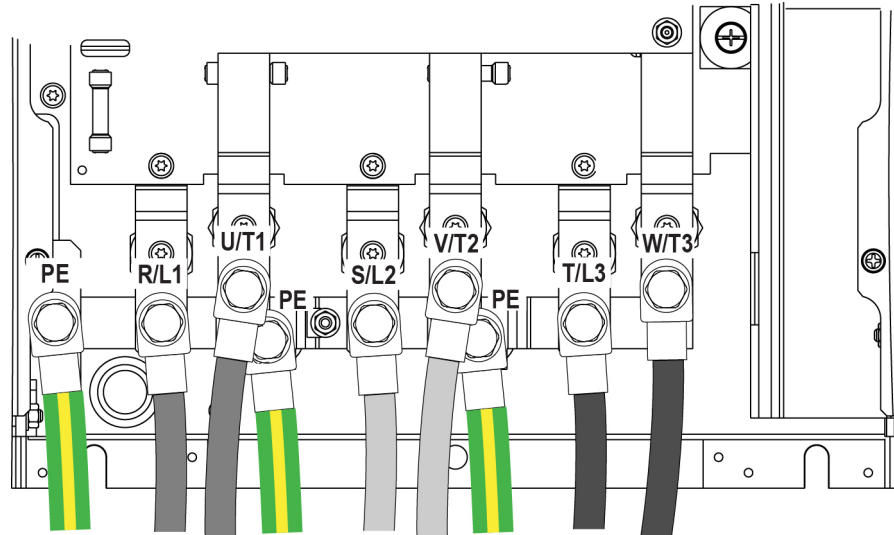

Cable wiring:

| Step | Action |
|------|---|
| 1 | Connect the first cable on the lower terminal |
| 2 | Connect the other cable on the upper terminal |


NOTE: Wiring of the DC chokes is described in the Installing the DC Choke section, page 73.

Frame Size 8A Cable Path

NOTE: Due to accessible live parts on their lower part, these drives should be installed in enclosures or located behind enclosures or barriers, which comply at least with the requirements of IP2•, as per IEC61800-5-1.

Refer to standard IEC 60364-5-52 for cable selection. Permissible cable cross sections are given in the Power Terminals section, page 100.

Wire the power cables as shown below.

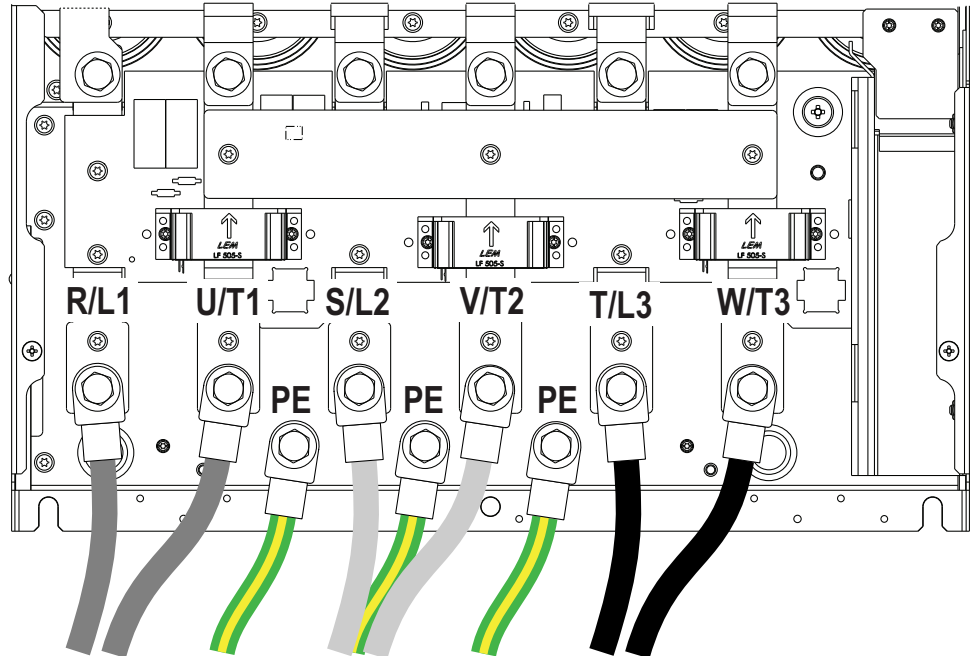

Cable wiring:

| Step | Action |
|------|---|
| 1 | Connect the first cable on the lower terminal |
| 2 | Connect the other cable on the upper terminal |


NOTE: Wiring of the DC chokes is described in the Installing the DC Choke section, page 73.

Frame Size 8B Cable Path

NOTE: Due to accessible live parts on their lower part, these drives should be installed in enclosures or located behind enclosures or barriers, which comply at least with the requirements of IP2*, as per IEC61800-5-1.

Refer to standard IEC 60364-5-52 for cable selection. Permissible cable cross sections are given in the Power Terminals section, page 100.

Wire the power cables as shown below.

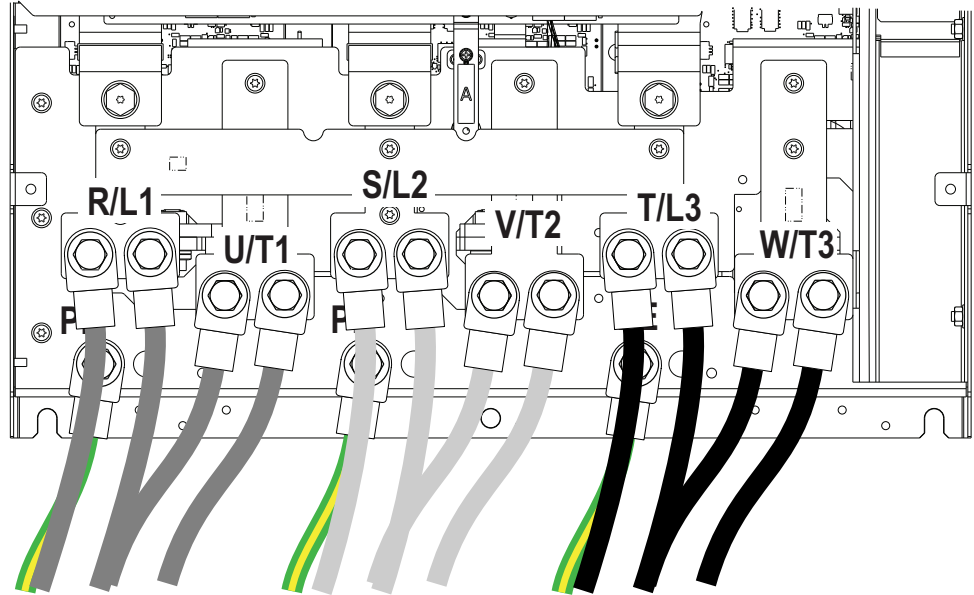

Cable wiring:

| Step | Action |
|------|---|
| 1 | Connect the first cable on the lower terminal |
| 2 | Connect the other cable on the upper terminal |

Electromagnetic Compatibility

Limit Values

This product meets the EMC requirements according to the standard IEC 61800-3 if the measures described in this manual are implemented during installation.

If the selected composition (product itself, mains filter, other accessories and measures) does not meet the requirements of category C1, the following information applies as it appears in IEC 61800-3:

| |
|--|
| ▲ WARNING |
| RADIO INTERFERENCE |
| In a domestic environment this product may cause radio interference in which case supplementary mitigation measures may be required. |
| Failure to follow these instructions can result in death, serious injury, or equipment damage. |

EMC requirements for the control cabinet

| EMC measures | Objective |
|--|---|
| Use mounting plates with good electrical conductivity, connect large surface areas of metal parts, remove paint from contact areas. | Good conductivity due to large surface contact. |
| Ground the control cabinet, the control cabinet door and the mounting plate with ground straps or ground wires. The conductor cross section must be at least 10 mm ² (AWG 8). | Reduces emissions. |
| Fit switching devices such as power contactors, relays or solenoid valves with interference suppression units or arc suppressors (for example, diodes, varistors, RC circuits). | Reduces mutual interference. |
| Install power components and control components separately. | |
| Install frame size 1 and 2 drives on grounded metal back plane. | Reduces emissions. |

Shielded cables

| EMC measures | Objective |
|---|---|
| Connect large surface areas of cable shields, use cable clamps and ground straps. | Reduces emissions. |
| Use cable clamps to connect a large surface area of the shields of all shielded cables to the mounting plate at the control cabinet entry. | |
| Ground shields of digital signal wires at both ends by connecting them to a large surface area or via conductive connector housings | Reduces interference affecting the signal wires, reduces emissions |
| Ground the shields of analog signal wires directly at the device (signal input); insulate the shield at the other cable end or ground it via a capacitor (for example, 10 nF, 100 V or higher). | Reduces ground loops due to low-frequency interference. |
| Use only shielded motor cables with copper braid and a coverage of at least 85%, ground a large surface area of the shield at both ends. | Diverts interference currents in a controlled way, reduces emissions. |

Cable Installation

| EMC measures | Objective |
|--|--|
| Do not route fieldbus cables and signal wires in a single cable duct together with lines with DC and AC voltages of more than 60 V. (Fieldbus cables, signal lines and analog lines may be in the same cable duct) Recommendation: Use separate cable ducts at least 20 cm (8 in.) apart. | Reduces mutual interference. |
| Keep cables as short as possible. Do not install unnecessary cable loops, use short cables from the central grounding point in the control cabinet to the external ground connection. | Reduces capacitive and inductive interference. |
| Use equipotential bonding conductors in the following cases: wide-area installations, different voltage supplies and installation across several buildings. | Reduces current in the cable shield, reduces emissions. |
| Use fine stranded equipotential bonding conductors. | Diverts high-frequency interference currents |
| If motor and machine are not conductively connected, for example by an insulated flange or a connection without surface contact, you must ground the motor with a ground strap or a ground wire. The conductor cross section must be at least 10 mm ² (AWG 8). | Reduces emissions, increases immunity. |
| Use twisted pair for the DC supply. For digital and analog inputs use shielded twisted cables with a pitch of between 25...50 mm (1...2 in). | Reduces interference affecting the signal cables, reduces emissions. |

Power Supply

| EMC measures | Objective |
|---|---|
| Operate product on mains with grounded neutral point. | Enables effectiveness of mains filter. |
| Surge arrester if there is a risk of overvoltage. | Reduces the risk of damage caused by overvoltage. |

Additional measures for EMC improvement

Depending on the application, the following measures can improve the EMC-dependent values:

| EMC measures | Objective |
|---|---|
| Use mains chokes | Reduces mains harmonics, prolongs product service life. |
| Use external mains filters | Improves the EMC limit values. |
| Additional EMC measures, for example mounting in a closed control cabinet with 15 dB shielding attenuation of radiated interference | |

NOTE: If using an additional input filter, it should be mounted as close as possible to the drive and connected directly to the supply mains via an unshielded cable.

Operation on an IT or Corner Grounded System

Definition

IT system: Isolated or impedance grounded neutral. Use a permanent insulation monitoring device compatible with nonlinear loads, such as an XM200 type or equivalent.

Corner grounded system: System with one phase grounded.

Operation

NOTICE

OVERVOLTAGE OR OVERHEATING

If the drive is operated via an IT or corner grounded system, the integrated EMC filter must be disconnected as described in the present manual.

Failure to follow these instructions can result in equipment damage.

NOTE: Corner-Grounded is not suitable for ATV610 Size 7, Size 8A and Size 8B product.

Disconnecting The Built-in EMC Filter

Filter Disconnection

⚡ ⚠ **DANGER**

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH



Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

The drives have a built-in EMC filter. As a result they exhibit leakage current to ground. If the leakage current creates compatibility problems with your installation (residual current device or other), then you can reduce the leakage current by disconnecting the built-in filter as shown below. In this configuration the product does not meet the EMC requirements according to the standard IEC 61800-3.

Setting


Apply the following instructions to disconnect the built-in EMC filter.

| Step | Action |
|------|--|
| 1 | Remove the front cover(s) , page 102 |
| 2 | The screw(s) or switch is/are factory set to the  position, as shown on detail ① |
| 3 | For operation without the built-in EMC filter, remove the screw(s) from its/ their location or move the switch from its position and set it/them to the  position, as shown on detail ② |
| 4 | Refit the front cover(s) |


NOTE:

- Use only the screw(s) supplied.
- Do not operate the drive with setting screw(s) removed.


Setting For Frame Size 1 Products

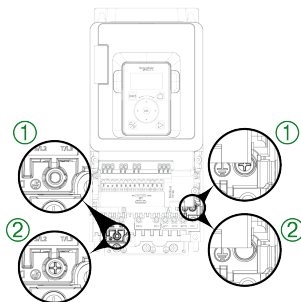


Setting For Frame Size 2 and Frame Size 3 Products

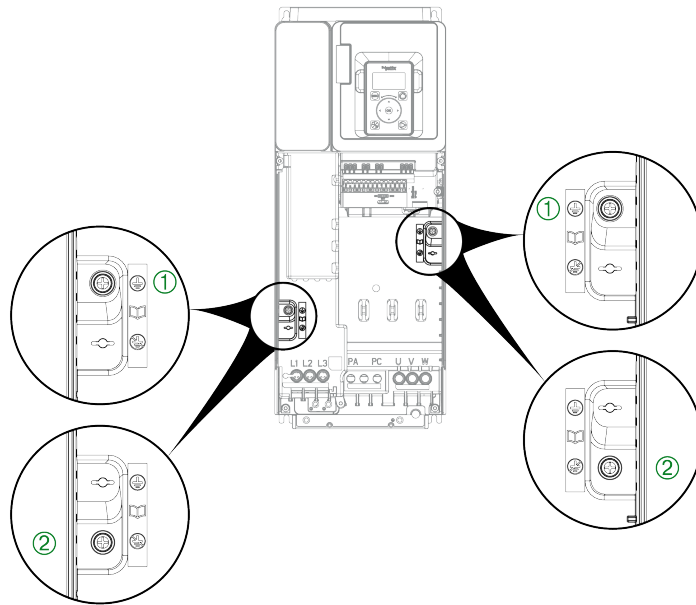


Setting For Frame Size 4 Products

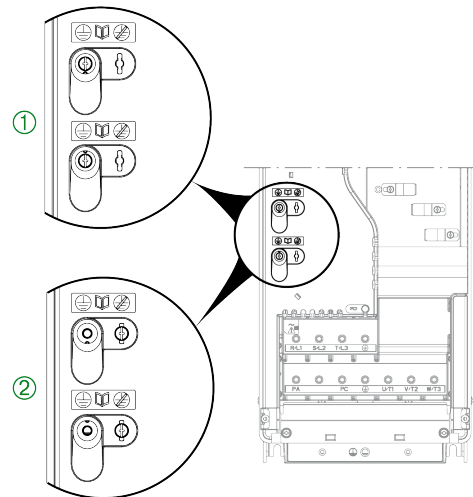


Setting For Frame Size 5 Products

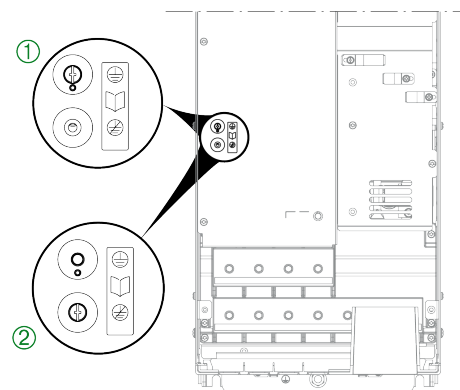


Setting For Frame Size 6 Products

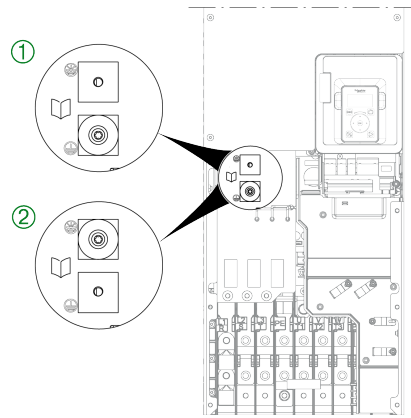


Setting For Frame Size 7 Products

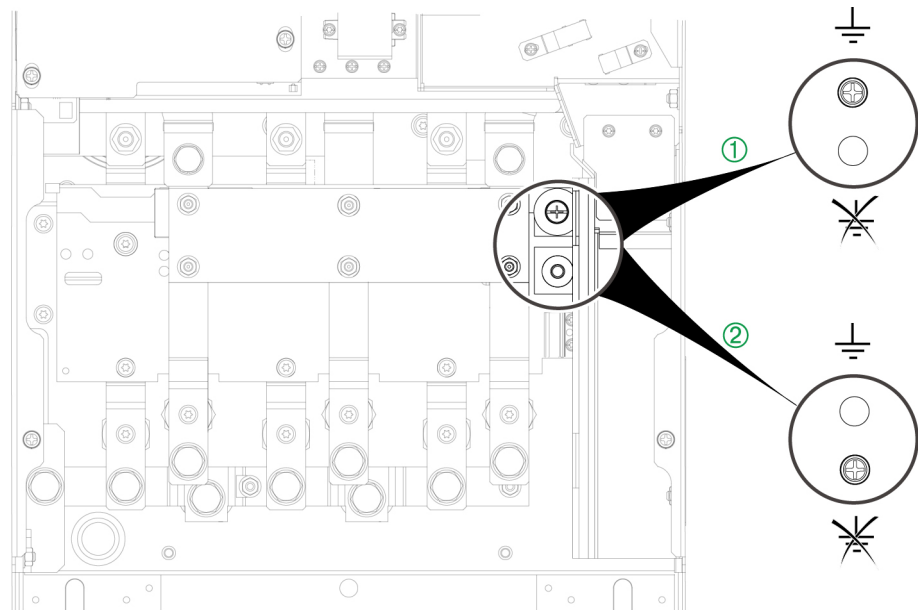

Setting For Frame Size 8A Products

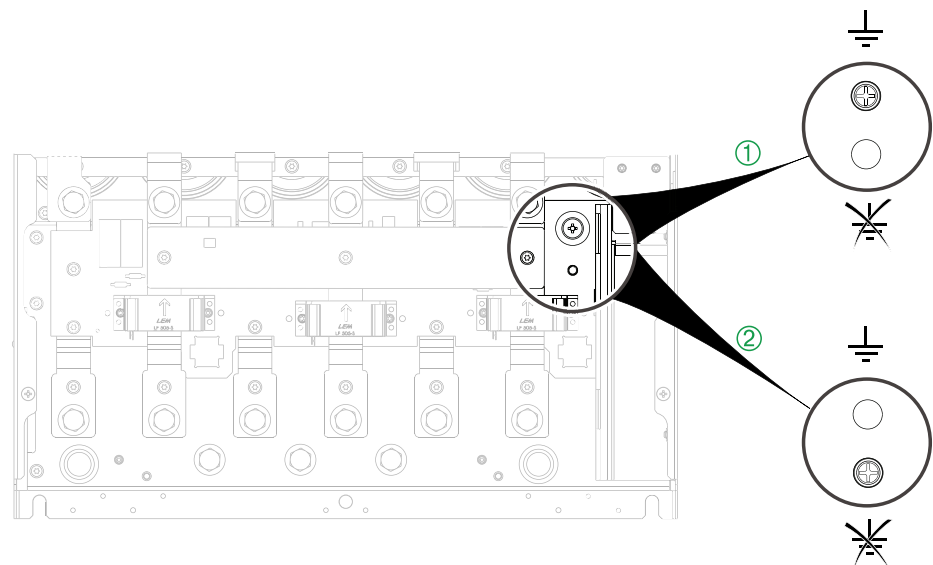


Setting For Frame Size 8B Products

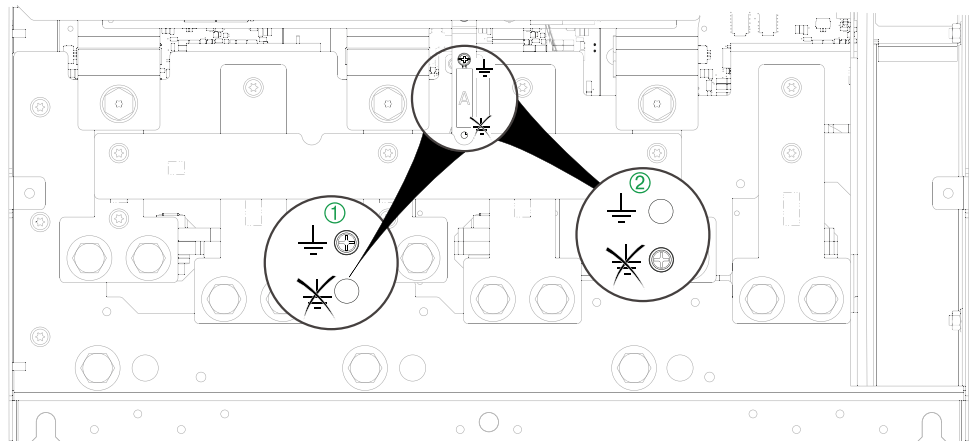

Arrangement and Characteristics of Control Block Terminals and Communication and I/O Ports

Terminal Arrangement


The control block terminals are the same for all drive frame sizes.

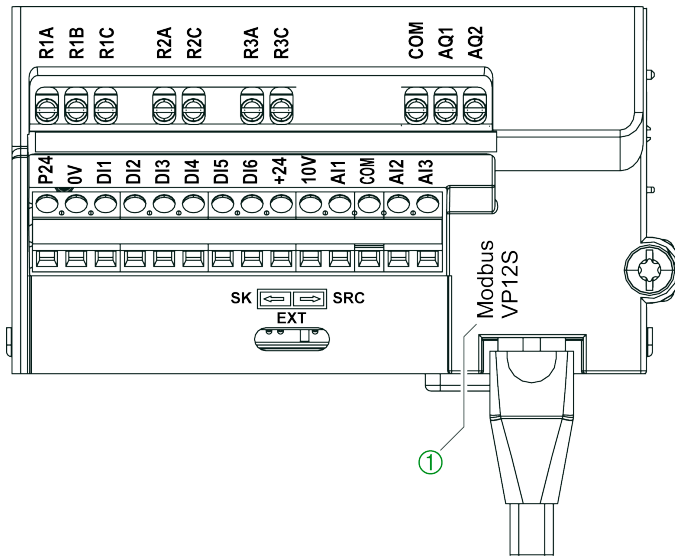

① Modbus VP12S: This is the standard Modbus serial link marking. VP•S means connector with power supply, where 12 stands for the 12 Vdc supply voltage.

ATV610...N4ZC Modbus RS485 Terminal

On the references **ATV610...N4ZC**, the Modbus In-Line (A, B, SGND,PE) is available:

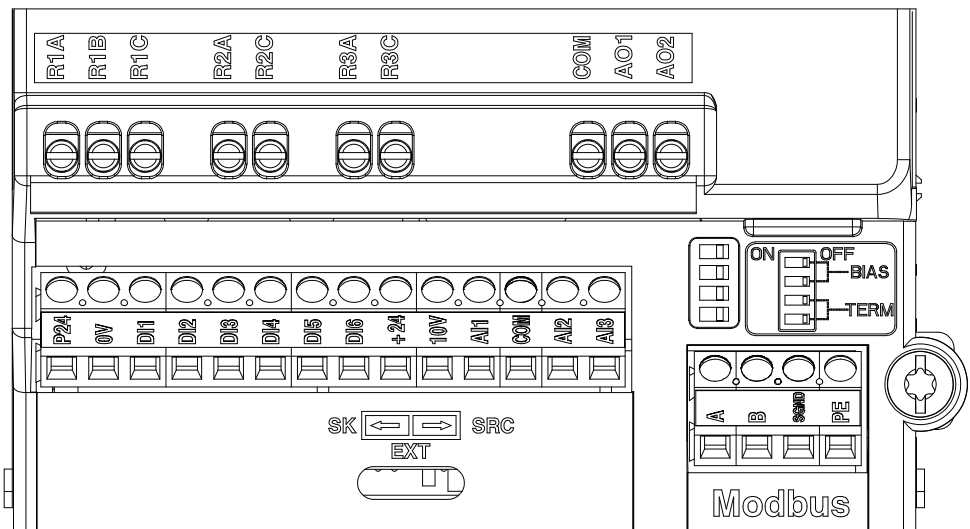

| Pin | Signal |
|------|------------------------------------|
| A | D1 (Modbus signals) |
| B | D0 (Modbus signals) |
| SGND | Common (Modbus signals) |
| PE | Protective Earth ground connection |

Wiring Characteristics

⚡ ⚠ DANGER

HAZARD OF FIRE OR ELECTRIC SHOCK

- Wire cross sections and tightening torques must comply with the specifications provided in this document.
- If you use flexible multi-wire cables for a connection with a voltage higher than 25 Vac, you must use ring type cable lugs or wire ferrules, depending on the wire gauge and the specified stripping length of the cable.

Failure to follow these instructions will result in death or serious injury.

Wire cross sections and tightening torques

| Control Terminals | Relay Output Wire Cross Section | | Other Wire Cross Section | | Tightening Torque |
|-------------------|---------------------------------|-----------------------|--------------------------|-----------------------|-------------------|
| | Minimum (1) | Maximum | Minimum (1) | Maximum | |
| | mm ² (AWG) | mm ² (AWG) | mm ² (AWG) | mm ² (AWG) | N·m (lb.in) |
| All terminals | 0.75 (18) | 1.5 (16) | 0.5 (20) | 1.5 (16) | 0.5 (4.4) |

(1) The value corresponds to the minimum permissible cross section of the terminal.

NOTE: Also refer to Control Terminal Electrical data, page 120.

RJ45 Communication port

It is used to connect a:

- Remote graphic display terminal, using a Modbus serial line
- Modbus network
- Configuration loader tool...

NOTE: Check that RJ45 cable is not damaged prior to connect it to the product otherwise the power supply of the control could be lost.

Control Terminals Electrical Data

NOTE:

- For a description of the terminal arrangement, refer to Arrangement and Characteristics of Control Terminals and Communication And I/O Ports, page 118
- For factory setting I/O assignment, refer to the Programming manual.
- For cable lengths, refer to the table given in the Wiring The control Part section, page 123.

| Terminal | Description | I/O Type | Electrical characteristics |
|----------|----------------------------------|----------|---|
| R1A | NO contact of relay R1 | O | Output Relay 1 <ul style="list-style-type: none"> • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching current on resistive load: 3 A for 250 Vac (OVC II) and 30 Vdc • Maximum switching current on inductive load: ($\cos \phi \geq 0.4$ and $L/R \leq 7$ ms): 2A for 250 Vac (OVC II) and 30 Vdc. Inductive load must be equipped with a voltage surge suppression device according to ac or dc operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads , page 86 and Output Relay with Inductive DC Load , page 87 • Refresh time: 5 ms \pm 0.5 ms • Service life: 100,000 operations at maximum switching current |
| R1B | NC contact of relay R1 | O | |
| R1C | Common point contact of relay R1 | O | |
| R2A | NO contact of relay R2 | O | Output Relay 2 <ul style="list-style-type: none"> • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching current on resistive load: 5 A for 250 Vac (OVC II) and 3 A for 30 Vdc • Maximum switching current on inductive load: ($\cos \phi \geq 0.4$ and $L/R \leq 7$ ms): 2 A for 250 Vac and 30 Vdc. Inductive load must be equipped with a voltage surge suppression device according to ac or dc operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads , page 86 and Output Relay with Inductive DC Loads , page 87 • Refresh time: 5 ms \pm 0.5 ms • Service life: <ul style="list-style-type: none"> ◦ 100,000 operations at maximum switching current ◦ 1,000,000 operations at 0.5 A |
| R2C | Common point contact of relay R2 | O | |
| R3A | NO contact of relay R3 | O | Output Relay 3 <ul style="list-style-type: none"> • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching current on resistive load: 5 A for 250 Vac (OVCII) and 3 A for 30 Vdc • Maximum switching current on inductive load: ($\cos \phi \geq 0.4$ and $L/R \leq 7$ ms): 2 A for 250 Vac (OVCII) and 30 Vdc. Inductive load must be equipped with a voltage surge suppression device according to AC or DC operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads Output Relay with Inductive AC Loads, page 86 and Output Relay with Inductive DC Loads Output Relay with Inductive DC loads, page 87 • Refresh time: 5 ms \pm 0.5 ms • Service life: <ul style="list-style-type: none"> ◦ 100,000 operations at maximum switching current ◦ 1,000,000 operations at 0.5 A |
| R3C | Common point contact of relay R3 | O | |
| 24V | Output supply for digital inputs | O | <ul style="list-style-type: none"> • +24 Vdc • Tolerance: minimum 20.4 Vdc, maximum 27.5 Vdc • Current: maximum 200 mA for both 24 Vdc terminals • Terminal protected against overload and short-circuit • In Sink Ext position, this supply is powered by external PLC supply |
| COM | Analog I/O common | I/O | 0 V for Analog outputs |

| Terminal | Description | I/O Type | Electrical characteristics |
|-------------|--------------------------------|----------|--|
| AQ1 | Analog output | O | AQ: Analog output software-configurable for voltage or current |
| AQ2 | Analog output | O | <ul style="list-style-type: none"> Voltage analog output 0...10 Vdc, minimum. Minimum load impedance 470 Ω, Current analog output X-Y mA by programming X and Y from 0...20 mA, maximum load impedance 500 Ω Sampling time: 10 ms + 1 ms maximum Resolution 10 bits Accuracy: ± 1 % for a temperature variation of 60 °C (140 °F) |
| P24 | External input supply | I | External input supply +24 Vdc <ul style="list-style-type: none"> Tolerance: minimum 19 Vdc, maximum 30 Vdc Current: maximum 0.8 A |
| 0V | 0 V | I/O | 0 V for P24 |
| DI1-DI6 | Digital inputs | I | 6 programmable logic inputs 24 Vdc, comply with IEC/EN 61131-2 logic type 1 <ul style="list-style-type: none"> Positive logic (Source): State 0 if ≤ 5 Vdc or logic input not wired, state 1 if ≥ 11 Vdc Negative logic (Sink): State 0 if ≥ 16 Vdc or logic input not wired, state 1 if ≤ 10 Vdc Impedance 4.42 kΩ Maximum voltage: 30 Vdc Sampling time: 2 ms + 0.5 ms maximum Multiple assignment makes it possible to configure several functions on one input (example: DI1 assigned to forward and preset speed 2, DI3 assigned to reverse and preset speed 3). |
| DI5-DI6 | Pulse inputs | I | Programmable Pulse input <ul style="list-style-type: none"> Comply with level 1 PLC, IEC 65A-68 standard State 0 if < 0.6 Vdc, state 1 if > 2.5 Vdc Pulse counter 0...30 kHz Frequency range: 0...30 kHz Cyclic ratio: 50 % ± 10 % Maximum input voltage 30 Vdc, < 10 mA Sampling time: 5 ms + 1 ms maximum |
| 10V | Output supply for Analog input | O | Internal supply for the analog inputs <ul style="list-style-type: none"> 10.5 Vdc Tolerance ± 5 % Current: maximum 10 mA |
| AI1-AI2-AI3 | Analog inputs | I | Software-configurable V/A : voltage or current analog input <ul style="list-style-type: none"> Voltage analog input 0...10 Vdc, impedance 30 kΩ, Current analog input X-Y mA by programming X and Y from 0...20 mA, with impedance 250 Ω Sampling time: 5 ms + 1 ms maximum Resolution 12 bits Accuracy: ± 1 % for a temperature variation of 60 °C (140 °F) |

| Terminal | Description | I/O Type | Electrical characteristics |
|----------|-------------------|----------|---|
| COM | Analog I/O common | I/O | 0 V for Analog inputs |
| AI2-AI3 | Sensor inputs | I | <p>Software-configurable PT100/PT1000 or KTY84 or PTC</p> <ul style="list-style-type: none"> • PT100 <ul style="list-style-type: none"> ◦ 1 thermal sensor (configurable by software) (see General Wiring Diagrams, page 84) ◦ Thermal sensor current: 5 mA ◦ Range $-20\dots200\text{ }^{\circ}\text{C}$ ($-4\dots392\text{ }^{\circ}\text{F}$) ◦ Accuracy $\pm 4\text{ }^{\circ}\text{C}$ ($7.2\text{ }^{\circ}\text{F}$) for a temperature variation of $60\text{ }^{\circ}\text{C}$ ($140\text{ }^{\circ}\text{F}$) • PT1000 <ul style="list-style-type: none"> ◦ 1 thermal sensor (configurable by software) (see General Wiring Diagrams, page 84) ◦ Thermal sensor current: 1 mA ◦ Range $-20\dots200\text{ }^{\circ}\text{C}$ ($-4\dots392\text{ }^{\circ}\text{F}$) ◦ Accuracy $\pm 4\text{ }^{\circ}\text{C}$ ($7.2\text{ }^{\circ}\text{F}$) for a temperature variation of $60\text{ }^{\circ}\text{C}$ ($140\text{ }^{\circ}\text{F}$) • PTC <ul style="list-style-type: none"> ◦ 1 thermal sensor or 3 thermal sensors or 6 thermal sensors mounted in series (see General Wiring Diagrams, page 84) ◦ Thermal sensor current: 1 mA ◦ Nominal value: $< 1.5\text{ k}\Omega$ ◦ Overheat trigger threshold: $2.9\text{ k}\Omega \pm 0.2\text{ k}\Omega$ ◦ Overheat reset threshold: $1.575\text{ k}\Omega \pm 75\text{ }\Omega$ ◦ Low impedance detection threshold: $50\text{ }\Omega \pm 10\text{ }\Omega$ • KTY84 <ul style="list-style-type: none"> ◦ 1 thermal sensor (see General Wiring Diagrams, page 84) ◦ Thermal sensor current: 1 mA ◦ Range $-20\dots200\text{ }^{\circ}\text{C}$ ($-4\dots392\text{ }^{\circ}\text{F}$) ◦ Accuracy $\pm 4\text{ }^{\circ}\text{C}$ ($7.2\text{ }^{\circ}\text{F}$) for a temperature variation of $60\text{ }^{\circ}\text{C}$ ($140\text{ }^{\circ}\text{F}$) |

Wiring The Control Part

Preliminary Instructions

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Safety Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

WARNING

UNINTENDED BEHAVIOR OF INPUTS AND OUTPUTS

The functions of the inputs and outputs depend on the selected operating mode and the settings of the corresponding parameters.

- Verify that the wiring is appropriate for the settings.
- Only start the system if there are no persons or obstructions in the hazardous area.
- When commissioning, carefully run tests for all operating states and potential error situations.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE

INCORRECT VOLTAGE


Only supply the digital inputs with 24 Vdc.

Failure to follow these instructions can result in equipment damage.

Control Cable Lengths

| Control terminal Input/Output Cables | | Maximum wires length depending on cable cross section (*) | |
|---|--------------------|---|-----------------------------|
| | | 1.5 mm ² / AWG16 | 0.5 mm ² / AWG20 |
| Analog inputs AI1, AI2, AI3 | voltage: 0 - 10 V | 30 m / 98 ft | 30 m / 98 ft |
| | current: 0 - 20 mA | 3000 m / 9840 ft | 1000 m / 3280 ft |
| Analog inputs AI2, AI3 | PT100 | 30 m / 98 ft | 10 m / 32 ft |
| | PT1000 | 300 m / 984 ft | 100 m / 328 ft |
| | KTY84 | 300 m / 984 ft | 100 m / 328 ft |
| | PTC | 300 m / 984 ft | 100 m / 328 ft |
| | Water level | 3000 m / 9840 ft | 1000 m / 3280 ft |
| Output supply 10V | | 30 m / 98 ft | 30 m / 98 ft |
| Analog outputs AQ1, AQ2 | voltage: 0 - 10 V | 30 m / 98 ft | 10 m / 32 ft |
| | current: 0 - 20 mA | 3000 m / 9840 ft | 1000 m / 3280 ft |
| Output power supply 24V | 200 mA max. | 300 m / 984 ft | 100 m / 328 ft |
| Digital inputs DI1...DI6 | | 3000 m / 9840 ft | 1000 m / 3280 ft |
| Control power supply input P24 | 24 V input | 120 m / 390 ft | 40 m / 130 ft |
| (*) Shorter cable lengths or smaller cable cross sections can be adjusted using linear interpolation with the values listed in the table. For example: maximum 10 m / 32 ft with 0.5 mm ² / AWG20 and maximum 30 m with 1.5 mm ² / AWG16 listed in the table, is equivalent to maximum 20 m / 65 ft with 1 mm ² / AWG17. | | | |

Access to the Terminals

 DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Safety Information** chapter before performing any procedure in this chapter.


Failure to follow these instructions will result in death or serious injury.

To access the control terminals, refer to the procedure described in the *Wiring the Power Part* chapter.

Control Cables Path - Drives With Conduit Box

To help ensure correct wiring of the control part, apply the following instructions to wire the control block terminals

| Step | Action |
|------|--|
| 1 | Wire the digital inputs (DI1...DI6), and the 24V terminals. |
| 2 | Wire the P24, the 0V, the COM, the analog outputs (AQ1, AQ2) terminals and the open style terminal (A, B, GND and PE). |
| 3 | Wire the 10V, the analog inputs (AI1...AI3) and COM terminals. Wire the Relay outputs. |

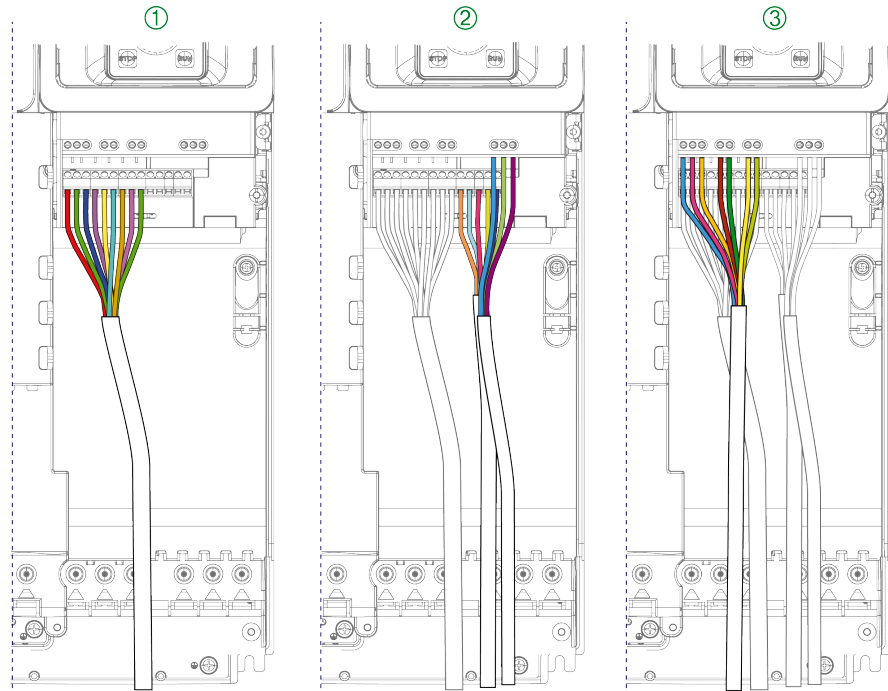


Optional Module Installation and Wiring

NOTE: ATV610...N4ZC reference not support optional module installation.

To help ensure correct wiring of the control part, apply the following instructions to install and connect a module to be wired


| Step | Action |
|------|--|
| 1 | Insert the module in the dedicated slot. |
| 2 | Connect the cable to the module. |

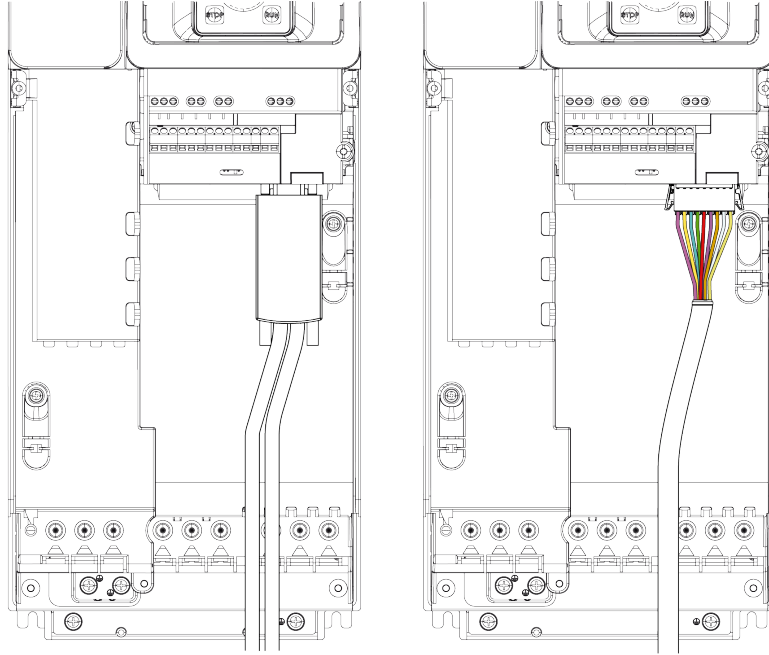

I/O Relay Module Installation and Wiring

To help ensure correct wiring of the control part, apply the following instructions to install and connect an I/O relay module.

| Step | Action |
|------|--|
| 1 | Insert the I/O relay module in the option module slot. |
| 2 | Push the module into its location and keep access to the module terminal screws. |
| 3 | Prepare the I/O cable for wiring. |
| 4 | Wire the I/O relay module. |
| 5 | Push again the module to its final position. |

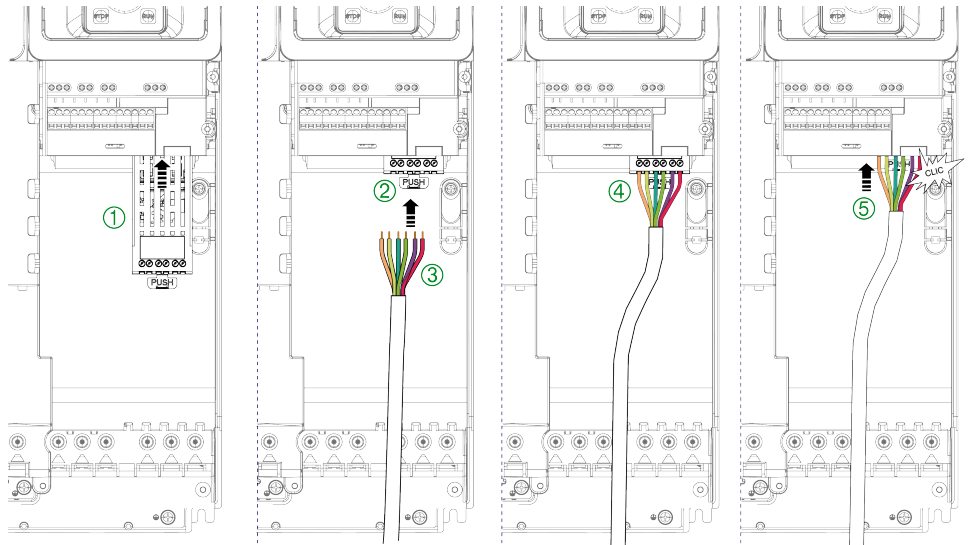

Check List Before Switching On

Unsuitable settings or unsuitable data or unsuitable wiring may trigger unintended movements, trigger signals, damage parts and disable monitoring functions.

| |
|---|
| ⚠ WARNING |
| <p>UNANTICIPATED EQUIPMENT OPERATION</p> <ul style="list-style-type: none"> • Only start the system if there are no persons or obstructions in the zone of operation. • Verify that a functioning emergency stop push-button is within reach of all persons involved in the operation. • Do not operate the product with unknown settings or data. • Verify that the wiring is appropriate for the settings. • Never modify a parameter unless you fully understand the parameter and all effects of the modification. • When commissioning, carefully run tests for all operating states, operating conditions and potential error situations. • Anticipate movements in unintended directions or oscillation of the motor. <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p> |

If the power stage is disabled unintentionally, for example as a result of power outage, errors or functions, there is a possibility that the motor is no longer decelerated in a controlled way.

| |
|--|
| ⚠ WARNING |
| <p>UNANTICIPATED EQUIPMENT OPERATION</p> <p>Verify that movements without braking effect does not result in unsafe conditions.</p> <p>Failure to follow these instructions can result in death, serious injury, or equipment damage.</p> |

Mechanical Installation

Verify the mechanical installation of the entire drive system:

| Step | Action | ✓ |
|------|--|---|
| 1 | Does the installation meet the specified distance requirements? | |
| 2 | Did you tighten all fastening screws to the specified tightening torque? | |

Electrical installation

Verify the electrical connections and the cabling:

| Step | Action | ✓ |
|------|---|---|
| 1 | Did you connect all protective ground conductors? | |
| 2 | The correct tightening of the screws may be altered during assembly and wiring phases of the drive. Verify and adjust the tightening of all terminal screws to the specified nominal torque. | |
| 3 | Do all fuses and circuit breaker have the correct rating; are the fuses of the specified type? Refer to the catalog. | |
| 4 | Did you connect or insulate all wires at the cable ends? | |
| 5 | Did you properly separate and insulate the control and power wiring? | |
| 6 | Did you properly connect and install all cables and connectors? | |
| 7 | Do all plug-in terminals colors and markings correspond to the colors and marking of the control block? | |
| 8 | Did you properly connect the signal wires? | |
| 9 | Are the required shield connections EMC-compliant? | |
| 10 | Did you take all measures for EMC compliance? | |

Covers And Seals

Verify that all devices, doors and covers of cabinet are properly installed to meet the required degree of protection.

Maintenance

What's in This Part

| | |
|--------------------------|-----|
| Scheduled Servicing..... | 131 |
| Long-term Storage | 133 |
| Decommissioning..... | 134 |
| Additional Support..... | 135 |

Scheduled Servicing

Servicing

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Read and understand the instructions in **Product Related Information** chapter before performing any procedure in this chapter.

Failure to follow these instructions will result in death or serious injury.

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

WARNING

HOT SURFACES

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

WARNING

INSUFFICIENT MAINTENANCE

Verify that the maintenance activities described below are performed at the specified intervals.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Adherence to the environmental conditions must be ensured during operation of the device. In addition, during maintenance, verify and, if appropriate, correct all factors that may have an impact on the environmental conditions.

Maintenance Activities

| | Part concerned | Activity | Interval (1) |
|---|---|-------------------------------|---------------------|
| Overall condition | All parts such as housing, HMI, control block, connections, etc. | Perform a visual inspection | At least every year |
| Corrosion | Terminals, connectors, screws, EMC plate | Inspect and clean if required | |
| Dust | Terminals, fans, cabinet air inlets and air outlets, air filters of cabinet | Inspect and clean if required | |
| Cooling | Fan | Verify the fan operation | At least every year |
| Fastening | All screws for electrical and mechanical connections | Verify tightening torques | At least every year |
| <p>(1)Maximum maintenance intervals from the date of commissioning. Reduce the intervals between maintenance to adapt maintenance to the environmental conditions, the operating conditions of the drive, and to any other factor that may influence the operation and/ or maintenance requirements of the drive.</p> | | | |

NOTE: The fan operation depends on the drive thermal state. The drive may be running and the fan not.

Fans may continue to run for a certain period of time even after power to the product has been disconnected.

| |
|--|
| ▲ CAUTION |
| <p>RUNNING FANS</p> <p>Verify that fans have come to a complete standstill before handling them.</p> <p>Failure to follow these instructions can result in injury or equipment damage.</p> |

Diagnostic And Troubleshooting

Refer to the ATV610 Programming manual available on www.se.com.

Spares and repairs

Serviceable products:

Please refer to your Customer Care Center on www.se.com/CCC.

Long-term Storage

Capacitor Reforming

If the drive was not connected to mains for an extended period of time, the capacitors must be restored to their full performance before the motor is started.

NOTICE

REDUCED CAPACITOR PERFORMANCE

- Apply mains voltage to the drive for one hour before starting the motor if the drive has not been connected to mains for the specified periods of time.(1)
- Verify that no Run command can be applied before the period of one hour has elapsed.
- Verify the date of manufacture if the drive is commissioned for the first time and run the specified procedure if the date of manufacture is more than 12 months in the past.

Failure to follow these instructions can result in equipment damage.

(1) Period of time:

- 12 months at a maximum storage temperature of +50°C (+122°F)
- 24 months at a maximum storage temperature of +45°C (+113°F)
- 36 months at a maximum storage temperature of +40°C (+104°F)

If the specified procedure cannot be performed without a Run command because of internal mains contactor control, perform this procedure with the power stage enabled, but the motor being at a standstill so that there is no appreciable mains current in the capacitors.

Decommissioning

Uninstall the Product

Observe the following procedure when uninstalling the product.

- Switch off all supply voltage. Verify that no voltages are present - refer to the *Verifying the Absence of Hazardous Voltage*, page 16.
- Remove all connection cables.
- Uninstall the product.

End of Life

The components of the product consist of different materials which can be recycled and which must be disposed of separately.

- Dispose of the packaging in compliance with all applicable regulations.
- Dispose of the product in compliance with all applicable regulations.

Refer to the *Environmental Data Program* for information and documents on environmental protection such as EoLI (End of Life instruction).

Additional Support

Customer Care Center

For additional support, you can contact our Customer Care Center on:

www.se.com/CCC.

Glossary

A

Abbreviations:

Req. = Required

Opt. = Optional

AC:

Alternating Current

D

DC:

Direct Current

DI: Digital Input

E

ELV:

Extra-Low Voltage. For more information: IEC 60449

Error :

Discrepancy between a detected (computed, measured, or signaled) value or condition and the specified or theoretically correct value or condition.

F

Factory setting:

Machine status in factory settings when the product was shipped.

Fault Reset:

A function used to restore the drive to an operational state after a detected error is cleared by removing the cause of the error so that the error is no longer active.

Fault:

Fault is an operating state. If the monitoring functions detect an error, a transition to this operating state is triggered, depending on the error class. A "Fault reset" is required to exit this operating state after the cause of the detected error has been removed. Further information can be found in the pertinent standards such as IEC 61800-7, ODVA Common Industrial Protocol (CIP).

G

GP:

General-Purpose

L

L/R:

Time constant equal to the quotient of inductance value (L) over the resistance value (R).

N

NC contact:

Normally Closed contact

NO contact:

Normally Open contact

O

OEM:

Original Equipment Manufacturer

OVCII:

Oversvoltage Category II, according IEC 61800-5-1

P

PA/+:

Positive differential DC bus terminal

PC/-:

Negative differential DC bus terminal

PELV:

Protective Extra Low Voltage, low voltage with isolation. For more information: IEC 60364-4-41.

PLC:

Programmable logic controller.

Power stage:

The power stage controls the motor. The power stage generates current for controlling the motor.

PTC:

Positive Temperature Coefficient. PTC thermistor probes integrated in the motor or application to measure its temperature

R

REACH:

Registration, Evaluation, Authorisation and restriction of Chemicals regulation

RoHS:

Restriction of Hazardous Substances

S

SCPD:

Short-Circuit Protective Device

SF: Switch Frequency

STO:

Safe Torque Off: No power that could cause torque or force is supplied to the motor

T**TVS Diode:**

Transient Voltage Suppression Diode

V**VHP:**

Very High Horse Power (> 800 kW)

VSD:

Variable Speed Drive

W**Warning:**

If the term is used outside the context of safety instructions, a warning alerts to a potential error that was detected by a monitoring function. A warning does not cause a transition of the operating state.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2026 Schneider Electric. All rights reserved.

EAV64381.12 – 04/2026