

Modicon

MCSESR Redundancy Switch

Graphic User Interface User Guide

(Original Language)

11/2024

EIO0000005411.00

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Table of Contents

Safety information	6
Important Information	6
Please Note.	7
Before You Begin	7
Start-up and Test	8
Operation and Adjustments.	9
About the Book.	10
Document Scope.	10
Validity Note	10
Related Documents.	11
Product Related Information	11
Terminology Derived from Standards	13
Information on Non-Inclusive or Insensitive Terminology	14
Trademarks.	14
Notes on the Graphical User Interface	15
Basic Settings	20
System	20
Network	24
Software	28
Load/Save.	30
External Memory	41
Port	44
Restart	50
Time	52
Basic Settings	52
SNTP	56
SNTP Client	56
SNTP Server	60
PTP	62
PTP Global.	62
PTP Boundary Clock	65
PTP Boundary Clock Global	65
PTP Boundary Clock Port.	69
PTP Transparent Clock	73
PTP Transparent Clock Global	73
PTP Transparent Clock Port.	76
Device Security	78
User Management.	78
Authentication List.	82
Management Access.	84
Server	85
IP Access Restriction.	97
Web	99
Command Line Interface	100
SNMPv1/v2 Community.	103
Pre-login Banner	103

Network Security	105
Port Security	105
802.1X Port Authentication	110
802.1X Global	110
802.1X Port Configuration	112
802.1X Port Clients	117
802.1X EAPOL Port Statistics	118
802.1X Port Authentication History	119
802.1X Integrated Authentication Server	121
RADIUS	122
RADIUS Global	122
RADIUS Authentication Server	124
RADIUS Accounting Server	125
RADIUS Authentication Statistics	127
RADIUS Accounting Statistics	128
DoS	129
DoS Global	129
Switching	134
Switching Global	134
Rate Limiter	136
Filter for MAC Addresses	138
IGMP Snooping	140
IGMP Snooping Global	140
IGMP Snooping Configuration	142
IGMP Snooping Enhancements	145
IGMP Snooping Querier	148
IGMP Snooping Multicasts	150
MRP-IEEE	151
MRP-IEEE Configuration	152
MRP-IEEE Multiple MAC Registration Protocol	153
MRP-IEEE Multiple VLAN Registration Protocol	157
QoS/Priority	160
QoS/Priority Global	160
QoS/Priority Port Configuration	161
802.1D/p Mapping	163
IP DSCP Mapping	164
Queue Management	165
VLAN	167
VLAN Global	167
VLAN Configuration	168
VLAN Port	170
VLAN Voice	172
L2-Redundancy	174
MRP	174
PRP	178
PRP Configuration	178
PRP DAN/VDAN Table	180
PRP Proxy Node Table	181
PRP Statistics	182
Spanning Tree	183

Spanning Tree Global	184
Spanning Tree Port	189
Link Aggregation	196
Link Backup	202
Diagnostics	206
Status Configuration	206
Device Status	206
Security Status	210
Signal Contact	216
Signal Contact 1 / Signal Contact 2	216
MAC Notification	221
Alarms (Traps)	222
System	224
System Information	224
Hardware State	224
IP Address Conflict Detection	225
ARP	228
Selftest	229
Syslog	231
Ports	233
SFP	233
Port Monitor	234
Auto-Disable	244
Port Mirroring	247
LLDP	249
LLDP Configuration	249
LLDP Topology Discovery	253
Report	256
Report Global	256
Persistent Logging	260
System Log	262
Audit Trail	263
Advanced	265
DHCP Server	265
DHCP Server Global	265
DHCP Server Pool	266
DHCP Server Lease Table	270
Industrial Protocols	271
IEC61850-MMS	271
Modbus TCP	273
EtherNet/IP	275
Command Line Interface	276
Index	277

Safety information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Before You Begin

Do not use this product on machinery lacking effective point-of-operation guarding. Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.

WARNING

UNGUARDED EQUIPMENT

- Do not use this software and related automation equipment on equipment which does not have point-of-operation protection.
- Do not reach into machinery during operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

This automation equipment and related software is used to control a variety of industrial processes. The type or model of automation equipment suitable for each application will vary depending on factors such as the control function required, degree of protection required, production methods, unusual conditions, government regulations, etc. In some applications, more than one processor may be required, as when backup redundancy is needed.

Only you, the user, machine builder or system integrator can be aware of all the conditions and factors present during setup, operation, and maintenance of the machine and, therefore, can determine the automation equipment and the related safeties and interlocks which can be properly used. When selecting automation and control equipment and related software for a particular application, you should refer to the applicable local and national standards and regulations. The National Safety Council's Accident Prevention Manual (nationally recognized in the United States of America) also provides much useful information.

In some applications, such as packaging machinery, additional operator protection such as point-of-operation guarding must be provided. This is necessary if the operator's hands and other parts of the body are free to enter the pinch points or other hazardous areas and serious injury can occur. Software products alone cannot protect an operator from injury. For this reason the software cannot be substituted for or take the place of point-of-operation protection.

Ensure that appropriate safeties and mechanical/electrical interlocks related to point-of-operation protection have been installed and are operational before placing the equipment into service. All interlocks and safeties related to point-of-operation protection must be coordinated with the related automation equipment and software programming.

NOTE: Coordination of safeties and mechanical/electrical interlocks for point-of-operation protection is outside the scope of the Function Block Library, System User Guide, or other implementation referenced in this documentation.

Start-up and Test

Before using electrical control and automation equipment for regular operation after installation, the system should be given a start-up test by qualified personnel to verify correct operation of the equipment. It is important that arrangements for such a check are made and that enough time is allowed to perform complete and satisfactory testing.

WARNING

EQUIPMENT OPERATION HAZARD

- Verify that all installation and set up procedures have been completed.
- Before operational tests are performed, remove all blocks or other temporary holding means used for shipment from all component devices.
- Remove tools, meters, and debris from equipment.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future references.

Software testing must be done in both simulated and real environments.

Verify that the completed system is free from all short circuits and temporary grounds that are not installed according to local regulations (according to the National Electrical Code in the U.S.A, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to prevent accidental equipment damage.

Before energizing equipment:

- Remove tools, meters, and debris from equipment.
- Close the equipment enclosure door.
- Remove all temporary grounds from incoming power lines.
- Perform all start-up tests recommended by the manufacturer.

Operation and Adjustments

The following precautions are from the NEMA Standards Publication ICS 7.1 - 1995: (In case of divergence or contradiction between any translation and the English original, the original text in the English language will prevail.)

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, there are hazards that can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation. Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment manufacturer's instructions and the machinery used with the electrical equipment.
- Only those operational adjustments required by the operator should be accessible to the operator. Access to other controls should be restricted to prevent unauthorized changes in operating characteristics.

About the Book

Document Scope

The Graphic User Interface User Guide contains detailed information on using the graphical user interface to operate the individual functions of the device.

Validity Note


The characteristics of the products described in this document are intended to match the characteristics that are available on www.se.com. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on www.se.com, consider www.se.com to contain the latest information.

Related Documents

Document title	Reference
Modicon MCSESR Redundancy Switch Installation User Guide	EIO0000004961.00 (English)
	EIO0000005423.00 (French)
	EIO0000005424.00 (German)
	EIO0000005426.00 (Spanish)
	EIO0000005425.00 (Italian)
	EIO0000005427.00 (Chinese)
Modicon MCSESR Redundancy Switch Configuration User Guide	EIO0000005410.00 (English)
	EIO0000005413.00 (French)
	EIO0000005414.00 (German)
	EIO0000005416.00 (Spanish)
	EIO0000005415.00 (Italian)
	EIO0000005417.00 (Chinese)
Modicon MCSESR Redundancy Switch Graphic User Interface User Guide	EIO0000005411.00 (English)
	EIO0000005418.00 (French)
	EIO0000005419.00 (German)
	EIO0000005421.00 (Spanish)
	EIO0000005420.00 (Italian)
	EIO0000005422.00 (Chinese)
Modicon MCSESR Redundancy Switch Command Line Interface User Guide	EIO0000005474.00 (English)

You can download these technical publications and other technical information from our website at: www.se.com/ww/en/download

Product Related Information

 **DANGER**

ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Disconnect all power from all equipment including connected devices prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires except under the specific conditions specified in the appropriate hardware guide for this equipment.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before applying power to the equipment.
- Use only the specified voltage when operating this equipment and any associated products.

Failure to follow these instructions will result in death or serious injury.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

WARNING

LOSS OF CONTROL

- Perform a Failure Mode and Effects Analysis (FMEA), or equivalent risk analysis, of your application, and apply preventive and detective controls before implementation.
- Provide a fall back state for undesired control events or sequences.
- Provide separate or redundant control paths wherever required.
- Supply appropriate parameters, particularly for limits.
- Review the implications of transmission delays and take actions to mitigate them.
- Review the implications of communication link interruptions and take actions to mitigate them.
- Provide independent paths for control functions (for example, emergency stop, over-limit conditions, and error conditions) according to your risk assessment, and applicable codes and regulations.
- Apply local accident prevention and safety regulations and guidelines.¹
- Test each implementation of a system for proper operation before placing it into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

1. For additional information, refer to NEMA ICS 1.1 (latest edition), Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control and to NEMA ICS 7.1 (latest edition), Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems or their equivalent governing your particular location.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Only use software approved by Schneider Electric for use with this equipment.
- Update your application program every time you change the physical hardware configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Terminology Derived from Standards

The technical terms, terminology, symbols and the corresponding descriptions in the information contained herein, or that appear in or on the products themselves, are generally derived from the terms or definitions of international standards.

In the area of functional safety systems, drives and general automation, this may include, but is not limited to, terms such as safety, safety function, safe state, fault, fault reset, malfunction, failure, error, error message, dangerous, etc.

Among others, these standards include:

Standard	Description
IEC 61131-2:2007	Programmable controllers, part 2: Equipment requirements and tests.
ISO 13849-1:2023	Safety of machinery: Safety related parts of control systems. General principles for design.
EN 61496-1:2013	Safety of machinery: Electro-sensitive protective equipment. Part 1: General requirements and tests.
ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction
EN 60204-1:2006	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
ISO 14119:2013	Safety of machinery - Interlocking devices associated with guards - Principles for design and selection
ISO 13850:2015	Safety of machinery - Emergency stop - Principles for design
IEC 62061:2021	Safety of machinery - Functional safety of safety-related electrical, electronic, and electronic programmable control systems
IEC 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety related systems: General requirements.
IEC 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety related systems: Requirements for electrical/electronic/programmable electronic safety-related systems.
IEC 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety related systems: Software requirements.
IEC 61784-3:2021	Industrial communication networks - Profiles - Part 3: Functional safety fieldbuses - General rules and profile definitions.
2006/42/EC	Machinery Directive
2014/30/EU	Electromagnetic Compatibility Directive
2014/35/EU	Low Voltage Directive

In addition, terms used in the present document may tangentially be used as they are derived from other standards such as:

Standard	Description
IEC 60034 series	Rotating electrical machines.
IEC 61800 series	Adjustable speed electrical power drive systems.
IEC 61158 series	Digital data communications for measurement and control – Fieldbus for use in industrial control systems.

Finally, the term zone of operation may be used in conjunction with the description of specific hazards, and is defined as it is for a hazard zone or danger zone in the Machinery Directive (2006/42/EC) and ISO 12100:2010.

NOTE: The aforementioned standards may or may not apply to the specific products cited in the present documentation. For more information concerning the individual standards applicable to the products described herein, see the characteristics tables for those product references.

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Trademarks

QR Code is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

Notes on the Graphical User Interface

The Graphical User Interface of the device is divided as follows:

- ▶ Navigation area
- ▶ Dialog area
- ▶ Buttons

Navigation area

The Navigation area is located on the left side of the Graphical User Interface.

The Navigation area contains the following elements:

- ▶ Toolbar
- ▶ Filter
- ▶ Menu

You have the option of collapsing the entire Navigation area, for example when displaying the Graphical User Interface on small screens. To collapse or expand, you click the small arrow at the top of the navigation area.

Toolbar

The toolbar at the top of the navigation area contains several buttons.

- When you position the mouse pointer over a button, a tooltip displays further information.
- If the connection to the device is lost, then the toolbar is grayed out.



The device automatically refreshes the toolbar information every 5 seconds.

Clicking the button refreshes the toolbar manually.



When you position the mouse pointer over the button, a tooltip displays the following information:

- ▶ *User:*
Name of the logged in user
- ▶ *Device name:*
Name of the device

Clicking the button opens the *Device Security > User Management* dialog.



Clicking the button logs out the user and displays the login dialog.

If the configuration profile in the volatile memory (*RAM*) and the selected configuration profile in the non-volatile memory (*NVM*) differ, then the device displays the *Warning* dialog.

- To permanently save the changes, click the *Yes* button in the *Warning* dialog.
- To discard the changes, click the *No* button in the *Warning* dialog.



Displays the remaining time in seconds until the device automatically logs out an inactive user.

Clicking the button opens the *Device Security > Management Access > Web* dialog. There you can specify the timeout.



When the configuration profile in the volatile memory (*RAM*) differs from the selected configuration profile in the non-volatile memory (*NVM*), this button is visible. Otherwise, the button is hidden.

Clicking the button opens the *Basic Settings > Load/Save* dialog.

By right-clicking the button you can save the settings in the non-volatile memory (*NVM*).



When you position the mouse pointer over the button, a tooltip displays the following information:

- ▶ **Device Status:** This section displays a compressed view of the *Device status* frame in the *Basic Settings > System* dialog. The section displays the alarm that is active and whose occurrence was recorded first.
- ▶ **Security Status:** This section displays a compressed view of the *Security status* frame in the *Basic Settings > System* dialog. The section displays the alarm that is active and whose occurrence was recorded first.
- ▶ **Boot Parameter:** If you permanently save changes to the settings and at least one boot parameter differs from the configuration profile used during the last restart, then this section displays a note.

The following settings cause the boot parameters to change:

- *Basic Settings > External Memory* dialog, *Software auto update* parameter
- *Basic Settings > External Memory* dialog, *Config priority* parameter
- *Device Security > Management Access > Server* dialog, *SNMP* tab, *UDP port* parameter
- *Diagnostics > System > Selftest* dialog, *RAM test* parameter
- *Diagnostics > System > Selftest* dialog, *SysMon1 is available* parameter
- *Diagnostics > System > Selftest* dialog, *Load default config on error* parameter

Clicking the button opens the *Diagnostics > Status Configuration > Device Status* dialog.

Filter

The filter enables you to reduce the number of menu items in the menu. When filtering, the menu displays only menu items matching the search string entered in the filter field.

Menu

The menu displays the menu items.

You have the option of filtering the menu items. See section “Filter”.

To display the corresponding dialog in the dialog area, you click the desired menu item. If the selected menu item is a node containing sub-items, then the node expands or collapses while clicking. The dialog area keeps the previously displayed dialog.

You have the option of expanding or collapsing every node in the menu at the same time. When you right-click anywhere in the menu, a context menu displays the following entries:


- ▶ *Expand*
Expands every node in the menu at the same time. The menu displays the menu items for every level.
- ▶ *Collapse*
Collapses every node in the menu at the same time. The menu displays the top level menu items.

Dialog area

The Dialog area is located on the right side of the Graphical User Interface. When you click a menu item in the Navigation area, the Dialog area displays the corresponding dialog.

Updating the display

If a dialog remains opened for a longer time, then the values in the device have possibly changed in the meantime.



- To update the display in the dialog, click the  button. Unsaved information in the dialog is lost.

Saving the settings

Saving, transfers the changed settings to the volatile memory (*RAM*) of the device. Perform the following step:

- Click the  button.

To keep the changed settings, even after restarting the device, perform the following steps:

- Open the *Basic Settings > Load/Save* dialog.
- In the table highlight the desired configuration profile.
- When in the *Selected* column the checkbox is cleared, click the  button and then the *Select* item.
- Click the  button and then the *Save* item.

NOTE: Unintentional changes to the settings can terminate the connection between your PC and the device. To keep the device accessible, enable the *Undo configuration modifications* function in the *Basic Settings > Load/Save* dialog, before changing any settings. Using the function, the device continuously checks if it can still be reached from the IP address of your PC. If the connection is lost, then the device loads the configuration profile saved in the non-volatile memory (*NVM*) after the specified time. Afterwards, the device can be accessed again.

Working with tables

The dialogs display numerous settings in table form.

When you modify a table cell, the table cell displays a red mark in its top-left corner. The red mark indicates that your modifications are not yet transferred to the volatile memory (*RAM*) of the device.

You have the option of customizing the look of the tables to fit your needs. When you position the mouse pointer over a column header, the column header displays a drop-down list button. When you click this button, the drop-down list displays the following entries:

- ▶ Sort ascending
 - Sorts the table entries in ascending order based on the entries of the selected column.
 - You recognize sorted table entries by an arrow in the column header.
- ▶ Sort descending
 - Sorts the table entries in descending order based on the entries of the selected column.
 - You recognize sorted table entries by an arrow in the column header.
- ▶ Columns
 - Displays or hides columns.
 - You recognize hidden columns by an cleared checkbox in the drop-down list.
- ▶ Filters
 - The table only displays the entries whose content matches the specified filter criteria of the selected column.
 - You recognize filtered table entries by an emphasized column header.

You have the option of selecting multiple table entries simultaneously and subsequently applying an action to them. This is useful when you are going to remove multiple table entries at the same time.



- ▶ Select several consecutive table entries:
 - Click the first desired table entry to highlight it.
 - Press and hold the <SHIFT> key.
 - Click the last desired table entry to highlight every desired table entry.
 - ▶ Select multiple individual table entries:
 - Click the first desired table entry to highlight it.
 - Press and hold the <CTRL> key.
 - Click the next desired table entry to highlight it.
- Repeat until every desired table entry is highlighted.

Buttons

Here you find the description of the standard buttons. The special dialog-specific buttons are described in the corresponding dialog help text.



Transfers the changes to the volatile memory (*RAM*) of the device and applies them to the device. To save the changes in the non-volatile memory, proceed as follows:

- Open the *Basic Settings > Load/Save* dialog.
- In the table highlight the desired configuration profile.
- When in the *Selected* column the checkbox is cleared, click the  button and then the *Select* item.
- Click the  button to save your current changes.



Updates the fields with the values that are saved in the volatile memory (*RAM*) of the device.



Transfers the settings from the volatile memory (*RAM*) into the selected configuration profile in the non-volatile memory (*NVM*).

When in the *Basic Settings > External Memory* dialog the checkbox in the *Backup config when saving* column is selected, then the device generates a copy of the configuration profile in the external memory.



Displays a submenu with menu items corresponding to the respective dialog.



Opens the *Wizard* dialog.



Adds a new table entry.



Removes the highlighted table entry.



Opens the online help.

Basic Settings

The menu contains the following dialogs:

- ▶ System
- ▶ Network
- ▶ Software
- ▶ Load/Save
- ▶ External Memory
- ▶ Port
- ▶ Restart

System

[Basic Settings > System]

In this dialog you monitor individual operating statuses.

Device status

The fields in this frame display the device status and inform you about alarms that have occurred. When an alarm is active, the frame is highlighted.

You specify the parameters that the device monitors in the [Diagnostics > Status Configuration > Device Status](#) dialog.

NOTE: If you connect only one power supply unit for the supply voltage to a device with a redundant power supply unit, then the device reports an alarm. To avoid this alarm, deactivate the monitoring of the missing power supply units in the [Diagnostics > Status Configuration > Device Status](#) dialog.

Alarm counter

Displays the number of active alarms.



When there is at least one active alarm, the icon is visible.

When you position the mouse pointer over the icon, a tooltip displays the cause of the active alarms and the time at which the device triggered the alarm.

If a monitored parameter differs from the desired status, then the device triggers an alarm. The [Diagnostics > Status Configuration > Device Status](#) dialog, [Status](#) tab displays an overview of the alarms.

Security status

The fields in this frame display the security status and inform you about alarms that have occurred. When an alarm is active, the frame is highlighted.

You specify the parameters that the device monitors in the [Diagnostics > Status Configuration > Security Status](#) dialog.

Alarm counter

Displays the number of active alarms.



When there is at least one active alarm, the icon is visible.

When you position the mouse pointer over the icon, a tooltip displays the cause of the active alarms and the time at which the device triggered the alarm.

If a monitored parameter differs from the desired status, then the device triggers an alarm. The [Diagnostics > Status Configuration > Security Status](#) dialog, [Status](#) tab displays an overview of the alarms.

Signal contact status

The fields in this frame display the signal contact status and inform you about alarms that have occurred. When an alarm is active, the frame is highlighted.

You specify the parameters that the device monitors in the [Diagnostics > Status Configuration > Signal Contact > Signal Contact 1/Signal Contact 2](#) dialog.

Alarm counter

Displays the number of active alarms.



When there is at least one active alarm, the icon is visible.

When you position the mouse pointer over the icon, a tooltip displays the cause of the active alarms and the time at which the device triggered the alarm.

If a monitored parameter differs from the desired status, then the device triggers an alarm. The [Diagnostics > Status Configuration > Signal Contact > Signal Contact 1/Signal Contact 2](#) dialog, [Status](#) tab displays an overview of the alarms.

System data

The fields in this frame display operating data and information on the location of the device.

System name

Specifies the hostname that identifies the device in the network.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..255 characters
The following characters are allowed:
 - 0..9
 - a..z
 - A..Z
 - !#\$%&'()*+,-./:;<=>?@[\\]^_`{|}~
 - <device name>-<MAC address> (default setting)

When creating HTTPS X.509 certificates, the application generating the certificate uses the specified value as the domain name and common name.

The following functions use the specified value as a host name or FQDN (Fully Qualified Domain Name). For compatibility, use only small letters, since not every system compares the case in the FQDN. Verify that this name is unique in the whole network.

- ▶ DHCP client
- ▶ *Syslog*
- ▶ *IEC61850-MMS*

Location

Specifies the location of the device.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..255 characters

Contact person

Specifies the contact person for this device.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..255 characters

Device type

Displays the product name of the device.

Power supply 1
Power supply 2

Displays the status of the power supply unit on the relevant voltage supply connection.

Possible values:




- ▶ *present*
- ▶ *defective*
- ▶ *notInstalled*
- ▶ *unknown*

Uptime	<p>Displays the time that has elapsed since this device was last restarted.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ Time in the format <code>day(s), ...h ...m ...s</code>
Temperature [°C]	<p>Displays the temperature in the device in °C.</p> <p>You activate the monitoring of the temperature thresholds in the Diagnostics > Status Configuration > Device Status dialog.</p>
Upper temp. limit [°C]	<p>Specifies the upper temperature threshold in °C.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>-99..99</code> (integer) <p>If the temperature in the device exceeds this value, then the device generates an alarm.</p>
Lower temp. limit [°C]	<p>Specifies the lower temperature threshold in °C.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>-99..99</code> (integer) <p>If the temperature in the device falls below this value, then the device generates an alarm.</p>

LED status

This frame displays the states of the device status LEDs at the time of the last update. The Installation User Guide contains detailed information about the device status LEDs.








Parameters	Color	Meaning
<i>Status</i>	●	There is no device status alarm. The device status is OK.
	●	There is at least one active device status alarm. Therefore, see the Device status frame above.
<i>Power</i>	●	Device variant with 2 power supply units: Only one supply voltage is active.
	●	Device variant with 1 power supply unit: The supply voltage is active. Device variant with 2 power supply units: Both supply voltages are active.
<i>RM</i>		Redundancy Manager • <i>MRP</i> ring manager
	●	The device does not operate as a Redundancy Manager.
	●	The device operates as a Redundancy Manager. No redundancy exists.
	●	The device operates as a Redundancy Manager. Redundancy exists.

Parameters	Color	Meaning
EAM		No external memory connected.
		The external memory is connected, but not ready for operation.
		The external memory is connected and ready for operation.

Port status

This frame displays a simplified view of the ports of the device at the time of the last update.

The icons represent the status of the individual ports. In some situations, the following icons interfere with one another. When you position the mouse pointer over the appropriate port icon, a tooltip displays a detailed information about the port state.

Parameters	Status	Meaning
<Port number>		The port is inactive. The port does not send or receive any data.
		The port is inactive. The cable is connected. Active link.
		The port is active. No cable connected or no active link.
		The port is active. The cable is connected. Connection okay. Active link. Full-duplex mode
		The half-duplex mode is enabled. Verify the settings in the <i>Basic Settings > Ports</i> dialog, <i>Configuration</i> tab.
		The port is in a blocking state due to a redundancy function.
		The port operates as a router interface.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Network

[Basic Settings > Network]

This dialog lets you specify the IP, VLAN and Ethernet Switch Configurator settings required for the access to the device management through the network.

Management interface

This frame lets you specify the VLAN in which the device management can be accessed.

IP address assignment

Specifies the source from which the device management receives its IP parameters.

Possible values:

- ▶ *Local*
The device uses the IP parameters from the internal memory. You specify the settings for this in the *IP parameter* frame.
- ▶ *BOOTP*
The device receives its IP parameters from a BOOTP or DHCP server. The server evaluates the MAC address of the device, then assigns the IP parameters.
- ▶ *DHCP* (default setting)
The device receives its IP parameters from a DHCP server. The server evaluates the MAC address, the DHCP name, or other parameters of the device, then assigns the IP parameters.

NOTE: If there is no response from the BOOTP or DHCP server, then the device sets the IP address to *0.0.0.0* and makes another attempt to obtain a valid IP address.

VLAN ID

Specifies the VLAN in which the device management is accessible through the network. The device management is accessible through ports that are members of this VLAN.

Possible values:

- ▶ *1..4042* (default setting: *1*)
The prerequisite is that the VLAN is already configured. See the *Switching > VLAN > Configuration* dialog.

When you click the button after changing the value, the *Information* window opens. Select the port, over which you connect to the device in the future. After clicking the *Ok* button, the new device management VLAN settings are assigned to the port.

- After that the port is a member of the VLAN and transmits the data packets without a VLAN tag (untagged). See the *Switching > VLAN > Configuration* dialog.
- The device assigns the port VLAN ID of the device management VLAN to the port. See the *Switching > VLAN > Port* dialog.

After a short time the device is reachable over the new port in the new device management VLAN.

MAC address

Displays the MAC address of the device. The device management is accessible via the network using the MAC address.

BOOTP/DHCP

Client ID

Displays the DHCP client ID that the device sends to the BOOTP or DHCP server. If the server is configured accordingly, then it reserves an IP address for this DHCP client ID. Therefore, the device receives the same IP from the server every time it requests it.

The DHCP client ID that the device sends is the device name specified in the *System name* field in the *Basic Settings > System* dialog.

Ethernet Switch Configurator protocol v1/v2

This frame lets you specify settings for the access to the device using the Ethernet Switch Configurator protocol.

On a PC, the Ethernet Switch Configurator software displays the Schneider Electric devices that can be accessed in the network on which the Ethernet Switch Configurator function is enabled. You can access these devices even if they have invalid or no IP parameters assigned. The Ethernet Switch Configurator software lets you assign or change the IP parameters in the device.

NOTE: With the Ethernet Switch Configurator software you access the device only through ports that are members of the same VLAN as the device management. You specify which VLAN a certain port is assigned to in the *Switching > VLAN > Configuration* dialog.

Operation

Enables/disables the Ethernet Switch Configurator function in the device.

Possible values:

- ▶ *On* (default setting)
Ethernet Switch Configurator is enabled.
You can use the Ethernet Switch Configurator software to access the device from your PC.
- ▶ *Off*
Ethernet Switch Configurator is disabled.

Access

Enables/disables the write access to the device using Ethernet Switch Configurator.

Possible values:

- ▶ *readWrite* (default setting)
The Ethernet Switch Configurator software is given write access to the device. With this setting you can change the IP parameters in the device.
- ▶ *readOnly*
The Ethernet Switch Configurator software is given read-only access to the device.
With this setting you can view the IP parameters in the device.

Change the setting to the value *readOnly* only after putting the device into operation.

Signal Activates/deactivates the flashing of the port LEDs as does the function of the same name in the Ethernet Switch Configurator software. The function lets you identify the device in the field.

Possible values:

- ▶ **selected**
The flashing of the port LEDs is active.
The port LEDs flash until you disable the function again.
- ▶ **cleared** (default setting)
The flashing of the port LEDs is inactive.

IP parameter

This frame lets you assign the IP parameters manually. If you have selected the *Local* radio button in the *Management interface* frame, *IP address assignment* option list, then these fields can be edited.

IP address Specifies the IP address under which the device management can be accessed through the network.

Possible values:

- ▶ Valid IPv4 address

Netmask Specifies the netmask.

Possible values:

- ▶ Valid IPv4 netmask

Gateway address Specifies the IP address of a router through which the device accesses other devices outside of its own network.

Possible values:

- ▶ Valid IPv4 address

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Software

[Basic Settings > Software]

This dialog lets you update the device software and display information about the device software.

You also have the option to restore a backup of the device software saved in the device.


NOTE: Before updating the device software, follow the version-specific notes in the [Readme](#) text file.

Version

Stored version	Displays the version number and creation date of the device software stored in the flash memory. The device loads the device software during the next restart.
Running version	Displays the version number and creation date of the running device software that the device loaded during the last system startup.
Backup version	Displays the version number and creation date of the device software saved as a backup in the flash memory. The device copied this device software into the backup memory during the last software update or after you clicked the Restore button.
Restore	Restores the device software saved as a backup. In the process, the device changes the Stored version and the Backup version of the device software. Upon restart, the device loads the Stored version .
Bootcode	Displays the version number and creation date of the boot code.

Software update

Alternatively, when the image file is located in the external memory, the device lets you update the device software by right-clicking in the table.

URL	<p>Specifies the path and the file name of the image file with which you update the device software.</p> <p>The device gives you the following options for updating the device software:</p> <ul style="list-style-type: none"> ▶ Software update from the PC When the file is located on your PC or on a network drive, drag and drop the file in the  area. Alternatively click in the area to select the file. ▶ Software update from an FTP server When the file is located on an FTP server, specify the URL for the file in the following form: <code>ftp://<user>:<password>@<IP address>:<port>/<file name></code>
-----	---

- ▶ Software update from a TFTP server
When the file is located on a TFTP server, specify the URL for the file in the following form:
tftp://<IP address>/<path>/<file name>
- ▶ Software update from an SCP or SFTP server
When the file is located on an SCP or SFTP server, specify the URL for the file in one of the following forms:
 - scp:// or sftp://<IP address>/<path>/<file name>
When you click the **Start** button, the device displays the **Credentials** window. There you enter **User name** and **Password**, to log in to the server.
 - scp:// or sftp://<user>:<password>@<IP address>/<path>/<file name>

Start

Updates the device software.

The device installs the selected file in the flash memory, replacing the previously saved device software. Upon restart, the device loads the installed device software.

The device copies the existing software into the backup memory.

To remain logged in to the device during the software update, move the mouse pointer occasionally. Alternatively, specify a sufficiently high value in the **Device Security > Management Access > Web** dialog, field **Web interface session timeout [min]** before the software update.

Table

File location

Displays the storage location of the device software.

Possible values:

- ▶ *ram*
Volatile memory of the device
- ▶ *flash*
Non-volatile memory (*NVM*) of the device
- ▶ *usb*
External USB memory (EAM)

Index

Displays the index of the device software.

For the device software in the flash memory, the index has the following meaning:

- ▶ 1
Upon restart, the device loads this device software.
- ▶ 2
The device copied this device software into the backup area during the last software update.

File name

Displays the device-internal file name of the device software.

Firmware

Displays the version number and creation date of the device software.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Load/Save

[Basic Settings > Load/Save]

This dialog lets you save the device settings permanently in a configuration profile.

The device can hold several configuration profiles. When you activate an alternative configuration profile, you change to other device settings. You have the option of exporting the configuration profiles to your PC or to a server. You also have the option of importing the configuration profiles from your PC or from a server to the device.

In the default setting, the device saves the configuration profiles unencrypted. If you enter a password in the *Configuration encryption* frame, then the device saves both the present and the future configuration profiles in an encrypted format.

Unintentional changes to the settings can terminate the connection between your PC and the device. To keep the device accessible, enable the *Undo configuration modifications* function before changing any settings. If the connection is lost, then the device loads the configuration profile saved in the non-volatile memory (*NVM*) after the specified time.

External memory

Selected external memory

Displays the type of the external memory.

Possible values:

- ▶ *usb*
External USB memory (EAM)

Status

Displays the operating state of the external memory.

Possible values:

- ▶ *notPresent*
No external memory connected.
- ▶ *removed*
Someone has removed the external memory from the device during operation.
- ▶ *ok*
The external memory is connected and ready for operation.
- ▶ *outOfMemory*
The memory space is occupied in the external memory.
- ▶ *genericErr*
The device has detected an error.

Configuration encryption

Active

Displays if the configuration encryption is active/inactive in the device.

Possible values:

- ▶ **selected**
The configuration encryption is active.
If the configuration profile is encrypted and the password matches the password stored in the device, then the device loads a configuration profile from the non-volatile memory (*NVM*).
- ▶ **cleared**
The configuration encryption is inactive.
If the configuration profile is unencrypted, then the device loads a configuration profile from the non-volatile memory (*NVM*) only.

If in the *Basic Settings > External Memory* dialog, the *Config priority* column has the value *first* and the configuration profile is unencrypted, then the *Security status* frame in the *Basic Settings > System* dialog displays an alarm.

In the *Diagnostics > Status Configuration > Security Status* dialog, *Global* tab, *Monitor* column you specify if the device monitors the *Load unencrypted config from external memory* parameter.

Set password

Opens the *Set password* window that helps you to enter the password needed for the configuration profile encryption. Encrypting the configuration profiles makes unauthorized access more difficult. To do this, perform the following steps:

- When you are changing an existing password, enter the existing password in the *Old password* field. To display the password in plain text instead of ***** (asterisks), mark the *Display content* checkbox.
- In the *New password* field, enter the password.
To display the password in plain text instead of ***** (asterisks), mark the *Display content* checkbox.
- Mark the *Save configuration afterwards* checkbox to use encryption also for the selected configuration profile in the non-volatile memory (*NVM*) and in the external memory.

NOTE: If a maximum of one configuration profile is stored in the non-volatile memory (*NVM*) of the device, then use this function only. Before creating additional configuration profiles, decide for or against permanently activated configuration encryption in the device. Save additional configuration profiles either unencrypted or encrypted with the same password.

If you are replacing a device with an encrypted configuration profile, for example due to an inoperative device, then perform the following steps:

- Restart the new device and assign the IP parameters.
- Open the *Basic Settings > Load/Save* dialog on the new device.
- Encrypt the configuration profile in the new device. See above. Enter the same password you used in the inoperative device.
- Install the external memory from the inoperative device in the new device.
- Restart the new device.
When you restart the device, the device loads the configuration profile with the settings of the inoperative device from the external memory. The device copies the settings into the volatile memory (*RAM*) and into the non-volatile memory (*NVM*).

Delete

Opens the *Delete* window which helps you to cancel the configuration encryption in the device. To cancel the configuration encryption, perform the following steps:

- In the *Old password* field, enter the existing password.
To display the password in plain text instead of ***** (asterisks), mark the *Display content* checkbox.
- Mark the *Save configuration afterwards* checkbox to remove the encryption also for the selected configuration profile in the non-volatile memory (*NVM*) and in the external memory.

NOTE: If you keep additional encrypted configuration profiles in the memory, then the device helps prevent you from activating or selecting these configuration profiles.

Information

NVM in sync with running config

Displays if the configuration profile in the volatile memory (*RAM*) and the selected configuration profile in the non-volatile memory (*NVM*) are the same.

Possible values:

- ▶ *selected*
The configuration profiles are the same.
- ▶ *cleared*
The configuration profiles differ.

External memory in sync with NVM

Displays if the selected configuration profile in the external memory and the selected configuration profile in the non-volatile memory (*NVM*) are the same.

Possible values:

- ▶ *selected*
The configuration profiles are the same.
- ▶ *cleared*
The configuration profiles differ.
Possible causes:
 - No external memory is connected to the device.
 - In the *Basic Settings > External Memory* dialog, the *Backup config when saving* function is disabled.

Backup config on a remote server when saving

Operation

Enables/disables the *Backup config on a remote server when saving* function.

Possible values:

- ▶ *Enabled*
The *Backup config on a remote server when saving* function is enabled.
When you save the configuration profile in the non-volatile memory (*NVM*), the device automatically backs up the configuration profile on the remote server specified in the *URL* field.
- ▶ *Disabled* (default setting)
The *Backup config on a remote server when saving* function is disabled.

URL	<p>Specifies path and file name of the backed up configuration profile on the remote server.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ Alphanumeric ASCII character string with 0..128 characters Example: <code>tftp://192.9.200.1/cfg/config.xml</code> The device supports the following wildcards: <ul style="list-style-type: none"> – <code>%d</code> System date in the format <code>YYYY-mm-dd</code> – <code>%t</code> System time in the format <code>HH_MM_SS</code> – <code>%i</code> IP address of the device – <code>%m</code> MAC address of the device in the format <code>AA-BB-CC-DD-EE-FF</code> – <code>%p</code> Product name of the device
Set credentials	<p>Opens the <i>Credentials</i> window which helps you to enter the login credentials needed to authenticate on the remote server. To do this, perform the following steps:</p> <ul style="list-style-type: none"> <input type="checkbox"/> In the <i>User name</i> field, enter the user name. To display the user name in plain text instead of ***** (asterisks), mark the <i>Display content</i> checkbox. Possible values: <ul style="list-style-type: none"> – Alphanumeric ASCII character string with 1..32 characters <input type="checkbox"/> In the <i>Password</i> field, enter the password. To display the password in plain text instead of ***** (asterisks), mark the <i>Display content</i> checkbox. Possible values: <ul style="list-style-type: none"> ▶ Alphanumeric ASCII character string with 6..64 characters The following characters are allowed: <pre style="margin-left: 20px;">a..z A..Z 0..9 !#\$%&'()*+,-./:;<=>?@[\\]^_`{ }~</pre>

Undo configuration modifications

Operation

Enables/disables the *Undo configuration modifications* function. Using the function, the device continuously checks if it can still be reached from the IP address of your PC. If the connection is lost, after a specified time period the device loads the selected configuration profile from the non-volatile memory (*NVM*). Afterwards, the device can be accessed again.

Possible values:

- ▶ *On*
The function is enabled.
 - You specify the time period between the interruption of the connection and the loading of the configuration profile in the *Timeout [s] to recover after connection loss* field.
 - When the non-volatile memory (*NVM*) contains multiple configuration profiles, the device loads the selected configuration profile.
- ▶ *Off* (default setting)
The function is disabled.
Disable the function again before you close the Graphical User Interface. You thus help prevent the device from restoring the selected configuration profile.

NOTE: Before you enable the function, save the settings in the configuration profile. Current changes, that are saved temporarily, are therefore maintained in the device.

Timeout [s] to recover after connection loss

Specifies the time in seconds after which the device loads the selected configuration profile from the non-volatile memory (*NVM*) if the connection is lost.

Possible values:

- ▶ 30..600 (default setting: 600)

Specify a sufficiently large value. Take into account the time when you are viewing the dialogs of the Graphical User Interface without changing or updating them.

Watchdog IP address

Displays the IP address of the PC on which you have enabled the function.

Possible values:

- ▶ IPv4 address (default setting: 0.0.0.0)


Table





Storage type

Displays the storage location of the configuration profile.

Possible values:

- ▶ *RAM* (volatile memory of the device)
In the volatile memory, the device stores the settings for the operation.

- ▶ *NVM* (non-volatile memory of the device)
When applying the *Undo configuration modifications* function or during a restart, the device loads the selected configuration profile from the non-volatile memory.
The non-volatile memory provides space for multiple configuration profiles, depending on the number of settings saved in the configuration profile. The device manages a maximum of 20 configuration profiles in the non-volatile memory.
You can load a configuration profile into the volatile memory (*RAM*). To do this, perform the following steps:
 - In the table highlight the configuration profile.
 - Click the  button and then the *Activate* item.
- ▶ *ENVM* (external memory)
In the external memory, the device saves a backup copy of the selected configuration profile.
The prerequisite is that in the *Basic Settings > External Memory* dialog you mark the *Backup config when saving* checkbox.

Profile name	<p>Displays the name of the configuration profile.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>running-config</i> Name of the configuration profile in the volatile memory (<i>RAM</i>). ▶ <i>config</i> Name of the factory setting configuration profile in the non-volatile memory (<i>NVM</i>). ▶ User-defined name The device lets you save a configuration profile with a user-specified name by highlighting an existing configuration profile in the table, clicking the  button and then the <i>Save As..</i> item. <p>To export the configuration profile as an XML file on your PC, click the link. Then you select the storage location and specify the file name.</p> <p>To save the file on a remote server, click the  button and then the <i>Export...</i> item.</p>
Modification date (UTC)	Displays the time (UTC) at which a user last saved the configuration profile.
Selected	<p>Displays if the configuration profile is selected.</p> <p>To select another configuration profile, you highlight the desired configuration profile in the table, click the  button and then the <i>Activate</i> item.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> The configuration profile is selected. <ul style="list-style-type: none"> – When applying the <i>Undo configuration modifications</i> function or during a restart, the device loads the configuration profile into the volatile memory (<i>RAM</i>). – When you click the  button, the device saves the temporarily saved settings in this configuration profile. ▶ <i>cleared</i> Another configuration profile is selected.

Encrypted	<p>Displays if the configuration profile is encrypted.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The configuration profile is encrypted.▶ cleared The configuration profile is unencrypted. <p>You activate/deactivate the encryption of the configuration profile in the Configuration encryption frame.</p>
Encryption verified	<p>Displays if the password of the encrypted configuration profile matches the password stored in the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The passwords match. The device is able to unencrypt the configuration profile.▶ cleared The passwords are different. The device is unable to unencrypt the configuration profile.
Software version	<p>Displays the version number of the device software that the device ran while saving the configuration profile.</p>
Fingerprint	<p>Displays the checksum saved in the configuration profile.</p> <p>When saving the settings, the device calculates the checksum and inserts it into the configuration profile.</p>
Fingerprint verified	<p>Displays if the checksum saved in the configuration profile is valid.</p> <p>The device calculates the checksum of the selected configuration profile and compares it with the checksum saved in this configuration profile.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The calculated and the saved checksum match. The saved settings are consistent.▶ cleared For the selected configuration profile applies: The calculated and the saved checksum are different. The configuration profile contains modified settings. Possible causes:<ul style="list-style-type: none">– The file is damaged.– The file system in the external memory is inconsistent.– A user has exported the configuration profile and changed the XML file outside the device.For the other configuration profiles the device has not calculated the checksum. <p>The device verifies the checksum correctly only if the configuration profile has been saved before as follows:</p> <ul style="list-style-type: none">• on an identical device• with the same software version, which the device is running <p>NOTE: This function identifies changes to the settings in the configuration profile. The function does not provide protection against operating the device with modified settings.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Removes the configuration profile highlighted in the table from the non-volatile memory (*NVM*) or from the external memory.

If the configuration profile is selected, then the device helps prevent you from removing the configuration profile.

Save As..

Copies the configuration profile highlighted in the table and saves it with a user-specified name in the non-volatile memory (*NVM*). The device selects the new configuration profile.

NOTE: Before creating additional configuration profiles, decide for or against permanently activated configuration encryption in the device. Save additional configuration profiles either unencrypted or encrypted with the same password.

If in the *Basic Settings > External Memory* dialog the checkbox in the *Backup config when saving* column is selected, then the device selects the configuration profile of the same name in the external memory.

Activate

Loads the settings of the configuration profile highlighted in the table to the volatile memory (*RAM*).

- ▶ The device terminates the connection to the Graphical User Interface. To access the device management again, perform the following steps:
 - Reload the Graphical User Interface.
 - Log in again.
- ▶ The device immediately uses the settings of the configuration profile on the fly.

Enable the *Undo configuration modifications* function before you activate another configuration profile. If the connection is lost afterwards, then the device loads the last selected configuration profile from the non-volatile memory (*NVM*). The device can then be accessed again.

If the configuration encryption is inactive, then the device loads an unencrypted configuration profile. If the configuration encryption is active and the password matches the password stored in the device, then the device loads an encrypted configuration profile.

When you activate an older configuration profile, the device takes over the settings of the functions contained in this software version. The device sets the values of new functions to their default value.

Select

Selects the configuration profile highlighted in the table. In the *Selected* column, the checkbox is then selected.

When applying the *Undo configuration modifications* function or during a restart, the device loads the settings of this configuration profile to the volatile memory (*RAM*).

- ▶ If the configuration encryption in the device is disabled, then only select an unencrypted configuration profile.
- ▶ If the configuration encryption in the device is enabled and the password of the configuration profile matches the password saved in the device, then only select an encrypted configuration profile.

Otherwise, the device is unable to load and encrypt the settings in the configuration profile the next time it restarts. For this case you specify in the *Diagnostics > System > Selftest* dialog if the device starts with the default settings or terminates the restart and stops.


NOTE: Only configuration profiles that are saved in the non-volatile memory (NVM) can be selected.

If in the *Basic Settings > External Memory* dialog the checkbox in the *Backup config when saving* column is selected, then the device selects the configuration profile of the same name in the external memory.

Import...

Opens the *Import...* window to import a configuration profile.

The prerequisite is that you have exported the configuration profile using the *Export...* button or using the link in the *Profile name* column.

- In the *Select source* drop-down list, select from where the device imports the configuration profile.
 - ▶ *PC/URL*
The device imports the configuration profile from the local PC or from a remote server.
 - ▶ *External memory*
The device imports the configuration profile from the external memory.
- When *PC/URL* is selected above, in the *Import profile from PC/URL* frame you specify the configuration profile file to be imported.
 - Import from the PC
When the file is located on your PC or on a network drive, drag and drop the file in the  area. Alternatively click in the area to select the file.
 - Import from an FTP server
When the file is located on an FTP server, specify the URL for the file in the following form:
`ftp://<user>:<password>@<IP address>:<port>/<file name>`
 - Import from a TFTP server
When the file is located on a TFTP server, specify the URL for the file in the following form:
`tftp://<IP address>/<path>/<file name>`
 - Import from an SCP or SFTP server
When the file is located on an SCP or SFTP server, specify the URL for the file in one of the following forms:
`scp:// or sftp://<IP address>/<path>/<file name>`
When you click the *Start* button, the device displays the *Credentials* window. There you enter *User name* and *Password*, to log in to the server.
`scp:// or sftp://<user>:<password>@<IP address>/<path>/<file name>`

- When *External memory* is selected above, in the *Import profile from external memory* frame you specify the configuration profile file to be imported. In the *Profile name* drop-down list, select the name of the configuration profile to be imported.
- In the *Destination* frame you specify where the device saves the imported configuration profile. In the *Profile name* field you specify the name under which the device saves the configuration profile. In the *Storage type* field you specify the storage location for the configuration profile. The prerequisite is that in the *Select source* drop-down list you select the *PC/URL* item.
 - ▶ *RAM*
The device saves the configuration profile in the volatile memory (*RAM*) of the device. This replaces the *running-config*, the device uses the settings of the imported configuration profile immediately. The device terminates the connection to the Graphical User Interface. Reload the Graphical User Interface. Log in again.
 - ▶ *NVM*
The device saves the configuration profile in the non-volatile memory (*NVM*) of the device.

When you import a configuration profile, the device takes over the settings as follows:

- If the configuration profile was exported on the same device or on an identically equipped device of the same type, then:
The device takes over the settings completely.
- If the configuration profile was exported on an other device, then:
The device takes over the settings which it can interpret based on its hardware equipment and software level.
The remaining settings the device takes over from its *running-config* configuration profile.

Regarding configuration profile encryption, also read the help text of the *Configuration encryption* frame. The device imports a configuration profile under the following conditions:

- The configuration encryption of the device is inactive. The configuration profile is unencrypted.
- The configuration encryption of the device is active. The configuration profile is encrypted with the same password that the device uses.

Export...

Exports the configuration profile highlighted in the table and saves it as an XML file on a remote server.

To save the file on your PC, click the link in the *Profile name* column to select the storage location and specify the file name.

The device gives you the following options for exporting a configuration profile:


- ▶ Export to an FTP server
To save the file on an FTP server, specify the URL for the file in the following form:
`ftp://<user>:<password>@<IP address>:<port>/<file name>`

- ▶ Export to a TFTP server
To save the file on a TFTP server, specify the URL for the file in the following form:
`tftp://<IP address>/<path>/<file name>`
- ▶ Export to an SCP or SFTP server
To save the file on an SCP or SFTP server, specify the URL for the file in one of the following forms:
 - `scp:// or sftp://<IP address>/<path>/<file name>`
When you click the **Ok** button, the device displays the **Credentials** window. There you enter **User name** and **Password**, to log in to the server.
 - `scp:// or sftp://<user>:<password>@<IP address>/<path>/<file name>`

Load running-config as script

Imports a script file which modifies the **running config** configuration profile.

The device gives you the following options to import a script file:

- ▶ Import from the PC
When the file is located on your PC or on a network drive, drag and drop the file in the  area. Alternatively click in the area to select the file.
- ▶ Import from an FTP server
When the file is located on an FTP server, specify the URL for the file in the following form:
`ftp://<user>:<password>@<IP address>:<port>/<file name>`
- ▶ Import from a TFTP server
When the file is located on a TFTP server, specify the URL for the file in the following form:
`tftp://<IP address>/<path>/<file name>`
- ▶ Import from an SCP or SFTP server
When the file is located on an SCP or SFTP server, specify the URL for the file in one of the following forms:
`scp:// or sftp://<IP address>/<path>/<file name>`

NOTE: The device applies script files additionally to the settings. Verify that the script file does not contain any parts that conflict with the settings.

Save running-config as script

Saves the **running config** configuration profile as a script file on the local PC. This lets you backup your device settings or to use them on various devices.

Back to factory...

Resets the settings in the device to the default values.

- ▶ The device deletes the saved configuration profiles from the volatile memory (**RAM**) and from the non-volatile memory (**NVM**).
- ▶ The device deletes the HTTPS certificate used by the web server in the device.
- ▶ The device deletes the RSA key (Host Key) used by the SSH server in the device.
- ▶ When an external memory is connected, the device deletes the configuration profiles saved in the external memory.
- ▶ After a brief period, the device reboots and loads the default values.

Back to default

Deletes the operating (**running config**) settings from the volatile memory (**RAM**).

External Memory

[Basic Settings > External Memory]

This dialog lets you activate functions that the device automatically executes in combination with the external memory. The dialog also displays the operating state and identifying characteristics of the external memory.

Configuration

USB mode

Specifies the mode of communication between the device and the external memory. To activate the changes to this field, save the settings permanently and restart the device.

Possible values:

- ▶ *normal* (USB 2.0 mode)
Device and external memory communicate in the high-speed mode (480 Mbit/s).
- ▶ *compatibility* (USB 1.1 compatibility mode)
Device and external memory communicate in the full-speed mode (12 Mbit/s).

NOTE: The external memory EAM operates only in the USB 1.1 compatibility mode. If you use this external memory, then specify the value *compatibility*.

Information

Current USB mode

Displays the mode the device uses for the communication with the external memory.

Possible values:

- ▶ *normal* (USB 2.0 mode)
Device and external memory communicate in the high-speed mode (480 Mbit/s).
- ▶ *compatibility* (USB 1.1 compatibility mode)
Device and external memory communicate in the full-speed mode (12 Mbit/s).

Table

Type

Displays the type of the external memory.

Possible values:

- ▶ *usb*
External USB memory (EAM)

Status	<p>Displays the operating state of the external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>notPresent</i> No external memory connected.▶ <i>removed</i> Someone has removed the external memory from the device during operation.▶ <i>ok</i> The external memory is connected and ready for operation.▶ <i>outOfMemory</i> The memory space is occupied in the external memory.▶ <i>genericErr</i> The device has detected an error.
Writable	<p>Displays if the device has write access to the external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The device has write access to the external memory.▶ <i>cleared</i> The device has read-only access to the external memory. Possibly the write protection is activated in the external memory.
Software auto update	<p>Activates/deactivates the automatic device software update during the restart.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The automatic device software update during the restart is activated. The device updates the device software when the following files are located in the external memory:<ul style="list-style-type: none">– the image file of the device software– a text file <code>startup.txt</code> with the content <code>autoUpdate=<image_file_name>.bin</code>▶ <i>cleared</i> The automatic device software update during the restart is deactivated.
SSH key auto upload	<p>Activates/deactivates the loading of the RSA key from an external memory upon restart.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The loading of the RSA key is activated. During a restart, the device loads the RSA key from the external memory when the following files are located in the external memory:<ul style="list-style-type: none">– SSH RSA key file– a text file <code>startup.txt</code> with the content <code>autoUpdateRSA=<filename_of_the_SSH_RSA_key></code>The device displays messages on the system console of the serial interface.▶ <i>cleared</i> The loading of the RSA key is deactivated. <p>NOTE: When loading the RSA key from the external memory (<i>ENVM</i>), the device overwrites the existing keys in the non-volatile memory (<i>NVM</i>).</p>

Config priority	<p>Specifies the memory from which the device loads the configuration profile upon reboot.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>disable</code> The device loads the configuration profile from the non-volatile memory (<i>NVM</i>).▶ <code>first</code> The device loads the configuration profile from the external memory. When the device does not find a configuration profile in the external memory, it loads the configuration profile from the non-volatile memory (<i>NVM</i>). <p>NOTE: When loading the configuration profile from the external memory (<i>ENVM</i>), the device overwrites the settings of the selected configuration profile in the non-volatile memory (<i>NVM</i>).</p> <p>If the <i>Config priority</i> column has the value <code>first</code> and the configuration profile is unencrypted, then the <i>Security status</i> frame in the <i>Basic Settings > System</i> dialog displays an alarm.</p> <p>In the <i>Diagnostics > Status Configuration > Security Status</i> dialog, <i>Global</i> tab, <i>Monitor</i> column you specify if the device monitors the <i>Load unencrypted config from external memory</i> parameter.</p>
Backup config when saving	<p>Activates/deactivates creating a copy of the configuration profile in the external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) Creating a copy is activated. When you click in the <i>Basic Settings > Load/Save</i> dialog the <i>Save</i> button, the device generates a copy of the configuration profile on the active external memory.▶ <code>cleared</code> Creating a copy is deactivated. The device does not generate a copy of the configuration profile.
Manufacturer ID	Displays the name of the memory manufacturer.
Revision	Displays the revision number specified by the memory manufacturer.
Version	Displays the version number specified by the memory manufacturer.
Name	Displays the product name specified by the memory manufacturer.
Serial number	Displays the serial number specified by the memory manufacturer.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Port

[Basic Settings > Port]

This dialog lets you specify settings for the individual ports. The dialog also displays the operating mode, connection status, bit rate and duplex mode for every port.

The dialog contains the following tabs:

- ▶ [Configuration]
- ▶ [Statistics]
- ▶ [Utilization]

[Configuration]

Table

Port	<p>Displays the port number.</p>
Name	<p>Name of the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ Alphanumeric ASCII character string with 0..64 characters The following characters are allowed: <ul style="list-style-type: none"> – <space> – 0..9 – a..z – A..Z – !#\$%&'()*+,-./:;<=>?@[\\]^_`{ }~
Port on	<p>Activates/deactivates the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) The port is active. ▶ <code>cleared</code> The port is inactive. The port does not send or receive any data.
State	<p>Displays if the port is physically enabled or disabled.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> The port is physically enabled. ▶ <code>cleared</code> The port is physically disabled. When the <i>Port on</i> function is active, the <i>Auto-Disable</i> function has disabled the port. You specify the settings of the <i>Auto-Disable</i> function in the <i>Diagnostics > Ports > Auto-Disable</i> dialog.

Power state (port off)	<p>Specifies if the port is physically switched on or off when you deactivate the port with the <i>Port on</i> function.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The port remains physically enabled. A connected device receives an active link.▶ <i>cleared</i> (default setting) The port is physically disabled.
Auto power down	<p>Specifies how the port behaves when no cable is connected.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>no-power-save</i> (default setting) The port remains activated.▶ <i>auto-power-down</i> The port changes to the energy-saving mode.▶ <i>unsupported</i> The port does not support this function and remains activated.
Automatic configuration	<p>Activates/deactivates the automatic selection of the operating mode for the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The automatic selection of the operating mode is active. The port negotiates the operating mode independently using autonegotiation and detects the devices connected to the TP port automatically (Auto Cable Crossing). This setting has priority over the manual setting of the port. Elapse several seconds until the port has set the operating mode.▶ <i>cleared</i> The automatic selection of the operating mode is inactive. The port operates with the values you specify in the <i>Manual configuration</i> column and in the <i>Manual cable crossing (Auto. conf. off)</i> column.▶ Grayed-out display No automatic selection of the operating mode.
Manual configuration	<p>Specifies the operating mode of the ports when the <i>Automatic configuration</i> function is disabled.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>10 Mbit/s HDX</i> Half duplex connection▶ <i>10 Mbit/s FDX</i> Full duplex connection▶ <i>100 Mbit/s HDX</i> Half duplex connection▶ <i>100 Mbit/s FDX</i> Full duplex connection▶ <i>1000 Mbit/s FDX</i> Full duplex connection <p>NOTE: The operating modes of the port actually available depend on the device configuration.</p>

Link/Current settings

Displays the operating mode which the port uses.

Possible values:

- ▶ `-`
No cable connected, no link.
- ▶ `10 Mbit/s HDX`
Half duplex connection
- ▶ `10 Mbit/s FDX`
Full duplex connection
- ▶ `100 Mbit/s HDX`
Half duplex connection
- ▶ `100 Mbit/s FDX`
Full duplex connection
- ▶ `1000 Mbit/s FDX`
Full duplex connection

NOTE: The operating modes of the port actually available depend on the device configuration.

Manual cable crossing (Auto. conf. off)

Specifies the devices connected to a TP port.

The prerequisite is that the *Automatic configuration* function is disabled.

Possible values:

- ▶ `mdi`
The device interchanges the send- and receive-line pairs on the port.
- ▶ `mdix` (default setting on TP ports)
The device helps prevent the interchange of the send- and receive-line pairs on the port.
- ▶ `auto-mdix`
The device detects the send and receive line pairs of the connected device and automatically adapts to them.
Example: When you connect an end device with a crossed cable, the device automatically resets the port from `mdix` to `mdi`.
- ▶ `unsupported` (default setting on optical ports or TP-SFP ports)
The port does not support this function.

Flow control	<p>Activates/deactivates the flow control on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) The Flow control on the port is active. The sending and evaluating of pause packets (full-duplex operation) or collisions (half-duplex operation) is activated on the port.<ul style="list-style-type: none"><input type="checkbox"/> To enable the flow control in the device, also activate the <i>Flow control</i> function in the <i>Switching > Global</i> dialog.<input type="checkbox"/> Activate the flow control also on the port of the device that is connected to this port. On an uplink port, activating the flow control can possibly cause undesired sending breaks in the higher-level network segment (“wandering backpressure”).▶ cleared The Flow control on the port is inactive. <p>If you are using a redundancy function, then you deactivate the flow control on the participating ports. If the flow control and the redundancy function are active at the same time, it is possible that the redundancy function operates differently than intended.</p>
Send trap (Link up/down)	<p>Activates/deactivates the sending of SNMP traps when the device detects a change in the link up/down status for this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) The sending of SNMP traps is active. When the device detects a link up/down status change, the device sends an SNMP trap.▶ cleared The sending of SNMP traps is inactive. <p>The prerequisite for sending SNMP traps is that you enable the function in the <i>Diagnostics > Status Configuration > Alarms (Traps)</i> dialog and specify at least one trap destination.</p>
Signal	<p>Activates/deactivates the port LED flashing. This function lets you identify the port in the field.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The flashing of the port LED is active. The port LED flashes until you disable the function again.▶ cleared (default setting) The flashing of the port LED is inactive.

Link monitoring

Activates/deactivates the *Link monitoring* function on the interface. This function lets you identify the port in the field.

Possible values:

- ▶ *selected*
The *Link monitoring* function is active.
Use the *Link monitoring* function for end devices that do not support Far End Fault Indication (FEFI) on optical links.
 - If the device recognizes an established link, the port LED illuminates.
 - When the device recognizes that a link has been lost, the port LED extinguishes.
- ▶ *cleared* (default setting)
The *Link monitoring* function is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Clear port statistics

Resets the counter for the port statistics to 0.

[Statistics]


This tab displays the following overview per port:

- ▶ Number of data packets/bytes received in the device
 - *Received packets*
 - *Received octets*
 - *Received unicast packets*
 - *Received multicast packets*
 - *Received broadcast packets*
- ▶ Number of data packets/bytes sent from the device
 - *Transmitted packets*
 - *Transmitted octets*
 - *Transmitted unicast packets*
 - *Transmitted multicast packets*
 - *Transmitted broadcast packets*
- ▶ Number of errors detected by the device
 - *Received fragments*
 - *Detected CRC errors*
 - *Detected collisions*
- ▶ Number of data packets per size category received in the device
 - *Packets 64 bytes*
 - *Packets 65 to 127 bytes*
 - *Packets 128 to 255 bytes*
 - *Packets 256 to 511 bytes*
 - *Packets 512 to 1023 bytes*
 - *Packets 1024 to 1518 bytes*
- ▶ Number of data packets discarded by the device
 - *Received discards*
 - *Transmitted discards*

To sort the table by a specific criterion click the header of the corresponding row.

For example, to sort the table based on the number of received bytes in ascending order, click the header of the *Received octets* column once. To sort in descending order, click the header again.

To reset the counter for the port statistics in the table to 0, perform the following steps:

- In the *Basic Settings > Port* dialog, click the  button and then the *Clear port statistics* item.
- or
- In the *Basic Settings > Restart* dialog, click the *Clear port statistics* button.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Clear port statistics

Resets the counter for the port statistics to 0.

[Utilization]

This tab displays the utilization (network load) for the individual ports.

Table

Port

Displays the port number.

Utilization [%]

Displays the utilization in percent in relation to the time interval specified in the *Control interval [s]* column.

The utilization is the relationship of the received data quantity to the maximum possible data quantity at the configured data rate.

Lower threshold [%]

Specifies a lower threshold for the utilization. If the utilization of the port falls below this value, then the *Alarm* column displays an alarm.

Possible values:

▶ 0.00..100.00 (default setting: 0.00)

The value 0 deactivates the lower threshold.

Upper threshold [%]

Specifies an upper threshold for the utilization. If the utilization of the port exceeds this value, then the *Alarm* column displays an alarm.

Possible values:

▶ 0.00..100.00 (default setting: 0.00)

The value 0 deactivates the upper threshold.

Control interval [s]	<p>Specifies the interval in seconds.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..3600 (default setting: 30)
Alarm	<p>Displays the utilization alarm status.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The utilization of the port is below the value specified in the <i>Lower threshold [%]</i> column or above the value specified in the <i>Upper threshold [%]</i> column. The device sends an SNMP trap.▶ <i>cleared</i> The utilization of the port is above the value specified in the <i>Lower threshold [%]</i> column and below the value specified in the <i>Upper threshold [%]</i> column. The prerequisite for sending SNMP traps is that you enable the function in the <i>Diagnostics > Status Configuration > Alarms (Traps)</i> dialog and specify at least one trap destination.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.


Clear port statistics	Resets the counter for the port statistics to 0.
-----------------------	--

Restart

[Basic Settings > Restart]

This dialog lets you restart the device, reset port counters and address tables, and delete log files.

Restart

Restart in	<p>Displays the remaining time until the device restarts.</p> <p>To update the display of the remaining time, click the  button.</p>
Cancel	Aborts a delayed restart.

Cold start...	<p>Opens the <i>Restart</i> dialog to initiate an immediate or delayed restart of the device.</p> <p>If the configuration profile in the volatile memory (<i>RAM</i>) and the selected configuration profile in the non-volatile memory (<i>NVM</i>) differ, then the device displays the <i>Warning</i> dialog.</p> <ul style="list-style-type: none"> • To permanently save the changes, click the <i>Yes</i> button in the <i>Warning</i> dialog. • To discard the changes, click the <i>No</i> button in the <i>Warning</i> dialog. • In the <i>Restart in</i> field you specify the delay time for the delayed restart. Possible values: <ul style="list-style-type: none"> – 00:00:00..596:31:23 (default setting: 00:00:00) <p>When the delay time elapsed, the device restarts and goes through the following phases:</p> <ul style="list-style-type: none"> ▶ If you activate the function in the <i>Diagnostics > System > Selftest</i> dialog, then the device performs a RAM test. ▶ The device starts the device software that the <i>Stored version</i> field displays in the <i>Basic Settings > Software</i> dialog. ▶ The device loads the settings from the selected configuration profile. See the <i>Basic Settings > Load/Save</i> dialog. <p>NOTE: During the restart, the device does not transfer any data. During this time, the device cannot be accessed by the Graphical User Interface or other management systems.</p>
---------------	---

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset MAC address table	Removes the MAC addresses from the forwarding table that have in the <i>Switching > Filter for MAC Addresses</i> dialog the value <i>learned</i> in the <i>Status</i> column.
Reset ARP table	Removes the dynamically set up addresses from the ARP table. See the <i>Diagnostics > System > ARP</i> dialog.
Clear port statistics	Resets the counter for the port statistics to 0. See the <i>Basic Settings > Port</i> dialog, <i>Statistics</i> tab.
Reset IGMP snooping data	Removes the IGMP Snooping entries and resets the counter in the <i>Information</i> frame to 0. See the <i>Switching > IGMP Snooping > Global</i> dialog.
Delete log file	Removes the logged events from the log file. See the <i>Diagnostics > Report > System Log</i> dialog.
Delete persistent log file	Removes the log files from the external memory. See the <i>Diagnostics > Report > Persistent Logging</i> dialog.

Time

The menu contains the following dialogs:

- ▶ Basic Settings
- ▶ SNTP
- ▶ PTP

Basic Settings

[Time > Basic Settings]

The device is equipped with a buffered hardware clock. This clock maintains the correct time if the power supply becomes inoperable or you disconnect the device from the power supply. After the device is started, the time is available to you, for example for log entries.

The hardware clock bridges a power supply downtime of 3 hours. The prerequisite is that the power supply of the device has been connected continually for at least 5 minutes beforehand.

In this dialog you specify time-related settings independently of the time synchronization protocol specified.

The dialog contains the following tabs:

- ▶ [Global]
- ▶ [Daylight saving time]

[Global]

In this tab you specify the system time in the device and the time zone.

Configuration

System time (UTC)	Displays the date and time with reference to Universal Time Coordinated (UTC).
Set time from PC	The device uses the date and time on the PC as the system time.
System time	Displays the date and time with reference to the local time: <i>System time = System time (UTC) + Local offset [min] + Daylight saving time</i>
Time source	Displays the time source from which the device gets the time information. The device automatically selects the available time source with the greatest accuracy.

Possible values:

- ▶ *local*
System clock of the device.
- ▶ *sntp*
The *SNTP* client is activated and the device is synchronized by an *SNTP* server.
- ▶ *ptp*
PTP is activated and the clock of the device is synchronized with a *PTP* master clock.

Local offset [min]

Specifies the difference between the local time and *System time (UTC)* in minutes:
Local offset [min] = System time – System time (UTC)

Possible values:

- ▶ *-780..840* (default setting: *60*)

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Daylight saving time]

In this tab you activate the automatic daylight saving time function. You specify the beginning and the end of summertime using a pre-defined profile, or you specify these settings individually. During summertime, the device puts the local time forward by 1 hour.

Operation

Daylight saving time

Enables/disables the *Daylight saving time* mode.

Possible values:

- ▶ *On*
The *Daylight saving time* mode is enabled.
The device automatically changes between summertime and wintertime.
- ▶ *Off* (default setting)
The *Daylight saving time* mode is disabled.

The times at which the device changes between summertime and wintertime are specified in the *Summertime begin* and *Summertime end* frames.

Profile...

Displays the *Profile...* dialog. There you select a pre-defined profile for the beginning and the end of summertime. This profile overwrites the settings in the *Summertime begin* and *Summertime end* frames.

Summertime begin

In the first 3 fields you specify the day for the beginning of summertime, and in the last field the time.

When the time in the *System time* field reaches the value entered here, the device switches to summertime.

Week

Specifies the week in the month.

Possible values:

- ▶ *none* (default setting)
- ▶ *first*
- ▶ *second*
- ▶ *third*
- ▶ *fourth*
- ▶ *last*

Day

Specifies the day of the week.

Possible values:

- ▶ *none* (default setting)
- ▶ *Sunday*
- ▶ *Monday*
- ▶ *Tuesday*
- ▶ *Wednesday*
- ▶ *Thursday*
- ▶ *Friday*
- ▶ *Saturday*

Month

Specifies the month.

Possible values:

- ▶ *none* (default setting)
- ▶ *January*
- ▶ *February*
- ▶ *March*
- ▶ *April*
- ▶ *May*
- ▶ *June*
- ▶ *July*
- ▶ *August*
- ▶ *September*
- ▶ *October*
- ▶ *November*
- ▶ *December*

System time

Specifies the time.

Possible values:

▶ `<HH:MM>` (default setting: `00:00`)

Summertime end

In the first 3 fields you specify the day for the end of summertime, and in the last field the time.

When the time in the *System time* field reaches the value entered here, the device switches to wintertime.

Week

Specifies the week in the month.

Possible values:

- ▶ `none` (default setting)
- ▶ `first`
- ▶ `second`
- ▶ `third`
- ▶ `fourth`
- ▶ `last`

Day

Specifies the day of the week.

Possible values:

- ▶ `none` (default setting)
- ▶ `Sunday`
- ▶ `Monday`
- ▶ `Tuesday`
- ▶ `Wednesday`
- ▶ `Thursday`
- ▶ `Friday`
- ▶ `Saturday`

Month

Specifies the month.

Possible values:

- ▶ `none` (default setting)
- ▶ `January`
- ▶ `February`
- ▶ `March`
- ▶ `April`
- ▶ `May`
- ▶ `June`
- ▶ `July`
- ▶ `August`
- ▶ `September`
- ▶ `October`

- ▶ *November*
- ▶ *December*

System time

Specifies the time.

Possible values:

- ▶ *<HH:MM>* (default setting: *00:00*)

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

SNTP

[Time > SNTP]

The Simple Network Time Protocol (SNTP) is a procedure described in the RFC 4330 for time synchronization in the network.

The device lets you synchronize the system time in the device as an *SNTP* client. As the *SNTP* server, the device makes the time information available to other devices.

The menu contains the following dialogs:

- ▶ *SNTP Client*
- ▶ *SNTP Server*

SNTP Client

[Time > SNTP > Client]

In this dialog you specify the settings with which the device operates as an *SNTP* client.

As an *SNTP* client the device obtains the time information from both *SNTP* servers and *NTP* servers and synchronizes the local clock with the time of the time server.

Operation

Operation

Enables/disables the *SNTP Client* function of the device.

Possible values:

- ▶ *On*
The *SNTP Client* function is enabled.
The device operates as an *SNTP* client.
- ▶ *Off* (default setting)
The *SNTP Client* function is disabled.

Configuration

Mode

Specifies if the device actively requests the time information from an *SNTP* server in the network (Unicast mode) or passively waits for the time information from a random *SNTP* server (Broadcast mode).

Possible values:

- ▶ *unicast* (default setting)
The device takes the time information only from the configured *SNTP* server.
The device sends Unicast requests to the *SNTP* server and evaluates its responses.
- ▶ *broadcast*
The device obtains the time information from one or more *SNTP* or *NTP* servers.
The device evaluates the Broadcasts or Multicasts only from these servers.

Request interval [s]

Specifies the interval in seconds at which the device requests time information from the *SNTP* server.

Possible values:

- ▶ *5..3600* (default setting: 30)

Broadcast recv timeout [s]

Specifies the time in seconds a client in broadcast client mode waits before changing the value in the field from *syncToRemoteServer* to *notSynchronized* when the client receives no broadcast packets.

Possible values:

- ▶ *128..2048* (default setting: 320)

Disable client after successful sync

Activates/deactivates the disabling of the *SNTP* client after the device has successfully synchronized the time.

Possible values:

- ▶ *selected*
The disabling of the *SNTP* client is active.
The device deactivates the *SNTP* client after successful time synchronization.
- ▶ *cleared* (default setting)
The disabling of the *SNTP* client is inactive.
The *SNTP* client remains active after successful time synchronization.

State

State	<p>Displays the status of the <i>SNTP</i> client.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>disabled</i> The <i>SNTP</i> client is disabled.▶ <i>notSynchronized</i> The <i>SNTP</i> client is not synchronized with any <i>SNTP</i> or <i>NTP</i> server.▶ <i>synchronizedToRemoteServer</i> The <i>SNTP</i> client is synchronized with an <i>SNTP</i> or <i>NTP</i> server.
-------	---

Table

In the table you specify the settings for up to 4 *SNTP* servers.

Index	<p>Displays the index number to which the table entry relates.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..4 <p>The device automatically assigns this number.</p> <p>When you delete a table entry, this leaves a gap in the numbering. When you create a new table entry, the device fills the first gap.</p> <p>After starting, the device sends requests to the <i>SNTP</i> server configured in the first table entry. When the server does not reply, the device sends its requests to the <i>SNTP</i> server configured in the next table entry.</p> <p>If none of the configured <i>SNTP</i> servers responds in the meantime, then the <i>SNTP</i> client interrupts its synchronization. The device cyclically sends requests to each <i>SNTP</i> server until a server delivers a valid time. The device synchronizes itself with this <i>SNTP</i> server, even if the other servers can be reached again later.</p>
Name	<p>Specifies the name of the <i>SNTP</i> server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 1..32 characters
Address	<p>Specifies the IP address of the <i>SNTP</i> server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address (default setting: 0.0.0.0)
Destination UDP port	<p>Specifies the UDP Port on which the <i>SNTP</i> server expects the time information.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 123) Exception: Port 2222 is reserved for internal functions.

Status	<p>Displays the connection status between the <i>SNTP</i> client and the <i>SNTP</i> server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>success</i> The device has successfully synchronized the time with the <i>SNTP</i> server.▶ <i>badDateEncoded</i> The time information received contains protocol errors - synchronization was unsuccessful.▶ <i>other</i><ul style="list-style-type: none">– The value <i>0.0.0.0</i> is entered for the IP address of the <i>SNTP</i> server - synchronization was unsuccessful.or– The <i>SNTP</i> client is using a different <i>SNTP</i> server.▶ <i>requestTimedOut</i> The device has not received a reply from the <i>SNTP</i> server - synchronization was unsuccessful.▶ <i>serverKissOfDeath</i> The <i>SNTP</i> server is overloaded. The device is requested to synchronize itself with another <i>SNTP</i> server. When no other <i>SNTP</i> server is available, the device checks at intervals longer than the setting in the <i>Request interval [s]</i> field, if the server is still overloaded.▶ <i>serverUnsynchronized</i> The <i>SNTP</i> server is not synchronized with either a local or an external reference time source - synchronization was unsuccessful.▶ <i>versionNotSupported</i> The <i>SNTP</i> versions on the client and the server are incompatible with each other - synchronization was unsuccessful.
Active	<p>Activates/deactivates the connection to the <i>SNTP</i> server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The connection to the <i>SNTP</i> server is activated. The <i>SNTP</i> client has access to the <i>SNTP</i> server.▶ <i>cleared</i> (default setting) The connection to the <i>SNTP</i> server is deactivated. The <i>SNTP</i> client has no access to the <i>SNTP</i> server.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

SNTP Server

[Time > SNTP > Server]

In this dialog you specify the settings with which the device operates as an *SNTP* server.

The *SNTP* server provides the Universal Time Coordinated (UTC) without considering local time differences.

If the setting is appropriate, then the *SNTP* server operates in the broadcast mode. In broadcast mode, the *SNTP* server automatically sends broadcast messages or multicast messages according to the broadcast send interval.

Operation

Operation

Enables/disables the *SNTP Server* function of the device.

Possible values:

- ▶ *On*
The *SNTP Server* function is enabled.
The device operates as an *SNTP* server.
- ▶ *Off* (default setting)
The *SNTP Server* function is disabled.

Note the setting in the *Disable server at local time source* checkbox in the *Configuration* frame.

Configuration

UDP port

Specifies the number of the UDP port on which the *SNTP* server of the device receives requests from other clients.

Possible values:

- ▶ *1..65535* (default setting: *123*)
Exception: Port *2222* is reserved for internal functions.

Broadcast admin mode

Activates/deactivates the Broadcast mode.

- ▶ *selected*
The *SNTP* server replies to requests from *SNTP* clients in Unicast mode and also sends *SNTP* packets in Broadcast mode as Broadcasts or Multicasts.
- ▶ *cleared* (default setting)
The *SNTP* server replies to requests from *SNTP* clients in the Unicast mode.

Broadcast destination address

Specifies the IP address to which the *SNTP* server of the device sends the *SNTP* packets in Broadcast mode.

Possible values:

- ▶ Valid IPv4 address (default setting: *0.0.0.0*)

Broadcast and Multicast addresses are permitted.

Broadcast UDP port	<p>Specifies the number of the UDP port on which the <i>SNTP</i> server sends the <i>SNTP</i> packets in Broadcast mode.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 123) Exception: Port 2222 is reserved for internal functions.
Broadcast VLAN ID	<p>Specifies the ID of the VLAN in which the <i>SNTP</i> server of the device sends the <i>SNTP</i> packets in Broadcast mode.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 The <i>SNTP</i> server sends the <i>SNTP</i> packets in the same VLAN in which the access to the device management is possible. See the <i>Basic Settings > Network</i> dialog.▶ 1..4042 (default setting: 1)
Broadcast send interval [s]	<p>Specifies the time interval at which the <i>SNTP</i> server of the device sends <i>SNTP</i> broadcast packets.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 64..1024 (default setting: 128)
Disable server at local time source	<p>Activates/deactivates the disabling of the <i>SNTP</i> server when the device is synchronized to the local clock.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The disabling of the <i>SNTP</i> server is active. If the device is synchronized to the local clock, then the device disables the <i>SNTP</i> server. The <i>SNTP</i> server continues to reply to requests from <i>SNTP</i> clients. In the <i>SNTP</i> packet, the <i>SNTP</i> server informs the clients that it is synchronized locally.▶ <i>cleared</i> (default setting) The disabling of the <i>SNTP</i> server is inactive. If the device is synchronized to the local clock, then the <i>SNTP</i> server remains active.

State

State	<p>Displays the state of the <i>SNTP</i> server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>disabled</i> The <i>SNTP</i> server is disabled.▶ <i>notSynchronized</i> The <i>SNTP</i> server is not synchronized with either a local or an external reference time source.▶ <i>syncToLocal</i> The <i>SNTP</i> server is synchronized with the hardware clock of the device.
-------	---

- ▶ *syncToRefclock*
The *SNTP* server is synchronized with an external reference time source, for example PTP.
- ▶ *syncToRemoteServer*
The *SNTP* server is synchronized with an *SNTP* server that is higher than the device in a cascade.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

PTP

[Time > PTP]

The menu contains the following dialogs:

- ▶ *PTP Global*
- ▶ *PTP Boundary Clock*
- ▶ *PTP Transparent Clock*

PTP Global

[Time > PTP > Global]

In this dialog you specify basic settings for the *PTP* protocol.

The Precision Time Protocol (PTP) is a procedure described in the IEEE 1588-2008 standard that supplies the devices in the network with a precise time. The method synchronizes the clocks in the network with a precision of a few 100 ns. The protocol uses Multicast communication, so the load on the network due to the *PTP* synchronization messages is negligible.

PTP is significantly more accurate than SNTP. If the *SNTP* function and the *PTP* function are enabled in the device at the same time, then the *PTP* function has priority.

With the *Best Master Clock Algorithm*, the devices in the network determine which device has the most accurate time. The devices use the device with the most accurate time as the reference time source (*Grandmaster*). Subsequently the participating devices synchronize themselves with this reference time source.

If you want to transport PTP time accurately through your network, then use only devices with PTP hardware support on the transport paths.

The protocol differentiates between the following clocks:

- ▶ **Boundary Clock (BC)**
This clock has any number of PTP ports and operates as both *PTP* master and *PTP* slave. In its respective network segment, the clock operates as an Ordinary Clock.
 - As *PTP* slave, the clock synchronizes itself with a *PTP* master that is higher than the device in the cascade.
 - As *PTP* master, the clock forwards the time information via the network to *PTP* slaves that are higher than the device in the cascade.
- ▶ **Transparent Clock (TC)**
This clock has any number of PTP ports. In contrast to the *Boundary Clock*, this clock corrects the time information before forwarding it, without synchronizing itself.

Operation IEEE1588/PTP

Operation IEEE1588/PTP

Enables/disables the *PTP* function.

Possible values:

- ▶ *On*
The *PTP* function is enabled.
The device synchronizes its clock with PTP.
If the *SNTP* function and the *PTP* function are enabled in the device at the same time, then the *PTP* function has priority.
- ▶ *Off* (default setting)
The *PTP* function is disabled.
The device transmits the *PTP* synchronization messages without any correction on every port.

Configuration IEEE1588/PTP

PTP mode

Specifies the PTP version and mode of the local clock.

Possible values:

- ▶ *v2-transparent-clock* (default setting)
- ▶ *v2-boundary-clock*

Sync lower bound [ns]	<p>Specifies the lower threshold value in nanoseconds for the path difference between the local clock and the reference time source (<i>Grandmaster</i>). If the path difference falls below this value once, then the local clock is classed as synchronized.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 1..999999999 (default setting: 30)
Sync upper bound [ns]	<p>Specifies the upper threshold value in nanoseconds for the path difference between the local clock and the reference time source (<i>Grandmaster</i>). If the path difference exceeds this value once, then the local clock is classed as unsynchronized.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 31..1000000000 (default setting: 5000)
PTP management	<p>Activates/deactivates the PTP management defined in the PTP standard.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> PTP management is activated. ▶ <i>cleared</i> (default setting) PTP management is deactivated.

Status

Is synchronized	<p>Displays if the local clock is synchronized with the reference time source (<i>Grandmaster</i>).</p> <p>If the path difference between the local clock and the reference time source (<i>Grandmaster</i>) falls below the synchronization lower threshold one time, then the local clock is synchronized. This status is kept until the path difference exceeds the synchronization upper threshold one time.</p> <p>You specify the synchronization thresholds in the <i>Configuration IEEE1588/PTP</i> frame.</p>
Max. offset absolute [ns]	<p>Displays the maximum path difference in nanoseconds that has occurred since the local clock was synchronized with the reference time source (<i>Grandmaster</i>).</p>
PTP time	<p>Displays the date and time for the PTP time scale when the local clock is synchronized with the reference time source (<i>Grandmaster</i>). Format: <i>Month Day, Year hh:mm:ss AM/PM</i></p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

PTP Boundary Clock

[Time > PTP > Boundary Clock]

With this menu you can configure the Boundary Clock mode for the local clock.

The menu contains the following dialogs:

- ▶ PTP Boundary Clock Global
- ▶ PTP Boundary Clock Port

PTP Boundary Clock Global

[Time > PTP > Boundary Clock > Global]

In this dialog you enter general, cross-port settings for the *Boundary Clock* mode for the local clock. The *Boundary Clock (BC)* operates according to PTP version 2 (IEEE 1588-2008).

The settings are effective when the local clock operates as the *Boundary Clock (BC)*. For this, you select in the *Time > PTP > Global* dialog in the *PTP mode* field the value *v2-boundary-clock*.

Operation IEEE1588/PTPv2 BC

Priority 1

Specifies *priority 1* for the device.

Possible values:

- ▶ 0..255 (default setting: 128)

The *Best Master Clock Algorithm* first evaluates *priority 1* among the participating devices in order to determine the reference time source (*Grandmaster*).

The lower you set this value, the more probable it is that the device becomes the reference time source (*Grandmaster*). See the *Grandmaster* frame.

Priority 2

Specifies *priority 2* for the device.

Possible values:

- ▶ 0..255 (default setting: 128)

When the previously evaluated criteria are the same for multiple devices, the *Best Master Clock Algorithm* evaluates *priority 2* of the participating devices.

The lower you set this value, the more probable it is that the device becomes the reference time source (*Grandmaster*). See the *Grandmaster* frame.

Domain number	<p>Assigns the device to a <i>PTP</i> domain.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 0..255 (default setting: 0) <p>The device transmits time information from and to devices only in the same domain.</p>
Status IEEE1588/PTPv2 BC	
Two step	<p>Displays that the clock is operating in Two-Step mode.</p>
Steps removed	<p>Displays the number of communication paths passed through between the local clock of the device and the reference time source (<i>Grandmaster</i>).</p> <p>For a <i>PTP</i> slave, the value 1 means that the clock is connected with the reference time source (<i>Grandmaster</i>) directly through 1 communication path.</p>
Offset to master [ns]	<p>Displays the measured difference (offset) between the local clock and the reference time source (<i>Grandmaster</i>) in nanoseconds. The <i>PTP</i> slave calculates the difference from the time information received.</p> <p>In Two-Step mode the time information consists of 2 <i>PTP</i> synchronization messages each, which the <i>PTP</i> master sends cyclically:</p> <ul style="list-style-type: none"> ▶ The first synchronization message (sync message) contains an estimated value for the exact sending time of the message. ▶ The second synchronization message (follow-up message) contains the exact sending time of the first message. <p>The <i>PTP</i> slave uses the two <i>PTP</i> synchronization messages to calculate the difference (offset) from the master and corrects its clock by this difference. Here the <i>PTP</i> slave also considers the <i>Delay to master [ns]</i> value.</p>
Delay to master [ns]	<p>Displays the delay when transmitting the <i>PTP</i> synchronization messages from the <i>PTP</i> master to the <i>PTP</i> slave in nanoseconds.</p> <p>The <i>PTP</i> slave sends a “Delay Request” packet to the <i>PTP</i> master and thus determines the exact sending time of the packet. When it receives the packet, the <i>PTP</i> master generates a time stamp and sends this in a “Delay Response” packet back to the <i>PTP</i> slave. The <i>PTP</i> slave uses the two packets to calculate the delay, and considers this starting from the next offset measurement.</p> <p>The prerequisite is that the delay mechanism value of the slave ports is specified as <i>e2e</i>.</p>

Grandmaster

This frame displays the criteria that the *Best Master Clock Algorithm* uses when evaluating the reference time source (*Grandmaster*).

The algorithm first evaluates *priority 1* of the participating devices. The device with the lowest value for *priority 1* is designated as the reference time source (*Grandmaster*). When the value is the same for multiple devices, the algorithm takes the next criterion, and when this is also the same, the algorithm takes the next criterion after this one. When every value is the same for multiple devices, the lowest value in the *Clock identity* field decides which device is designated as the reference time source (*Grandmaster*).

The device lets you influence which device in the network is designated as the reference time source (*Grandmaster*). To do this, modify the value in the *Priority 1* field or the *Priority 2* field in the *Operation IEEE1588/PTPv2 BC* frame.

Priority 1	Displays <i>priority 1</i> for the device that is the reference time source (<i>Grandmaster</i>).
Clock class	Displays the class of the reference time source (<i>Grandmaster</i>). Parameter for the <i>Best Master Clock Algorithm</i> .
Clock accuracy	Displays the estimated accuracy of the reference time source (<i>Grandmaster</i>). Parameter for the <i>Best Master Clock Algorithm</i> .
Clock variance	Displays the variance of the reference time source (<i>Grandmaster</i>), also known as the <i>Offset scaled log variance</i> . Parameter for the <i>Best Master Clock Algorithm</i> .
Priority 2	Displays <i>priority 2</i> for the device that is the reference time source (<i>Grandmaster</i>).

Local time properties

Time source	<p>Specifies the time source from which the local clock gets its time information.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>atomicClock</i> ▶ <i>gps</i> ▶ <i>terrestrialRadio</i> ▶ <i>ptp</i> ▶ <i>ntp</i> ▶ <i>handSet</i> ▶ <i>other</i> ▶ <i>internalOscillator</i> (default setting)
UTC offset [s]	<p>Specifies the difference between the <i>PTP</i> time scale and the UTC.</p> <p>See the <i>PTP timescale</i> checkbox.</p>

	<p>Possible values:</p> <ul style="list-style-type: none">▶ <code>-32768..32767</code> <p>NOTE: The default setting is the value valid on the creation date of the device software. You can find further information in the "Bulletin C" of the Earth Rotation and Reference Systems Service (IERS): https://www.iers.org/iers/en/Publications/Bulletins/bulletins.html</p>
UTC offset valid	<p>Specifies if the value specified in the <i>UTC offset [s]</i> field is correct.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code> (default setting)
Time traceable	<p>Displays if the device gets the time from a primary UTC reference, for example from an NTP server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code>
Frequency traceable	<p>Displays if the device gets the frequency from a primary UTC reference, for example from an NTP server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code>
PTP timescale	<p>Displays if the device uses the PTP time scale.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code> <p>According to IEEE 1588, the PTP time scale is the TAI atomic time started on 01.01.1970.</p> <p>In contrast to UTC, TAI does not use leap seconds.</p> <p>As of July 1, 2020, the TAI time is 37 s ahead of the UTC time.</p>
	<h2>Identities</h2> <p>The device displays the identities as byte sequences in hexadecimal notation.</p> <p>The identification numbers (UUID) are made up as follows:</p> <ul style="list-style-type: none">▶ The device identification number consists of the MAC address of the device, with the values <code>ff</code> and <code>fe</code> added between byte 3 and byte 4.▶ The port UUID consists of the device identification number followed by a 16-bit port ID.
Clock identity	<p>Displays the device's own identification number (UUID).</p>

Parent port identity	Displays the port identification number (UUID) of the directly superior master device.
Grandmaster identity	Displays the identification number (UUID) of the reference time source (<i>Grandmaster</i>) device.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

PTP Boundary Clock Port

[Time > PTP > Boundary Clock > Port]

In this dialog you specify the *Boundary Clock (BC)* settings on each individual port.

The settings are effective when the local clock operates as the *Boundary Clock (BC)*. For this, you select in the *Time > PTP > Global* dialog in the *PTP mode* field the value *v2-boundary-clock*.

Table

Port	Displays the port number.
PTP enable	<p>Activates/deactivates <i>PTP</i> synchronization message transmission on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> (default setting) The transmission is activated. The port forwards and receives <i>PTP</i> synchronization messages. ▶ <i>cleared</i> The transmission is deactivated. The port blocks <i>PTP</i> synchronization messages.
PTP status	<p>Displays the status of the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>initializing</i> Initialization phase ▶ <i>faulty</i> Error detected in the PTP protocol. ▶ <i>disabled</i> PTP is disabled on the port. ▶ <i>listening</i> Device port is waiting for <i>PTP</i> synchronization messages.

	<ul style="list-style-type: none"> ▶ <i>pre-master</i> <i>PTP</i> pre-master mode ▶ <i>master</i> <i>PTP</i> master mode ▶ <i>passive</i> <i>PTP</i> passive mode ▶ <i>uncalibrated</i> <i>PTP</i> uncalibrated mode ▶ <i>slave</i> <i>PTP</i> slave mode
Sync interval	<p>Specifies the interval in seconds at which the port transmits <i>PTP</i> synchronization messages.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 0.25 ▶ 0.5 ▶ 1 (default setting) ▶ 2
Delay mechanism	<p>Specifies the mechanism with which the device measures the delay for transmitting the <i>PTP</i> synchronization messages.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>disabled</i> The measurement of the delay for the <i>PTP</i> synchronization messages for the connected PTP devices is inactive. ▶ <i>e2e</i> (default setting) End-to-End: As the <i>PTP</i> slave, the port measures the delay for the <i>PTP</i> synchronization messages to the <i>PTP</i> master. The device displays the measured value in the <i>Time > PTP > Boundary Clock > Global</i> dialog. ▶ <i>p2p</i> Peer-to-Peer: The device measures the delay for the <i>PTP</i> synchronization messages for the connected PTP devices, provided that these devices support P2P. This mechanism saves the device from having to determine the delay again in the case of a reconfiguration. If you specify this value, then the value <i>IEEE 802.3</i> is only available in the <i>Network protocol</i> column.
P2P delay	<p>Displays the measured Peer-to-Peer delay for the <i>PTP</i> synchronization messages.</p> <p>The prerequisite is that you select the value <i>p2p</i> in the <i>Delay mechanism</i> column.</p>
P2P delay interval [s]	<p>Specifies the interval in seconds at which the port measures the Peer-to-Peer delay.</p> <p>The prerequisite is that you have specified the value <i>p2p</i> on this port and on the port of the remote device.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 1 (default setting) ▶ 2 ▶ 4

	<ul style="list-style-type: none">▶ 8▶ 16▶ 32
Network protocol	<p>Specifies which protocol the port uses to transmit the <i>PTP</i> synchronization messages.</p> <p>If you change the value for a port, then the device changes every port to this value after clicking the <input checked="" type="checkbox"/> button.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>IEEE 802.3</i> (default setting)▶ <i>UDP/IPv4</i> This value is available only if in the <i>Delay mechanism</i> column another value than <i>P2P</i> is specified.
Announce interval [s]	<p>Specifies the interval in seconds at which the port transmits messages for the PTP topology discovery.</p> <p>Assign the same value to every device of a <i>PTP</i> domain.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1▶ 2 (default setting)▶ 4▶ 8▶ 16
Announce timeout	<p>Specifies the number of announce intervals.</p> <p>Example:</p> <p>For the default setting (<i>Announce interval [s]</i> = 2 and <i>Announce timeout</i> = 3), the timeout is $3 \times 2 \text{ s} = 6 \text{ s}$.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 2..10 (default setting: 3) Assign the same value to every device of a <i>PTP</i> domain.
E2E delay interval [s]	<p>Displays the interval in seconds at which the port measures the End-to-End delay:</p> <ul style="list-style-type: none">▶ When the port is operating as the <i>PTP</i> master, the device assigns to the port the value 8.▶ When the port is operating as the <i>PTP</i> slave, the value is specified by the <i>PTP</i> master connected to the port.
V1 hardware compatibility	<p>Specifies if the port adjusts the length of the <i>PTP</i> synchronization messages when you have set in the <i>Network protocol</i> column the value <i>udpIpv4</i>.</p> <p>It is possible that other devices in the network expect the <i>PTP</i> synchronization messages to be the same length as PTPv1 messages.</p>

Possible values:

- ▶ *auto* (default setting)
The device automatically detects if other devices in the network expect the *PTP* synchronization messages to be the same length as PTPv1 messages. If this is the case, then the device extends the length of the *PTP* synchronization messages before transmitting them.
- ▶ *on*
The device extends the length of the *PTP* synchronization messages before transmitting them.
- ▶ *off*
The device transmits *PTP* synchronization messages without changing the length.

Asymmetry

Corrects the measured delay value corrupted by asymmetrical transmission paths.

Possible values:

- ▶ *-2000000000..2000000000* (default setting: 0)

The value represents the delay symmetry in nanoseconds.

A measured delay value of y ns corresponds to an asymmetry of $y \times 2$ ns.

The value is positive if the delay from the *PTP* master to the *PTP* slave is longer than in the opposite direction.

VLAN

Specifies the VLAN ID with which the device marks the *PTP* synchronization messages on this port.

Possible values:

- ▶ *none* (default setting)
The device transmits *PTP* synchronization messages without a VLAN tag.
- ▶ *0..4042*
You specify VLANs that you have already set up in the device from the list.

Verify that the port is a member of the VLAN.

See the [Switching > VLAN > Configuration](#) dialog.

VLAN priority

Specifies the priority with which the device transmits the *PTP* synchronization messages marked with a VLAN ID (Layer 2, IEEE 802.1D).

Possible values:

- ▶ *0..7* (default setting: 4)

If you specified in the *VLAN* column the value *none*, then the device ignores the VLAN priority.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

PTP Transparent Clock

[Time > PTP > Transparent Clock]

With this menu you can configure the *Transparent Clock* mode for the local clock.

The menu contains the following dialogs:

- ▶ PTP Transparent Clock Global
- ▶ PTP Transparent Clock Port

PTP Transparent Clock Global

[Time > PTP > Transparent Clock > Global]

In this dialog you enter general, cross-port settings for the *Transparent Clock* mode for the local clock. The *Transparent Clock (TC)* operates according to PTP version 2 (IEEE 1588-2008).

The settings are effective when the local clock operates as the *Transparent Clock (TC)*. For this, you select in the *Time > PTP > Global* dialog in the *PTP mode* field the value *v2-transparent-clock*.

Operation IEEE1588/PTPv2 TC

Delay mechanism

Specifies the mechanism with which the device measures the delay for transmitting the *PTP* synchronization messages.

Possible values:

- ▶ *e2e* (default setting)
As the *PTP* slave, the port measures the delay for the *PTP* synchronization messages to the *PTP* master.
The device displays the measured value in the *Time > PTP > Transparent Clock > Global* dialog.
- ▶ *p2p*
The device measures the delay for the *PTP* synchronization messages for every connected PTP device, provided that the device supports P2P.
This mechanism saves the device from having to determine the delay again in the case of a reconfiguration.
If you specify this value, then the value *IEEE 802.3* is only available in the *Network protocol* field.

	<ul style="list-style-type: none"> ▶ <i>e2e-optimized</i> Like <i>e2e</i>, with the following special characteristics: <ul style="list-style-type: none"> – The device transmits the delay requests of the <i>PTP</i> slaves only to the <i>PTP</i> master, even though these requests are multicast messages. The device thus spares the other devices from unnecessary multicast requests. – If the master-slave topology changes, then the device relearns the port for the <i>PTP</i> master as soon as it receives a synchronization message from another <i>PTP</i> master. – If the device does not know a <i>PTP</i> master, then the device transmits delay requests to the ports. ▶ <i>disabled</i> The delay measuring is disabled on the port. The device discards messages for the delay measuring.
Primary domain	<p>Assigns the device to a <i>PTP</i> domain.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>0..255</i> (default setting: 0) <p>The device transmits time information from and to devices only in the same domain.</p>
Network protocol	<p>Specifies which protocol the port uses to transmit the <i>PTP</i> synchronization messages.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>ieee8023</i> (default setting) ▶ <i>udpIpv4</i> Available only if in the <i>Delay mechanism</i> option list, a radio button different from <i>p2p</i> is selected.
Multi domain mode	<p>Activates/deactivates the <i>PTP</i> synchronization message correction in every <i>PTP</i> domain.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> The device corrects <i>PTP</i> synchronization messages in every <i>PTP</i> domain. ▶ <i>cleared</i> (default setting) The device corrects <i>PTP</i> synchronization messages only in the primary <i>PTP</i> domain. See the <i>Primary domain</i> field.
VLAN ID	<p>Specifies the VLAN ID with which the device marks the <i>PTP</i> synchronization messages on this port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>none</i> (default setting) The device transmits <i>PTP</i> synchronization messages without a VLAN tag. ▶ <i>0..4042</i> You specify VLANs that you have already set up in the device from the list.

VLAN priority Specifies the priority with which the device transmits the *PTP* synchronization messages marked with a VLAN ID (Layer 2, IEEE 802.1D).

Possible values:

- ▶ 0..7 (default setting: 4)

If you specified the value *none* in the *VLAN ID* field, then the device ignores the specified value.

Local synchronization

Syntonize Activates/deactivates the frequency synchronization of the *Transparent Clock* with the *PTP* master.

Possible values:

- ▶ *selected* (default setting)
The frequency synchronization is active.
The device synchronizes the frequency.
- ▶ *cleared*
The frequency synchronization is inactive.
The frequency remains constant.

Synchronize local clock Activates/deactivates the synchronization of the local system time.

Possible values:

- ▶ *selected*
The synchronization is active.
The device synchronizes the local system time with the time received via PTP.
The prerequisite is that the *Syntonize* checkbox is selected.
- ▶ *cleared* (default setting)
The synchronization is inactive.
The local system time remains constant.

Current master Displays the port identification number (UUID) of the directly superior master device on which the device synchronizes its frequency.

If the value contains only zeros, this is because:

- ▶ The *Syntonize* function is disabled.
- or
- ▶ The device cannot find a *PTP* master.

Offset to master [ns] Displays the measured difference (offset) between the local clock and the *PTP* master in nanoseconds. The device calculates the difference from the time information received.

The prerequisite is that the *Synchronize local clock* function is enabled.

Delay to master [ns] Displays the delay when transmitting the *PTP* synchronization messages from the *PTP* master to the *PTP* slave in nanoseconds.

Prerequisite:

- ▶ The *Synchronize local clock* function is enabled.
- ▶ In the *Delay mechanism* field, the value *e2e* is selected.

Status IEEE1588/PTPv2 TC

Clock identity

Displays the device's own identification number (UUID).

The device displays the identities as byte sequences in hexadecimal notation.

The device identification number consists of the MAC address of the device, with the values `ff` and `fe` added between byte 3 and byte 4.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

PTP Transparent Clock Port

[Time > PTP > Transparent Clock > Port]

In this dialog you specify the *Transparent Clock (TC)* settings on each individual port.

The settings are effective when the local clock operates as the *Transparent Clock (TC)*. For this, you select in the *Time > PTP > Global* dialog in the *PTP mode* field the value `v2-transparent-clock`.

Table

Port

Displays the port number.

PTP enable

Activates/deactivates the transmitting of *PTP* synchronization messages on the port.

Possible values:

- ▶ `selected` (default setting)
The transmitting is active.
The port forwards and receives *PTP* synchronization messages.
- ▶ `cleared`
The transmitting is inactive.
The port blocks *PTP* synchronization messages.

P2P delay interval [s]

Specifies the interval in seconds at which the port measures the Peer-to-Peer delay.

The prerequisite is that you specify the value `p2p` on this port and on the port of the remote terminal. See the *Delay mechanism* option list in the *Time > PTP > Transparent Clock > Global* dialog.

Possible values:

- ▶ 1 (default setting)
- ▶ 2
- ▶ 4
- ▶ 8
- ▶ 16
- ▶ 32

P2P delay

Displays the measured Peer-to-Peer delay for the *PTP* synchronization messages.

The prerequisite is that you select in the *Delay mechanism* option list the *p2p* radio button. See the *Delay mechanism* field in the *Time > PTP > Transparent Clock > Global* dialog.

Asymmetry

Corrects the measured delay value corrupted by asymmetrical transmission paths.

Possible values:

- ▶ -20000000000..20000000000 (default setting: 0)

The value represents the delay symmetry in nanoseconds.

A measured delay value of y ns corresponds to an asymmetry of $y \times 2$ ns.

The value is positive if the delay from the *PTP* master to the *PTP* slave is longer than in the opposite direction.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Device Security

The menu contains the following dialogs:

- ▶ [User Management](#)
- ▶ [Authentication List](#)
- ▶ [Management Access](#)
- ▶ [Pre-login Banner](#)

User Management

[Device Security > User Management]

If users log in with valid login data, then the device lets them have access to its device management.

In this dialog you manage the users of the local user management. You also specify the following settings here:

- ▶ Settings for the login
- ▶ Settings for saving the passwords
- ▶ Specify policy for valid passwords

The methods that the device uses for the authentication you specify in the [Device Security > Authentication List](#) dialog.

Configuration

This frame lets you specify settings for the login.

Login attempts

Specifies the number of login attempts possible when the user accesses the device management using the Graphical User Interface and the Command Line Interface.

NOTE: When accessing the device management using the Command Line Interface through the serial connection, the number of login attempts is unlimited.

Possible values:

- ▶ 0..5 (default setting: 0)

If the user makes one more unsuccessful login attempt, then the device locks access for the user.

The device lets only users with the [administrator](#) authorization remove the lock.

The value 0 deactivates the lock. The user has unlimited attempts to log in.

Min. password length

The device accepts the password if it contains at least the number of characters specified here.

The device checks the password according to this setting, regardless of the setting for the [Policy check](#) checkbox.

Possible values:

▶ 1..64 (default setting: 6)

Password policy

This frame lets you specify the policy for valid passwords. The device checks every new password and password change according to this policy.


The settings effect the *Password* column. The prerequisite is that you mark the checkbox in the *Policy check* column.

Upper-case characters (min.)	<p>The device accepts the password if it contains at least as many upper-case letters as specified here.</p> <p>Possible values: ▶ 0..16 (default setting: 1)</p> <p>The value 0 deactivates this setting.</p>
Lower-case characters (min.)	<p>The device accepts the password if it contains at least as many lower-case letters as specified here.</p> <p>Possible values: ▶ 0..16 (default setting: 1)</p> <p>The value 0 deactivates this setting.</p>
Digits (min.)	<p>The device accepts the password if it contains at least as many numbers as specified here.</p> <p>Possible values: ▶ 0..16 (default setting: 1)</p> <p>The value 0 deactivates this setting.</p>
Special characters (min.)	<p>The device accepts the password if it contains at least as many special characters as specified here.</p> <p>Possible values: ▶ 0..16 (default setting: 1)</p> <p>The value 0 deactivates this setting.</p>

Table

Every user requires an active user account to gain access to the device management. The table lets you set up and manage user accounts.

To change settings, click the desired parameter in the table and modify the value.

User name	<p>Displays the name of the user account.</p> <p>To create a new user account, click the  button.</p>
Active	<p>Activates/deactivates the user account.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> The user account is active. The device accepts the login of a user with this user name. ▶ <code>cleared</code> (default setting) The user account is inactive. The device rejects the login of a user with this user name. <p>When one user account exists with the <code>administrator</code> access role, this user account is constantly active.</p>
Password	<p>Displays ***** (asterisks) instead of the password with which the user logs in. To change the password, click the relevant field.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ Alphanumeric ASCII character string with 6..64 characters The following characters are allowed: <ul style="list-style-type: none"> – <code>a..z</code> – <code>A..Z</code> – <code>0..9</code> – <code>!#\$%&'()*+,-./:;<=>?@[\\]^_`{ }~</code> <p>The minimum length of the password is specified in the <code>Configuration</code> frame. The device differentiates between upper and lower case.</p> <p>If the checkbox in the <code>Policy check</code> column is selected, then the device checks the password according to the policy specified in the <code>Password policy</code> frame.</p> <p>The device constantly checks the minimum length of the password, even if the checkbox in the <code>Policy check</code> column is cleared.</p>
Role	<p>Specifies the user role that regulates the access of the user to the individual functions of the device.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>unauthorized</code> The user is blocked, and the device rejects the user login. Assign this value to temporarily lock the user account. If the device detects an error when another role is being assigned, then the device assigns this role to the user account. ▶ <code>guest</code> (default setting) The user is authorized to monitor the device. ▶ <code>auditor</code> The user is authorized to monitor the device and to save the log file in the <code>Diagnostics > Report > Audit Trail</code> dialog. ▶ <code>operator</code> The user is authorized to monitor the device and to change the settings – with the exception of security settings for device access. ▶ <code>administrator</code> The user is authorized to monitor the device and to change the settings.

The device assigns the Service Type transferred in the response of a RADIUS server as follows to a user role:

- `Administrative-User`: `administrator`
- `Login-User`: `operator`
- `NAS-Prompt-User`: `guest`

User locked

Unlocks the user account.

Possible values:

- ▶ `selected`
The user account is locked. The user has no access to the device management. If the user makes too many unsuccessful login attempts, then the device automatically locks the user.
- ▶ `cleared` (grayed out) (default setting)
The user account is unlocked. The user has access to the device management.

Policy check

Activates/deactivates the password check.

Possible values:

- ▶ `selected`
The password check is activated.
When you set up or change the password, the device checks the password according to the policy specified in the `Password policy` frame.
- ▶ `cleared` (default setting)
The password check is deactivated.

SNMP auth type

Specifies the authentication protocol that the device applies for user access via SNMPv3.

Possible values:

- ▶ `hmacmd5` (default value)
For this user account, the device uses protocol HMACMD5.
- ▶ `hmacsha`
For this user account, the device uses protocol HMACSHA.

SNMP encryption type

Specifies the encryption protocol that the device applies for user access via SNMPv3.

Possible values:

- ▶ `none`
No encryption.
- ▶ `des` (default value)
DES encryption
- ▶ `aesCfb128`
AES128 encryption

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Opens the *Create* window to add a new entry to the table.

- ▶ In the *User name* field, you specify the name of the user account.
Possible values:
 - Alphanumeric ASCII character string with 1..32 characters

Authentication List

[Device Security > Authentication List]

In this dialog you manage the authentication lists. In an authentication list you specify which method the device uses for the authentication. You also have the option to assign pre-defined applications to the authentication lists.

If users log in with valid login data, then the device lets them have access to its device management. The device authenticates the users using the following methods:

- ▶ User management of the device
- ▶ RADIUS

With the port-based access control according to IEEE 802.1X, if connected end devices log in with valid login data, then the device lets them have access to the network. The device authenticates the end devices using the following methods:

- ▶ RADIUS
- ▶ IAS (Integrated Authentication Server)

In the default setting the following authentication lists are available:


- ▶ `defaultDot1x8021AuthList`
- ▶ `defaultLoginAuthList`
- ▶ `defaultV24AuthList`

Table

NOTE: If the table does not contain a list, then the access to the device management is only possible using the Command Line Interface through the serial interface of the device. In this case, the device authenticates the user by using the local user management. See the *Device Security > User Management* dialog.

Name

Displays the name of the list.

To create a new list, click the  button.

Policy 1
 Policy 2
 Policy 3
 Policy 4
 Policy 5

Possible values:

- ▶ Alphanumeric ASCII character string with 1..32 characters

Specifies the authentication policy that the device uses for access using the application specified in the *Dedicated applications* column.


The device gives you the option of a fall-back solution. For this, you specify another policy in each of the policy fields. If the authentication with the specified policy is unsuccessful, then the device can use the next policy, depending on the order of the values entered in each policy.

Possible values:

- ▶ *local* (default setting)
 The device authenticates the users by using the local user management. See the *Device Security > User Management* dialog.
 You cannot assign this value to the authentication list `defaultDot1x8021AuthList`.
- ▶ *radius*
 The device authenticates the users with a RADIUS server in the network. You specify the RADIUS server in the *Network Security > RADIUS > Authentication Server* dialog.
- ▶ *reject*
 The device accepts or rejects the authentication depending on which policy you try first. The following list contains authentication scenarios:
 - If the first policy in the authentication list is *local* and the device accepts the login credentials of the user, then it logs the user in without attempting the other policies.
 - If the first policy in the authentication list is *local* and the device denies the login credentials of the user, then it attempts to log the user in using the other policies in the order specified.
 - If the first policy in the authentication list is *radius* and the device rejects a login, then the login is immediately rejected without attempting to log in the user using another policy.
 If there is no response from the RADIUS server, then the device attempts to authenticate the user with the next policy.
 - If the first policy in the authentication list is *reject*, then the device immediately rejects the user login without attempting another policy.
 - Verify that the authentication list `defaultV24AuthList` contains at least one policy different from *reject*.
- ▶ *ias*
 The device authenticates the end devices logging in via 802.1X with the integrated authentication server (IAS). The integrated authentication server manages the login data in a separate database. See the *Network Security > 802.1X Port Authentication > Integrated Authentication Server* dialog.
 You can only assign this value to the authentication list `defaultDot1x8021AuthList`.

Dedicated applications

Displays the dedicated applications. When users access the device with the relevant application, the device uses the specified policies for the authentication.

To allocate another application to the list or remove the allocation, click the  button and then the *Allocate applications* item. The device lets you assign each application to exactly one list.

Active

Activates/deactivates the list.

Possible values:

- ▶ **selected** (default setting)
The list is activated. The device uses the policies in this list when users access the device with the relevant application.
- ▶ **cleared**
The list is deactivated.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Allocate applications

Opens the *Allocate applications* window.

- ▶ The left field displays the applications that can be allocated to the highlighted list.
- ▶ The right field displays the applications that are allocated to the highlighted list.
- ▶ Buttons:
 - ▶ → Moves every entry to the right field.
 - ▶ → Moves the highlighted entries from the left field to the right field.
 - ▶ ← Moves the highlighted entries from the right field to the left field.
 - ▶ ← Moves every entry to the left field.

NOTE: When you move the entry *WebInterface* to the left field, the connection to the device is lost, after you click the *Ok* button.

Management Access

[Device Security > Management Access]

The menu contains the following dialogs:

- ▶ **Server**
- ▶ **IP Access Restriction**
- ▶ **Web**
- ▶ **Command Line Interface**
- ▶ **SNMPv1/v2 Community**

Server

[Device Security > Management Access > Server]

This dialog lets you set up the server services which enable users or applications to access the management of the device.

The dialog contains the following tabs:

- ▶ [Information]
- ▶ [SNMP]
- ▶ [Telnet]
- ▶ [SSH]
- ▶ [HTTP]
- ▶ [HTTPS]

[Information]

This tab displays as an overview which server services are enabled.

Table

SNMPv1

Displays if the server service is active or inactive, which authorizes access to the device using SNMP version 1. See the [SNMP](#) tab.

Possible values:

- ▶ [selected](#)
Server service is active.
- ▶ [cleared](#)
Server service is inactive.

SNMPv2

Displays if the server service is active or inactive, which authorizes access to the device using SNMP version 2. See the [SNMP](#) tab.

Possible values:

- ▶ [selected](#)
Server service is active.
- ▶ [cleared](#)
Server service is inactive.

SNMPv3

Displays if the server service is active or inactive, which authorizes access to the device using SNMP version 3. See the [SNMP](#) tab.

Possible values:

- ▶ [selected](#)
Server service is active.
- ▶ [cleared](#)
Server service is inactive.

Telnet server	<p>Displays if the server service is active or inactive, which authorizes access to the device using Telnet. See the Telnet tab.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Server service is active.▶ cleared Server service is inactive.
SSH server	<p>Displays if the server service is active or inactive, which authorizes access to the device using Secure Shell (SSH). See the SSH tab.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Server service is active.▶ cleared Server service is inactive.
HTTP server	<p>Displays if the server service is active or inactive, which authorizes access to the device using the Graphical User Interface through HTTP. See the HTTP tab.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Server service is active.▶ cleared Server service is inactive.
HTTPS server	<p>Displays if the server service is active or inactive, which authorizes access to the device using the Graphical User Interface through HTTPS. See the HTTPS tab.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Server service is active.▶ cleared Server service is inactive.

Buttons



You find the description of the standard buttons in section [“Buttons” on page 18](#).

[SNMP]

This tab lets you specify settings for the SNMP agent of the device and to enable/disable access to the device with different SNMP versions.

The SNMP agent enables access to the device management with SNMP-based applications.

Configuration

SNMPv1	<p>Activates/deactivates the access to the device with SNMP version 1.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> Access is activated.▶ <code>cleared</code> (default setting) Access is deactivated. <p>You specify the community names in the Device Security > Management Access > SNMPv1/v2 Community dialog.</p>
SNMPv2	<p>Activates/deactivates the access to the device with SNMP version 2.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> Access is activated.▶ <code>cleared</code> (default setting) Access is deactivated. <p>You specify the community names in the Device Security > Management Access > SNMPv1/v2 Community dialog.</p>
SNMPv3	<p>Activates/deactivates the access to the device with SNMP version 3.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) Access is activated.▶ <code>cleared</code> Access is deactivated. <p>Network management systems like ConneXium Network Manager use this protocol to communicate with the device.</p>
UDP port	<p>Specifies the number of the UDP port on which the SNMP agent receives requests from clients.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>1..65535</code> (default setting: <code>161</code>) Exception: Port <code>2222</code> is reserved for internal functions. <p>To enable the SNMP agent to use the new port after a change, you proceed as follows:</p> <ul style="list-style-type: none"><input type="checkbox"/> Click the  button.<input type="checkbox"/> Select in the Basic Settings > Load/Save dialog the active configuration profile.<input type="checkbox"/> Click the  button to save the changes.<input type="checkbox"/> Restart the device.

SNMPOver802

Activates/deactivates the access to the device through SNMP over IEEE-802.

Possible values:

- ▶ *selected*
Access is activated.
- ▶ *cleared* (default setting)
Access is deactivated.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Telnet]

This tab lets you enable/disable the Telnet server in the device and specify its settings.

The Telnet server enables access to the device management remotely through the Command Line Interface. Telnet connections are unencrypted.

Operation

Telnet server

Enables/disables the Telnet server.

Possible values:

- ▶ *On*
The Telnet server is enabled.
The access to the device management is possible through the Command Line Interface using an unencrypted Telnet connection.
- ▶ *Off* (default setting)
The Telnet server is disabled.

NOTE: If the *SSH* server is disabled and you also disable the *Telnet* server, then the access to the Command Line Interface is only possible through the serial interface of the device.

Configuration

TCP port	<p>Specifies the number of the TCP port on which the device receives Telnet requests from clients.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 23) Exception: Port 2222 is reserved for internal functions. <p>The server restarts automatically after the port is changed. Existing connections remain in place.</p>
Connections	<p>Displays how many Telnet connections are established to the device.</p>
Connections (max.)	<p>Specifies the maximum number of Telnet connections to the device that can be set up simultaneously.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..5 (default setting: 5)
Session timeout [min]	<p>Specifies the timeout in minutes. After the device has been inactive for this time it ends the session for the user logged in.</p> <p>A change in the value takes effect the next time a user logs in.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 Deactivates the function. The connection remains established in the case of inactivity.▶ 1..160 (default setting: 5)

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[SSH]

This tab lets you enable/disable the SSH server in the device and specify its settings required for SSH. The server works with SSH version 2.

The SSH server enables access to the device management remotely through the Command Line Interface. SSH connections are encrypted.

The SSH server identifies itself to the clients using its public RSA key. When first setting up the connection, the client program displays the user the fingerprint of this key. The fingerprint contains a Base64-coded character sequence that is easy to check. When you make this character sequence available to the users via a reliable channel, they have the option to compare both fingerprints. If the character sequences match, then the client is connected to the correct server.

The device lets you create the private and public keys (host keys) required for RSA directly in the device. Otherwise you have the option to copy your own keys to the device in PEM format.

As an alternative, the device lets you load the RSA key (host key) from an external memory upon restart. You activate this function in the [Basic Settings > External Memory](#) dialog, [SSH key auto upload](#) column.

Operation

SSH server

Enables/disables the SSH server.

Possible values:

- ▶ *On* (default setting)
The SSH server is enabled.
The access to the device management is possible through the Command Line Interface using an encrypted SSH connection.
You can start the server only if there is an RSA signature in the device.
- ▶ *Off*
The SSH server is disabled.
When you disable the SSH server, the existing connections remain established. However, the device helps prevent new connections from being set up.

NOTE: If the [Telnet](#) server is disabled and you also disable the [SSH](#) server, then the access to the Command Line Interface is only possible through the serial interface of the device.

Configuration

TCP port

Specifies the number of the TCP port on which the device receives SSH requests from clients.

Possible values:

- ▶ [1..65535](#) (default setting: [22](#))
Exception: Port [2222](#) is reserved for internal functions.

The server restarts automatically after the port is changed. Existing connections remain in place.

Sessions

Displays how many SSH connections are established to the device.

Sessions (max.)

Specifies the maximum number of SSH connections to the device that can be set up simultaneously.

Possible values:

- ▶ [1..5](#) (default setting: [5](#))

Session timeout [min]

Specifies the timeout in minutes. After the user logged in has been inactive for this time, the device ends the connection.

A change in the value takes effect the next time a user logs in.

Possible values:

- ▶ 0
Deactivates the function. The connection remains established in the case of inactivity.
- ▶ 1..160 (default setting: 5)

Fingerprint

The fingerprint is an easy to verify string that uniquely identifies the host key of the SSH server.

After importing a new host key, the device continues to display the existing fingerprint until you restart the server.

Fingerprint type


Specifies which fingerprint the *RSA Fingerprint* field displays.

Possible values:

- ▶ *md5*
The *RSA Fingerprint* field displays the fingerprint as hexadecimal MD5 hash.
- ▶ *sha256*
The *RSA Fingerprint* field displays the fingerprint as Base64-coded SHA256 hash.

RSA Fingerprint

Displays the fingerprint of the public host key of the SSH server.

When you change the settings in the *Fingerprint type* field, click afterwards the button and then the  button to update the display.

Signature

RSA present

Displays if an RSA host key is present in the device.

Possible values:

- ▶ *selected*
A key is present.
- ▶ *cleared*
No key is present.

Create

Generates a host key in the device. The prerequisite is that the *SSH* server is disabled.

Length of the key created:


- ▶ 2048 bit (RSA)

To get the SSH server to use the generated host key, re-enable the SSH server.

Alternatively, you have the option to copy your own host key to the device in PEM format. See the *Key import* frame.

Delete	Removes the host key from the device. The prerequisite is that the SSH server is disabled.
Oper status	<p>Displays if the device is generating a host key.</p> <p>NOTE: It is possible that another user triggered this action.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>rsa</i> The device is generating an RSA host key. ▶ <i>none</i> The device is not generating a host key.

Key import

URL	<p>Specifies the path and file name of your own RSA host key.</p> <p>The device accepts the RSA key if it has the following key length:</p> <ul style="list-style-type: none"> • 2048 bit (RSA) <p>The device gives you the following options for copying the key to the device:</p> <ul style="list-style-type: none"> ▶ Import from the PC When the host key is located on your PC or on a network drive, drag and drop the file that contains the key in the  area. Alternatively click in the area to select the file. ▶ Import from an FTP server When the key is on an FTP server, specify the URL for the file in the following form: <code>ftp://<user>:<password>@<IP address>:<port>/<file name></code> ▶ Import from a TFTP server When the key is on a TFTP server, specify the URL for the file in the following form: <code>tftp://<IP address>/<path>/<file name></code> ▶ Import from an SCP or SFTP server When the key is on an SCP or SFTP server, specify the URL for the file in the following form: <ul style="list-style-type: none"> – <code>scp:// or sftp://<IP address>/<path>/<file name></code> When you click the <i>Start</i> button, the device displays the <i>Credentials</i> window. There you enter <i>User name</i> and <i>Password</i>, to log in to the server. – <code>scp:// or sftp://<user>:<password>@<IP address>/<path>/<file name></code>
Start	Copies the key specified in the <i>URL</i> field to the device.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[HTTP]

This tab lets you enable/disable the HTTP protocol for the web server and specify the settings required for HTTP.

The web server provides the Graphical User Interface via an unencrypted HTTP connection. For improved security, disable the HTTP protocol and use the HTTPS protocol instead.

The device supports up to 10 simultaneous connections using HTTP or HTTPS.

NOTE: If you change the settings in this tab and click the button, then the device ends the session and disconnects every opened connection. To continue working with the Graphical User Interface, log in again.

Operation

HTTP server

Enables/disables the *HTTP* protocol for the web server.

Possible values:

▶ *On* (default setting)

The *HTTP* protocol is enabled.

The access to the device management is possible through an unencrypted *HTTP* connection.

When the *HTTPS* protocol is also enabled, the device automatically redirects the request for a *HTTP* connection to an encrypted *HTTPS* connection.

▶ *Off*

The *HTTP* protocol is disabled.

When the *HTTPS* protocol is enabled, the access to the device management is possible through an encrypted *HTTPS* connection.

NOTE: If the *HTTP* and *HTTPS* protocols are disabled, then you can enable the *HTTP* protocol using the Command Line Interface command `http server` to get to the Graphical User Interface.

Configuration

TCP port

Specifies the number of the TCP port on which the web server receives HTTP requests from clients.

Possible values:

▶ *1..65535* (default setting: 80)

Exception: Port *2222* is reserved for internal functions.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[HTTPS]

This tab lets you enable/disable the HTTPS protocol for the web server and specify the settings required for HTTPS.

The web server provides the Graphical User Interface via an encrypted HTTP connection.

A digital certificate is required for the encryption of the HTTP connection. The device lets you create this certificate yourself or to load an existing certificate onto the device.

The device supports up to 10 simultaneous connections using HTTP or HTTPS.

NOTE: If you change the settings in this tab and click the button, then the device ends the session and disconnects every opened connection. To continue working with the Graphical User Interface, log in again.

Operation

HTTPS server

Enables/disables the *HTTPS* protocol for the web server.

Possible values:

▶ *On* (default setting)

The *HTTPS* protocol is enabled.

The access to the device management is possible through an encrypted *HTTPS* connection.

When there is no digital certificate present, the device generates a digital certificate before it enables the *HTTPS* protocol.

▶ *Off*

The *HTTPS* protocol is disabled.

When the *HTTP* protocol is enabled, the access to the device management is possible through an unencrypted *HTTP* connection.

NOTE: If the *HTTP* and *HTTPS* protocols are disabled, then you can enable the *HTTPS* protocol using the Command Line Interface command `https server` to get to the Graphical User Interface.

Configuration

TCP port

Specifies the number of the TCP port on which the web server receives HTTPS requests from clients.

Possible values:

▶ *1..65535* (default setting: *443*)

Exception: Port *2222* is reserved for internal functions.

Fingerprint

The fingerprint is an easily verified hexadecimal number sequence that uniquely identifies the digital certificate of the HTTPS server.

After importing a new digital certificate, the device displays the fingerprint until you restart the server.

Fingerprint type



Specifies which fingerprint the *Fingerprint* field displays.

Possible values:

- ▶ *sha1*
The *Fingerprint* field displays the SHA1 fingerprint of the certificate.
- ▶ *sha256*
The *Fingerprint* field displays the SHA256 fingerprint of the certificate.

Fingerprint

Character sequence of the digital certificate used by the server.

When you change the settings in the *Fingerprint type* field, click afterwards the  button and then the  button to update the display.

Certificate

NOTE: If the device uses a certificate that is not signed by a certification authority, then the web browser displays a message while loading the Graphical User Interface. To continue, add an exception rule for the certificate in the web browser.

Present

Displays if the digital certificate is present in the device.

Possible values:

- ▶ *selected*
The certificate is present.
- ▶ *cleared*
The certificate has been removed.

Create

Generates a digital certificate in the device.

Until restarting the web server uses the previous certificate.

To get the web server to use the newly generated certificate, restart the web server. Restarting the web server is possible only through the Command Line Interface.

Alternatively, you have the option of copying your own certificate to the device. See the *Certificate import* frame.

Delete

Deletes the digital certificate.

Until restarting the web server uses the previous certificate.

Oper status

Displays if the device is generating or deleting a digital certificate.

NOTE: It is possible that another user has triggered the action.

Possible values:

- ▶ *none*
The device is not generating nor deleting a certificate.
- ▶ *delete*
The device is deleting a certificate.
- ▶ *generate*
The device is generating a certificate.

Certificate import

URL


Specifies the path and file name of the certificate.

The device accepts certificates with the following properties:

- X.509 format
- .PEM file name extension
- Base64-coded, enclosed by


```
-----BEGIN PRIVATE KEY-----
and
-----END PRIVATE KEY-----
as well as
-----BEGIN CERTIFICATE-----
and
-----END CERTIFICATE-----
```
- RSA key with 2048 bit length

The device gives you the following options for copying the certificate to the device:

- ▶ Import from the PC
When the certificate is located on your PC or on a network drive, drag and drop the certificate in the  area. Alternatively click in the area to select the certificate.
- ▶ Import from an FTP server
When the certificate is on a FTP server, specify the URL for the file in the following form:
`ftp://<user>:<password>@<IP address>:<port>/<path>/<file name>`
- ▶ Import from a TFTP server
When the certificate is on a TFTP server, specify the URL for the file in the following form:
`tftp://<IP address>/<path>/<file name>`
- ▶ Import from an SCP or SFTP server
When the certificate is on an SCP or SFTP server, specify the URL for the file in the following form:
 - `scp:// or sftp://<IP address>/<path>/<file name>`
When you click the *Start* button, the device displays the *Credentials* window. There you enter *User name* and *Password*, to log in to the server.
 - `scp:// or sftp://<user>:<password>@<IP address>/<path>/<file name>`

Start

Copies the certificate specified in the *URL* field to the device.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

IP Access Restriction

[Device Security > Management Access > IP Access Restriction]

This dialog enables you to restrict the access to the device management to specific IP address ranges and selected IP-based applications.

- ▶ If the function is disabled, then the access to the device management is possible from any IP address and using every application.
- ▶ If the function is enabled, then the access is restricted. You have access to the device management only under the following conditions:
 - At least one table entry is activated.
 - and
 - You are accessing the device with a permitted application from a permitted IP address range.

Operation

NOTE: Before you enable the function, verify that at least one active entry in the table lets you access. Otherwise, if you change the settings, then the connection to the device terminates. The access to the device management is possible only using the Command Line Interface through the serial interface.

Operation

Enables/disables the *IP Access Restriction* function.

Possible values:

- ▶ *On*
The *IP Access Restriction* function is enabled.
The access to the device management is restricted.
- ▶ *OFF* (default setting)
The *IP Access Restriction* function is disabled.

Table

You have the option of defining up to 16 table entries and activating them separately.

Index

Displays the index number to which the table entry relates.

When you delete a table entry, this leaves a gap in the numbering. When you create a new table entry, the device fills the first gap.

	<p>Possible values:</p> <ul style="list-style-type: none">▶ 1..16
Address	<p>Specifies the IP address of the network from which you allow the access to the device management. You specify the network range in the <i>Netmask</i> column.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address (default setting: 0.0.0.0)
Netmask	<p>Specifies the range of the network specified in the <i>Address</i> column.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid netmask (default setting: 0.0.0.0)
HTTP	<p>Activates/deactivates the HTTP access.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) Access is activated for the adjacent IP address range.▶ <i>cleared</i> Access is deactivated.
HTTPS	<p>Activates/deactivates the HTTPS access.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) Access is activated for the adjacent IP address range.▶ <i>cleared</i> Access is deactivated.
SNMP	<p>Activates/deactivates the SNMP access.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) Access is activated for the adjacent IP address range.▶ <i>cleared</i> Access is deactivated.
Telnet	<p>Activates/deactivates the Telnet access.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) Access is activated for the adjacent IP address range.▶ <i>cleared</i> Access is deactivated.
SSH	<p>Activates/deactivates the SSH access.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) Access is activated for the adjacent IP address range.▶ <i>cleared</i> Access is deactivated.

IEC61850-MMS

Activates/deactivates the access to the MMS server.

Possible values:

- ▶ **selected** (default setting)
Access is activated for the adjacent IP address range.
- ▶ **cleared**
Access is deactivated.

Modbus TCP

Activates/deactivates the access to the *Modbus TCP* server.

Possible values:

- ▶ **selected** (default setting)
Access is activated for the adjacent IP address range.
- ▶ **cleared**
Access is deactivated.

EtherNet/IP

Activates/deactivates the access to the *EtherNet/IP* server.

Possible values:

- ▶ **selected** (default setting)
Access is activated for the adjacent IP address range.
- ▶ **cleared**
Access is deactivated.

Active

Activates/deactivates the table entry.

Possible values:

- ▶ **selected** (default setting)
Table entry is activated. The device restricts the access to the device management to the adjacent IP address range and the selected IP-based applications.
- ▶ **cleared**
Table entry is deactivated.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Web

[Device Security > Management Access > Web]

In this dialog you specify settings for the Graphical User Interface.

Configuration

Web interface session timeout
[min]

Specifies the timeout in minutes. After the device has been inactive for this time it ends the session for the user logged in.

Possible values:

▶ 0..160 (default setting: 5)

The value 0 deactivates the function, and the user remains logged in when inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Command Line Interface

[Device Security > Management Access > CLI]

In this dialog you specify settings for the Command Line Interface. You find detailed information about the Command Line Interface in the “Command Line Interface” reference manual.

The dialog contains the following tabs:

- ▶ [Global]
- ▶ [Login banner]

[Global]

This tab lets you change the prompt in the Command Line Interface and specify the automatic closing of sessions through the serial interface when they have been inactive.

The device has the following serial interfaces.

- ▶ V.24 interface

Configuration

Login prompt

Specifies the character string that the device displays in the Command Line Interface at the start of every command line.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..128 characters (0x20..0x7E) including space characters

Wildcards

- %d date
- %i IP address
- %m MAC address
- %p product name
- %t time

Default setting: (MCSESR)

Changes to this setting are immediately effective in the active Command Line Interface session.

V.24 timeout [min]

Specifies the time in minutes after which the device automatically closes the session of an inactive user logged in with the Command Line Interface through the serial interface.

Possible values:

- ▶ 0..160 (default setting: 5)

The value 0 deactivates the function, and the user remains logged in when inactive.

A change in the value takes effect the next time a user logs in.

For the *Telnet* server and the *SSH* server, you specify the timeout in the *Device Security > Management Access > Server* dialog.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Login banner]

In this tab you replace the start screen of the Command Line Interface with your own text.

In the default setting, the start screen displays information about the device, such as the software version and the device settings. With the function in this tab, you deactivate this information and replace it with an individually specified text.

To display your own text in the Command Line Interface and in the Graphical User Interface before the login, you use the *Device Security > Pre-login Banner* dialog.

Operation

Operation

Enables/disables the *Login banner* function.

Possible values:

- ▶ *On*
The *Login banner* function is enabled.
The device displays the text information specified in the *Banner text* field to the users that log in with the Command Line Interface.
- ▶ *Off* (default setting)
The *Login banner* function is disabled.
The start screen displays information about the device. The text information in the *Banner text* field is kept.

Banner text

Banner text

Specifies the character string that the device displays in the Command Line Interface at the start of every session.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..1024 characters (0x20..0x7E) including space characters
- ▶ <Tab>
- ▶ <Line break>

Remaining characters

Displays how many characters are still remaining in the *Banner text* field for the text information.

Possible values:

- ▶ 1024..0

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

SNMPv1/v2 Community

[Device Security > Management Access > SNMPv1/v2 Community]

In this dialog you specify the community name for SNMPv1/v2 applications.

Applications send requests via SNMPv1/v2 with a community name in the SNMP data packet header. Depending on the community name, the application gets read authorization or read and write authorization for the device.

You activate the access to the device via SNMPv1/v2 in the [Device Security > Management Access > Server](#) dialog.

Table

Community	<p>Displays the authorization for SNMPv1/v2 applications to the device:</p> <ul style="list-style-type: none">▶ Write For requests with the community name entered, the application receives read and write authorization for the device.▶ Read For requests with the community name entered, the application receives read authorization for the device.
Name	<p>Specifies the community name for the adjacent authorization.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 0..32 characters<ul style="list-style-type: none">admin (default setting for read and write authorizations)user (default setting for read authorization)

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Pre-login Banner

[Device Security > Pre-login Banner]

This dialog lets you display a greeting or information text to users before they log in.

The users see this text in the login dialog of the Graphical User Interface and of the Command Line Interface. Users logging in with SSH see the text - regardless of the client used - before or during the login.

To display the text only in the Command Line Interface, use the settings in the [Device Security > Management Access > CLI](#) dialog.

Operation

Operation

Enables/disables the *Pre-login Banner* function.

Using the *Pre-login Banner* function, the device displays a greeting or information text in the login dialog of the Graphical User Interface and of the Command Line Interface.

Possible values:

- ▶ *On*
The *Pre-login Banner* function is enabled.
The device displays the text specified in the *Banner text* field in the login dialog.
- ▶ *Off* (default setting)
The *Pre-login Banner* function is disabled.
The device does not display a text in the login dialog. When you enter a text in the *Banner text* field, this text is saved in the device.

Banner text

Banner text

Specifies information text that the device displays in the login dialog of the Graphical User Interface and of the Command Line Interface.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..512 characters (0x20..0x7E) including space characters
- ▶ <Tab>
- ▶ <Line break>

Remaining characters

Displays how many characters are still remaining in the *Banner text* field.

Possible values:

- ▶ 512..0

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Network Security

The menu contains the following dialogs:


- ▶ Port Security
- ▶ 802.1X Port Authentication
- ▶ RADIUS
- ▶ DoS

Port Security

[Network Security > Port Security]

The device lets you transmit only data packets from desired senders on one port. When this function is enabled, the device checks the VLAN ID and MAC address of the sender before it transmits a data packet. The device discards data packets from other senders and logs this event.

If the *Auto-Disable* function is activated, the device disables the port. This restriction makes MAC Spoofing attacks more difficult. The *Auto-Disable* function enables the relevant port again automatically when the parameters are no longer being exceeded.

In this dialog a *Wizard* window helps you to connect the ports with one or more desired sources. In the device, these addresses are known as *Static entries (x/y)*. To view the specified static addresses, highlight the relevant port and click the  button.

To simplify the setup process, the device lets you record the desired senders automatically. The device “learns” the senders by evaluating the received data packets. In the device, these addresses are known as *Dynamic entries*. When a user-defined upper limit has been reached (*Dynamic limit*), the device stops the “learning” on the relevant port and transmits only the data packets of the senders already recorded. When you adapt the upper limit to the number of expected senders, you thus make MAC Flooding attacks more difficult.

NOTE: With the automatic recording of the *Dynamic entries*, the device constantly discards the 1st data packet from unknown senders. Using this 1st data packet, the device checks if the upper limit has been reached. The device records the sender until the upper limit is reached. Afterwards, the device transmits data packets that it receives on the relevant port from this sender.

Operation

Operation

Enables/disables the *Port Security* function.

Possible values:

- ▶ *On*
The *Port Security* function is enabled.
The device checks the VLAN ID and the source MAC address before it transmits a data packet.
The device transmits a received data packet only if the VLAN ID and the source MAC address of the data packet are allowed on the relevant port. For this setting to take effect, you also activate the checking of the source address on the relevant ports.
- ▶ *Off* (default setting)
The *Port Security* function is disabled.
The device transmits every received data packet without checking the source address.

Configuration

Auto-disable

Activates/deactivates the *Auto-Disable* function for *Port Security*.

Possible values:

- ▶ *selected*
The *Auto-Disable* function for *Port Security* is active.
Also mark the checkbox in the *Auto-disable* column for the relevant ports.
- ▶ *cleared* (default setting)
The *Auto-Disable* function for *Port Security* is inactive.

Table

Port

Displays the port number.

Active

Activates/deactivates the checking of the source address on the port.

Possible values:

- ▶ *selected*
The device checks every data packet received on the port and transmits it only if the source address of the data packet is allowed. Also enable the *Port Security* function in the *Operation* frame.
- ▶ *cleared* (default setting)
The device transmits every data packet received on the port without checking the source address.

NOTE: When you operate the device as an active participant within an *MRP* ring, clear the checkbox for the ring ports.

Auto-disable	<p>Activates/deactivates the <i>Auto-Disable</i> function for the parameters that the <i>Port Security</i> function is monitoring on the port.</p>
	<p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The <i>Auto-Disable</i> function is active on the port. The prerequisite is that you mark the checkbox <i>Auto-disable</i> in the <i>Configuration</i> frame.<ul style="list-style-type: none">– If the port registers source MAC addresses that are not allowed or more source MAC addresses than specified in the <i>Dynamic limit</i> column, then the device disables the port. The “Link status” LED for the port flashes 3× per period.– The <i>Diagnostics > Ports > Auto-Disable</i> dialog displays which ports are disabled due to the parameters being exceeded.– The <i>Auto-Disable</i> function reactivates the port automatically. For this you go to the <i>Diagnostics > Ports > Auto-Disable</i> dialog and specify a waiting period for the relevant port in the <i>Reset timer [s]</i> column.▶ <i>cleared</i> The <i>Auto-Disable</i> function on the port is inactive.
Send trap	<p>Activates/deactivates the sending of SNMP traps when the device discards a data packet from an undesired sender on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The sending of SNMP traps is active. If the device discards data packets from a sender that is not allowed on the port, then the device sends an SNMP trap.▶ <i>cleared</i> (default setting) The sending of SNMP traps is inactive. <p>The prerequisite for sending SNMP traps is that you enable the function in the <i>Diagnostics > Status Configuration > Alarms (Traps)</i> dialog and specify at least one trap destination.</p>
Trap interval [s]	<p>Specifies the delay time in seconds that the device waits after sending an SNMP trap before sending the next SNMP trap.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>0..3600</i> (default setting: 0) <p>The value 0 deactivates the delay time.</p>
Dynamic limit	<p>Specifies the upper limit for the number of automatically registered sources (<i>Dynamic entries</i>). When the upper limit is reached, the device stops “learning” on this port.</p> <p>Adjust the value to the number of expected sources.</p> <p>If the port registers more senders than specified here, then the port disables the <i>Auto-Disable</i> function. The prerequisite is that you mark the checkbox in the <i>Auto-disable</i> column and the <i>Auto-disable</i> checkbox in the <i>Configuration</i> frame.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 Deactivates the automatic registering of sources on this port.▶ <i>1..600</i> (default setting: 600)

Static limit	<p>Specifies the upper limit for the number of sources connected to the port (<i>Static entries (x/y)</i>). The <i>Wizard</i> window, <i>Addresses</i> dialog, helps you to connect the port with one or more desired sources.</p> <p>Possible values: ▶ 0..64 (default setting: 64)</p> <p>The value 0 helps prevent you from connecting a source with the port.</p>
Dynamic entries	<p>Displays the number of senders that the device has automatically determined.</p> <p>See the <i>Wizard</i> window, <i>Addresses</i> dialog, <i>Dynamic entries</i> field.</p>
Static entries	<p>Displays the number of senders that are linked with the port.</p> <p>See the <i>Wizard</i> window, <i>Addresses</i> dialog, <i>Static entries (x/y)</i> field.</p>
Last violating VLAN ID/MAC	<p>Displays the VLAN ID and MAC address of an undesired sender whose data packets the device last discarded on this port.</p>
Sent traps	<p>Displays the number of discarded data packets on this port that caused the device to send an SNMP trap.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Port security (Wizard)]

The *Wizard* window helps you to connect the ports with one or more desired sources. After you specify the settings, click the *Finish* button.



NOTE: The device saves the sources connected with the port until you deactivate the checking of the source on the relevant port or in the *Operation* frame.

After closing the *Wizard* window, click the button to save your settings.



[Port security (Wizard) – Select port]

Port	<p>Specifies the port that you assign to the sender in the next step.</p>
------	---

[Port security (Wizard) – Addresses]

VLAN ID	<p>Specifies the VLAN ID of the desired source.</p> <p>Possible values:</p> <p>▶ 1..4042</p> <p>To transfer the VLAN ID and the MAC address to the <i>Static entries (x/y)</i> field, click the <i>Add</i> button.</p>
MAC address	<p>Specifies the MAC address of the desired source.</p> <p>Possible values:</p> <p>▶ Valid Unicast MAC address Specify the value with a colon separator, for example 00:11:22:33:44:55.</p> <p>To transfer the VLAN ID and the MAC address to the <i>Static entries (x/y)</i> field, click the <i>Add</i> button.</p>
Add	<p>Transfers the values specified in the <i>VLAN ID</i> and <i>MAC address</i> fields to the <i>Static entries (x/y)</i> field.</p>
Static entries (x/y)	<p>Displays the VLAN ID and MAC address of desired senders connected to the port.</p> <p>The device uses this field to display the number of senders connected to the port and the upper limit. You specify the upper limit for the number of entries in the table, <i>Static limit</i> field.</p> <p>NOTE: You cannot assign a MAC address that you assign to this port to any other port.</p>
Remove	<p>Removes the entries highlighted in the <i>Static entries (x/y)</i> field.</p>
	<p>Moves the entries highlighted in the <i>Dynamic entries</i> field to the <i>Static entries (x/y)</i> field.</p>
	<p>Moves every entry from the <i>Dynamic entries</i> field to the <i>Static entries (x/y)</i> field.</p> <p>When the <i>Dynamic entries</i> field contains more entries than are allowed in the <i>Static entries (x/y)</i> field, the device moves the foremost entries until the upper limit is reached.</p>
Dynamic entries	<p>Displays in ascending order the VLAN ID and MAC address of the senders automatically recorded on this port. The device transmits data packets from these senders when receiving the data packets on this port.</p> <p>The prerequisites for the device to display MAC addresses are:</p> <ul style="list-style-type: none">• The <i>Port Security</i> function is enabled. See the <i>Operation</i> frame.• The device checks every data packet received on the port. The checkbox in the <i>Active</i> column is selected.

You specify the upper limit for the number of entries in the table, *Dynamic limit* field.

The  and  buttons allow you to transfer entries from this field into the *Static entries (x/y)* field. In this way, you connect the relevant senders with the port.

802.1X Port Authentication

[Network Security > 802.1X Port Authentication]

With the port-based access control according to IEEE 802.1X, the device monitors the access to the network from connected end devices. The device (authenticator) lets an end device (supplicant) have access to the network if it logs in with valid login data. The authenticator and the end devices communicate via the EAPoL (Extensible Authentication Protocol over LANs) authentication protocol.

The device supports the following methods to authenticate end devices:

- ▶ *radius*
A RADIUS server in the network authenticates the end devices.
- ▶ *ias*
The Integrated Authentication Server (IAS) implemented in the device authenticates the end devices. Compared to RADIUS, the IAS provides only basic functions.

The menu contains the following dialogs:

- ▶ *802.1X Global*
- ▶ *802.1X Port Configuration*
- ▶ *802.1X Port Clients*
- ▶ *802.1X EAPoL Port Statistics*
- ▶ *802.1X Port Authentication History*
- ▶ *802.1X Integrated Authentication Server*

802.1X Global

[Network Security > 802.1X Port Authentication > Global]

This dialog lets you specify basic settings for the port-based access control.

Operation

Operation

Enables/disables the *802.1X Port Authentication* function.

Possible values:

- ▶ *On*
The *802.1X Port Authentication* function is enabled.
The device checks the access to the network from connected end devices.
The port-based access control is enabled.
- ▶ *Off* (default setting)
The *802.1X Port Authentication* function is disabled.
The port-based access control is disabled.

Configuration

VLAN assignment

Activates/deactivates the assigning of the relevant port to a VLAN. This function lets you provide selected services to the connected end device in this VLAN.

Possible values:

- ▶ *selected*
The assigning is active.
If the end device successfully authenticates itself, then the device assigns to the relevant port the VLAN ID transferred by the RADIUS authentication server.
- ▶ *cleared* (default setting)
The assigning is inactive.
The relevant port is assigned to the VLAN specified in the *Network Security > 802.1X Port Authentication > Port Configuration* dialog, *Assigned VLAN ID* row.

Dynamic VLAN creation

Activates/deactivates the automatic creation of the VLAN assigned by the RADIUS authentication server if the VLAN does not exist.

Possible values:

- ▶ *selected*
The automatic VLAN creation is active.
The device creates the VLAN if it does not exist.
- ▶ *cleared* (default setting)
The automatic VLAN creation is inactive.
If the assigned VLAN does not exist, then the port remains assigned to the original VLAN.

Monitor mode

Activates/deactivates the monitor mode.

Possible values:

- ▶ *selected*
The monitor mode is active.
The device monitors the authentication and helps with diagnosing detected errors. If an end device has not logged in successfully, then the device gives the end device access to the network.
- ▶ *cleared* (default setting)
The monitor mode is inactive.

Information

Monitor mode clients	<p>Displays to how many end devices the device gave network access even though they did not log in successfully.</p> <p>The prerequisite is that you activate the <i>Monitor mode</i> function. See the <i>Configuration</i> frame.</p>
Non monitor mode clients	<p>Displays the number of end devices to which the device gave network access after successful login.</p>
Policy 1	<p>Displays the method that the device uses to authenticate the end devices using IEEE 802.1X.</p> <p>You specify the method used in the <i>Device Security > Authentication List</i> dialog.</p> <ul style="list-style-type: none"><input type="checkbox"/> To authenticate the end devices through a RADIUS server, you assign the <i>radius</i> policy to the <i>8021x</i> list.<input type="checkbox"/> To authenticate the end devices through the Integrated Authentication Server (IAS) you assign the <i>ias</i> policy to the <i>8021x</i> list.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

802.1X Port Configuration

[Network Security > 802.1X Port Authentication > Port Configuration]

This dialog lets you specify the access settings for every port.

Table

Port	Displays the port number.
------	---------------------------

Port initialization	<p>Activates/deactivates the port initialization in order to activate the access control on the port or reset it to its initial state. Use this function only on ports in which the <i>Port control</i> column contains the value <i>auto</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The port initialization is active. When the initialization is complete, the device changes the value to <i>cleared</i> again.▶ <i>cleared</i> (default setting) The port initialization is inactive. The device keeps the port status.
Port reauthentication	<p>Activates/deactivates the one-time reauthentication request.</p> <p>Use this function only on ports in which the <i>Port control</i> column contains the value <i>auto</i>.</p> <p>The device also lets you periodically request the end device to log in again. See the <i>Periodic reauthentication</i> column.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The one-time reauthentication request is active. The device requests the end device to log in again. Afterwards, the device changes the value to <i>cleared</i> again.▶ <i>cleared</i> (default setting) The one-time reauthentication request is inactive. The device keeps the end device logged in.
Authentication activity	<p>Displays the status of the Authenticator (<i>Authenticator PAE state</i>).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>initialize</i>▶ <i>disconnected</i>▶ <i>connecting</i>▶ <i>authenticating</i>▶ <i>authenticated</i>▶ <i>aborting</i>▶ <i>held</i>▶ <i>forceAuth</i>▶ <i>forceUnauth</i>
Backend authentication state	<p>Displays the status of the connection to the authentication server (<i>Backend Authentication state</i>).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>request</i>▶ <i>response</i>▶ <i>success</i>▶ <i>fail</i>▶ <i>timeout</i>▶ <i>idle</i>▶ <i>initialize</i>

Authentication state	<p>Displays the status of the authentication on the port (Controlled Port Status).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ authorized The end device is logged in successfully.▶ unauthorized The end device is not logged in.
Port control	<p>Specifies how the device grants access to the network (Port control mode).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ forceUnauthorized The device blocks the access to the network. You use this setting if an end device is connected to the port that does not receive access to the network.▶ auto The device grants access to the network if the end device logged in successfully. You use this setting if an end device is connected to the port that logs in at the authenticator. <p>NOTE: If other end devices are connected through the same port, then they get access to the network without additional authentication.</p> <ul style="list-style-type: none">▶ forceAuthorized (default setting) When end devices do not support IEEE 802.1X, the device grants access to the network. You use this setting if an end device is connected to the port that receives access to the network without logging in.

Quiet period [s]	<p>Specifies the time period in seconds in which the authenticator does not accept any more logins from the end device after an unsuccessful login attempt (<i>Quiet period [s]</i>).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..65535 (default setting: 60)
Transmit period [s]	<p>Specifies the period in seconds after which the authenticator requests the end device to log in again. After this waiting period, the device sends an EAP request/identity data packet to the end device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 30)
Supplicant timeout period [s]	<p>Specifies the period in seconds for which the authenticator waits for the login of the end device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 30)
Server timeout [s]	<p>Specifies the period in seconds for which the authenticator waits for the response from the authentication server (RADIUS or IAS).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 30)
Requests (max.)	<p>Specifies how many times the authenticator requests the end device to log in until the time specified in the <i>Supplicant timeout period [s]</i> column has elapsed. The device sends an EAP request/identity data packet to the end device as often as specified here.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..10 (default setting: 2)
Assigned VLAN ID	<p>Displays the ID of the VLAN that the authenticator assigned to the port. This value applies only on ports in which the <i>Port control</i> column contains the value <i>auto</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..4042 (default setting: 0) <p>You find the VLAN ID that the authenticator assigned to the ports in the <i>Network Security > 802.1X Port Authentication > Port Clients</i> dialog.</p>
Assignment reason	<p>Displays the cause for the assignment of the VLAN ID. This value applies only on ports in which the <i>Port control</i> column contains the value <i>auto</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>notAssigned</i> (default setting)▶ <i>radius</i>▶ <i>guestVlan</i>▶ <i>unauthenticatedVlan</i> <p>You find the VLAN ID that the authenticator assigned to the ports for a supplicant in the <i>Network Security > 802.1X Port Authentication > Port Clients</i> dialog.</p>

Reauthentication period [s]	<p>Specifies the period in seconds after which the authenticator periodically requests the end device to log in again.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 3600)
Periodic reauthentication	<p>Activates/deactivates periodic reauthentication requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The periodic reauthentication requests are active. The device periodically requests the end device to log in again. You specify this time period in the <i>Reauthentication period [s]</i> column. If the authenticator assigned the ID of a Voice VLAN, Unauthenticated VLAN or Guest VLAN to the end device, then this setting becomes ineffective.▶ <i>cleared</i> (default setting) The periodic reauthentication requests are inactive. The device keeps the end device logged in.
Guest VLAN ID	<p>Specifies the ID of the VLAN that the authenticator assigns to the port if the end device does not log in during the time period specified in the <i>Guest VLAN period</i> column. This value applies only on ports in which the <i>Port control</i> column contains the value <i>auto</i>.</p> <p>This function lets you grant end devices, without IEEE 802.1X support, access to selected services in the network.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 (default setting) The authenticator does not assign a Guest VLAN to the port.▶ 1..4042 <p>NOTE: The <i>MAC authorized bypass</i> function and the <i>Guest VLAN ID</i> function cannot be in use simultaneously.</p>
Guest VLAN period	<p>Specifies the period in seconds for which the authenticator waits for EAPOL data packets after the end device is connected. If this period elapses, then the authenticator grants the end device access to the network and assigns the port to the Guest VLAN specified in the <i>Guest VLAN ID</i> column.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..300 (default setting: 90)
Unauthenticated VLAN ID	<p>Specifies the ID of the VLAN that the authenticator assigns to the port if the end device does not log in successfully. This value applies only on ports in which the <i>Port control</i> column contains the value <i>auto</i>.</p> <p>This function lets you grant end devices without valid login data access to selected services in the network.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..4042 (default setting: 0) <p>The effect of the value 0 is that the authenticator does not assign a Unauthenticated VLAN to the port.</p> <p>NOTE: Assign to the port a VLAN set up statically in the device.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

802.1X Port Clients

[Network Security > 802.1X Port Authentication > Port Clients]

This dialog displays information on the connected end devices.

Table

Port	Displays the port number.
User name	Displays the user name with which the end device logged in.
MAC address	Displays the MAC address of the end device.
Filter ID	<p>Displays the name of the filter list that the RADIUS authentication server assigned to the end device after successful authentication.</p> <p>The authentication server transfers the filter ID attributes in the Access Accept data packet.</p>
Assigned VLAN ID	Displays the VLAN ID that the authenticator assigned to the port after the successful authentication of the end device.
Assignment reason	<p>Displays the reason for the assignment of the VLAN.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>default</i>▶ <i>radius</i>▶ <i>unauthenticatedVlan</i>▶ <i>guestVlan</i>▶ <i>monitorVlan</i>▶ <i>invalid</i> <p>The field only displays a valid value as long as the client is authenticated.</p>

Session timeout	<p>Displays the remaining time in seconds until the login of the end device expires. This value applies only if for the port in the Network Security > 802.1X Port Authentication > Port Configuration dialog, <i>Port control</i> column the value <i>auto</i> is specified.</p> <p>The authentication server assigns the timeout period to the device through RADIUS. The value <i>0</i> means that the authentication server has not assigned a timeout.</p>
Termination action	<p>Displays the action performed by the device when the login has elapsed.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>default</i>▶ <i>reauthenticate</i>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

802.1X EAPOL Port Statistics

[Network Security > 802.1X Port Authentication > Statistics]

This dialog displays which EAPOL data packets the end device has sent and received for the authentication of the end devices.

Table

Port	Displays the port number.
Received packets	Displays the total number of EAPOL data packets that the device received on the port.
Transmitted packets	Displays the total number of EAPOL data packets that the device sent on the port.
Start packets	Displays the number of EAPOL start data packets that the device received on the port.
Logoff packets	Displays the number of EAPOL logoff data packets that the device received on the port.
Response/ID packets	Displays the number of EAP response/identity data packets that the device received on the port.

Response packets	Displays the number of valid EAP response data packets that the device received on the port (without EAP response/identity data packets).
Request/ID packets	Displays the number of EAP request/identity data packets that the device received on the port.
Request packets	Displays the number of valid EAP request data packets that the device received on the port (without EAP request/identity data packets).
Invalid packets	Displays the number of EAPOL data packets with an undefined frame type that the device received on the port.
Received error packets	Displays the number of EAPOL data packets with an invalid packet body length field that the device received on the port.
Packet version	Displays the protocol version number of the EAPOL data packet that the device last received on the port.
Source of last received packet	<p>Displays the sender MAC address of the EAPOL data packet that the device last received on the port.</p> <p>The value <code>00:00:00:00:00:00</code> means that the port has not received any EAPOL data packets yet.</p>

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

802.1X Port Authentication History

[Network Security > 802.1X Port Authentication > Port Authentication History]

The device registers the authentication process of the end devices that are connected to its ports. This dialog displays the information recorded during the authentication.

Table

Port	Displays the port number.
Authentication time stamp	Displays the time at which the authenticator authenticated the end device.
Result age	Displays since when this entry has been entered in the table.

MAC address	Displays the MAC address of the end device.
VLAN ID	Displays the ID of the VLAN that was assigned to the end device before the login.
Authentication status	Displays the status of the authentication on the port. Possible values: <ul style="list-style-type: none">▶ <i>success</i> The authentication was successful.▶ <i>failure</i> The authentication did not succeed.
Access status	Displays if the device grants the end device access to the network. Possible values: <ul style="list-style-type: none">▶ <i>granted</i> The device grants the end device access to the network.▶ <i>denied</i> The device denies the end device access to the network.
Assigned VLAN ID	Displays the ID of the VLAN that the authenticator assigned to the port.
Assignment type	Displays the type of the VLAN that the authenticator assigned to the port. Possible values: <ul style="list-style-type: none">▶ <i>default</i>▶ <i>radius</i>▶ <i>unauthenticatedVlan</i>▶ <i>guestVlan</i>▶ <i>monitorVlan</i>▶ <i>notAssigned</i>
Assignment reason	Displays the reason for the assignment of the VLAN ID and the VLAN type.

802.1X Port Authentication History

Port	Simplifies the table and displays only the entries relating to the port selected here. This makes it easier for you to record the table and sort it as you desire. Possible values: <ul style="list-style-type: none">▶ <i>all</i> The table displays the entries for every port.▶ <i><Port number></i> The table displays the entries that apply to the port selected here.
------	--

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

802.1X Integrated Authentication Server


[Network Security > 802.1X Port Authentication > Integrated Authentication Server]

The Integrated Authentication Server (IAS) lets you authenticate end devices using IEEE 802.1X. Compared to RADIUS, the IAS has a very limited range of functions. The authentication is based only on the user name and the password.

In this dialog you manage the login data of the end devices. The device lets you set up to 100 sets of login data.

To authenticate the end devices through the Integrated Authentication Server you assign in the *Device Security > Authentication List* dialog the `ias` policy to the 8021x list.

Table

User name	<p>Displays the user name of the end device.</p> <p>To create a new user, click the  button.</p>
Password	<p>Specifies the password with which the user authenticates.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 0..64 characters <p>The device differentiates between upper and lower case.</p>
Active	<p>Activates/deactivates the login data.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> The login data is active. An end device has the option of logging in through IEEE 802.1X using this login data.▶ <code>cleared</code> (default setting) The login data is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

RADIUS

[Network Security > RADIUS]

With its factory settings, the device authenticates users based on the local user management. However, as the size of a network increases, it becomes more difficult to keep the login data of the users consistent across the devices.

RADIUS (Remote Authentication Dial-In User Service) lets you authenticate and authorize the users at a central point in the network. A RADIUS server performs the following tasks here:

- ▶ **Authentication**
The authentication server authenticates the users when the RADIUS client at the access point forwards the login data of the users to the server.
- ▶ **Authorization**
The authentication server authorizes logged in users for selected services by assigning various parameters for the relevant end device to the RADIUS client at the access point.
- ▶ **Accounting**
The accounting server records the traffic data that has occurred during the port authentication according to IEEE 802.1X. This enables you to subsequently determine which services the users have used, and to what extent.

If you assign the `radius` policy to an application in the *Device Security > Authentication List* dialog, then the device operates in the role of the RADIUS client. The device forwards the users' login data to the primary authentication server. The authentication server decides if the login data is valid and transfers the user's authorizations to the device.

The device assigns the Service Type transferred in the response of a RADIUS server as follows to a user role existing in the device:

- `Administrative-User: administrator`
- `Login-User: operator`
- `NAS-Prompt-User: guest`

The device also lets you authenticate end devices with IEEE 802.1X through an authentication server. To do this, you assign the `radius` policy to the `8021x` list in the *Device Security > Authentication List* dialog.

The menu contains the following dialogs:

- ▶ [RADIUS Global](#)
- ▶ [RADIUS Authentication Server](#)
- ▶ [RADIUS Accounting Server](#)
- ▶ [RADIUS Authentication Statistics](#)
- ▶ [RADIUS Accounting Statistics](#)

RADIUS Global

[Network Security > RADIUS > Global]

This dialog lets you specify basic settings for RADIUS.

RADIUS configuration

Retransmits (max.)	<p>Specifies how many times the device retransmits an unanswered request to the authentication server before the device sends the request to an alternative authentication server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..15 (default setting: 4)
Timeout [s]	<p>Specifies how many seconds the device waits for a response after a request to an authentication server before it retransmits the request.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..30 (default setting: 5)
Accounting	<p>Activates/deactivates the accounting.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Accounting is active. The device sends the traffic data to an accounting server specified in the Network Security > RADIUS > Accounting Server dialog.▶ cleared (default setting) Accounting is inactive.
NAS IP address (attribute 4)	<p>Specifies the IP address that the device transfers to the authentication server as attribute 4. Specify the IP address of the device or another available address.</p> <p>NOTE: The device only includes the attribute 4 if the packet was triggered by the 802.1X authentication request of an end device (supplicant).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address (default setting: 0.0.0.0) <p>In many cases, there is a firewall between the device and the authentication server. In the Network Address Translation (NAT) in the firewall changes the original IP address, and the authentication server receives the translated IP address of the device.</p> <p>The device transfers the IP address in this field unchanged across the Network Address Translation (NAT).</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	<p>Deletes the statistics in the Network Security > RADIUS > Authentication Statistics dialog and in the Network Security > RADIUS > Accounting Statistics dialog.</p>
-------	--

RADIUS Authentication Server

[Network Security > RADIUS > Authentication Server]

This dialog lets you specify up to 8 authentication servers. An authentication server authenticates and authorizes the users when the device forwards the login data to the server.

The device sends the login data to the specified primary authentication server. When the server does not respond, the device contacts the specified authentication server that is highest in the table. When no response comes from this server either, the device contacts the next server in the table.

Table

Index	Displays the index number to which the table entry relates.
Name	<p>Displays the name of the server.</p> <p>To change the value, click the relevant field.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 1..32 characters (default setting: <code>Default-RADIUS-Server</code>)
Address	<p>Specifies the IP address of the server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
Destination UDP port	<p>Specifies the number of the UDP port on which the server receives requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>0..65535</code> (default setting: <code>1812</code>) Exception: Port <code>2222</code> is reserved for internal functions.
Secret	<p>Displays <code>*****</code> (asterisks) when you specify a password with which the device logs in to the server. To change the password, click the relevant field.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 1..64 characters <p>You get the password from the administrator of the authentication server.</p>

Primary server

Specifies the authentication server as primary or secondary.

Possible values:

- ▶ **selected**
The server is specified as the primary authentication server. The device sends the login data for authenticating the users to this authentication server. When you activate multiple servers, the device specifies the last server activated as the primary authentication server.
- ▶ **cleared** (default setting)
The server is the secondary authentication server. When the device does not receive a response from the primary authentication server, the device sends the login data to the secondary authentication server.

Active

Activates/deactivates the connection to the server.

The device uses the server, if you specify in the *Device Security > Authentication List* dialog the value **radius** in one of the rows *Policy 1* to *Policy 5*.

Possible values:

- ▶ **selected** (default setting)
The connection is active. The device sends the login data for authenticating the users to this server if the preconditions named above are fulfilled.
- ▶ **cleared**
The connection is inactive. The device does not send any login data to this server.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Opens the *Create* window to add a new entry to the table.

- ▶ In the *Index* field, you specify the index number.
- ▶ In the *Address* field, you specify the IP address of the server.

RADIUS Accounting Server

[Network Security > RADIUS > Accounting Server]

This dialog lets you specify up to 8 accounting servers. An accounting server records the traffic data that has occurred during the port authentication according to IEEE 802.1X. The prerequisite is that you activate in the *Network Security > RADIUS > Global* menu the *Accounting* function.

The device sends the traffic data to the first accounting server that can be reached. When the accounting server does not respond, the device contacts the next server in the table.

Table

Index	<p>Displays the index number to which the table entry relates.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..8
Name	<p>Displays the name of the server.</p> <p>To change the value, click the relevant field.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 1..32 characters (default setting: <code>Default-RADIUS-Server</code>)
Address	<p>Specifies the IP address of the server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
Destination UDP port	<p>Specifies the number of the UDP port on which the server receives requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..65535 (default setting: 1813) Exception: Port 2222 is reserved for internal functions.
Secret	<p>Displays ***** (asterisks) when you specify a password with which the device logs in to the server. To change the password, click the relevant field.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 1..16 characters <p>You get the password from the administrator of the authentication server.</p>
Active	<p>Activates/deactivates the connection to the server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) The connection is active. The device sends traffic data to this server if the preconditions named above are fulfilled.▶ <code>cleared</code> The connection is inactive. The device does not send any traffic data to this server.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).



Opens the `Create` window to add a new entry to the table.

- ▶ In the `Index` field, you specify the index number.
- ▶ In the `Address` field, you specify the IP address of the server.

RADIUS Authentication Statistics

[Network Security > RADIUS > Authentication Statistics]

This dialog displays information about the communication between the device and the authentication server. The table displays the information for each server in a separate row.

To delete the statistic, click in the *Network Security > RADIUS > Global* dialog the  button and then the *Reset* item.

Table

Name	Displays the name of the server.
Address	Displays the IP address of the server.
Round trip time	Displays the time interval in hundredths of a second between the last response received from the server (Access Reply/Access Challenge) and the corresponding data packet sent (Access Request).
Access requests	Displays the number of access data packets that the device sent to the server. This value does not take repetitions into account.
Retransmitted access-request packets	Displays the number of access data packets that the device retransmitted to the server.
Access accepts	Displays the number of access accept data packets that the device received from the server.
Access rejects	Displays the number of access reject data packets that the device received from the server.
Access challenges	Displays the number of access challenge data packets that the device received from the server.
Malformed access responses	Displays the number of malformed access response data packets that the device received from the server (including data packets with an invalid length).
Bad authenticators	Displays the number of access response data packets with an invalid authenticator that the device received from the server.
Pending requests	Displays the number of access request data packets that the device sent to the server to which it has not yet received a response from the server.
Timeouts	Displays how many times no response to the server was received before the specified waiting time elapsed.

Unknown types	Displays the number of data packets with an undefined data type that the device received from the server on the authentication port.
Packets dropped	Displays the number of data packets that the device received from the server on the authentication port and then discarded them.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

RADIUS Accounting Statistics

[Network Security > RADIUS > Accounting Statistics]

This dialog displays information about the communication between the device and the accounting server. The table displays the information for each server in a separate row.

To delete the statistic, click in the *Network Security > RADIUS > Global* dialog the  button and then the *Reset* item.

Table

Name	Displays the name of the server.
Address	Displays the IP address of the server.
Round trip time	Displays the time interval in hundredths of a second between the last response received from the server (Accounting Response) and the corresponding data packet sent (Accounting Request).
Accounting-request packets	Displays the number of accounting request data packets that the device sent to the server. This value does not take repetitions into account.
Retransmitted accounting-request packets	Displays the number of accounting request data packets that the device retransmitted to the server.
Received packets	Displays the number of accounting response data packets that the device received from the server.
Malformed packets	Displays the number of malformed accounting response data packets that the device received from the server (including data packets with an invalid length).

Bad authenticators	Displays the number of accounting response data packets with an invalid authenticator that the device received from the server.
Pending requests	Displays the number of accounting request data packets that the device sent to the server to which it has not yet received a response from the server.
Timeouts	Displays how many times no response to the server was received before the specified waiting time elapsed.
Unknown types	Displays the number of data packets with an undefined data type that the device received from the server on the accounting port.
Packets dropped	Displays the number of data packets that the device received from the server on the accounting port and then discarded them.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

DoS

[Network Security > DoS]

Denial of Service (DoS) is a cyber-attack that aims to bring down specific services or devices. In this dialog you can set up several filters to help protect the device itself and other devices in the network from DoS attacks.

The menu contains the following dialogs:

- ▶ [DoS Global](#)

DoS Global

[Network Security > DoS > Global]

In this dialog you specify the DoS settings for the TCP/UDP, IP and ICMP protocols.

TCP/UDP

A scanner uses port scans to prepare network attacks. The scanner uses different techniques to determine running devices and open ports. This frame lets you activate filters for specific scanning techniques.

The device supports the detection of the following scan types:

- ▶ Null scans
- ▶ Xmas scans
- ▶ SYN/FIN scans
- ▶ TCP Offset attacks
- ▶ TCP SYN attacks
- ▶ L4 Port attacks
- ▶ Minimal Header scans

Null Scan filter

Activates/deactivates the Null Scan filter.

The device detects and discards incoming TCP packets with the following properties:

- ▶ No TCP flags are set.
- ▶ The TCP sequence number is 0.

Possible values:

- ▶ `selected`
The filter is active.
- ▶ `cleared` (default setting)
The filter is inactive.

Xmas filter

Activates/deactivates the Xmas filter.

The device detects and discards incoming TCP packets with the following properties:

- ▶ The TCP flags *FIN*, *URG* and *PSH* are simultaneously set.
- ▶ The TCP sequence number is 0.

Possible values:

- ▶ `selected`
The filter is active.
- ▶ `cleared` (default setting)
The filter is inactive.

SYN/FIN filter

Activates/deactivates the SYN/FIN filter.

The device detects incoming data packets with the TCP flags *SYN* and *FIN* set simultaneously and discards them.

Possible values:

- ▶ `selected`
The filter is active.
- ▶ `cleared` (default setting)
The filter is inactive.

TCP Offset protection

Activates/deactivates the TCP Offset protection.

The TCP Offset protection detects incoming TCP data packets whose fragment offset field of the IP header is equal to 1 and discards them.

The TCP Offset protection accepts UDP and ICMP packets whose fragment offset field of the IP header is equal to 1.

Possible values:

- ▶ `selected`
The protection is active.
- ▶ `cleared` (default setting)
The protection is inactive.

TCP SYN protection

Activates/deactivates the TCP SYN protection.

The TCP SYN protection detects incoming data packets with the TCP flag SYN set and a L4 source port < 1024 and discards them.

Possible values:

- ▶ `selected`
The protection is active.
- ▶ `cleared` (default setting)
The protection is inactive.

L4 Port protection

Activates/deactivates the L4 Port protection.

The L4 Port protection detects incoming TCP and UDP data packets whose source port number and destination port number are identical and discards them.

Possible values:

- ▶ `selected`
The protection is active.
- ▶ `cleared` (default setting)
The protection is inactive.

Min. Header Size filter

Activates/deactivates the Minimal Header filter.

The Minimal Header filter compares the TCP header of incoming data packets. If the data offset value multiplied by 4 is smaller than the minimum TCP header size, then the filter discards the data packet.

Possible values:

- ▶ `selected`
The filter is active.
- ▶ `cleared` (default setting)
The filter is inactive.

Min. TCP header size

Displays the minimum size of a valid TCP header.

IP

This frame lets you activate or deactivate the Land Attack filter. With the land attack method, the attacking station sends data packets whose source and destination addresses are identical to those of the recipient. When you activate this filter, the device detects data packets with identical source and destination addresses and discards these data packets.

Land Attack filter

Activates/deactivates the Land Attack filter.

The Land Attack filter detects incoming IP data packets whose source and destination IP address are identical and discards them.

Possible values:

- ▶ **selected**
The filter is active.
- ▶ **cleared** (default setting)
The filter is inactive.

ICMP

This dialog provides you with filter options for the following ICMP parameters:

- ▶ Fragmented data packets
- ▶ ICMP packets from a specific size upwards

Filter fragmented packets

Activates/deactivates the filter for fragmented ICMP packets.

The filter detects fragmented ICMP packets and discards them.

Possible values:

- ▶ **selected**
The filter is active.
- ▶ **cleared** (default setting)
The filter is inactive.

Filter by packet size

Activates/deactivates the filter for incoming ICMP packets.

The filter detects ICMP packets whose payload size exceeds the size specified in the *Allowed payload size [byte]* field and discards them.

Possible values:

- ▶ **selected**
The filter is active.
- ▶ **cleared** (default setting)
The filter is inactive.

Allowed payload size [byte]

Specifies the maximum allowed payload size of ICMP packets in bytes.

Mark the *Filter by packet size* checkbox if you want the device to discard incoming data packets whose payload size exceeds the maximum allowed size for ICMP packets.

Possible values:

▶ 0..1472 (default setting: 512)

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Switching

The menu contains the following dialogs:

- ▶ Switching Global
- ▶ Rate Limiter
- ▶ Filter for MAC Addresses
- ▶ IGMP Snooping
- ▶ MRP-IEEE
- ▶ QoS/Priority
- ▶ VLAN
- ▶ L2-Redundancy

Switching Global

[Switching > Global]

This dialog lets you specify the following settings:

- ▶ Change the Aging time of the address table
- ▶ Enable the flow control in the device
- ▶ Enable the VLAN Unaware Mode

If a large number of data packets are received in the priority queue of a port at the same time, then this can cause the port memory to overflow. This happens, for example, when the device receives data on a Gigabit port and forwards it to a port with a lower bandwidth. The device discards surplus data packets.

The flow control mechanism described in standard IEEE 802.3 helps ensure that no data packets are lost due to a port memory overflowing. Shortly before a port memory is completely full, the device signals to the connected devices that it is not accepting any more data packets from them.

- ▶ In full-duplex mode, the device sends a pause data packet.
- ▶ In half-duplex mode, the device simulates a collision.

Then the connected devices do not send any more data packets for as long as the signaling takes. On uplink ports, this can possibly cause undesired sending breaks in the higher-level network segment (“wandering backpressure”).

According to standard IEEE 802.1Q, the device forwards data packets with a VLAN tag in a VLAN ≥ 1 . However, a few applications on connected end devices send or receive data packets with a VLAN ID=0. When the device receives one of these data packets, before forwarding it, the device overwrites the original value in the data packet with the VLAN ID of the receiving port. If you activate the VLAN Unaware Mode, then this deactivates the VLAN settings in the device. The device then transparently forwards the data packets and evaluates the priority information contained only in the data packet.

Configuration

MAC address

Displays the MAC address of the device.

Aging time [s]	<p>Specifies the aging time in seconds.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 10..500000 (default setting: 30) <p>The device monitors the age of the learned unicast MAC addresses. The device deletes address entries that exceed a particular age (aging time) from its address table.</p> <p>You find the address table in the Switching > Filter for MAC Addresses dialog.</p>
Flow control	<p>Activates/deactivates the flow control in the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The flow control is active in the device. Additionally activate the flow control on the required ports. See the Basic Settings > Port dialog, Configuration tab, checkbox in the Flow control column.▶ cleared (default setting) The flow control is inactive in the device. <p>If you are using a redundancy function, then deactivate the flow control on the participating ports. If the flow control and the redundancy function are active at the same time, it is possible that the redundancy function operates differently than intended.</p>
VLAN unaware mode	<p>Activates/deactivates the VLAN unaware mode.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The VLAN unaware mode is active. The device works in the VLAN Unaware bridging mode (IEEE 802.1Q):<ul style="list-style-type: none">– The device ignores the VLAN settings in the device and the VLAN tags in the data packets. The device transmits the data packets based on their destination MAC address or destination IP address in VLAN 1.– The device ignores the VLAN settings specified in the Switching > VLAN > Configuration and Switching > VLAN > Port dialogs. Every port is assigned to VLAN 1.– The device evaluates the priority information contained in the data packet.▶ cleared (default setting) The VLAN unaware mode is inactive. The device works in the VLAN-aware bridging mode (IEEE 802.1Q):<ul style="list-style-type: none">– The device evaluates the VLAN tags in the data packets.– The device transmits the data packets based on their destination MAC address or destination IP address in the corresponding VLAN.– The device evaluates the priority information contained in the data packet. <p>NOTE: You specify the VLAN ID 1 for every function in the device which uses VLAN settings. Among other things, this applies to static filters, MRP and IGMP Snooping.</p>

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Rate Limiter

[Switching > Rate Limiter]

The device lets you limit the traffic on the ports in order to help provide stable operation even with a large traffic volume. If the traffic on a port exceeds the traffic value entered, then the device discards the excess traffic on this port.

The rate limiter function operates only on Layer 2, and is used to limit the effects of storms of data packets that flood the device (typically Broadcasts).

The rate limiter function ignores protocol information on higher layers, such as IP or TCP.

The dialog contains the following tabs:

- ▶ [Ingress]
- ▶ [Egress]

[Ingress]

In this tab you enable the *Rate Limiter* function. The threshold value specifies the maximum amount of traffic the port receives. If the traffic on this port exceeds the threshold value, then the device discards the excess traffic on this port.

Table

Port	Displays the port number.
Threshold	<p>Specifies the threshold value for broadcast, multicast, and unicast traffic on this port:</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 0 (default setting) The <i>Rate Limiter</i> function is deactivated on this port. ▶ 1..24414 at 100 Mbit/s 1..244140 at 1000 Mbit/s <ul style="list-style-type: none"> <input type="checkbox"/> If the value <i>percent</i> is specified in the <i>Threshold unit</i> column, then specify a percentage value between 1 and 100. <input type="checkbox"/> If the value <i>pps</i> is specified in the <i>Threshold unit</i> column, then specify an absolute value. The rate limiter function calculates the threshold based on 512-byte-sized packets.

NOTE: The operating modes actually available depend on the device configuration.

Threshold unit	<p>Specifies the unit for the threshold value:</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>percent</code> (default setting) Specifies the threshold value as a percentage of the data rate of the port.▶ <code>pps</code> Specifies the threshold value in data packets per second.
Broadcast mode	<p>Activates/deactivates the rate limiter function for received broadcast data packets.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code> (default setting) <p>If the threshold value is exceeded, then the device discards the excess broadcast data packets on this port.</p>
Multicast mode	<p>Activates/deactivates the rate limiter function for received multicast data packets.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code> (default setting) <p>If the threshold value is exceeded, then the device discards the excess multicast data packets on this port.</p>
Unknown unicast mode	<p>Activates/deactivates the rate limiter function for received unicast data packets with an unknown destination address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code>▶ <code>cleared</code> (default setting) <p>If the threshold value is exceeded, then the device discards the excess unicast data packets on this port.</p>

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[Egress]

In this tab you specify the egress transmission rate on the port.

Table

Port	Displays the port number.
------	---------------------------

Bandwidth [%]	<p>Specifies the egress transmission rate.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 (default setting) The bandwidth limitation is disabled.▶ 1..100 The bandwidth limitation is enabled. This value specifies the percentage of overall link speed for the port in 1% increments.
---------------	---

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Filter for MAC Addresses

[Switching > Filter for MAC Addresses]

This dialog lets you display and edit address filters for the address table. Address filters specify the way the data packets are forwarded in the device based on the destination MAC address.

Each row in the table represents one filter. The device automatically sets up the filters. The device lets you set up additional filters manually.

The device transmits the data packets as follows:


- ▶ When the table contains an entry for the destination address of a data packet, the device transmits the data packet from the receiving port to the port specified in the table entry.
- ▶ When there is no table entry for the destination address, the device transmits the data packet from the receiving port to every other port.

Table

To delete the learned MAC addresses from the address table, click in the *Basic Settings > Restart* dialog the *Reset MAC address table* button.

Address	Displays the destination MAC address to which the table entry applies.
---------	--

VLAN ID	<p>Displays the ID of the VLAN to which the table entry applies.</p> <p>The device learns the MAC addresses for every VLAN separately (independent VLAN learning).</p>
---------	--

Status	<p>Displays how the device has set up the address filter.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>learned</i> Address filter set up automatically by the device based on received data packets. ▶ <i>permanent</i> Address filter set up manually. The address filter stays set up permanently. ▶ <i>IGMP</i> Address filter automatically set up by IGMP Snooping. ▶ <i>mgmt</i> MAC address of the device. The address filter is protected against changes. ▶ <i>MRP-MMRP</i> Multicast address filter automatically set up by MMRP.
<Port number>	<p>Displays how the corresponding port transmits data packets which it directs to the adjacent destination address.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>-</i> The port does not transmit any data packets to the destination address. ▶ <i>learned</i> The port transmits data packets to the destination address. The device created the filter automatically based on received data packets. ▶ <i>IGMP learned</i> The port transmits data packets to the destination address. The device created the filter automatically based on IGMP. ▶ <i>unicast static</i> The port transmits data packets to the destination address. A user created the filter. ▶ <i>multicast static</i> The port transmits data packets to the destination address. A user created the filter.
<h2 style="color: green; margin: 0;">Buttons</h2> <p>You find the description of the standard buttons in section “Buttons” on page 18.</p>	
	<p>Opens the <i>Create</i> window to add a new entry to the table.</p> <ul style="list-style-type: none"> ▶ In the <i>Address</i> field, you specify the destination MAC address. ▶ In the <i>VLAN ID</i> field, you specify the ID of the VLAN. ▶ In the <i>Port</i> field, you specify the port. <ul style="list-style-type: none"> – Select one port if the destination MAC address is a unicast address. – Select one or more ports if the destination MAC address is a multicast address. – Select no port to create a discard filter. The device discards data packets with the destination MAC address specified in the table entry.
Reset MAC address table	<p>Removes the MAC addresses from the forwarding table that have the value <i>learned</i> in the <i>Status</i> column.</p>

IGMP Snooping

[Switching > IGMP Snooping]

The Internet Group Management Protocol (IGMP) is a protocol for dynamically managing Multicast groups. The protocol describes the distribution of Multicast data packets between routers and end devices on Layer 3.

The device lets you use the IGMP Snooping function to also use the IGMP mechanisms on Layer 2:

- ▶ Without IGMP Snooping, the device transmits the Multicast data packets to every port.
- ▶ With the activated IGMP Snooping function, the device transmits the Multicast data packets only on ports to which Multicast receivers are connected. This reduces the network load. The device evaluates the IGMP data packets transmitted on Layer 3 and uses the information on Layer 2.

Activate the IGMP Snooping function not until the following conditions are fulfilled:

- ▶ There is a Multicast router in the network that creates IGMP queries (periodic queries).
- ▶ The devices participating in IGMP Snooping forward the IGMP queries.

The device links the IGMP reports with the entries in its address table. When a multicast receiver joins a multicast group, the device creates a table entry for this port in the [Switching > Filter for MAC Addresses](#) dialog. When the multicast receiver leaves the multicast group, the device removes the table entry.

The menu contains the following dialogs:

- ▶ [IGMP Snooping Global](#)
- ▶ [IGMP Snooping Configuration](#)
- ▶ [IGMP Snooping Enhancements](#)
- ▶ [IGMP Snooping Querier](#)
- ▶ [IGMP Snooping Multicasts](#)

IGMP Snooping Global

[Switching > IGMP Snooping > Global]

This dialog lets you enable the [IGMP Snooping](#) protocol in the device and also configure it for each port and each VLAN.

Operation

Operation

Enables/disables the *IGMP Snooping* function in the device.

Possible values:

- ▶ *On*
The *IGMP Snooping* function is enabled in the device according to RFC 4541 (Considerations for Internet Group Management Protocol (IGMP) and Multicast Listener Discovery (MLD) Snooping Switches).
- ▶ *Off* (default setting)
The *IGMP Snooping* function is disabled in the device.
The device transmits received query, report, and leave data packets without evaluating them. Received data packets with a Multicast destination address are transmitted to every port by the device.

Information

Multicast control packets processed

Displays the number of Multicast control data packets processed.

This statistic encompasses the following packet types:

- IGMP Reports
- IGMP Queries version V1
- IGMP Queries version V2
- IGMP Queries version V3
- IGMP Queries with an incorrect version
- PIM or DVMRP packets

The device uses the Multicast control data packets to create the address table for transmitting the Multicast data packets.

Possible values:

- ▶ $0..2^{31}-1$

You use the *Reset IGMP snooping data* button in the *Basic Settings > Restart* dialog or the command `clear igmp-snooping` using the Command Line Interface to reset the IGMP Snooping entries, including the counter for the processed multicast control data packets.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset IGMP snooping counters

Removes the IGMP Snooping entries and resets the counter in the *Information* frame to 0.

IGMP Snooping Configuration

[Switching > IGMP Snooping > Configuration]

This dialog lets you enable the *IGMP Snooping* function in the device and also configure it for each port and each VLAN.

The dialog contains the following tabs:

- ▶ [VLAN ID]
- ▶ [Port]

[VLAN ID]

In this tab you configure the *IGMP Snooping* function for every VLAN.

Table

VLAN ID	Displays the ID of the VLAN to which the table entry applies.
Active	<p>Activates/deactivates the <i>IGMP Snooping</i> function for this VLAN.</p> <p>The prerequisite is that the <i>IGMP Snooping</i> function is globally enabled.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> IGMP Snooping is activated for this VLAN. The VLAN has joined the Multicast data stream. ▶ <i>cleared</i> (default setting) IGMP Snooping is deactivated for this VLAN. The VLAN has left the Multicast data stream.
Group membership interval	<p>Specifies the time in seconds for which a VLAN from a dynamic Multicast group remains entered in the address table when the device does not receive any more report data packets from the VLAN.</p> <p>Specify a value larger than the value in the <i>Max. response time</i> column.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>2..3600</i> (default setting: 260)
Max. response time	<p>Specifies the time in seconds in which the members of a Multicast group respond to a query data packet. For their response, the members specify a random time within the response time. You thus help prevent the multicast group members from responding to the query at the same time.</p> <p>Specify a value smaller than the value in the <i>Group membership interval</i> column.</p>

Possible values:

- ▶ 1..25 (default setting: 10)

Fast leave admin mode

Activates/deactivates the Fast Leave function for this VLAN.

Possible values:

- ▶ **selected**
When the Fast Leave function is active and the device receives an IGMP Leave message from a multicast group, the device immediately removes the entry from its address table.
- ▶ **cleared** (default setting)
When the Fast Leave function is inactive, the device first sends MAC-based queries to the members of the multicast group and removes an entry when a VLAN does not send any more report messages.

MRP expiration time

Multicast Router Present Expiration Time. Specifies the time in seconds for which the device waits for a query on this port that belongs to a VLAN. When the port does not receive a query data packet, the device removes the port from the list of ports with connected multicast routers.

You have the option of configuring this parameter only if the port belongs to an existing VLAN.

Possible values:

- ▶ 0
unlimited timeout - no expiration time
- ▶ 1..3600 (default setting: 260)

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[Port]

In this tab you configure the *IGMP Snooping* function for every port.

Table

Port

Displays the port number.

Active

Activates/deactivates the *IGMP Snooping* function for this port.

The prerequisite is that the *IGMP Snooping* function is globally enabled.

	<p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) IGMP Snooping is active on this port. The device includes the port in the multicast data stream.▶ cleared IGMP Snooping is inactive on this port. The port left the multicast data stream.
Group membership interval	<p>Specifies the time in seconds for which a port, from a dynamic multicast group, remains entered in the address table when the device does not receive any more report data packets from the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 2..3600 (default setting: 260) <p>Specify the value larger than the value in the <i>Max. response time</i> column.</p>
Max. response time	<p>Specifies the time in seconds in which the members of a Multicast group respond to a query data packet. For their response, the members specify a random time within the response time. You thus help prevent the multicast group members from responding to the query at the same time.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..25 (default setting: 10) <p>Specify a value lower than the value in the <i>Group membership interval</i> column.</p>
MRP expiration time	<p>Specifies the Multicast Router Present Expiration Time. The MRP expiration time is the time in seconds for which the device waits for a query packet on this port. When the port does not receive a query data packet, the device removes the port from the list of ports with connected multicast routers.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 unlimited timeout - no expiration time▶ 1..3600 (default setting: 260)
Fast leave admin mode	<p>Activates/deactivates the Fast Leave function for this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected When the Fast Leave function is active and the device receives an IGMP Leave message from a multicast group, the device immediately removes the entry from its address table.▶ cleared (default setting) When the Fast Leave function is inactive, the device first sends MAC-based queries to the members of the multicast group and removes an entry when a port does not send any more report messages.

Static query port	<p>Activates/deactivates the <i>Static query port</i> mode.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> The <i>Static query port</i> mode is active. The port is a static query port in the VLANs that are set up. ▶ <i>cleared</i> (default setting) The <i>Static query port</i> mode is inactive. The port is not a static query port. The device transmits IGMP report messages to the port only if it receives IGMP queries.
VLAN IDs	Displays the ID of the VLANs to which the table entry applies.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

IGMP Snooping Enhancements

[Switching > IGMP Snooping > Snooping Enhancements]

This dialog lets you select a port for a VLAN ID and to configure the port.

Table

VLAN ID	Displays the ID of the VLAN to which the table entry applies.
<Port number>	<p>Displays for every VLAN set up in the device if the relevant port is a query port. Additionally, the field displays if the device transmits every Multicast stream in the VLAN to this port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ - The port is not a query port in this VLAN. ▶ <i>L</i>= Learned The device detected the port as a query port because the port received IGMP queries in this VLAN. The port is not a statically configured query port. ▶ <i>A</i>= Automatic The device detected the port as a query port. The prerequisite is that you configure the port as <i>Learn by LLDP</i>. ▶ <i>s</i>= Static (manual setting) A user specified the port as a static query port. The device transmits IGMP reports only to ports on which it previously received IGMP queries – and to statically configured query ports. To assign this value, perform the following steps: <ul style="list-style-type: none"> <input type="checkbox"/> Open the <i>Wizard</i> window. <input type="checkbox"/> In the <i>Configuration</i> dialog, mark the <i>Static</i> checkbox.

- ▶ **P= Learn by LLDP (manual setting)**
 A user specified the port as *Learn by LLDP*.
 With the Link Layer Discovery Protocol (LLDP), the device detects Schneider Electric devices connected directly to the port. The device denotes the detected query ports with **A**.
 To assign this value, perform the following steps:
 - Open the *Wizard* window.
 - In the *Configuration* dialog, mark the *Learn by LLDP* checkbox.
- ▶ **F= Forward All (manual setting)**
 A user specified the port so that the device transmits every received Multicast stream in the VLAN to this port. Use this setting for diagnostics purposes, for example.
 To assign this value, perform the following steps:
 - Open the *Wizard* window.
 - In the *Configuration* dialog, mark the *Forward all* checkbox.

Display categories

Enhances the clarity of the display. The table emphasizes the cells which contain the specified value. This helps to analyze and sort the table according to your needs.

- ▶ *Learned (L)*
 The table displays cells which contain the value **L** and possibly further values. Cells which contain other values than **L** only, the table displays with the “-“ symbol.
- ▶ *Static (S)*
 The table displays cells which contain the value **S** and possibly further values. Cells which contain other values than **S** only, the table displays with the “-“ symbol.
- ▶ *Automatic (A)*
 The table displays cells which contain the value **A** and possibly further values. Cells which contain other values than **A** only, the table displays with the “-“ symbol.
- ▶ *Learned by LLDP (P)*
 The table displays cells which contain the value **P** and possibly further values. Cells which contain other values than **P** only, the table displays with the “-“ symbol.
- ▶ *Forward all (F)*
 The table displays cells which contain the value **F** and possibly further values. Cells which contain other values than **F** only, the table displays with the “-“ symbol.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Opens the *Wizard* window that helps you to select and configure the ports.

[Selection VLAN/Port (Wizard)]

In the *Selection VLAN/Port* dialog you assign a VLAN ID to port.

In the *Configuration* dialog you specify the settings for the port.

After closing the *Wizard* window, click the button to save your settings.

[Selection VLAN/Port (Wizard) – Selection VLAN/Port]

VLAN ID Select the ID of the VLAN.

Possible values:

▶ 1..4042

Port Select the port.

Possible values:

▶ <Port number>

[Selection VLAN/Port (Wizard) – Configuration]

VLAN ID Displays the ID of the selected VLAN.

Port Displays the number of the selected port.

Static Specifies the port as a static query port in the VLANs that are set up. The device transmits IGMP report messages to the ports at which it receives IGMP queries. This lets you also transmit IGMP report messages to other selected ports (enable) or connected Schneider Electric devices (*Automatic*).

Learn by LLDP Specifies the port as *Learn by LLDP*. Lets the device detect directly connected Schneider Electric devices using LLDP and learn the related ports as a query port.

Forward all Specifies the port as *Forward all*. With the *Forward all* setting, the device transmits at this port every data packet with a Multicast address in the destination address field.

IGMP Snooping Querier

[Switching > IGMP Snooping > Querier]

The device lets you send a Multicast stream only to those ports to which a Multicast receiver is connected.

To determine which ports Multicast receivers are connected to, the device sends query data packets to the ports at a definable interval. When a Multicast receiver is connected, it joins the Multicast stream by responding to the device with a report data packet.

This dialog lets you configure the Snooping Querier settings globally and for the VLANs that are set up.

Operation

Operation

Enables/disables the IGMP Querier function globally in the device.

Possible values:

- ▶ *On*
- ▶ *Off* (default setting)

Configuration

In this frame you specify the IGMP Snooping Querier settings for the general query data packets.

Protocol version

Specifies the IGMP version of the general query data packets.

Possible values:

- ▶ *1*
IGMP v1
- ▶ *2* (default setting)
IGMP v2
- ▶ *3*
IGMP v3

Query interval [s] Specifies the time in seconds after which the device generates general query data packets itself when it has received query data packets from the Multicast router.

Possible values:

- ▶ 1..1800 (default setting: 60)

Expiry interval [s] Specifies the time in seconds after which an active querier switches from the passive state back to the active state if it has not received any query packets for longer than specified here.

Possible values:

- ▶ 60..300 (default setting: 125)

Table

In the table you specify the Snooping Querier settings for the VLANs that are set up.

VLAN ID Displays the ID of the VLAN to which the table entry applies.

Active Activates/deactivates the IGMP Snooping Querier function for this VLAN.

Possible values:

- ▶ `selected`
The IGMP Snooping Querier function is active for this VLAN.
- ▶ `cleared` (default setting)
The IGMP Snooping Querier function is inactive for this VLAN.

Current state Displays if the Snooping Querier is active for this VLAN.

Possible values:

- ▶ `selected`
The Snooping Querier is active for this VLAN.
- ▶ `cleared`
The Snooping Querier is inactive for this VLAN.

Address Specifies the IP address that the device adds as the source address in generated general query data packets. You use the address of the multicast router.

Possible values:

- ▶ Valid IPv4 address (default setting: 0.0.0.0)

Protocol version Displays the IGMP protocol version of the general query data packets.

Possible values:

- ▶ 1
IGMP v1
- ▶ 2
IGMP v2
- ▶ 3
IGMP v3

Max. response time	Displays the time in seconds in which the members of a Multicast group respond to a query data packet. For their response, the members specify a random time within the response time. This helps prevent every Multicast group member to respond to the query at the same time.
Last querier address	Displays the IP address of the Multicast router from which the last received IGMP query was sent out..
Last querier version	Displays the IGMP version that the Multicast router used when sending out the last IGMP query received in this VLAN.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

IGMP Snooping Multicasts

[Switching > IGMP Snooping > Multicasts]

The device lets you specify how it transmits data packets with unknown Multicast addresses: Either the device discards these data packets, floods them to every port, or transmits them only to the ports that previously received query packets.

The device also lets you transmit the data packets with known Multicast addresses to the query ports.

Configuration

Unknown multicasts	<p>Specifies how the device transmits the data packets with unknown Multicast addresses.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>Discard</i> The device discards data packets with an unknown MAC/IP Multicast address.▶ <i>Send to all ports</i> (default setting) The device forwards data packets with an unknown MAC/IP Multicast address to every port.▶ <i>Send to query ports</i> The device forwards data packets with an unknown MAC/IP Multicast address to the query ports.
--------------------	---

Table

In the table you specify the settings for known Multicasts for the VLANs that are set up.

VLAN ID	Displays the ID of the VLAN to which the table entry applies.
Known multicasts	<p>Specifies how the device transmits the data packets with known Multicast addresses.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>send to query and registered ports</i> The device forwards data packets with an unknown MAC/IP Multicast address to the query ports and to the registered ports. ▶ <i>send to registered ports</i> (default setting) The device forwards data packets with an unknown MAC/IP Multicast address to registered ports.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

MRP-IEEE

[Switching > MRP-IEEE]

The IEEE 802.1ak amendment to the IEEE 802.1Q standard introduced the Multiple Registration Protocol (MRP) to replace the Generic Attribute Registration Protocol (GARP). The IEEE also modified and replaced the GARP applications, GARP Multicast Registration Protocol (GMRP) and GARP VLAN Registration Protocol (GVRP). The Multiple MAC Registration Protocol (MMRP) and the Multiple VLAN Registration Protocol (MVRP) replace these protocols.

MRP-IEEE helps confine traffic to the required areas of the LAN. To confine traffic, the MRP-IEEE applications distribute attribute values to participating MRP-IEEE devices across a LAN registering and de-registering multicast group membership and VLAN identifiers.

Registering group participants lets you reserve resources for specific traffic transversing a LAN. Defining resource requirements regulates the level of traffic, allowing the devices to determine the required resources and provides for dynamic maintenance of the allocated resources.

The menu contains the following dialogs:

- ▶ [MRP-IEEE Configuration](#)
- ▶ [MRP-IEEE Multiple MAC Registration Protocol](#)
- ▶ [MRP-IEEE Multiple VLAN Registration Protocol](#)

MRP-IEEE Configuration

[Switching > MRP-IEEE > Configuration]

This dialog lets you set the various MRP timers. By maintaining a relationship between the various timer values, the protocol operates efficiently and with less likelihood of unnecessary attribute withdraws and re-registrations. The default timer values effectively maintain these relationships.

When you reconfigure the timers, maintain the following relationships:

- ▶ To allow for re-registration after a Leave or LeaveAll event, even if there is a lost message, specify the LeaveTime to: $\geq (2 \times \text{JoinTime}) + 60$.
- ▶ To minimize the volume of rejoining traffic generated following a LeaveAll event, specify the value for the LeaveAll timer larger than the LeaveTime value.

Table

Port	Displays the port number.
Join time [1/100s]	<p>Specifies the Join timer which controls the interval between transmit opportunities applied to the Applicant state machine.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 10..100 (default setting: 20)
Leave time [1/100s]	<p>Specifies the Leave timer which controls the period that the Registrar state machine waits in the leave (LV) state before transiting to the empty (MT) state.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 20..600 (default setting: 60)
Leave all time [1/100s]	<p>Specifies the LeaveAll timer which controls the frequency with which the LeaveAll state machine generates LeaveAll PDUs.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 200..6000 (default setting: 1000)

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

MRP-IEEE Multiple MAC Registration Protocol

[Switching > MRP-IEEE > MMRP]

The Multiple MAC Registration Protocol (MMRP) lets end devices and MAC switches register and de-register group membership and individual MAC address information with switches located in the same LAN. The switches within the LAN disseminate the information through switches that support extended filtering services. Using the MAC address information, MMRP lets you confine multicast traffic to the required areas of a Layer 2 network.

For an example of how MMRP works, consider a security camera mounted on a mast overlooking a building. The camera sends multicast packets onto a LAN. You have 2 end devices installed for surveillance in separate locations. You register the MAC addresses of the camera and the 2 end devices in the same multicast group. You then specify the MMRP settings on the ports to send the multicast group packets to the 2 end devices.

The dialog contains the following tabs:

- ▶ [Configuration]
- ▶ [Service requirement]
- ▶ [Statistics]

[Configuration]

In this tab you select active MMRP port participants and set the device to transmit periodic events. The dialog also lets you enable VLAN registered MAC address broadcasting.

A periodic state machine exists for each port and transmits periodic events regularly to the applicant state machines associated with active ports. Periodic events contain information indicating the status of the devices associated with the active port.

Operation

Operation

Enables/disables the global *MMRP* function in the device. The device participates in MMRP message exchanges.

Possible values:

- ▶ *On*
The device is a normal participant in MMRP message exchanges.
- ▶ *Off* (default setting)
The device ignores MMRP messages.

Configuration

Periodic state machine	<p>Enables/disables the global periodic state machine in the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>On</i> With MMRP <i>Operation</i> enabled globally, the device transmits MMRP messages in one-second intervals, on MMRP participating ports.▶ <i>Off</i> (default setting) Disables the periodic state machine in the device.
------------------------	--

Table

Port	<p>Displays the port number.</p>
Active	<p>Activates/deactivates the port MMRP participation.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) With MMRP enabled globally and on this port, the device sends and receives MMRP messages on this port.▶ <i>cleared</i> Disables the port MMRP participation.
Restricted group registration	<p>Activates/deactivates the restriction of dynamic MAC address registration using MMRP on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> If enabled and a static filter entry for the MAC address exists on the VLAN concerned, then the device registers the MAC address attributes dynamically.▶ <i>cleared</i> (default setting) Activates/deactivates the restriction of dynamic MAC address registration using MMRP on the port.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[Service requirement]

This tab contains forwarding parameters for each active VLAN, specifying the ports on which multicast forwarding applies. The device lets you statically setup VLAN ports as *Forward all* or *Forbidden*. You set the *Forbidden* MMRP service requirement statically only through the Graphical User Interface or Command Line Interface.

A port is setup only as *ForwardAll* or *Forbidden*.

Table

VLAN ID	Displays the ID of the VLAN.
<Port number>	<p>Specifies the service requirement handling for the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>FA</i> Specifies the <i>ForwardAll</i> traffic setting on the port. The device forwards traffic destined to MMRP registered multicast MAC addresses on the VLAN. The device forwards traffic to ports which MMRP has dynamically setup or ports which the administrator has statically setup as <i>ForwardAll</i> ports. ▶ <i>F</i> Specifies the <i>Forbidden</i> traffic setting on the port. The device blocks dynamic MMRP <i>ForwardAll</i> service requirements. With <i>ForwardAll</i> requests blocked on this port in this VLAN, the device blocks traffic destined to MMRP registered multicast MAC addresses on this port. Furthermore, the device blocks MMRP service request for changing this value on this port. ▶ <i>-</i> (default setting) Disables the forwarding functions on this port. ▶ <i>Learned</i> Displays values setup by MMRP service requests.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[Statistics]

Devices on a LAN exchange Multiple MAC Registration Protocol Data Units (MMRPDU) to maintain statuses of devices on an active MMRP port. This tab lets you monitor the MMRP traffic statistics for each port.

Information

Transmitted MMRP PDU	Displays the number of MMRPDUs transmitted in the device.
Received MMRP PDU	Displays the number of MMRPDUs received in the device.
Received bad header PDU	Displays the number of MMRPDUs received with an incorrect header in the device.
Received bad format PDU	Displays the number of MMRPDUs with an incorrect data field that were not transmitted in the device.
Transmission failed	Displays the number of MMRPDUs not transmitted in the device.

Table

Port	Displays the port number.
Transmitted MMRP PDU	Displays the number of MMRPDUs transmitted on the port.
Received MMRP PDU	Displays the number of MMRPDUs received on the port.
Received bad header PDU	Displays the number of MMRPDUs with an incorrect header that were received on the port.
Received bad format PDU	Displays the number of MMRPDUs with an incorrect data field that were not transmitted on the port.
Transmission failed	Displays the number of MMRPDUs not transmitted on the port.
Last received MAC address	Displays the last MAC address from which the port received MMRPPDUs.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Reset	Resets the port statistics counters and the values in the Last received MAC address column.
-------	---

MRP-IEEE Multiple VLAN Registration Protocol

[Switching > MRP-IEEE > MVRP]

The Multiple VLAN Registration Protocol (MVRP) provides a mechanism that lets you distribute VLAN information and configure VLANs dynamically. For example, when you configure a VLAN on an active MVRP port, the device distributes the VLAN information to other MVRP enabled devices. Using the information received, an MVRP enabled device dynamically creates the VLAN trunks on other MVRP enabled devices as needed.

The dialog contains the following tabs:

- ▶ [\[Configuration\]](#)
- ▶ [\[Statistics\]](#)

[Configuration]

In this tab you select active MVRP port participants and set the device to transmit periodic events.

A periodic state machine exists for each port and transmits periodic events regularly to the applicant state machines associated with active ports. Periodic events contain information indicating the status of the VLANs associated with the active port. Using the periodic events, MVRP enabled switches dynamically maintain the VLANs.

Operation

Operation

Enables/disables the global Applicant Administrative Control which specifies if the Applicant state machine participates in MMRP message exchanges.

Possible values:

- ▶ *On*
Normal Participant. The Applicant state machine participates in MMRP message exchanges.
- ▶ *Off* (default setting)
Non-Participant. The Applicant state machine ignores MMRP messages.

Configuration

Periodic state machine

Enables/disables the periodic state machine in the device.

Possible values:

- ▶ *On*
The periodic state machine is enabled.
With MVRP *Operation* enabled globally, the device transmits MVRP periodic events in 1 second intervals, on MVRP participating ports.
- ▶ *Off* (default setting)
The periodic state machine is disabled.
Disables the periodic state machine in the device.

Table

Port

Displays the port number.

Active

Activates/deactivates the port MVRP participation.

Possible values:

- ▶ *selected* (default setting)
With MVRP enabled globally and on this port, the device distributes VLAN membership information to MVRP-aware devices connected to this port.
- ▶ *cleared*
Disables the port MVRP participation.

Restricted VLAN registration

Activates/deactivates the *Restricted VLAN registration* function on this port.

Possible values:

- ▶ *selected*
If enabled and a static VLAN registration entry exists, then the device lets you create a dynamic VLAN for this entry.
- ▶ *cleared* (default setting)
Disables the *Restricted VLAN registration* function on this port.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[Statistics]

Devices on a LAN exchange Multiple VLAN Registration Protocol Data Units (MVRPDU) to maintain statuses of VLANs on active ports. This tab lets you monitor the MVRP traffic.

Information

Transmitted MVRP PDU	Displays the number of MVRPDUs transmitted in the device.
Received MVRP PDU	Displays the number of MVRPDUs received in the device.
Received bad header PDU	Displays the number of MVRPDUs received with an incorrect header in the device.
Received bad format PDU	Displays the number of MVRPDUs with an incorrect data field that the device blocked.
Transmission failed	Displays the number of unsuccessful transmissions while adding a message into the MVRP queue.
Message queue failures	Displays the number of MVRPDUs that the device blocked.

Table

Port	Displays the port number.
Transmitted MVRP PDU	Displays the number of MVRPDUs transmitted on the port.
Received MVRP PDU	Displays the number of MVRPDUs received on the port.
Received bad header PDU	Displays the number of MVRPDUs with an incorrect header that the device received on the port.
Received bad format PDU	Displays the number of MVRPDUs with an incorrect data field that the device blocked on the port.
Transmission failed	Displays the number of MVRPDUs that the device blocked on the port.
Registrations failed	Displays the number of unsuccessful registration attempts on the port.
Last received MAC address	Displays the last MAC address from which the port received MVRPDUs.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Reset	Resets the port statistics counters and the values in the Last received MAC address column.
-------	---

QoS/Priority

[Switching > QoS/Priority]

Communication networks transmit a number of applications at the same time that have different requirements as regards availability, bandwidth and latency periods.

QoS (Quality of Service) is a procedure defined in IEEE 802.1D. It is used to distribute resources in the network. You therefore have the possibility of providing minimum bandwidth for necessary applications. The prerequisite is that the end devices and the devices in the network support prioritized data transmission. Data packets with high priority are given preference when transmitted by devices in the network. You transfer data packets with lower priority when there are no data packets with a higher priority to be transmitted.

The device provides the following setting options:

- ▶ You specify how the device evaluates QoS/prioritization information for inbound data packets.
- ▶ For outbound packets, you specify which QoS/prioritization information the device writes in the data packet (for example priority for management packets, port priority).

NOTE: If you use the functions in this menu, then disable the flow control. The flow control is inactive if in the *Switching > Global* dialog, *Configuration* frame the *Flow control* checkbox is cleared.

The menu contains the following dialogs:

- ▶ [QoS/Priority Global](#)
- ▶ [QoS/Priority Port Configuration](#)
- ▶ [802.1D/p Mapping](#)
- ▶ [IP DSCP Mapping](#)
- ▶ [Queue Management](#)

QoS/Priority Global

[Switching > QoS/Priority > Global]

The device lets you maintain access to the device management, even in situations with heavy utilization. In this dialog you specify the required QoS/priority settings.

Configuration

VLAN priority for management packets

Specifies the VLAN priority for sending management data packets. Depending on the VLAN priority, the device assigns the data packet to a specific traffic class and thus to a specific priority queue of the port.

Possible values:

- ▶ 0..7 (default setting: 0)

In the *Switching > QoS/Priority > 802.1D/p Mapping* dialog, you assign a traffic class to every VLAN priority.

IP DSCP value for management packets Specifies the IP DSCP value for sending management data packets. Depending on the IP DSCP value, the device assigns the data packet to a specific traffic class and thus to a specific priority queue of the port.

Possible values:

► 0 (*be/cs0*)..63 (default setting: 0 (*be/cs0*))

Some values in the list also have a DSCP keyword, for example 0 (*be/cs0*), 10 (*af11*) and 46 (*ef*). These values are compatible with the IP precedence model.

In the [Switching > QoS/Priority > IP DSCP Mapping](#) dialog you assign a traffic class to every IP DSCP value.

Queues per port

Displays the number of priority queues per port.

The device has 4 priority queues per port. You assign every priority queue to a specific traffic class (traffic class according to IEEE 802.1D).

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

QoS/Priority Port Configuration

[Switching > QoS/Priority > Port Configuration]

In this dialog you specify for every port how the device processes received data packets based on their QoS/priority information.

Table

Port

Displays the port number.

Port priority	<p>Specifies what VLAN priority information the device writes into a data packet if the data packet contains no priority information. After this, the device transmits the data packet depending on the value specified in the <i>Trust mode</i> column.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..7 (default setting: 0)
Trust mode	<p>Specifies how the device handles a received data packet if the data packet contains QoS/priority information.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>untrusted</i> The device transmits the data packet according to the priority specified in the <i>Port priority</i> column. The device ignores the priority information contained in the data packet. In the <i>Switching > QoS/Priority > 802.1D/p Mapping</i> dialog, you assign a traffic class to every VLAN priority.▶ <i>trustDot1p</i> (default setting) The device transmits the data packet according to the priority information in the VLAN tag. In the <i>Switching > QoS/Priority > 802.1D/p Mapping</i> dialog, you assign a traffic class to every VLAN priority.▶ <i>trustIpDscp</i><ul style="list-style-type: none">– If the data packet is an IP packet, then: The device transmits the data packet according to the IP DSCP value contained in the data packet. In the <i>Switching > QoS/Priority > IP DSCP Mapping</i> dialog you assign a traffic class to every IP DSCP value.– If the data packet is not an IP packet, then: The device transmits the data packet according to the priority specified in the <i>Port priority</i> column. In the <i>Switching > QoS/Priority > 802.1D/p Mapping</i> dialog, you assign a traffic class to every VLAN priority.
Untrusted traffic class	<p>Displays the traffic class assigned to the VLAN priority information specified in the <i>Port priority</i> column. In the <i>Switching > QoS/Priority > 802.1D/p Mapping</i> dialog, you assign a traffic class to every VLAN priority.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..3

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

802.1D/p Mapping

[Switching > QoS/Priority > 802.1D/p Mapping]

The device transmits data packets with a VLAN tag according to the contained QoS/priority information with a higher or lower priority.

In this dialog you assign a traffic class to every VLAN priority. You assign the traffic classes to the priority queues of the ports.

Table

VLAN priority	Displays the VLAN priority.
Traffic class	Specifies the traffic class assigned to the VLAN priority.

Possible values:

- ▶ 0..3
 - 0 assigned to the priority queue with the lowest priority.
 - 3 assigned to the priority queue with the highest priority.

NOTE: Among other things redundancy mechanisms use the highest traffic class. Therefore, select another traffic class for application data.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Default assignment of the VLAN priority to traffic classes

VLAN Priority	Traffic class	Content description according to IEEE 802.1D
0	1	Best Effort Normal data without prioritizing
1	0	Background Non-time-sensitive data and background services
2	0	Standard Normal data
3	1	Excellent Effort Crucial data
4	2	Controlled Load Time-sensitive data with a high priority

VLAN Priority	Traffic class	Content description according to IEEE 802.1D
5	2	Video Video transmission with delays and jitter < 100 ms
6	3	Voice Voice transmission with delays and jitter < 10 ms
7	3	Network Control Data for network management and redundancy mechanisms

IP DSCP Mapping

[Switching > QoS/Priority > IP DSCP Mapping]

The device transmits IP data packets according to the DSCP value contained in the data packet with a higher or lower priority.

In this dialog you assign a traffic class to every DSCP value. You assign the traffic classes to the priority queues of the ports.

Table

DSCP value

Displays the DSCP value.

Traffic class

Specifies the traffic class which is assigned to the DSCP value.

Possible values:

▶ 0..3

0 assigned to the priority queue with the lowest priority.

3 assigned to the priority queue with the highest priority.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Default assignment of the DSCP values to traffic classes

DSCP Value	DSCP Name	Traffic class
0	Best Effort /CS0	1
1-7		1
8	CS1	0
9,11,13,15		0

DSCP Value	DSCP Name	Traffic class
10,12,14	AF11,AF12,AF13	0
16	CS2	0
17,19,21,23		0
18,20,22	AF21,AF22,AF23	0
24	CS3	1
25,27,29,31		1
26,28,30	AF31,AF32,AF33	1
32	CS4	2
33,35,37,39		2
34,36,38	AF41,AF42,AF43	2
40	CS5	2
41,42,43,44,45,47		2
46	EF	2
48	CS6	3
49-55		3
56	CS7	3
57-63		3

Queue Management

[Switching > QoS/Priority > Queue Management]

This dialog lets you enable and disable the *Strict priority* function for the traffic classes. When you disable the *Strict priority* function, the device processes the priority queues of the ports with "Weighted Fair Queuing".

Table

Traffic class

Displays the traffic class.

Strict priority

Activates/deactivates the processing of the port priority queue with *Strict priority* for this traffic class.

Possible values:

▶ *selected* (default setting)

The processing of the port priority queue with *Strict priority* is active.

- The port forwards only data packets that are in the priority queue with the highest priority. When this priority queue is empty, the port forwards data packets that are in the priority queue with the next lower priority.
- The port forwards data packets with a lower traffic class after the priority queues with a higher priority are empty. In unfavorable situations, the port does not send these data packets.
- When you select this setting for a traffic class, the device also enables the function for traffic classes with a higher priority.
- Use this setting for applications such as VoIP or video that require the least possible delay.

▶ *cleared*

The processing of the port priority queue with *Strict priority* is inactive. The device uses "Weighted Fair Queuing"/"Weighted Round Robin" (WRR) to process the port priority queue.

- The device assigns a minimum bandwidth to each traffic class.
- Even under a high network load the port transmits data packets with a low traffic class.
- When you select this setting for a traffic class, the device also disables the function for traffic classes with a lower priority.

Min. bandwidth [%]

Specifies the minimum bandwidth for this traffic class when the device is processing the priority queues of the ports with "Weighted Fair Queuing".

Possible values:

▶ *0..100* (default setting: 0 = the device does not reserve any bandwidth for this traffic class)

The value specified in percent refers to the available bandwidth on the port. When you disable the *Strict priority* function for every traffic class, the maximum bandwidth is available on the port for the "Weighted Fair Queuing".

The maximum total of the assigned bandwidths is 100 %.

Buttons

You find the description of the standard buttons in section "Buttons" on page 18.

VLAN

[Switching > VLAN]

With VLAN (Virtual Local Area Network) you distribute the data traffic in the physical network to logical subnetworks. This provides you with the following advantages:

- ▶ High flexibility
 - With VLAN you distribute the data traffic to logical networks in the existing infrastructure. Without VLAN, it would be necessary to have additional devices and complicated cabling.
 - With VLAN you specify network segments independently of the location of the individual end devices.
- ▶ Improved throughput
 - In VLANs data packets can be transferred by priority. When the priority is high, the device transfers the data of a VLAN preferentially, for example for time-sensitive applications such as VoIP phone calls.
 - When the data packets and Broadcasts are distributed in small network segments instead of in the entire network, the network load is considerably reduced.
- ▶ Improved security

The distribution of the data traffic among individual logical networks makes unwanted accessing more difficult and strengthens the system against attacks such as MAC Flooding or MAC Spoofing.

The device supports packet-based “tagged” VLANs according to the IEEE 802.1Q standard. The VLAN tagging in the data packet indicates the VLAN to which the data packet belongs.

The device transmits the tagged data packets of a VLAN only on ports that are assigned to the same VLAN. This reduces the network load.

The device learns the MAC addresses for every VLAN separately (independent VLAN learning).

The device prioritizes the received data stream in the following sequence:

- ▶ Voice VLAN
- ▶ Port-based VLAN

The menu contains the following dialogs:

- ▶ [VLAN Global](#)
- ▶ [VLAN Configuration](#)
- ▶ [VLAN Port](#)
- ▶ [VLAN Voice](#)

VLAN Global

[Switching > VLAN > Global]

This dialog lets you view general VLAN parameters for the device.

Configuration

Max. VLAN ID	Highest ID assignable to a VLAN. See the Switching > VLAN > Configuration dialog.
VLANs (max.)	Displays the maximum number of VLANs possible. See the Switching > VLAN > Configuration dialog.
VLANs	Number of VLANs configured in the device. See the Switching > VLAN > Configuration dialog. The VLAN ID 1 is constantly present in the device.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Clear...	Resets the VLAN settings of the device to the default setting. Note that you lose your connection to the device if you have changed the VLAN ID for the device management in the Basic Settings > Network dialog.
----------	---

VLAN Configuration

[Switching > VLAN > Configuration]

In this dialog you manage the VLANs. To set up a VLAN, create a further row in the table. There you specify for each port if it transmits data packets of the respective VLAN and if the data packets contain a VLAN tag.

You distinguish between the following VLANs:

- ▶ The user sets up static VLANs.
- ▶ The device sets up dynamic VLANs automatically and removes them if the prerequisites cease to apply.
For the following functions the device creates dynamic VLANs:
 - **MRP**: If you assign to the ring ports a non-existing VLAN, then the device creates this VLAN.
 - **MVRP**: The device creates a VLAN based on the messages of neighboring devices.

NOTE: The settings are effective only if the VLAN Unaware Mode is disabled. See the [Switching > Global](#) dialog.

Table

VLAN ID	<p>ID of the VLAN.</p> <p>The device supports up to 16 VLANs simultaneously set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 1..4042
Status	<p>Displays how the VLAN is set up.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>other</i> VLAN 1 or VLAN set up using the <i>802.1X Port Authentication</i> function. See the <i>Network Security > 802.1X Port Authentication</i> dialog. ▶ <i>permanent</i> VLAN set up by the user. or VLAN set up using the <i>MRP</i> function. See the <i>Switching > L2-Redundancy > MRP</i> dialog. If you save the changes in the non-volatile memory, then the VLANs with this setting remain set up after a restart. ▶ <i>dynamicMvrp</i> VLAN set up using the <i>MVRP</i> function. See the <i>Switching > MRP-IEEE > MVRP</i> dialog. VLANs with this setting are write-protected. The device removes a VLAN from the table as soon as the last port leaves the VLAN.
Creation time	<p>Displays the time of VLAN creation.</p> <p>The field displays the time stamp for the operating time (system uptime).</p>
Name	<p>Specifies the name of the VLAN.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ Alphanumeric ASCII character string with 1..32 characters
<Port number>	<p>Specifies if the respective port transmits data packets of the VLAN and if the data packets contain a VLAN tag.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ - (default setting) The port is not a member of the VLAN and does not transmit data packets of the VLAN. ▶ T = Tagged The port is a member of the VLAN and transmits the data packets with a VLAN tag. You use this setting for uplink ports, for example. ▶ LT = Tagged Learned The port is a member of the VLAN and transmits the data packets with a VLAN tag. The device created the entry automatically based on the <i>GVRP</i> or <i>MVRP</i> function.

- ▶ **F** = Forbidden
The port is not a member of the VLAN and does not transmit data packets of this VLAN.
Additionally, the device helps prevent the port from becoming a VLAN member through the **MVRP** function.
- ▶ **U** = Untagged (default setting for VLAN 1)
The port is a member of the VLAN and transmits the data packets without a VLAN tag. Use this setting if the connected device does not evaluate any VLAN tags, for example on end ports.
- ▶ **LU** = Untagged Learned
The port is a member of the VLAN and transmits the data packets without a VLAN tag.
The device created the entry automatically based on the **GVRP** or **MVRP** function.

NOTE: Verify that the port on which the network management station is connected is a member of the VLAN in which the device transmits the management data. In the default setting, the device transmits the management data on VLAN 1. Otherwise, the connection to the device terminates when you transfer the changes to the device. The access to the device management is possible only using the Command Line Interface through the serial interface.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Opens the **Create** window to add a new entry to the table.

In the **VLAN ID** field, you specify the ID of the VLAN.

VLAN Port

[Switching > VLAN > Port]

In this dialog you specify how the device handles received data packets that have no VLAN tag, or whose VLAN tag differs from the VLAN ID of the port.

This dialog lets you assign a VLAN to the ports and thus specify the port VLAN ID.

Additionally, you also specify for each port how the device transmits data packets if the VLAN Unaware mode is disabled and one of the following situations occurs:

- ▶ The port receives data packets without a VLAN tagging.
- ▶ The port receives data packets with VLAN priority information (VLAN ID 0, priority tagged).
- ▶ The VLAN tagging of the data packet differs from the VLAN ID of the port.

NOTE: The settings are effective only if the VLAN Unaware Mode is disabled. See the **Switching > Global** dialog.

Table

Port	Displays the port number.
Port-VLAN ID	<p>Specifies the ID of the VLAN which the device assigns to data packets without a VLAN tag.</p> <p>Prerequisites:</p> <ul style="list-style-type: none"> In the <i>Acceptable packet types</i> column, you specify the value <i>admitAll</i>. <p>Possible values:</p> <ul style="list-style-type: none"> ▶ ID of a VLAN you set up (default setting: 1) <p>If you use the <i>MRP</i> function and you did not assign a VLAN to the ring ports, then you specify the value 1 here for the ring ports. Otherwise, the device assigns the value to the ring ports automatically.</p>
Acceptable packet types	<p>Specifies if the port transmits or discards received data packets without a VLAN tag.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>admitAll</i> (default setting) The port accepts data packets both with and without a VLAN tag. ▶ <i>admitOnlyVlanTagged</i> The port accepts only data packets tagged with a VLAN ID ≥ 1.
Ingress filtering	<p>Activates/deactivates the ingress filtering.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> The ingress filtering is active. The device compares the VLAN ID in the data packet with the VLANs of which the port is a member. See the <i>Switching > VLAN > Configuration</i> dialog. If the VLAN ID in the data packet matches one of these VLANs, then the port transmits the data packet. Otherwise, the device discards the data packet. ▶ <i>cleared</i> (default setting) The ingress filtering is inactive. The device transmits received data packets without comparing the VLAN ID. Thus the port also transmits data packets with a VLAN ID of which the port is not a member.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

VLAN Voice

[Switching > VLAN > Voice]

Use the Voice VLAN feature to separate voice and data traffic on a port, by VLAN and/or priority. A primary benefit of Voice VLAN is safeguarding the quality of voice traffic when data traffic on the port is high.

The device detects VoIP phones using the Link Layer Discovery Protocol - Media Endpoint Discovery (LLDP-MED). The device then adds the appropriate port to the member set of the configured Voice VLAN. The member set is either tagged or untagged. Tagging depends on the Voice VLAN interface mode (VLAN ID, Dot1p, None, Untagged).

Another benefit of the Voice VLAN feature is that the VoIP phone obtains VLAN ID or priority information via LLDP-MED from the device. As a result, the VoIP phone sends voice data tagged as priority, or untagged. This depends on the configured Voice VLAN Interface mode. You activate Voice VLAN on the port which is connecting to the VoIP phone.

Operation

Operation

Enables/disables the *VLAN Voice* function of the device globally.

Possible values:

- ▶ *On*
- ▶ *Off* (default setting)

Table

Port

Displays the port number.

Voice VLAN mode

Specifies if the port transmits or discards received data packets without voice VLAN tagging or with voice VLAN priority information.

Possible values:

- ▶ *disabled* (default setting)
Deactivates the *VLAN Voice* function for this table entry.
- ▶ *none*
Lets the IP telephone use its own configuration for sending untagged voice traffic.
- ▶ *vlan/dot1p-priority*
The port filters data packets of the voice VLAN using the vlan and dot1p priority tags.
- ▶ *untagged*
The port filters data packets without a voice VLAN tag.

	<ul style="list-style-type: none">▶ <i>vlan</i> The port filters data packets of the voice VLAN using the <i>vlan</i> tag.▶ <i>dot1p-priority</i> The port filters data packets of the voice VLAN using the dot1p priority tags. If you select this value, then additionally specify a proper value in the <i>Priority</i> column.
Data priority mode	<p>Specifies the trust mode for the data traffic on the particular port.</p> <p>The device uses this mode for data traffic on the voice VLAN, when it detects a VoIP telephone and a PC and when these devices use the same cable for transmitting and receiving data.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>trust</i> (default setting) If voice traffic is present on the interface, then the data traffic uses the normal priority with this setting.▶ <i>untrust</i> If voice traffic is present and the <i>Voice VLAN mode</i> is set to <i>dot1p-priority</i>, then the data has the priority 0. If the interface only transmits data, then the data has the normal priority.
Status	<p>Displays the status of the Voice VLAN on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The Voice VLAN is enabled.▶ <i>cleared</i> The Voice VLAN is disabled.
VLAN ID	<p>Specifies the ID of the VLAN to which the table entry applies.</p> <p>To forward traffic to this VLAN ID using this filter, select in the <i>Voice VLAN mode</i> column the value <i>vlan</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>0..4042</i>
Priority	<p>Specifies the Voice VLAN Priority of the port.</p> <p>Prerequisites:</p> <ul style="list-style-type: none">• In the <i>Voice VLAN mode</i> column, you specify the value <i>dot1p-priority</i>. <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>0..7</i>▶ <i>none</i> Deactivates the Voice VLAN Priority of the port.
Bypass authentication	<p>Activates the Voice VLAN Authentication mode.</p> <p>If you deactivate the function and set the value in the <i>Voice VLAN mode</i> column to <i>dot1p-priority</i>, then voice devices require an authentication.</p>

Possible values:

- ▶ `selected` (default setting)
If you activated the function in the *Network Security > 802.1X Port Authentication > Global* dialog, then set the *Port control* parameter for this port to the *multiClient* value before activating this function. You find the *Port control* parameter in the *Network Security > 802.1X Port Authentication > Global* dialog.
- ▶ `cleared`

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

L2-Redundancy

[Switching > L2-Redundancy]

The menu contains the following dialogs:

- ▶ `MRP`
- ▶ `PRP`
- ▶ `Spanning Tree`
- ▶ `Link Aggregation`
- ▶ `Link Backup`

MRP

[Switching > L2-Redundancy > MRP]

The Media Redundancy Protocol (MRP) is a protocol that lets you set up high-availability, ring-shaped network structures. An MRP ring with Schneider Electric devices is made up of up to 100 devices that support the MRP protocol according to IEC 62439.

If a section is not operating, then the ring structure of an MRP ring changes back into a line structure. The maximum recovery time can be configured.

The Ring Manager function of the device closes the ends of a backbone in a line structure to a redundant ring.

NOTE: *Spanning Tree* and Ring Redundancy have an effect on each other. Deactivate the *Spanning Tree* protocol for the ports connected to the MRP ring. See the *Switching > L2-Redundancy > Spanning Tree > Port* dialog.

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION

- Configure each device of the *MRP* configuration individually.
- Complete the configuration of the other devices of the ring configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Operation

Operation

Enables/disables the *MRP* function.

After you configured the parameters for the MRP ring, enable the function here.

Possible values:

- ▶ *On*
The *MRP* function is enabled.
After you configured the devices in the MRP ring, the redundancy is active.
- ▶ *Off* (default setting)
The *MRP* function is disabled.

Ring port 1/Ring port 2

Port

Specifies the number of the port that is operating as a ring port.

Possible values:

- ▶ *<Port number>*
Number of the ring port

Operation

Displays the operating status of the ring port.

Possible values:

- ▶ *forwarding*
The port is enabled, connection exists.
- ▶ *blocked*
The port is blocked, connection exists.
- ▶ *disabled*
The port is disabled.
- ▶ *not-connected*
No connection exists.

Fixed backup

Activates/deactivates the backup port function for the *Ring port 2*.

NOTE: The switch over to the primary port can exceed the maximum ring recovery time.

Possible values:

- ▶ *selected*
The *Ring port 2* backup function is active. When the ring is closed, the ring manager reverts back to the primary ring port.
- ▶ *cleared* (default setting)
The *Ring port 2* backup function is inactive. When the ring is closed, the ring manager continues to send data on the secondary ring port.

Configuration

Ring manager

Enables/disables the *Ring manager* function.

If there is one device at each end of the line, then you activate this function.

Possible values:

- ▶ *On*
The *Ring manager* function is enabled.
The device operates as a ring manager.
- ▶ *Off* (default setting)
The *Ring manager* function is disabled.
The device operates as a ring client.

Advanced mode

Activates/deactivates the advanced mode for fast recovery times.

Possible values:

- ▶ *selected* (default setting)
Advanced mode active.
MRP-capable Schneider Electric devices support this mode.
- ▶ *cleared*
Advanced mode inactive.
Select this setting if another device in the ring does not support this mode.

Ring recovery

Specifies the maximum recovery time in milliseconds for reconfiguration of the ring. This setting is effective if the device operates as a ring manager.

Possible values:

- ▶ *500ms*
- ▶ *200ms* (default setting)

Shorter switching times make greater demands on the response time of every individual device in the ring. Use values lower than *500ms* if the other devices in the ring also support this shorter recovery time.

VLAN ID	<p>Specifies the ID of the VLAN which you assign to the ring ports.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 (default setting) No VLAN assigned. Assign in the <i>Switching > VLAN > Configuration</i> dialog to the ring ports for VLAN 1 the value 0.▶ 1..4042 VLAN assigned. If you assign to the ring ports a non-existing VLAN, then the device creates this VLAN. In the <i>Switching > VLAN > Configuration</i> dialog, the device creates an entry in the table for the VLAN and assigns the value 1 to the ring ports.
---------	---

Information

Information	<p>Displays messages for the redundancy configuration and the possible causes of detected errors.</p>
-------------	---

When the device operates as a ring client or a ring manager, the following messages are possible:

- ▶ *Redundancy available*
The redundancy is set up. When a component of the ring is down, the redundant line takes over its function.
- ▶ *Configuration error: Error on ringport link.*
An error is detected in the cabling of the ring ports.

When the device operates as a ring manager, the following messages are possible:

- ▶ *Configuration error: Packets from another ring manager received.*
Another device exists in the ring that operates as the ring manager. Enable the *Ring manager* function only on one device in the ring.
- ▶ *Configuration error: Ring link is connected to wrong port.*
A line in the ring is connected with a different port instead of with a ring port. The device only receives test data packets on one ring port.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Delete ring configuration	<p>Disables the redundancy function and resets the settings in the dialog to the default setting.</p>
---------------------------	---

PRP

[Switching > L2-Redundancy > PRP]

The Parallel Redundancy Protocol (PRP) is defined in the international standard IEC 62439-3. PRP uses 2 independent LANs with any ring, star, bus and mesh topologies, providing a high availability of network connections.

To connect the device to the PRP network, use 100 Mbit/s FDX on both of the specially marked ports, *Port A* and *Port B*.

The main advantage of PRP is that the destination node receives packets from the source as long as one LAN is available. The absence of the second LAN due to repairs or maintenance has no impact on the packet transmission.

The network device which connects the end devices to the network implements the PRP protocol. The Ethernet switches in both LANs are standard switches that are oblivious to PRP. A Double Attached Node implementing PRP (DANP) is a network device with PRP functionality and has one connection into each independent LAN. A Single Attached Node (SAN) is a standard Ethernet device with a single LAN interface directly connected to one of the redundant LANs. For this reason, a SAN is unable to use the redundant LAN.

A Redundancy Box (RedBox) is a network device which implements the PRP functionality for standard ethernet devices. A standard ethernet device when connected to a PRP network via a RedBox is a virtual DANP (VDAN).

NOTE: *PRP* is available for devices with an FPGA (hardware for extended functions). The product code indicates if your device supports *PRP*. To use the functions, load the device software supporting *PRP*.

NOTE: If the inter-frame gap is shorter than the latency between the 2 LANs, then a frame-ordering mismatch can occur. Frame-ordering mismatch is a phenomenon of the PRP protocol. The only solution to help avoid a frame-ordering mismatch is to verify that the inter-frame gap is greater than the latency between the LANs.

The menu contains the following dialogs:

- ▶ *PRP Configuration*
- ▶ *PRP DAN/VDAN Table*
- ▶ *PRP Proxy Node Table*
- ▶ *PRP Statistics*

PRP Configuration

[Switching > L2-Redundancy > PRP > Configuration]

In this dialog you enable/disable the *PRP* function, and configure PRP supervision packet reception and transmission.

The *MRP* and *Spanning Tree* functions cannot operate on the same ports as the *PRP* function. Disable the *MRP* function or choose different ports. Deactivate the *Spanning Tree* function on the PRP ports.

NOTE: When PRP is active, it uses the interfaces `1/1` and `1/2`. As seen in the [Switching > VLAN](#), [Switching > Rate Limiter](#) and [Switching > Filter for MAC Addresses](#) dialogs, the *PRP* function replaces the interfaces `1/1` and `1/2` with the interface `prp/1`. Configure the VLAN membership, the rate limiting, and the MAC filtering for the interface `prp/1`.

Operation

Operation

Enables/disables the *PRP* function.

Possible values:

- ▶ *On*
The *PRP* function is enabled globally.
When this function is active, the device processes the data stream according to the set up.
- ▶ *Off* (default setting)
The *PRP* function is disabled globally.
To help avoid network loops, disable the *PRP* function on *Port A* or *Port B* before disabling the *PRP* function globally.

NOTE: When you use SFPs for PRP ports and the device only supports 100 Mbit/s, verify that the SFPs support 100 Mbit/s.

Port A / Port B

Physical port

Displays the number of the physical port which the device uses as the PRP *Port A* or *Port B*.

Port A admin state
Port B admin state

Enables/disables the *PRP* function on the port.

Possible values:

- ▶ *On* (default setting)
The *PRP* function on the port is enabled.
- ▶ *Off*
The *PRP* function on the port is disabled.

Supervision packet receiver

Evaluate supervision packets

Activates/deactivates the analysis of the supervision packets.

Possible values:

- ▶ *selected* (default setting)
The analysis of the supervision packets is activated.
The device receives Supervision Packets and analyzes them.
- ▶ *cleared*
The analysis of the supervision packets is deactivated.
The device receives supervision packets without analyzing them.

Supervision packet sender

Active

Enables/disables the transmission of supervision packets.

Possible values:

- ▶ *On* (default setting)
The transmission of supervision packets is enabled. The RedBox transmits its own supervision packets.
- ▶ *Off*
The transmission of supervision packets is disabled.

Send VDAN packets

Activates/deactivates the transmission of VDAN supervision packets.

The prerequisite is that you activate the *Supervision packet sender* first.

Possible values:

- ▶ *selected* (default setting)
The transmission of VDAN supervision packets is active.
The RedBox transmits both its own supervision packets and the supervision packets for the VDANs listed in the *PRP Proxy Node Table*.
- ▶ *cleared*
The transmission of VDAN supervision packets is inactive.

Configuration

MTU

Displays the maximum allowed size of Ethernet packets on the interface in bytes.

Possible values:

- ▶ 2000

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

PRP DAN/VDAN Table

[Switching > L2-Redundancy > PRP > DAN/VDAN Table]

This dialog lets you analyze the LANs. This is helpful, for example, when the *Last seen A* counter of one port continually increases while the *Last seen B* counter remains the same (and the other way round). This condition indicates the interruption of a LAN connection.

DAN/VDAN means Double Attached Node / Virtual Double Attached Node.

Table

Index	Displays the index number to which the table entry relates.
MAC address	Displays the MAC address of the node.
Last seen A	Displays the time between received first packets for this node on LAN A. When the counter threshold reaches 497 days, it restarts from 0.
Last seen B	Displays the time between received first packets for this node on LAN B. When the counter threshold reaches 497 days, it restarts from 0.
Remote node type	Displays the type of node. Possible values: <ul style="list-style-type: none">▶ <i>redboxp</i> Management▶ <i>vdanp</i> Client

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Reset	Resets the entire table.
-------	--------------------------

PRP Proxy Node Table

[Switching > L2-Redundancy > PRP > Proxy Node Table]

This dialog informs you of the connected devices for which this device provides PRP redundancy.

NOTE: The Redbox supports up to 128 hosts. If this number is exceeded with Redbox, then the device drops the packets.

Table

Index	Displays the index number to which the table entry relates. Possible values: ▶ 1..128
MAC address	Displays the MAC address of the connected devices for which this device implements PRP redundancy.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	Resets the entire table.
-------	--------------------------

PRP Statistics

[Switching > L2-Redundancy > PRP > Statistics]

This dialog lists receive events for various MIB Managed Objects. Each entry represents link degradation for the MIB Managed Objects listed in the description column. The table lists how many times the event occurred for each path through the device. The Port A entries for example, specify the path between the transceiver, through the Link Redundancy Entity (LRE) to the UDP and TCP layers.

Table

Description	Displays the MIB Managed Objects description to which the <i>Port A</i> , <i>Port B</i> , and <i>Interlink</i> entries refer.
Port A	Displays the number of MIB Managed Objects events on <i>Port A</i> . The device examines the traffic as it passes from receive transceiver A to the LRE.
Port B	Displays the number of MIB Managed Objects events on <i>Port B</i> . The device examines the traffic as it passes from receive transceiver B to the LRE.
Interlink	Displays the number of MIB Managed Objects events on the interlink. The counters are active for the MIB Managed Objects that pertain to the interlink. The other counters remain empty. A sample is made of the traffic as it passes from the LRE to the switch.

CPU port

Displays the number of MIB Managed Objects events on the CPU Port. There is one MIB Managed Object that pertains to the CPU Port. The other counters remain empty. A sample is made of the traffic as it passes from receive transceiver to the CPU.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset

Resets the entire table.

Spanning Tree

[Switching > L2-Redundancy > Spanning Tree]

The Spanning Tree Protocol (STP) is a protocol that deactivates redundant paths of a network in order to help avoid loops. If a network component becomes inoperable on the path, then the device calculates the new topology and reactivates these paths.

The Rapid Spanning Tree Protocol (RSTP) enables fast switching to a newly calculated topology without interrupting existing connections. RSTP gets average reconfiguration times of less than a second. When you use RSTP in a ring with 10 to 20 devices, you can get reconfiguration times in the order of milliseconds.

NOTE: When you connect the device to the network through twisted pair SFPs instead of through usual twisted pair ports, the reconfiguration of the network takes slightly longer.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Configure each device of the *Spanning Tree* configuration individually.
- Complete the configuration of the other devices of the *Spanning Tree* configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The menu contains the following dialogs:

- ▶ *Spanning Tree Global*
- ▶ *Spanning Tree Port*

Spanning Tree Global

[Switching > L2-Redundancy > Spanning Tree > Global]

In this dialog you enable/disable the *Spanning Tree* function and specify the bridge settings.

Operation

Operation

Enables/disables the Spanning Tree function in the device.

Possible values:

▶ *On* (default setting)

▶ *Off*

The device behaves transparently. The device floods received Spanning Tree data packets like multicast data packets to the ports.

Variant

Variant

Displays the protocol used for the *Spanning Tree* function:

Possible values:

▶ *rstp*

The protocol *RSTP* is active.

With RSTP (IEEE 802.1Q-2005), the *Spanning Tree* function operates for the underlying physical layer.

Traps

Send trap

Activates/deactivates the sending of SNMP traps for the following events:

- Another bridge takes over the root bridge role.
- The topology changes. A port changes its *Port state* from *forwarding* into *discarding* or from *discarding* into *forwarding*.

Possible values:

▶ *selected* (default setting)

The sending of SNMP traps is active.

▶ *cleared*

The sending of SNMP traps is inactive.

Bridge configuration

Bridge ID	<p>Displays the bridge ID of the device.</p> <p>The device with the lowest bridge ID numerical value takes over the role of the root bridge in the network.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code><Bridge priority> / <MAC address></code> Value in the <i>Priority</i> field / MAC address of the device
Priority	<p>Specifies the bridge priority of the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>0..61440</code> in steps of 4096 (default setting: <code>32768</code>) <p>To make this device the root bridge, assign the lowest numeric priority value in the network to the device.</p>
Hello time [s]	<p>Specifies the time in seconds between the sending of two configuration messages (Hello data packets).</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>1..2</code> (default setting: <code>2</code>) <p>If the device takes over the role of the root bridge, then the other devices in the network use the value specified here.</p> <p>Otherwise, the device uses the value specified by the root bridge. See the <i>Root information</i> frame.</p> <p>Due to the interaction with the <i>Tx holds</i> parameter, avoid modifying the default setting.</p>
Forward delay [s]	<p>Specifies the delay time for the status change in seconds.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>4..30</code> (default setting: <code>15</code>) <p>If the device takes over the role of the root bridge, then the other devices in the network use the value specified here.</p> <p>Otherwise, the device uses the value specified by the root bridge. See the <i>Root information</i> frame.</p> <p>In the RSTP protocol, the bridges negotiate a status change without a specified delay.</p> <p>The <i>Spanning Tree</i> protocol uses the parameter to delay the status change between the statuses <i>disabled</i>, <i>discarding</i>, <i>learning</i>, <i>forwarding</i>.</p> <p>The parameters <i>Forward delay [s]</i> and <i>Max age</i> have the following relationship:</p> $\text{Forward delay [s]} \geq (\text{Max age}/2) + 1$ <p>If you enter values in the fields that contradict this relationship, then the device replaces these values with the last valid values or with the default value.</p>

Max age	<p>Specifies the maximum permitted branch length for example, the number of devices to the root bridge.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 6..40 (default setting: 20) <p>If the device takes over the role of the root bridge, then the other devices in the network use the value specified here.</p> <p>Otherwise, the device uses the value specified by the root bridge. See the Root information frame.</p> <p>The Spanning Tree protocol uses the parameter to specify the validity of STP-BPDUs in seconds.</p>
Tx holds	<p>Limits the maximum transmission rate for sending BPDUs.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 1..40 (default setting: 10) <p>When the device sends a BPDU, the device increments a counter on this port.</p> <p>If the counter reaches the value specified here, then the port stops sending BPDUs. On the one hand, this reduces the load generated by RSTP, and on the other when the device does not receive BPDUs, a communication interruption can be caused.</p> <p>The device decrements the counter by 1 every second. In the following second, the device sends a maximum of 1 new BPDU.</p>
BPDU guard	<p>Activates/deactivates the BPDU Guard function in the device.</p> <p>With this function, the device helps protect your network from incorrect configurations, attacks with STP-BPDUs, and unwanted topology changes.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ selected The BPDU guard is active. <ul style="list-style-type: none"> – The device applies the function to manually specified edge ports. For these ports, in the Switching > L2-Redundancy > Spanning Tree > Port dialog, CIST tab the checkbox in the Admin edge port column is selected. – If an edge port receives an STP-BPDU, then the device disables the port. For this port, in the Basic Settings > Port dialog, Configuration tab the checkbox in the Port on column is cleared. ▶ cleared (default setting) The BPDU guard is inactive. <p>To reset the status of the port to the value forwarding, you proceed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> If the port is still receiving BPDUs, then: <ul style="list-style-type: none"> – In the Switching > L2-Redundancy > Spanning Tree > Port dialog, CIST tab, clear the checkbox in the Admin edge port column. or – In the Switching > L2-Redundancy > Spanning Tree > Global dialog, clear the BPDU guard checkbox. <input type="checkbox"/> To re-enable the port again you use the Auto-Disable function. Alternatively, proceed as follows: <ul style="list-style-type: none"> – Open the Basic Settings > Port dialog, Configuration tab. – Mark the checkbox in the Port on column.

BPDU filter (all admin edge ports) Activates/deactivates the STP-BPDU filter on every manually specified edge port. For these ports, in the [Switching > L2-Redundancy > Spanning Tree > Port](#) dialog, *CIST* tab the checkbox in the *Admin edge port* column is selected.

Possible values:

- ▶ *selected*
The BPDU filter is active on every edge port.
The function does not use these ports in *Spanning Tree* operations.
 - The device does not send STP-BPDUs on these ports.
 - The device drops any STP-BPDUs received on these ports.
- ▶ *cleared* (default setting)
The global BPDU filter is inactive.
You have the option to explicitly activate the BPDU filter for single ports. See the *Port BPDU filter* column in the [Switching > L2-Redundancy > Spanning Tree > Port](#) dialog.

Auto-disable Activates/deactivates the *Auto-Disable* function for the parameters that *BPDU guard* is monitoring on the port.

Possible values:

- ▶ *selected*
The *Auto-Disable* function for the *BPDU guard* is active.
 - When the port receives an STP-BPDU, the device disables an edge port. The “Link status” LED for the port flashes 3× per period.
 - The [Diagnostics > Ports > Auto-Disable](#) dialog displays which ports are disabled due to the parameters being exceeded.
 - The *Auto-Disable* function reactivates the port automatically. For this you go to the [Diagnostics > Ports > Auto-Disable](#) dialog and specify a waiting period for the relevant port in the *Reset timer [s]* column.
- ▶ *cleared* (default setting)
The *Auto-Disable* function for the *BPDU guard* is inactive.

Root information

Root ID Displays the bridge ID of the root bridge.

Possible values:

- ▶ *<Bridge priority> / <MAC address>*

Priority Displays the bridge priority of the root bridge.

Possible values:

- ▶ *0..61440* in steps of 4096

Hello time [s] Displays the time in seconds that the root bridge specifies between the sending of two configuration messages (Hello data packets).

Possible values:

- ▶ *1..2*

The device uses this specified value. See the [Bridge configuration](#) frame.

Forward delay [s] Specifies the delay time in seconds set up by the root bridge for status changes.

Possible values:

- ▶ 4..30

The device uses this specified value. See the *Bridge configuration* frame.

In the RSTP protocol, the bridges negotiate a status change without a specified delay.

The *Spanning Tree* protocol uses the parameter to delay the status change between the statuses *disabled*, *discarding*, *learning*, *forwarding*.

Max age Specifies the maximum permitted branch length that the root bridge sets up for example, the number of devices to the root bridge.

Possible values:

- ▶ 6..40 (default setting: 20)

The *Spanning Tree* protocol uses the parameter to specify the validity of STP-BPDUs in seconds.

Topology information

Bridge is root Displays if the device has the role of the root bridge.

Possible values:

- ▶ *selected*
The device has the role of the root bridge.
- ▶ *cleared*
Another device has the role of the root bridge.

Root port Displays the number of the port from which the path leads to the root bridge.

If the device takes over the role of the root bridge, then the field displays the value *no Port*.

Root path cost Specifies the path cost for the path that leads from the root port of the device to the root bridge of the layer 2 network.

Possible values:

- ▶ 0..200000000
If the value 0 is specified, then the device takes over the role of the root bridge.

Topology changes Displays how many times the device has put a port into the *forwarding* status using the *Spanning Tree* function since the *Spanning Tree* instance was started.

Time since topology change Displays the time since the last topology change.

Possible values:

▶ `<days, hours:minutes:seconds>`

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Spanning Tree Port

[Switching > L2-Redundancy > Spanning Tree > Port]

In this dialog you activate the Spanning Tree function on the ports, specify edge ports, and specify the settings for various protection functions.

The dialog contains the following tabs:

- ▶ [CIST]
- ▶ [Guards]

[CIST]

In this tab you have the option to activate the Spanning Tree function on the ports individually, specify the settings for edge ports, and view the present values. The abbreviation CIST stands for Common and Internal Spanning Tree.

NOTE: Deactivate the *Spanning Tree* function on the ports that are participating in other Layer 2 redundancy protocols. Otherwise, it is possible that the redundancy protocols operate differently than intended. This can cause loops.

Table

Port Displays the port number.

STP active Activates/deactivates the Spanning Tree function on the port.

Possible values:

- ▶ `selected` (default setting)
The *Spanning Tree* function is active on the port.
- ▶ `cleared`
The *Spanning Tree* function is inactive on the port.
If the *Spanning Tree* function is enabled in the device and inactive on the port, then the port does not send STP-BPDUs and drops any STP-BPDUs received.

Port state	<p>Displays the transmission status of the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>discarding</i> The port is blocked and forwards only STP-BPDUs.▶ <i>learning</i> The port is blocked, but it learns the MAC addresses of received data packets.▶ <i>forwarding</i> The port forwards data packets.▶ <i>disabled</i> The port is inactive. See the <i>Basic Settings > Port</i> dialog, <i>Configuration</i> tab.▶ <i>manualFwd</i> The <i>Spanning Tree</i> function is disabled on the port. The port forwards STP-BPDUs.▶ <i>notParticipate</i> The port is not participating in STP.
Port role	<p>Displays the role of the port in CIST.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>root</i> Port with the cheapest path to the root bridge.▶ <i>alternate</i> Port with the alternative path to the root bridge (currently blocking).▶ <i>designated</i> Port for the side of the tree averted from the root bridge (currently blocking).▶ <i>backup</i> Port receives STP-BPDUs from its own device.▶ <i>disabled</i> The port is inactive. See the <i>Basic Settings > Port</i> dialog, <i>Configuration</i> tab.
Port path cost	<p>Specifies the path costs of the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>0..200000000</i> (default setting: 0) <p>When the value is 0, the device automatically calculates the path costs depending on the data rate of the port.</p>
Port priority	<p>Specifies the priority of the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>0..240</i> in steps of 16 (default setting: 128) <p>This value represents the first 4 bits of the port ID.</p>

Received bridge ID	<p>Displays the bridge ID of the device from which this port last received an STP-BPDU.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ For ports with the <i>designated</i> role, the device displays the information for the STP-BPDU last received by the port. This helps to diagnose the possible STP issues in the network.▶ For the <i>alternate</i>, <i>backup</i>, <i>master</i>, and <i>root</i> port roles, in the stationary condition (static topology) this information is identical to the information of the <i>designated</i> port role.▶ If a port has no connection or if it did not receive any STP-BPDUs yet, then the device displays the values that the port can send with the <i>designated</i> role.
Received port ID	<p>Displays the port ID of the device from which this port last received an STP-BPDU.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ For ports with the <i>designated</i> role, the device displays the information for the STP-BPDU last received by the port. This helps to diagnose the possible STP issues in the network.▶ For the <i>alternate</i>, <i>backup</i>, <i>master</i>, and <i>root</i> port roles, in the stationary condition (static topology) this information is identical to the information of the <i>designated</i> port role.▶ If a port has no connection or if it did not receive any STP-BPDUs yet, then the device displays the values that the port can send with the <i>designated</i> role.
Received path cost	<p>Displays the path cost that the higher-level bridge has from its root port to the root bridge.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ For ports with the <i>designated</i> role, the device displays the information for the STP-BPDU last received by the port. This helps to diagnose the possible STP issues in the network.▶ For the <i>alternate</i>, <i>backup</i>, <i>master</i>, and <i>root</i> port roles, in the stationary condition (static topology) this information is identical to the information of the <i>designated</i> port role.▶ If a port has no connection or if it did not receive any STP-BPDUs yet, then the device displays the values that the port can send with the <i>designated</i> role.
Admin edge port	<p>Activates/deactivates the <i>Admin edge port</i> mode. If the port is connected to an end device, then use the <i>Admin edge port</i> mode. This setting lets the edge port change faster to the forwarding state after linkup and thus a faster accessibility of the end device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The <i>Admin edge port</i> mode is active. The port is connected to an end device.<ul style="list-style-type: none">– After the connection is set up, the port changes to the <i>forwarding</i> status without changing to the <i>learning</i> status beforehand.– If the port receives an STP-BPDU and the BPDU Guard function is active, then the device deactivates the port. See the Switching > L2-Redundancy > Spanning Tree > Global dialog.▶ <i>cleared</i> (default setting) The <i>Admin edge port</i> mode is inactive. The port is connected to another STP bridge. After the connection is set up, the port changes to the <i>learning</i> status before changing to the <i>forwarding</i> status, if applicable.

Auto edge port	<p>Activates/deactivates the automatic detection of whether you connect an end device to the port. The prerequisite is that the checkbox in the <i>Admin edge port</i> column is cleared.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The automatic detection is active. After the installation of the connection and after $1.5 \times \textit{Hello time [s]}$, the device sets the port to the <i>forwarding</i> status (default setting $1.5 \times 2 \text{ s}$) if the port did not receive any STP-BPDUs during this time.▶ <i>cleared</i> The automatic detection is inactive. After the installation of the connection, and after <i>Max age</i> the device sets the port to the <i>forwarding</i> status. (default setting: 20 s)
Oper edge port	<p>Displays if an end device or an STP bridge is connected to the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> An end device is connected to the port. The port does not receive any STP-BPDUs.▶ <i>cleared</i> An STP bridge is connected to the port. The port receives STP-BPDUs.
Oper PointToPoint	<p>Displays if the port is connected to an STP device via a direct full-duplex link.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The port is connected directly to an STP device via a full-duplex link. The direct, decentralized communication between 2 bridges enables short reconfiguration times.▶ <i>cleared</i> The port is connected in another way, for example via a half-duplex link or via a hub.
Port BPDU filter	<p>Activates/deactivates the filtering of STP-BPDUs on the port explicitly.</p> <p>The prerequisite is that the port is a manually specified edge port. For these ports, the checkbox in the <i>Admin edge port</i> column is selected.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The BPDU filter is active on the port. The function excludes the port from <i>Spanning Tree</i> operations.<ul style="list-style-type: none">– The device does not send STP-BPDUs on the port.– The device drops any STP-BPDUs received on the port.▶ <i>cleared</i> (default setting) The BPDU filter is inactive on the port. You have the option to globally activate the BPDU filter for every edge port. See the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog, <i>Bridge configuration</i> frame. If the <i>BPDU filter (all admin edge ports)</i> checkbox is selected, then the BPDU filter is still active on the port.

BPDU filter status	<p>Displays if the BPDU filter is active on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The BPDU filter is active on the port as a result of the following settings:<ul style="list-style-type: none">– The checkbox in the <i>Port BPDU filter</i> column is selected. and/or– The checkbox in the <i>BPDU filter (all admin edge ports)</i> column is selected. See the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog, <i>Bridge configuration</i> frame.▶ cleared The BPDU filter is inactive on the port.
BPDU flood	<p>Activates/deactivates the <i>BPDU flood</i> mode on the port even if the <i>Spanning Tree</i> function is inactive on the port. The device floods STP-BPDUs received on the port to the ports for which the <i>Spanning Tree</i> function is inactive and the <i>BPDU flood</i> mode is active too.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The <i>BPDU flood</i> mode is active.▶ cleared (default setting) The <i>BPDU flood</i> mode is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Guards]

This tab lets you specify the settings for various protection functions on the ports.

Table

Port	Displays the port number.
Root guard	<p>Activates/deactivates the monitoring of STP-BPDUs on the port. The prerequisite is that the <i>Loop guard</i> function is inactive.</p> <p>With this setting the device helps you protect your network from incorrect configurations or attacks with STP-BPDUs that try to change the topology. This setting is relevant only for ports with the STP role <i>designated</i>.</p>

Possible values:

- ▶ **selected**
The monitoring of STP-BPDUs is active.
 - If the port receives an STP-BPDU with better path information to the root bridge, then the device discards the STP-BPDU and sets the status of the port to the value *discarding* instead of *root*.
 - If there are no STP-BPDUs with better path information to the root bridge, then the device resets the status of the port after $2 \times \textit{Hello time [s]}$.
- ▶ **cleared** (default setting)
The monitoring of STP-BPDUs is inactive.

TCN guard

Activates/deactivates the monitoring of "Topology Change Notifications" on the port. With this setting the device helps you protect your network from attacks with STP-BPDUs that try to change the topology.

Possible values:

- ▶ **selected**
The monitoring of "Topology Change Notifications" is enabled.
 - The port ignores the Topology Change flag in received STP-BPDUs.
 - If the received BPDU contains other information that causes a topology change, then the device processes the BPDU even if the TCN guard is enabled.
Example: The device receives better path information for the root bridge.
- ▶ **cleared** (default setting)
The monitoring of "Topology Change Notifications" is disabled.
If the device receives STP-BPDUs with a Topology Change flag, then the device deletes the address table of the port and forwards the Topology Change Notifications.

Loop guard

Activates/deactivates the monitoring of loops on the port. The prerequisite is that the *Root guard* function is inactive.

With this setting the device helps prevent loops if the port does not receive any more STP-BPDUs. Use this setting only for ports with the STP role *alternate*, *backup* or *root*.

Possible values:

- ▶ **selected**
The monitoring of loops is active. This helps prevent loops for example, if you disable the Spanning Tree function on the remote device or if the connection is interrupted only in the receiving direction.
 - If the port does not receive any STP-BPDUs for a while, then the device sets the status of the port to the value *discarding* and marks the checkbox in the *Loop state* column.
 - If the port receives STP-BPDUs again, then the device sets the status of the port to a value according to *Port role* and clears the checkbox in the *Loop state* column.
- ▶ **cleared** (default setting)
The monitoring of loops is inactive.
If the port does not receive any STP-BPDUs for a while, then the device sets the status of the port to the value *forwarding*.

Loop state	<p>Displays if the loop state of the port is inconsistent.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ selected The loop state of the port is inconsistent: <ul style="list-style-type: none"> – The port is not receiving any STP-BPDUs and the <i>Loop guard</i> function is enabled. – The device sets the state of the port to the value <i>discarding</i>. The device thus helps prevent any potential loops. ▶ cleared The loop state of the port is consistent. The port receives STP-BPDUs.
Trans. into loop	Displays how many times the loop state of the port became inconsistent (selected checkbox in the <i>Loop state</i> column).
Trans. out of loop	Displays how many times the loop state of the port became consistent (cleared checkbox in the <i>Loop state</i> column).
BPDU guard effect	<p>Displays if the port received an STP-BPDU as an edge port.</p> <p>Prerequisite:</p> <ul style="list-style-type: none"> • The port is a manually specified edge port. In the <i>Port</i> dialog, the checkbox for this port in the <i>Admin edge port</i> column is selected. • In the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog, the BPDU Guard function is active. <p>Possible values:</p> <ul style="list-style-type: none"> ▶ selected The port is an edge port and received an STP-BPDU. The device deactivates the port. For this port, in the <i>Basic Settings > Port</i> dialog, <i>Configuration</i> tab the checkbox in the <i>Port on</i> column is cleared. ▶ cleared The port is an edge port and has not received any STP-BPDUs, or the port is not an edge port. <p>To reset the status of the port to the value <i>forwarding</i>, you proceed as follows:</p> <ul style="list-style-type: none"> <input type="checkbox"/> If the port is still receiving BPDUs, then: <ul style="list-style-type: none"> – In the <i>CIST</i> tab, clear the checkbox in the <i>Admin edge port</i> column. or – In the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog, clear the <i>BPDU guard</i> checkbox. <input type="checkbox"/> To activate the port, proceed as follows: <ul style="list-style-type: none"> – Open the <i>Basic Settings > Port</i> dialog, <i>Configuration</i> tab. – Mark the checkbox in the <i>Port on</i> column.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Link Aggregation

[Switching > L2-Redundancy > Link Aggregation]

The *Link Aggregation* function lets you aggregate multiple parallel links. The prerequisite is that the links have the same speed and are full duplex. The advantages compared to conventional connections using a single line are higher availability and a higher transmission bandwidth.

The Link Aggregation Control Protocol (LACP) makes it possible to monitor the packet-based continuous link status on the physical ports. LACP also helps ensure that the link partners meet the aggregation prerequisites.

If the remote side does not support the Link Aggregation Control Protocol (LACP), then you can use the *Static link aggregation* function. In this case, the device aggregates the links based on the link, link speed and duplex setting.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Configure each device of the *Link Aggregation* configuration individually.
- Complete the configuration of the other devices of the *Link Aggregation* configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Table

Trunk port	Displays the LAG interface number.
Name	Specifies the name of the LAG interface. Possible values: ▶ Alphanumeric ASCII character string with 0..64 characters
Active	Activates/deactivates the LAG interface. Possible values: ▶ <i>selected</i> (default setting) The LAG interface is active. Consider that the following protocols do not work properly on the physical ports when you activate the LAG interface: – <i>PTP</i> ▶ <i>cleared</i> The LAG interface is inactive.

STP active	<p>Activates/deactivates the <i>Spanning Tree</i> protocol on this LAG interface. The prerequisite is that you enable the <i>Spanning Tree</i> function globally in the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog.</p> <p>You can also activate/deactivate the <i>Spanning Tree</i> protocol on the LAG interfaces in the <i>Switching > L2-Redundancy > Spanning Tree > Port</i> dialog.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The <i>Spanning Tree</i> protocol is active on this LAG interface.▶ <i>cleared</i> The <i>Spanning Tree</i> protocol is inactive on this LAG interface.
Static link aggregation	<p>Activates/deactivates the <i>Static link aggregation</i> function on the LAG interface. The device aggregates the assigned physical ports to the LAG interface, even if the remote site does not support LACP.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The <i>Static link aggregation</i> function is active on this LAG interface. The device aggregates an assigned physical port to the LAG interface as soon as the physical port gets a link. The device does not send LACPDUs and discards received LACPDUs.▶ <i>cleared</i> (default setting) The <i>Static link aggregation</i> function is inactive on this LAG interface. If the connection was successfully negotiated using LACP, then the device aggregates an assigned physical port to the LAG interface.
Active ports (min.)	<p>Specifies the minimum number of physical ports to be active for the LAG interface to stay active. If the number of active physical ports is lower than the specified value, then the device deactivates the LAG interface.</p> <p>If a redundancy function like <i>Spanning Tree</i> is active in the device, then you use this function to force the device to switch automatically to the redundant line.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1 (default setting)▶ 2▶ Depending on the hardware:<ul style="list-style-type: none">4832
Type	<p>Displays if the LAG interface is based on the <i>Static link aggregation</i> function or on LACP.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>static</i> The LAG interface is based on the <i>Static link aggregation</i> function.▶ <i>dynamic</i> The LAG interface is based on LACP.

Send trap (Link up/down)	<p>Activates/deactivates the sending of SNMP traps when the device detects a change in the link up/down status for this interface.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) The sending of SNMP traps is active. If the device detects a link up/down status change, then the device sends an SNMP trap.▶ <code>cleared</code> The sending of SNMP traps is inactive. <p>The prerequisite for sending SNMP traps is that you enable the function in the Diagnostics > Status Configuration > Alarms (Traps) dialog and specify at least one trap destination.</p>
LACP admin key	<p>Specifies the LAG interface key. The device uses this key to identify the ports that can be aggregated to the LAG interface.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>0..65535</code> You specify the corresponding value for the physical ports in the LACP port actor admin key column.
LACP collector max. delay [µs]	<p>Specifies the Frame Collector maximum delay time in microseconds.</p> <p>The LAG uses a Frame Collector to pass frames to the MAC client in the order that the port receives them. The collector delays either delivering the frame to its MAC client or discarding the frame according to this value.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>0..65535</code>
Port	<p>Displays the physical ports number assigned to the LAG interface.</p>
Status	<p>Displays the LAG status of the port.</p> <ul style="list-style-type: none">▶ <code>active</code> The port is actively participating in the LAG instance.▶ <code>inactive</code> The port is a non-participant in the LAG instance.
LACP active	<p>Activates/deactivates LACP on the physical port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) LACP is active on the physical port.▶ <code>cleared</code> LACP is inactive on the physical port.

LACP port actor admin key	<p>Specifies the physical port key. The device uses this key to identify the ports that can be aggregated to the LAG interface.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0 The device ignores the key on this physical port when deciding to aggregate the port into the LAG interface.▶ 1..65535 If this value matches the value of the LAG interface specified in the <i>LACP admin key</i> column, then the device only aggregates this physical port to the LAG interface.
LACP actor admin state	<p>Specifies the actor state values that the LAG interface transmits in the LACPDU. This lets you control the LACPDU parameters.</p> <p>The device lets you mix the values. In the drop-down list, select one or more values.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>lacpActivity</i> (LACP_Activity state) When selected, the link transmits the LACPDUs cyclically, otherwise when requested.▶ <i>lacpTimeout</i> (LACP_Timeout state) When selected, the link transmits the LACPDUs cyclically using the short timeout, otherwise using the long timeout.▶ <i>aggregation</i> (Aggregation state) When selected, the device interprets the link as a candidate for aggregation, otherwise as an individual link. <p>For further information on the values, see the standard IEEE 802.1AX-2014.</p>
LACP actor port priority	<p>Specifies the LACP actor port priority for this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..65535 (default setting: 128) The port with the lower value has the higher priority.
LACP partner port admin key	<p>Specifies the default value for the partner key, assigned by administrator or system policy for use when information about the partner is unknown or expired.</p> <p>The LAG uses keys to assign membership to partner ports. Specify the same key value for the local partners participating in the same LAG.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..65535 (default setting: 0) If the port is alone in a LAG, then set this value to 0. When the port is in a LAG, then set this value to correspond with the LAG operational key. <p>To manage the partner ports, you use this parameter in conjunction with the settings in the following columns:</p> <ul style="list-style-type: none">• <i>LACP partner admin port</i>• <i>LACP partner admin port priority</i>• <i>LACP partner admin SysID</i>• <i>LACP partner admin sys priority</i>

LACP partner admin state

Specifies the partner administrative state values.

You have the option to combine the values with each other which allows you administrative control over the LACPDU parameters. In the drop-down list, select one or more values.

Possible values:

- ▶ `lacpActivity`
Specifies whether the port is an active or passive participant. An active participant transmits LACPDUs periodically. A passive participant transmits LACPDUs when requested. When selected you set the parameter to active.
- ▶ `lacpTimeout`
The Actor periodically transmits LACPDUs at either a slow or fast transmission rate depending on the settings of the Partner either long timeout or short timeout. When selected you set the parameter to short timeout.
- ▶ `aggregation`
Specifies whether the port is a potential candidate for aggregation or for an individual link. When selected you set the parameter to aggregatable.

When the parameter is unspecified the device displays the following values for the LACPDU parameters:

- ▶ `synchronization`
The system considers this link to be allocated to the correct LAG, and the group is associated with a compatible aggregator. Furthermore, the identity of the LAG is consistent with the system ID, and operational key information transmitted.
- ▶ `collecting`
Collection of incoming data packets on this link is definitely enabled. For example, collection is enabled and remains enabled in the absence of administrative changes or changes in the received protocol information.
- ▶ `distributing`
Distribution is disabled and remains disabled in the absence of administrative changes or changes in received protocol information.
- ▶ `defaulted`
The LACPDUs received by the actor is using the statically configured partner information.
- ▶ `expired`
The LACPDUs received by the partner is in the expired state.

LACP partner admin port

Specifies the port number of the partner port.

Possible values:

- ▶ `0..65535` (default setting: 0)

To manage the partner ports, you use this parameter in conjunction with the settings in the following columns:

- `LACP partner port admin key`
- `LACP partner admin port priority`
- `LACP partner admin SysID`
- `LACP partner admin sys priority`

LACP partner admin port priority

Specifies the port priority for the partner port.

Possible values:

- ▶ `0..65535` (default setting: 0)
The port with the lower value has the higher priority.

To manage the partner ports, you use this parameter in conjunction with the settings in the following columns:

- *LACP partner port admin key*
- *LACP partner admin port*
- *LACP partner admin SysID*
- *LACP partner admin sys priority*

LACP partner admin SysID

Specifies a MAC Address value representing the Partner System ID.

Possible values:

- ▶ Valid MAC address (default setting: 00:00:00:00:00:00)

To manage the partner ports, you use this parameter in conjunction with the settings in the following columns:

- *LACP partner port admin key*
- *LACP partner admin port*
- *LACP partner admin port priority*
- *LACP partner admin sys priority*

LACP partner admin sys priority

Specifies the default value for the system priority component of the system identifier of the partner, assigned by administrator or system policy for use when the information from the partner is unknown or expired.

Possible values:

- ▶ 0..65535 (default setting: 0)
The port with the lower value has the higher priority.

To manage the partner ports, you use this parameter in conjunction with the settings in the following columns:

- *LACP partner port admin key*
- *LACP partner admin port*
- *LACP partner admin port priority*
- *LACP partner admin SysID*

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Opens the *Create* window to add a new LAG interface entry to the table or to assign a physical port to a LAG interface.

- ▶ In the *Trunk port* drop-down list, you select the LAG interface number.
- ▶ In the *Port* drop-down list, you select the number of a physical port to assign to the LAG interface.

After you create a LAG interface, the device adds the LAG interface to the table in the *Basic Settings > Port* dialog, *Statistics* tab.

Link Backup

[Switching > L2-Redundancy > Link Backup]

With Link Backup, you configure pairs of redundant links. Each pair has a primary port and a backup port. The primary port forwards traffic until the device detects an error. If the device detects an error on the primary port, then the Link Backup function transfers traffic over to the backup port.

The dialog also lets you set a *fail back* option. If you enable the *fail back* function and the primary port returns to normal operation, then the device first blocks traffic on the backup port and then forwards traffic on the primary port. This process helps protect the device from causing loops in the network.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Configure each device of the *Link Backup* configuration individually.
- Complete the configuration of the other devices of the *Link Backup* configuration.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Operation

Operation

Enables/disables the Link Backup function globally in the device.

Possible values:

- ▶ *On*
Enables the Link Backup function.
- ▶ *OFF* (default setting)
Disables the Link Backup function.

Table

Primary port	<p>Displays the primary port of the interface pair. When you enable the Link Backup function, this port forwards traffic.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Physical ports
Backup port	<p>Displays the backup port on which the device forwards traffic if the device detects an error on the primary port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Physical ports except for the port you set as the primary port.
Description	<p>Specifies the Link Backup pair. Enter a name to identify the Backup pair.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 0..255 characters
Primary port status	<p>Displays the status of the primary port for this Link Backup pair.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>forwarding</i> The link is up, no shutdown, and forwarding traffic.▶ <i>blocking</i> The link is up, no shutdown, and blocking traffic.▶ <i>down</i> The port is either link down, cable unplugged, or disabled in software, shutdown.▶ <i>unknown</i> The Link Backup feature is globally disabled, or the port pair is inactive. Therefore, the device ignores the port pair settings.
Backup port status	<p>Displays the status of the Backup port for this Link Backup pair.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>forwarding</i> The link is up, no shutdown, and forwarding traffic.▶ <i>blocking</i> The link is up, no shutdown, and blocking traffic.▶ <i>down</i> The port is either link down, cable unplugged, or disabled in the software, shutdown.▶ <i>unknown</i> The Link Backup feature is globally disabled, or the port pair is inactive. Therefore, the device ignores the port pair settings.

Fail back	<p>Activates/deactivates the automatic <i>fail back</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) The automatic <i>fail back</i> is active. After the delay timer expires, the backup port changes to <i>blocking</i> and the primary port changes to <i>forwarding</i>.▶ cleared The automatic <i>fail back</i> is inactive. The backup port continues forwarding traffic even after the primary port re-establishes a link or you manually change the admin status of the primary port from <i>shutdown</i> to <i>no shutdown</i>.
Fail back delay [s]	<p>Specifies the delay time in seconds that the device waits after the primary port re-establishes a link. Furthermore, this timer also applies when you manually set the admin status of the primary port from <i>shutdown</i> to <i>no shutdown</i>. After the delay timer expires, the backup port changes to <i>blocking</i> and the primary port changes to <i>forwarding</i>.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..3600 (default setting: 30) When set to 0, immediately after the primary port re-establishes a link, the backup port changes to <i>blocking</i> and the primary port changes to <i>forwarding</i>. Furthermore, immediately after you manually set the admin status of from <i>shutdown</i> to <i>no shutdown</i>, the backup port changes to <i>blocking</i> and the primary port changes to <i>forwarding</i>.
Active	<p>Activates/deactivates the Link Back up pair configuration.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The Link Backup pair is active. The device senses the link and administration status and forwards traffic according to the pair configuration.▶ cleared (default setting) The Link Backup pair is inactive. The ports forward traffic according to standard switching.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Create

Primary port

Specifies the primary port of the backup interface pair. During normal operation this port forwards the traffic.

Possible values:

- ▶ Physical ports

Backup port

Specifies the backup port to which the device transfers the traffic to if the device detects an error on the primary port.

Possible values:

- ▶ Physical ports except for the port you set as the primary port.

Diagnostics

The menu contains the following dialogs:

- ▶ [Status Configuration](#)
- ▶ [System](#)
- ▶ [Syslog](#)
- ▶ [Ports](#)
- ▶ [LLDP](#)
- ▶ [Report](#)

Status Configuration

[Diagnostics > Status Configuration]

The menu contains the following dialogs:

- ▶ [Device Status](#)
- ▶ [Security Status](#)
- ▶ [Signal Contact](#)
- ▶ [MAC Notification](#)
- ▶ [Alarms \(Traps\)](#)

Device Status

[Diagnostics > Status Configuration > Device Status]

The device status provides an overview of the overall condition of the device. Many process visualization systems record the device status for a device in order to present its condition in graphic form.

The device displays its current status as *error* or *ok* in the *Device status* frame. The device determines this status from the individual monitoring results.

The device displays detected errors in the *Status* tab and also in the *Basic Settings > System* dialog, *Device Status* frame.

The dialog contains the following tabs:

- ▶ [\[Global\]](#)
- ▶ [\[Port\]](#)
- ▶ [\[Status\]](#)

[Global]

Device status

Device status

Displays the status of the device. The device determines the status from the individual monitored parameters.

Possible values:

- ▶ *error*
The device displays this value to indicate a detected error in one of the monitored parameters.
- ▶ *ok*

Traps

Send trap

Activates/deactivates the sending of SNMP traps when the device detects a change in a monitored function.

Possible values:

- ▶ *selected* (default setting)
The sending of SNMP traps is active.
If the device detects a change in the monitored functions, then the device sends an SNMP trap.
- ▶ *cleared*
The sending of SNMP traps is inactive.

The prerequisite for sending SNMP traps is that you enable the function in the *Diagnostics > Status Configuration > Alarms (Traps)* dialog and specify at least one trap destination.

Table

Connection errors

Activates/deactivates the monitoring of the link status of the port/interface.

Possible values:

- ▶ *selected*
Monitoring is active.
If the link interrupts on a monitored port/interface, then in the *Device status* frame, the value changes to *error*.
In the *Port* tab, you have the option of selecting the ports/interfaces to be monitored individually.
- ▶ *cleared* (default setting)
Monitoring is inactive.

Temperature	<p>Activates/deactivates the monitoring of the temperature in the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If the temperature exceeds or falls below the specified limit, then in the <i>Device status</i> frame, the value changes to <i>error</i>.▶ cleared Monitoring is inactive. <p>You specify the temperature thresholds in the <i>Basic Settings > System</i> dialog, <i>Upper temp. limit [°C]</i> field and <i>Lower temp. limit [°C]</i> field.</p>
External memory removal	<p>Activates/deactivates the monitoring of the active external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Monitoring is active. If you remove the active external memory from the device, then in the <i>Device status</i> frame, the value changes to <i>error</i>.▶ cleared (default setting) Monitoring is inactive.
External memory not in sync	<p>Activates/deactivates the monitoring of the configuration profile in the device and in the external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Monitoring is active. In the <i>Device status</i> frame, the value changes to <i>error</i> in the following situations:<ul style="list-style-type: none">– The configuration profile only exists in the device.– The configuration profile in the device differs from the configuration profile in the external memory.▶ cleared (default setting) Monitoring is inactive.
Ring redundancy	<p>Activates/deactivates the monitoring of the ring redundancy.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Monitoring is active. In the <i>Device status</i> frame, the value changes to <i>error</i> in the following situations:<ul style="list-style-type: none">– The redundancy function becomes active (loss of redundancy reserve).– The device is a normal ring participant and detects an error in its settings.▶ cleared (default setting) Monitoring is inactive.
Power supply	<p>Activates/deactivates the monitoring of the power supply unit.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If the device has a detected power supply error, then in the <i>Device status</i> frame, the value changes to <i>error</i>.▶ cleared Monitoring is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Port]

Table

Port	Displays the port number.
Propagate connection error	<p>Activates/deactivates the monitoring of the link on the port/interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> Monitoring is active. If the link on the selected port/interface is interrupted, then in the <i>Device status</i> frame, the value changes to <i>error</i>. ▶ <i>cleared</i> (default setting) Monitoring is inactive. <p>This setting takes effect when you mark the <i>Connection errors</i> checkbox in the <i>Global</i> tab.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Status]

Table

Timestamp	Displays the date and time of the event in the format, <i>Month Day, Year hh:mm:ss AM/PM</i> .
Cause	Displays the event which caused the SNMP trap.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Security Status

[Diagnostics > Status Configuration > Security Status]

This dialog gives you an overview of the status of the safety-relevant settings in the device.

The device displays its current status as *error* or *ok* in the *Security status* frame. The device determines this status from the individual monitoring results.

The device displays detected errors in the *Status* tab and also in the *Basic Settings > System* dialog, *Security status* frame.

The dialog contains the following tabs:

- ▶ [Global]
- ▶ [Port]
- ▶ [Status]

[Global]

Security status

Security status

Displays the status of the security-relevant settings in the device. The device determines the status from the individual monitored parameters.

Possible values:

- ▶ *error*
The device displays this value to indicate a detected error in one of the monitored parameters.
- ▶ *ok*

Traps

Send trap

Activates/deactivates the sending of SNMP traps when the device detects a change in a monitored function.

Possible values:

- ▶ *selected*
The sending of SNMP traps is active.
If the device detects a change in the monitored functions, then the device sends an SNMP trap.
- ▶ *cleared* (default setting)
The sending of SNMP traps is inactive.

The prerequisite for sending SNMP traps is that you enable the function in the *Diagnostics > Status Configuration > Alarms (Traps)* dialog and specify at least one trap destination.

Table

Password default settings unchanged	<p>Activates/deactivates the monitoring of the password for the locally set up user account <code>admin</code>.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) Monitoring is active. If the password is set to the default setting for the <code>admin</code> account, then in the <code>Security status</code> frame, the value changes to <code>error</code>. ▶ <code>cleared</code> Monitoring is inactive. <p>You set the password in the <code>Device Security > User Management</code> dialog.</p>
Min. password length < 8	<p>Activates/deactivates the monitoring of the <code>Min. password length</code> policy.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) Monitoring is active. If the value for the <code>Min. password length</code> policy is less than 8, then in the <code>Security status</code> frame, the value changes to <code>error</code>. ▶ <code>cleared</code> Monitoring is inactive. <p>You specify the <code>Min. password length</code> policy in the <code>Device Security > User Management</code> dialog in the <code>Configuration</code> frame.</p>
Password policy settings deactivated	<p>Activates/deactivates the monitoring of the Password policies settings.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) Monitoring is active. If the value for at least one of the following policies is less than 1, then in the <code>Security status</code> frame, the value changes to <code>error</code>. <ul style="list-style-type: none"> – <code>Upper-case characters (min.)</code> – <code>Lower-case characters (min.)</code> – <code>Digits (min.)</code> – <code>Special characters (min.)</code> ▶ <code>cleared</code> Monitoring is inactive. <p>You specify the policy settings in the <code>Device Security > User Management</code> dialog in the <code>Password policy</code> frame.</p>
User account password policy check deactivated	<p>Activates/deactivates the monitoring of the <code>Policy check</code> function.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> Monitoring is active. If the <code>Policy check</code> function is inactive for at least one user account, then in the <code>Security status</code> frame, the value changes to <code>error</code>. ▶ <code>cleared</code> (default setting) Monitoring is inactive. <p>You activate the <code>Policy check</code> function in the <code>Device Security > User Management</code> dialog.</p>

Telnet server active	Activates/deactivates the monitoring of the Telnet server. Possible values: <ul style="list-style-type: none"><li data-bbox="483 241 1390 367">▶ selected (default setting) Monitoring is active. If you enable the Telnet server, then in the <i>Security status</i> frame, the value changes to <i>error</i>.<li data-bbox="483 383 783 443">▶ cleared Monitoring is inactive. You enable/disable the Telnet server in the <i>Device Security > Management Access > Server</i> dialog, <i>Telnet</i> tab.
HTTP server active	Activates/deactivates the monitoring of the HTTP server. Possible values: <ul style="list-style-type: none"><li data-bbox="483 701 1390 826">▶ selected (default setting) Monitoring is active. If you enable the HTTP server, then in the <i>Security status</i> frame, the value changes to <i>error</i>.<li data-bbox="483 842 783 902">▶ cleared Monitoring is inactive. You enable/disable the HTTP server in the <i>Device Security > Management Access > Server</i> dialog, <i>HTTP</i> tab.
SNMP unencrypted	Activates/deactivates the monitoring of the SNMP server. Possible values: <ul style="list-style-type: none"><li data-bbox="483 1155 1449 1442">▶ selected (default setting) Monitoring is active. If at least one of the following conditions applies, then in the <i>Security status</i> frame, the value changes to <i>error</i>:<ul style="list-style-type: none"><li data-bbox="520 1285 948 1317">– The <i>SNMPv1</i> function is enabled.<li data-bbox="520 1319 948 1350">– The <i>SNMPv2</i> function is enabled.<li data-bbox="520 1352 1031 1384">– The encryption for SNMPv3 is disabled.You enable the encryption in the <i>Device Security > User Management</i> dialog, in the <i>SNMP encryption type</i> column.<li data-bbox="483 1458 783 1518">▶ cleared Monitoring is inactive. You specify the settings for the SNMP agent in the <i>Device Security > Management Access > Server</i> dialog, <i>SNMP</i> tab.
Access to system monitor with V.24 possible	Activates/deactivates the monitoring of the system monitor. When the system monitor is activated, you have the possibility to change to the system monitor via a serial connection.

Possible values:

- ▶ **selected**
Monitoring is active.
If you activate the system monitor, then in the *Security status* frame, the value changes to *error*.
- ▶ **cleared** (default setting)
Monitoring is inactive.

You activate/deactivate the system monitor in the *Diagnostics > System > Selftest* dialog.

Saving the configuration profile on the external memory possible

Activates/deactivates the monitoring of the configuration profile in the external memory.

Possible values:

- ▶ **selected**
Monitoring is active.
If you activate the saving of the configuration profile in the external memory, then in the *Security status* frame, the value changes to *error*.
- ▶ **cleared** (default setting)
Monitoring is inactive.

You activate/deactivate the saving of the configuration profile in the external memory in the *Basic Settings > External Memory* dialog.

Link interrupted on enabled device ports

Activates/deactivates the monitoring of the link on the active ports.

Possible values:

- ▶ **selected**
Monitoring is active.
If the link interrupts on an active port, then in the *Security status* frame, the value changes to *error*. In the *Port* tab, you have the option of selecting the ports to be monitored individually.
- ▶ **cleared** (default setting)
Monitoring is inactive.

Access with Ethernet Switch Configurator possible

Activates/deactivates the monitoring of the Ethernet Switch Configurator function.

Possible values:

- ▶ **selected** (default setting)
Monitoring is active.
If you enable the Ethernet Switch Configurator function, then in the *Security status* frame, the value changes to *error*.
- ▶ **cleared**
Monitoring is inactive.

You enable/disable the Ethernet Switch Configurator function in the *Basic Settings > Network* dialog.

Load unencrypted config from external memory	<p>Activates/deactivates the monitoring of loading unencrypted configuration profiles from the external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If the settings allow the device to load an unencrypted configuration profile from the external memory, then in the Security status frame, the value changes to error. If the following preconditions are fulfilled, then the Security status frame in the Basic Settings > System dialog, displays an alarm.<ul style="list-style-type: none">– The configuration profile stored in the external memory is unencrypted. and– The Config priority column in the Basic Settings > External Memory dialog has the value first.▶ cleared Monitoring is inactive.
IEC61850-MMS active	<p>Activates/deactivates the monitoring of the IEC61850-MMS function.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If you enable the IEC61850-MMS function, then in the Security status frame, the value changes to error.▶ cleared Monitoring is inactive. <p>You enable/disable the IEC61850-MMS function in the Industrial Protocols > IEC61850-MMS dialog, Operation frame.</p>
Self-signed HTTPS certificate present	<p>Activates/deactivates the monitoring of the HTTPS certificate.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If the HTTPS server uses a self-created digital certificate, then in the Security status frame, the value changes to error.▶ cleared Monitoring is inactive.
Modbus TCP active	<p>Activates/deactivates the monitoring of the Modbus TCP function.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If you enable the Modbus TCP function, then in the Security status frame, the value changes to error.▶ cleared Monitoring is inactive. <p>You enable/disable the Modbus TCP function in the Advanced > Industrial Protocols > Modbus TCP dialog, Operation frame.</p>

EtherNet/IP active	<p>Activates/deactivates the monitoring of the <i>EtherNet/IP</i> function.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) Monitoring is active. If you enable the <i>EtherNet/IP</i> function, then in the <i>Security status</i> frame, the value changes to <i>error</i>.▶ <i>cleared</i> Monitoring is inactive. <p>You enable/disable the <i>EtherNet/IP</i> function in the <i>Advanced > Industrial Protocols > EtherNet/IP</i> dialog, <i>Operation</i> frame.</p>
--------------------	--

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Port]

Table

Port	Displays the port number.
Link interrupted on enabled device ports	<p>Activates/deactivates the monitoring of the link on the active ports.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> Monitoring is active. If the port is enabled (<i>Basic Settings > Port</i> dialog, <i>Configuration</i> tab, <i>Port on</i> checkbox is selected) and the link is down on the port, then in the <i>Security status</i> frame, the value changes to <i>error</i>.▶ <i>cleared</i> (default setting) Monitoring is inactive. <p>This setting takes effect when you mark the <i>Link interrupted on enabled device ports</i> checkbox in the <i>Diagnostics > Status Configuration > Security Status</i> dialog, <i>Global</i> tab.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Status]

Table

Timestamp	Displays the date and time of the event in the format, Month Day, Year hh:mm:ss AM/PM .
Cause	Displays the event which caused the SNMP trap.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Signal Contact

[Diagnostics > Status Configuration > Signal Contact]

The signal contact is a potential-free relay contact. The device thus lets you perform remote diagnosis. The device uses the relay contact to signal the occurrence of events by opening the relay contact and interrupting the closed circuit.

NOTE: The device can contain several signal contacts. Each contact contains the same monitoring functions. Several contacts allow you to group various functions together providing flexibility in system monitoring.

The menu contains the following dialogs:

- ▶ [Signal Contact 1 / Signal Contact 2](#)

Signal Contact 1 / Signal Contact 2

[Diagnostics > Status Configuration > Signal Contact > Signal Contact 1]

In this dialog you specify the trigger conditions for the signal contact.

The signal contact gives you the following options:

- ▶ Monitoring the correct operation of the device.
- ▶ Signaling the device status of the device.
- ▶ Signaling the security status of the device.
- ▶ Controlling external devices by manually setting the signal contacts.

The device displays detected errors in the [Status](#) tab and also in the [Basic Settings > System](#) dialog, [Signal contact status](#) frame.

The dialog contains the following tabs:

- ▶ [Global]
- ▶ [Port]
- ▶ [Status]

[Global]

Configuration

Mode

Specifies which events the signal contact indicates.

Possible values:

- ▶ *Manual setting* (default setting for *Signal Contact 2*, if present)
You use this setting to manually open or close the signal contact, for example to turn on or off a remote device. See the *Contact* option list.
- ▶ *Monitoring correct operation* (default setting)
Using this setting the signal contact indicates the status of the parameters specified in the table below.
- ▶ *Device status*
Using this setting the signal contact indicates the status of the parameters monitored in the *Diagnostics > Status Configuration > Device Status* dialog. In addition, you can read the status in the *Signal contact status* frame.
- ▶ *Security status*
Using this setting the signal contact indicates the status of the parameters monitored in the *Diagnostics > Status Configuration > Security Status* dialog. In addition, you can read the status in the *Signal contact status* frame.
- ▶ *Device/Security status*
Using this setting the signal contact indicates the status of the parameters monitored in the *Diagnostics > Status Configuration > Device Status* and the *Diagnostics > Status Configuration > Security Status* dialog. In addition, you can read the status in the *Signal contact status* frame.

Contact

Toggles the signal contact manually. The prerequisite is that in the *Mode* drop-down list you select the *Manual setting* item.

Possible values:

- ▶ *open*
The signal contact is opened.
- ▶ *close*
The signal contact is closed.

Signal contact status

Signal contact status

Displays the status of the signal contact.

Possible values:

- ▶ *Opened (error)*
The signal contact is opened. The circuit is interrupted.
- ▶ *Closed (ok)*
The signal contact is closed. The circuit is closed.

Trap configuration

Send trap

Activates/deactivates the sending of SNMP traps when the device detects a change in a monitored function.

Possible values:

- ▶ *selected*
The sending of SNMP traps is active.
If the device detects a change in the monitored functions, then the device sends an SNMP trap.
- ▶ *cleared (default setting)*
The sending of SNMP traps is inactive.

The prerequisite for sending SNMP traps is that you enable the function in the [Diagnostics > Status Configuration > Alarms \(Traps\)](#) dialog and specify at least one trap destination.

Monitoring correct operation

In the table you specify the parameters that the device monitors. The device signals the occurrence of an event by opening the signal contact.

Connection errors

Activates/deactivates the monitoring of the link status of the port/interface.

Possible values:

- ▶ *selected*
Monitoring is active.
If the link interrupts on a monitored port/interface, then the signal contact opens.
In the *Port* tab, you have the option of selecting the ports/interfaces to be monitored individually.
- ▶ *cleared (default setting)*
Monitoring is inactive.

Temperature	<p>Activates/deactivates the monitoring of the temperature in the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If the temperature exceeds / falls below the threshold values, then the signal contact opens.▶ cleared Monitoring is inactive. <p>You specify the temperature thresholds in the <i>Basic Settings > System</i> dialog, <i>Upper temp. limit [°C]</i> field and <i>Lower temp. limit [°C]</i> field.</p>
External memory removed	<p>Activates/deactivates the monitoring of the active external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Monitoring is active. If you remove the active external memory from the device, then the signal contact opens.▶ cleared (default setting) Monitoring is inactive.
External memory not in sync with NVM	<p>Activates/deactivates the monitoring of the configuration profile in the device and in the external memory.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Monitoring is active. The signal contact opens in the following situations:<ul style="list-style-type: none">– The configuration profile only exists in the device.– The configuration profile in the device differs from the configuration profile in the external memory.▶ cleared (default setting) Monitoring is inactive.
Ring redundancy	<p>Activates/deactivates the monitoring of the ring redundancy.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected Monitoring is active. The signal contact opens in the following situations:<ul style="list-style-type: none">– The redundancy function becomes active (loss of redundancy reserve).– The device is a normal ring participant and detects an error in its settings.▶ cleared (default setting) Monitoring is inactive.
Power supply	<p>Activates/deactivates the monitoring of the power supply unit.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) Monitoring is active. If the device has a detected power supply error, then the signal contact opens.▶ cleared Monitoring is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Port]

Table

Port	Displays the port number.
Propagate connection error	<p>Activates/deactivates the monitoring of the link on the port/interface.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> Monitoring is active. If the link interrupts on the selected port/interface, then the signal contact opens. ▶ <code>cleared</code> (default setting) Monitoring is inactive. <p>This setting takes effect when you mark the <i>Connection errors</i> checkbox in the <i>Global</i> tab.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Status]

Table

Timestamp	Displays the date and time of the event in the format, <code>Month Day, Year hh:mm:ss AM/PM</code> .
Cause	Displays the event which caused the SNMP trap.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

MAC Notification

[Diagnostics > Status Configuration > MAC Notification]

The device lets you track changes in the network using the MAC address of the devices in the network. The device saves the combination of port and MAC address in its MAC address table. If the device (un)learns the MAC address of a (dis)connected device, then the device sends an SNMP trap.

This function is intended for ports to which you connect end devices and thus the MAC address changes infrequently.

Operation

Operation

Enables/disables the *MAC Notification* function in the device.

Possible values:

- ▶ *On*
The *MAC Notification* function is enabled.
- ▶ *Off* (default setting)
The *MAC Notification* function is disabled.

Configuration

Interval [s]

Specifies the send interval in seconds. If the device (un)learns the MAC address of a (dis)connected device, then the device sends an SNMP trap after this time.

Possible values:

- ▶ *0..2147483647* (default setting: 1)

Before sending an SNMP trap, the device registers up to 20 MAC addresses. If the device detects a high number of changes, then the device sends the SNMP trap before the send interval expires.

Table

Port

Displays the port number.

Active	<p>Activates/deactivates the <i>MAC Notification</i> function on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The <i>MAC Notification</i> function is active on the port. The device sends an SNMP trap in case of one of the following events:<ul style="list-style-type: none">– The device learns the MAC address of a newly connected device.– The device unlearns the MAC address of a disconnected device.▶ <i>cleared</i> (default setting) The <i>MAC Notification</i> function is inactive on the port. <p>The prerequisite for sending SNMP traps is that you enable the function in the <i>Diagnostics > Status Configuration > Alarms (Traps)</i> dialog and specify at least one trap destination.</p>
Last MAC address	<p>Displays the MAC address of the device last connected on or disconnected from the port.</p> <p>The device detects the MAC addresses of devices which are connected as follows:</p> <ul style="list-style-type: none">• directly connected to the port• connected to the port through other devices in the network
Last MAC status	<p>Displays the status of the <i>Last MAC address</i> value on this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>added</i> The device detected that another device was connected at the port.▶ <i>removed</i> The device detected that the connected device was removed from the port.▶ <i>other</i> The device did not detect a status.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Alarms (Traps)

[Diagnostics > Status Configuration > Alarms (Traps)]

The device lets you send an SNMP trap as a reaction to specific events. In this dialog you specify the trap destinations to which the device sends the SNMP traps.

The events for which the device triggers an SNMP trap, you specify, for example, in the following dialogs:

- ▶ in the *Diagnostics > Status Configuration > Device Status* dialog
- ▶ in the *Diagnostics > Status Configuration > Security Status* dialog
- ▶ in the *Diagnostics > Status Configuration > MAC Notification* dialog

Operation

Operation

Enables/disables the sending of SNMP traps to the trap destinations.

Possible values:

- ▶ *On* (default setting)
The sending of SNMP traps is enabled.
- ▶ *Off*
The sending of SNMP traps is disabled.

Table

Name

Specifies the name of the trap destination.

Possible values:

- ▶ Alphanumeric ASCII character string with 1..32 characters

Address

Specifies the IP address and the port number of the trap destination.

Possible values:

- ▶ `<Valid IPv4 address>:<port number>`

Active

Activates/deactivates the sending of SNMP traps to this trap destination.

Possible values:

- ▶ *selected* (default setting)
The sending of SNMP traps to this trap destination is active.
- ▶ *cleared*
The sending of SNMP traps to this trap destination is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.



Opens the *Create* window to add a new entry to the table.

- ▶ In the *Name* field you specify a name for the trap destination.
- ▶ In the *Address* field you specify the IP address and the port number of the trap destination.
If you choose not to enter a port number, then the device automatically adds the port number 162.

System

[Diagnostics > System]

The menu contains the following dialogs:

- ▶ [System Information](#)
- ▶ [Hardware State](#)
- ▶ [IP Address Conflict Detection](#)
- ▶ [ARP](#)
- ▶ [Selftest](#)

System Information

[Diagnostics > System > System Information]

This dialog displays the operating condition of individual components in the device. The displayed values are a snapshot; they represent the operating condition at the time the dialog was loaded to the page.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Save system information

Opens the HTML page in a new web browser window or tab. You can save the HTML page on your PC using the appropriate web browser command.

Hardware State

[Diagnostics > System > Hardware State]

This dialog provides information about the distribution and state of the flash memory of the device.

Information

Uptime

Displays the total operating time of the device since it was delivered.

Possible values:

- ▶ `..d ..h ..m ..s`
Day(s) Hour(s) Minute(s) Second(s)

Table

Flash region	Displays the name of the respective memory area.
Description	Displays a description of what the device uses the memory area for.
Flash sectors	Displays how many sectors are assigned to the memory area.
Sector erase operations	Displays how many times the device has overwritten the sectors of the memory area.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

IP Address Conflict Detection

[Diagnostics > System > IP Address Conflict Detection]

Using the *IP Address Conflict Detection* function the device verifies that its IP address is unique in the network. For this purpose, the device analyzes received ARP packets.

In this dialog you specify the procedure with which the device detects address conflicts and specify the required settings for this.

The device displays detected address conflicts in the table.

When the device detects an address conflict, the status LED of the device flashes red 4 times.

Operation

Operation Enables/disables the *IP Address Conflict Detection* function.

Possible values:

- ▶ *On* (default setting)
The *IP Address Conflict Detection* function is enabled.
The device verifies that its IP address is unique in the network.
- ▶ *Off*
The *IP Address Conflict Detection* function is disabled.

Configuration

Detection mode	<p>Specifies the procedure with which the device detects address conflicts.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>active and passive</i> (default setting) The device uses active and passive address conflict detection.▶ <i>active</i> Active address conflict detection. The device actively helps avoid communicating with an IP address that already exists in the network. The address conflict detection begins as soon as you connect the device to the network or change its IP parameters.<ul style="list-style-type: none">– The device sends 4 ARP probe data packets at the interval specified in the <i>Detection delay [ms]</i> field. If the device receives a response to these data packets, then there is an address conflict.– If the device does not detect an address conflict, then it sends 2 gratuitous ARP data packets as an announcement. The device also sends these data packets when the address conflict detection is disabled.– If the IP address already exists in the network, then the device changes back to the previously used IP parameters (if possible). If the device receives its IP parameters from a DHCP server, then it sends a DHCPDECLINE message back to the DHCP server.– After the period specified in the <i>Release delay [s]</i> field, the device checks if the address conflict still exists. When the device detects 10 address conflicts one after the other, the device extends the waiting time to 60 s for the next check.– When the device resolves the address conflict, the device management returns to the network again.▶ <i>passive</i> Passive address conflict detection. The device analyzes the data traffic in the network. If another device in the network is using the same IP address, then the device initially “defends” its IP address. The device stops sending if the other device keeps sending with the same IP address.<ul style="list-style-type: none">– As a “defence” the device sends gratuitous ARP data packets. The device repeats this procedure for the number of times specified in the <i>Address protections</i> field.– If the other device continues sending with the same IP address, then after the period specified in the <i>Release delay [s]</i> field, the device periodically checks if the address conflict still exists.– When the device resolves the address conflict, the device management returns to the network again.
Send periodic ARP probes	<p>Activates/deactivates the periodic address conflict detection.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> (default setting) The periodic address conflict detection is active.<ul style="list-style-type: none">– The device periodically sends an ARP probe data packet every 90 to 150 seconds and waits for the time specified in the <i>Detection delay [ms]</i> field for a response.– If the device detects an address conflict, then the device applies the passive detection mode function. If the <i>Send trap</i> function is active, then the device sends an SNMP trap.▶ <i>cleared</i> The periodic address conflict detection is inactive.

Detection delay [ms]	<p>Specifies the period in milliseconds for which the device waits for a response after sending a ARP data packets.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 20..500 (default setting: 200)
Release delay [s]	<p>Specifies the period in seconds after which the device checks again if the address conflict still exists.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 3..3600 (default setting: 15)
Address protections	<p>Specifies how many times the device sends gratuitous ARP data packets in the passive detection mode to “defend” its IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 0..100 (default setting: 1)
Protection interval [ms]	<p>Specifies the period in milliseconds after which the device sends gratuitous ARP data packets again in the passive detection mode to “defend” its IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 20..10000 (default setting: 10000)
Send trap	<p>Activates/deactivates the sending of SNMP traps when the device detects an address conflict.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected (default setting) The sending of SNMP traps is active. If the device detects an address conflict, then the device sends an SNMP trap.▶ cleared The sending of SNMP traps is inactive. <p>The prerequisite for sending SNMP traps is that you enable the function in the Diagnostics > Status Configuration > Alarms (Traps) dialog and specify at least one trap destination.</p>

Information

Conflict detected	<p>Displays if the device has detected an address conflict.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The device has detected an address conflict.▶ cleared The device has not detected an address conflict.
-------------------	--

Table

Timestamp	Displays the time at which the device detected an address conflict.
Port	Displays the number of the port on which the device detected the address conflict.
IP address	Displays the IP address that is causing the address conflict.
MAC address	Displays the MAC address of the device with which the address conflict exists.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

ARP

[Diagnostics > System > ARP]

This dialog displays the MAC and IP addresses of the neighboring devices connected to the device management.

Table

Port	Displays the port number.
IP address	Displays the IPv4 address of a neighboring device.
MAC address	Displays the MAC address of a neighboring device.
Last updated	Displays the time in seconds since the settings of the entry were registered in the ARP table.
Type	Displays the type of the entry. Possible values: <ul style="list-style-type: none">▶ <code>static</code> Static entry. When the ARP table is deleted, the device keeps the static entry.▶ <code>dynamic</code> Dynamic entry. When the <i>Aging time [s]</i> has been exceeded and the device does not receive any data from this device during this time, the device deletes the dynamic entry.▶ <code>local</code> IP and MAC address of the device management.

Active Displays that the ARP table contains the IP/MAC address assignment as an active entry.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset ARP table Removes the dynamically set up addresses from the ARP table.

Selftest

[Diagnostics > System > Selftest]

This dialog lets you do the following:

- ▶ Activate/deactivate the RAM test when the device is being started.
- ▶ Enable/disable the option of entering the system monitor upon the system start.
- ▶ Specify how the device behaves in the case of a detected error.

Configuration

If the device does not detect any readable configuration profile when restarting, then the following settings block your access to the device permanently.

- ▶ *SysMon1 is available* checkbox is cleared.
- ▶ *Load default config on error* checkbox is cleared.

This is the case, for example, if the password of the configuration profile that you are loading differs from the password set in the device. To have the device unlocked again, contact your sales partner.

RAM test Activates/deactivates the RAM memory check during the restart.

Possible values:

- ▶ *selected* (default setting)
The RAM memory check is activated. During the restart, the device checks the RAM memory.
- ▶ *cleared*
The RAM memory check is deactivated. This shortens the start time for the device.

SysMon1 is available	<p>Activates/deactivates the access to the system monitor during the restart.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) The device lets you open the system monitor during the restart. ▶ <code>cleared</code> The device starts without the option of opening to the system monitor. <p>Among other things, the system monitor lets you update the device software and to delete saved configuration profiles.</p>
Load default config on error	<p>Activates/deactivates the loading of the default settings if the device does not detect any readable configuration profile when restarting.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) The device loads the default settings. ▶ <code>cleared</code> The device interrupts the restart and stops. The access to the device management is possible only using the Command Line Interface through the serial interface. To regain the access to the device through the network, open the system monitor and reset the settings. Upon restart, the device loads the default settings.

Table

In this table you specify how the device behaves in the case of a detected error.

Cause	<p>Detected error causes to which the device reacts.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>task</code> The device detects errors in the applications executed, for example if a task terminates or is not available. ▶ <code>resource</code> The device detects errors in the resources available, for example if the memory is becoming scarce. ▶ <code>software</code> The device detects software errors, for example error in the consistency check. ▶ <code>hardware</code> The device detects hardware errors, for example in the chip set.
Action	<p>Specifies how the device behaves if the adjacent event occurs.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>reboot</code> (default setting) The device triggers a restart.

- ▶ `logOnly`
The device registers the detected error in the log file. See the [Diagnostics > Report > System Log](#) dialog.
- ▶ `sendTrap`
The device sends an SNMP trap.
The prerequisite for sending SNMP traps is that you enable the function in the [Diagnostics > Status Configuration > Alarms \(Traps\)](#) dialog and specify at least one trap destination.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Syslog

[Diagnostics > Syslog]

The device lets you report selected events, independent of the severity of the event, to different syslog servers. In this dialog you specify the settings for this function and manage up to 8 syslog servers.

Operation

Operation

Enables/disables the sending of events to the syslog servers.

Possible values:

- ▶ `On`
The sending of events is enabled.
The device sends the events specified in the table to the specified syslog servers.
- ▶ `Off` (default setting)
The sending of events is disabled.

Table

Index

Displays the index number to which the table entry relates.

When you delete a table entry, this leaves a gap in the numbering. When you create a new table entry, the device fills the first gap.

	<p>Possible values:</p> <ul style="list-style-type: none">▶ 1..8
IP address	<p>Specifies the IP address of the syslog server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address (default setting: 0.0.0.0)
Destination UDP port	<p>Specifies the UDP port on which the syslog server expects the log entries.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..65535 (default setting: 514)
Transport type	<p>Displays the transport type the device uses to send the events to the syslog server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ udp The device sends the events over the UDP port specified in the <i>Destination UDP port</i> column.
Min. severity	<p>Specifies the minimum severity of the events. The device sends a log entry for events with this severity and with more urgent severities to the syslog server.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ emergency▶ alert▶ critical▶ error▶ warning (default setting)▶ notice▶ informational▶ debug
Type	<p>Specifies the type of the log entry transmitted by the device.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ systemlog (default setting)▶ audittrail
Active	<p>Activates/deactivates the transmission of events to the syslog server:</p> <ul style="list-style-type: none">▶ selected The device sends events to the syslog server.▶ cleared (default setting) The transmission of events to the syslog server is deactivated.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Ports

[Diagnostics > Ports]

The menu contains the following dialogs:

- ▶ SFP
- ▶ Port Monitor
- ▶ Auto-Disable
- ▶ Port Mirroring

SFP

[Diagnostics > Ports > SFP]

This dialog lets you look at the SFP transceivers connected to the device and their properties.

Table

The table displays valid values if the device is equipped with SFP transceivers.

Port	Displays the port number.
Module type	Type of the SFP transceiver, for example M-SFP-SX/LC.
Serial number	Displays the serial number of the SFP transceiver.
Connector type	Displays the connector type.
Supported	Displays if the device supports the SFP transceiver.
Temperature [°C]	Operating temperature of the SFP transceiver in °Celsius.
Tx power [mW]	Transmission power of the SFP transceiver in mW.
Rx power [mW]	Receiving power of the SFP transceiver in mW.
Tx power [dBm]	Transmission power of the SFP transceiver in dBm.
Rx power [dBm]	Receiving power of the SFP transceiver in dBm.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Port Monitor

[Diagnostics > Ports > Port Monitor]

The *Port Monitor* function monitors the adherence to the specified parameters on the ports. If the *Port Monitor* function detects that the parameters are being exceeded, then the device performs an action.

To apply the *Port Monitor* function, perform the following steps:

- ▶ *Global* tab
 - Enable the *Operation* function in the *Port Monitor* frame.
 - Activate for each port those parameters that you want the *Port Monitor* function to monitor.
- ▶ *Link flap, CRC/Fragments* and *Overload detection* tabs
 - Specify the threshold values for the parameters for each port.
- ▶ *Link speed/Duplex mode detection* tab
 - Activate the allowed combinations of speed and duplex mode for each port.
- ▶ *Global* tab
 - Specify for each port an action that the device carries out if the *Port Monitor* function detects that the parameters have been exceeded.
- ▶ *Auto-disable* tab
 - Mark the *Auto-disable* checkbox for the monitored parameters if you have specified the *auto-disable* action at least once.

The dialog contains the following tabs:

- ▶ [Global]
- ▶ [Auto-disable]
- ▶ [Link flap]
- ▶ [CRC/Fragments]
- ▶ [Overload detection]
- ▶ [Link speed/Duplex mode detection]

[Global]

In this tab you enable the *Port Monitor* function and specify the parameters that the *Port Monitor* function is monitoring. Also specify the action that the device carries out if the *Port Monitor* function detects that the parameters have been exceeded.

Operation

Operation Enables/disables the *Port Monitor* function globally.

Possible values:

- ▶ *On*
The *Port Monitor* function is enabled.
- ▶ *Off* (default setting)
The *Port Monitor* function is disabled.

Table

Port Displays the port number.

Link flap on Activates/deactivates the monitoring of link flaps on the port.

Possible values:

- ▶ *selected*
Monitoring is active.
 - The *Port Monitor* function monitors link flaps on the port.
 - If the device detects too many link flaps, then the device executes the action specified in the *Action* column.
 - On the *Link flap* tab, specify the parameters to be monitored.
- ▶ *cleared* (default setting)
Monitoring is inactive.

CRC/Fragments on Activates/deactivates the monitoring of CRC/fragment errors detected on the port.


Possible values:

- ▶ *selected*
Monitoring is active.
 - The *Port Monitor* function monitors CRC/fragment errors detected on the port.
 - If the device detects too many CRC/fragment errors, then the device executes the action specified in the *Action* column.
 - On the *CRC/Fragments* tab, specify the parameters to be monitored.
- ▶ *cleared* (default setting)
Monitoring is inactive.

Duplex mismatch detection active Activates/deactivates the monitoring of duplex mismatches on the port.

Possible values:

- ▶ *selected*
Monitoring is active.
 - The *Port Monitor* function monitors duplex mismatches on the port.
 - If the device detects a duplex mismatch, then the device executes the action specified in the *Action* column.
- ▶ *cleared* (default setting)
Monitoring is inactive.

Overload detection on	<p>Activates/deactivates the overload detection on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> Monitoring is active. <ul style="list-style-type: none"> – The <i>Port Monitor</i> function monitors the data load on the port. – If the device detects a data overload on the port, then the device executes the action specified in the <i>Action</i> column. – On the <i>Overload detection</i> tab, specify the parameters to be monitored. ▶ <i>cleared</i> (default setting) Monitoring is inactive.
Link speed/Duplex mode detection on	<p>Activates/deactivates the monitoring of the link speed and duplex mode on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> Monitoring is active. <ul style="list-style-type: none"> – The <i>Port Monitor</i> function monitors the link speed and duplex mode on the port. – If the device detects an unpermitted combination of link speed and duplex mode, then the device executes the action specified in the <i>Action</i> column. – On the <i>Link speed/Duplex mode detection</i> tab, specify the parameters to be monitored. ▶ <i>cleared</i> (default setting) Monitoring is inactive.
Active condition	<p>Displays the monitored parameter that led to the action on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>-</i> No monitored parameter. The device does not carry out any action. ▶ <i>Link flap</i> Too many link changes during the observed period. ▶ <i>CRC/Fragments</i> Too many CRC/fragment errors detected during the observed period. ▶ <i>Duplex mismatch</i> Duplex mismatch detected. ▶ <i>Overload detection</i> Overload detected during the observed period. ▶ <i>Link speed/Duplex mode detection</i> Impermissible combination of speed and duplex mode detected.
Action	<p>Specifies the action that the device carries out if the <i>Port Monitor</i> function detects that the parameters have been exceeded.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>disable port</i> The device disables the port and sends an SNMP trap. The “Link status” LED for the port flashes 3× per period. <ul style="list-style-type: none"> – To re-enable the port, highlight the port and click the  button and then the <i>Reset</i> item. – If the parameters are no longer being exceeded, then the <i>Auto-Disable</i> function enables the relevant port again after the specified waiting period. The prerequisite is that on the <i>Auto-disable</i> tab the checkbox for the monitored parameter is selected.

- ▶ *send trap*
The device sends an SNMP trap.
The prerequisite for sending SNMP traps is that you enable the function in the *Diagnostics > Status Configuration > Alarms (Traps)* dialog and specify at least one trap destination.
- ▶ *auto-disable* (default setting)
The device disables the port and sends an SNMP trap.
The “Link status” LED for the port flashes 3× per period.
The prerequisite is that on the *Auto-disable* tab the checkbox for the monitored parameter is selected.
 - The *Diagnostics > Ports > Auto-Disable* dialog displays which ports are disabled due to the parameters being exceeded.
 - The *Auto-Disable* function reactivates the port automatically. For this you go to the *Diagnostics > Ports > Auto-Disable* dialog and specify a waiting period for the relevant port in the *Reset timer [s]* column.

Port status

Displays the operating state of the port.

Possible values:

- ▶ *up*
The port is enabled.
- ▶ *down*
The port is disabled.
- ▶ *notPresent*
Physical port unavailable.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset

Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:

- ▶ *Diagnostics > Ports > Port Monitor* dialog
 - *Link flap* tab
 - *CRC/Fragments* tab
 - *Overload detection* tab
- ▶ *Diagnostics > Ports > Auto-Disable* dialog

[Auto-disable]

In this tab you activate the *Auto-Disable* function for the parameters monitored by the *Port Monitor* function.

Table

Reason	<p>Displays the parameters monitored by the <i>Port Monitor</i> function.</p> <p>Mark the adjacent checkbox so that the <i>Port Monitor</i> function carries out the <i>auto-disable</i> action if it detects that the monitored parameters have been exceeded.</p>
Auto-disable	<p>Activates/deactivates the <i>Auto-Disable</i> function for the adjacent parameters.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> The <i>Auto-Disable</i> function for the adjacent parameters is active. If the adjacent parameters are exceeded and the value <i>auto-disable</i> is specified in the <i>Action</i> column, then the device carries out the <i>Auto-Disable</i> function. ▶ <i>cleared</i> (default setting) The <i>Auto-Disable</i> function for the adjacent parameters is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	<p>Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:</p> <ul style="list-style-type: none"> ▶ <i>Diagnostics > Ports > Port Monitor</i> dialog <ul style="list-style-type: none"> – <i>Link flap</i> tab – <i>CRC/Fragments</i> tab – <i>Overload detection</i> tab ▶ <i>Diagnostics > Ports > Auto-Disable</i> dialog
-------	---

[Link flap]

In this tab you specify individually for every port the following settings:

- ▶ The number of link changes.
- ▶ The period during which the *Port Monitor* function monitors a parameter to detect discrepancies.

You also see how many link changes the *Port Monitor* function has detected up to now.

The *Port Monitor* function monitors those ports for which the checkbox in the *Link flap on* column is selected on the *Global* tab.

Table

Port	Displays the port number.
------	---------------------------

Sampling interval [s]	<p>Specifies in seconds, the period during which the <i>Port Monitor</i> function monitors a parameter to detect discrepancies.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 1..180 (default setting: 10)
Link flaps	<p>Specifies the number of link changes.</p> <p>If the <i>Port Monitor</i> function detects this number of link changes in the monitored period, then the device performs the specified action.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 1..100 (default setting: 5)
Last sampling interval	Displays the number of errors that the device has detected during the period that has elapsed.
Total	Displays the total number of errors that the device has detected since the port was enabled.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	<p>Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:</p> <ul style="list-style-type: none"> ▶ <i>Diagnostics > Ports > Port Monitor</i> dialog <ul style="list-style-type: none"> – <i>Link flap</i> tab – <i>CRC/Fragments</i> tab – <i>Overload detection</i> tab ▶ <i>Diagnostics > Ports > Auto-Disable</i> dialog
-------	---

[CRC/Fragments]

In this tab you specify individually for every port the following settings:

- ▶ The detected fragment error rate.
- ▶ The period during which the *Port Monitor* function monitors a parameter to detect discrepancies.

You also see the fragment error rate that the device has detected up to now.

The *Port Monitor* function monitors those ports for which the checkbox in the *CRC/Fragments on* column is selected on the *Global* tab.

Table

Port	Displays the port number.
------	---------------------------

Sampling interval [s]	<p>Specifies in seconds, the period during which the <i>Port Monitor</i> function monitors a parameter to detect discrepancies.</p> <p>Possible values:</p> <p>▶ 5..180 (default setting: 10)</p>
CRC/Fragments count [ppm]	<p>Specifies the detected fragment error rate (in parts per million).</p> <p>If the <i>Port Monitor</i> function detects this fragment error rate in the monitored period, then the device performs the specified action.</p> <p>Possible values:</p> <p>▶ 1..1000000 (default setting: 1000)</p>
Last active interval [ppm]	<p>Displays the fragment error rate that the device has detected during the period that has elapsed.</p>
Total [ppm]	<p>Displays the fragment error rate that the device has detected since the port was enabled.</p>

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	<p>Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:</p> <ul style="list-style-type: none">▶ <i>Diagnostics > Ports > Port Monitor</i> dialog<ul style="list-style-type: none">– <i>Link flap</i> tab– <i>CRC/Fragments</i> tab– <i>Overload detection</i> tab▶ <i>Diagnostics > Ports > Auto-Disable</i> dialog
-------	--

[Overload detection]

In this tab you specify individually for every port the following settings:

- ▶ The load threshold values.
- ▶ The period during which the *Port Monitor* function monitors a parameter to detect discrepancies.

You also see the number of data packets that the device has detected up to now.

The *Port Monitor* function monitors those ports for which the checkbox in the *Overload detection on* column is selected on the *Global* tab.

The *Port Monitor* function does not monitor a port if the port operates in any of the following roles:

- Member of a Link Aggregation group
- PRP subscriber

Table

Port	Displays the port number.
Traffic type	<p>Specifies the type of data packets that the device considers when monitoring the load on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>all</code> The <i>Port Monitor</i> function monitors Broadcast, Multicast and Unicast packets. ▶ <code>bc</code> (default setting) The <i>Port Monitor</i> function monitors only Broadcast packets. ▶ <code>bc-mc</code> The <i>Port Monitor</i> function monitors only Broadcast and Multicast packets.
Threshold type	<p>Specifies the unit for the data rate.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>pps</code> (default setting) packets per second ▶ <code>kbps</code> kbit per second The prerequisite is that the value in the <i>Traffic type</i> column = <code>all</code>.
Lower threshold	<p>Specifies the lower threshold value for the data rate.</p> <p>The <i>Auto-Disable</i> function enables the port again only when the load on the port is lower than the value specified here.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>0..10000000</code> (default setting: 0)
Upper threshold	<p>Specifies the upper threshold value for the data rate.</p> <p>If the <i>Port Monitor</i> function detects this load in the monitored period, then the device performs the specified action.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>0..10000000</code> (default setting: 0)
Interval [s]	<p>Specifies in seconds, the period that the <i>Port Monitor</i> function observes a parameter to detect that a parameter is being exceeded.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>1..20</code> (default setting: 1)
Packets	Displays the number of Broadcast, Multicast and Unicast packets that the device has detected during the period that has elapsed.
Broadcast packets	Displays the number of Broadcast packets that the device has detected during the period that has elapsed.

Multicast packets	Displays the number of Multicast packets that the device has detected during the period that has elapsed.
Kbit/s	Displays the data rate in Kbits per second that the device has detected during the period that has elapsed.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	<p>Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:</p> <ul style="list-style-type: none">▶ <i>Diagnostics > Ports > Port Monitor</i> dialog<ul style="list-style-type: none">– <i>Link flap</i> tab– <i>CRC/Fragments</i> tab– <i>Overload detection</i> tab▶ <i>Diagnostics > Ports > Auto-Disable</i> dialog
-------	--

[Link speed/Duplex mode detection]

In this tab you activate the allowed combinations of speed and duplex mode for each port.

The *Port Monitor* function monitors those ports for which the checkbox in the *Link speed/Duplex mode detection on* column is selected on the *Global* tab.

The *Port Monitor* function monitors only enabled physical ports.

Table

Port	Displays the port number.
10 Mbit/s HDX	<p>Activates/deactivates the port monitor to accept a half-duplex and 10 Mbit/s data rate combination on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>selected</i> The port monitor takes into consideration the speed and duplex combination.▶ <i>cleared</i> If the port monitor detects the speed and duplex combination on the port, then the device executes the action specified in the <i>Global</i> tab.

10 Mbit/s FDX	<p>Activates/deactivates the port monitor to accept a full-duplex and 10 Mbit/s data rate combination on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The port monitor takes into consideration the speed and duplex combination.▶ cleared If the port monitor detects the speed and duplex combination on the port, then the device executes the action specified in the Global tab.
100 Mbit/s HDX	<p>Activates/deactivates the port monitor to accept a half-duplex and 100 Mbit/s data rate combination on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The port monitor takes into consideration the speed and duplex combination.▶ cleared If the port monitor detects the speed and duplex combination on the port, then the device executes the action specified in the Global tab.
100 Mbit/s FDX	<p>Activates/deactivates the port monitor to accept a full-duplex and 100 Mbit/s data rate combination on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The port monitor takes into consideration the speed and duplex combination.▶ cleared If the port monitor detects the speed and duplex combination on the port, then the device executes the action specified in the Global tab.
1,000 Mbit/s FDX	<p>Activates/deactivates the port monitor to accept a full-duplex and 1 Gbit/s data rate combination on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The port monitor takes into consideration the speed and duplex combination.▶ cleared If the port monitor detects the speed and duplex combination on the port, then the device executes the action specified in the Global tab.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Reset	<p>Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:</p> <ul style="list-style-type: none">▶ Diagnostics > Ports > Port Monitor dialog<ul style="list-style-type: none">– Link flap tab– CRC/Fragments tab– Overload detection tab▶ Diagnostics > Ports > Auto-Disable dialog
-------	--

Auto-Disable

[Diagnostics > Ports > Auto-Disable]

The *Auto-Disable* function lets you disable monitored ports automatically and enable them again as you desire.

For example, the *Port Monitor* function and selected functions in the *Network Security* menu use the *Auto-Disable* function to disable ports if monitored parameters are exceeded.

If the parameters are no longer being exceeded, then the *Auto-Disable* function enables the relevant port again after the specified waiting period.

The dialog contains the following tabs:

- ▶ [Port]
- ▶ [Status]

[Port]

This tab displays which ports are disabled due to the parameters being exceeded. If the parameters are no longer being exceeded and you specify a waiting period in the *Reset timer [s]* column, then the *Auto-Disable* function automatically enables the relevant port again.

Table

Port	Displays the port number.
Reset timer [s]	<p>Specifies the waiting period in seconds, after which the <i>Auto-Disable</i> function enables the port again.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ 0 (default setting) The timer is inactive. The port remains disabled. ▶ 30..4294967295 If the parameters are no longer being exceeded, then the <i>Auto-Disable</i> function enables the port again after the waiting period specified here.
Error time	Displays when the device disabled the port due to the parameters being exceeded.
Remaining time [s]	Displays the remaining time in seconds, until the <i>Auto-Disable</i> function enables the port again.

Component	<p>Displays the software component in the device that disabled the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>PORT_MON</code> <i>Port Monitor</i> See the <i>Diagnostics > Ports > Port Monitor</i> dialog. ▶ <code>PORT_ML</code> <i>Port Security</i> See the <i>Network Security > Port Security</i> dialog. ▶ <code>DOT1S</code> <i>BPDU guard</i> See the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog.
Reason	<p>Displays the monitored parameter that led to the port being disabled.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>none</code> No monitored parameter. The port is enabled. ▶ <code>link-flap</code> Too many link changes. See the <i>Diagnostics > Ports > Port Monitor</i> dialog, <i>Link flap</i> tab. ▶ <code>crc-error</code> Too many CRC/fragment errors are detected. See the <i>Diagnostics > Ports > Port Monitor</i> dialog, <i>CRC/Fragments</i> tab. ▶ <code>duplex-mismatch</code> Duplex mismatch detected. See the <i>Diagnostics > Ports > Port Monitor</i> dialog, <i>Global</i> tab. ▶ <code>bpdu-rate</code> STP-BPDUs received. See the <i>Switching > L2-Redundancy > Spanning Tree > Global</i> dialog. ▶ <code>mac-based-port-security</code> Too many data packets from undesired senders. See the <i>Network Security > Port Security</i> dialog. ▶ <code>overload-detection</code> Overload. See the <i>Diagnostics > Ports > Port Monitor</i> dialog, <i>Overload detection</i> tab. ▶ <code>speed-duplex</code> Impermissible combination of speed and duplex mode detected. See the <i>Diagnostics > Ports > Port Monitor</i> dialog, <i>Link speed/Duplex mode detection</i> tab.
Active	<p>Displays if the port is disabled due to the parameters being exceeded.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> The port is disabled. ▶ <code>cleared</code> The port is enabled.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

[Status]

This tab displays the monitored parameters for which the *Auto-Disable* function is activated.

Table

Reason	<p>Displays the parameters that the device monitors.</p> <p>Mark the adjacent checkbox so that the <i>Auto-Disable</i> function disables and, when applicable, enables the port again if the monitored parameters are exceeded.</p>
Category	<p>Displays which function the adjacent parameter belongs to.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>port-monitor</i> The parameter belongs to the functions in the <i>Diagnostics > Port > Port Monitor</i> menu. ▶ <i>network-security</i> The parameter belongs to the functions in the <i>Network Security</i> menu. ▶ <i>l2-redundancy</i> The parameter belongs to the functions in the <i>Switching > L2-Redundancy</i> menu.
Auto-disable	<p>Displays if the <i>Auto-Disable</i> function is activated/deactivated for the adjacent parameter.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> The <i>Auto-Disable</i> function for the adjacent parameters is active. The <i>Auto-Disable</i> function disables and, when applicable, enables the relevant port again if the monitored parameters are exceeded. ▶ <i>cleared</i> (default setting) The <i>Auto-Disable</i> function for the adjacent parameters is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset	<p>Enables the port highlighted in the table again and resets its counter to 0. This affects the counters in the following dialogs:</p> <ul style="list-style-type: none"> ▶ <i>Diagnostics > Ports > Port Monitor</i> dialog <ul style="list-style-type: none"> – <i>Link flap</i> tab – <i>CRC/Fragments</i> tab – <i>Overload detection</i> tab ▶ <i>Diagnostics > Ports > Auto-Disable</i> dialog
-------	---

Port Mirroring

[Diagnostics > Ports > Port Mirroring]

The *Port Mirroring* function lets you copy received and sent data packets from selected ports to a destination port. You can watch and process the data stream using an analyzer or an RMON probe, connected to the destination port. The data packets remain unmodified on the source port.

NOTE: To enable the access to the device management using the destination port, mark the checkbox *Allow management* in the *Destination port* frame before you enable the *Port Mirroring* function.

Operation

Operation

Enables/disables the *Port Mirroring* function.

Possible values:

- ▶ *On*
The *Port Mirroring* function is enabled.
The device copies the data packets from the selected source ports to the destination port.
- ▶ *Off* (default setting)
The *Port Mirroring* function is disabled.

Destination port

Primary port

Specifies the destination port.

Suitable ports are those ports that are not used for the following purposes:

- Source port
- L2 redundancy protocols

Possible values:

- ▶ *no Port* (default setting)
No destination port selected.
- ▶ *<Port number>*
Number of the destination port. The device copies the data packets from the source ports to this port.

On the destination port, the device adds a VLAN tag to the data packets that the source port transmits. The destination port transmits unmodified the data packets that the source port receives.

NOTE: The destination port needs sufficient bandwidth to absorb the data stream. If the copied data stream exceeds the bandwidth of the destination port, then the device discards surplus data packets on the destination port.

Allow management	<p>Activates/deactivates the access to the device management using the destination port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ selected The access to the device management using the destination port is active. The device lets users have access to the device management using the destination port without interrupting the active <i>Port Mirroring</i> session. <ul style="list-style-type: none"> – The device duplicates multicasts, broadcasts and unknown unicasts on the destination port. – The VLAN settings on the destination port remain unchanged. The prerequisite for access to the device management using the destination port is that the destination port is not a member of the VLAN of the device management. ▶ cleared (default setting) The access to the device management using the destination port is inactive. The device prohibits the access to the device management using the destination port.
------------------	--

Table

Source port	<p>Specifies the port number.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code><Port number></code>
Enabled	<p>Activates/deactivates the copying of the data packets from this source port to the destination port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ selected The copying of the data packets is active. The port is specified as a source port. ▶ cleared (default setting) The copying of the data packets is inactive. ▶ (Grayed-out display) It is not possible to copy the data packets for this port. Possible causes: <ul style="list-style-type: none"> – The port is already specified as a destination port. – The port is a logical port, not a physical port. <p>NOTE: The device lets you activate every physical port as source port except for the destination port.</p>
Type	<p>Specifies which data packets the device copies to the destination port.</p> <p>On the destination port, the device adds a VLAN tag to the data packets that the source port transmits. The destination port transmits unmodified the data packets that the source port receives.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ none (default setting) No data packets.

- ▶ `tx`
Data packets that the source port transmits.
- ▶ `rx`
Data packets that the source port receives.
- ▶ `txrx`
Data packets that the source port transmits and receives.

NOTE: With the `txrx` setting the device copies transmitted and received data packets. The destination ports needs at least a bandwidth that corresponds to the sum of the send and receive channel of the source ports. For example, for similar ports the destination port is at 100 % capacity when the send and receive channel of a source port are at 50 % capacity respectively.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Reset config

Resets the settings in the dialog to the default settings and transfers the changes to the volatile memory of the device (*RAM*).

LLDP

[Diagnostics > LLDP]

The device lets you gather information about neighboring devices. For this, the device uses the Link Layer Discovery Protocol (LLDP). This information enables a network management station to map the structure of your network.

This menu lets you configure the topology discovery and to display the information received in table form.

The menu contains the following dialogs:

- ▶ [LLDP Configuration](#)
- ▶ [LLDP Topology Discovery](#)

LLDP Configuration

[Diagnostics > LLDP > Configuration]

This dialog lets you configure the topology discovery for every port.

Operation

Operation

Enables/disables the *LLDP* function.

Possible values:

- ▶ *On* (default setting)
The *LLDP* function is enabled.
The topology discovery using LLDP is active in the device.
- ▶ *Off*
The *LLDP* function is disabled.

Configuration

Transmit interval [s]

Specifies the interval in seconds at which the device transmits LLDP data packets.

Possible values:

- ▶ *5..32768* (default setting: 30)

Transmit interval multiplier

Specifies the factor for determining the time-to-live value for the LLDP data packets.

Possible values:

- ▶ *2..10* (default setting: 4)

The time-to-live value coded in the LLDP header results from multiplying this value with the value in the *Transmit interval [s]* field.

Reinit delay [s]

Specifies the delay in seconds for the reinitialization of a port.

Possible values:

- ▶ *1..10* (default setting: 2)

If in the *Operation* column the value *Off* is specified, then the device tries to reinitialize the port after the time specified here has elapsed.

Transmit delay [s]

Specifies the delay in seconds for transmitting successive LLDP data packets after configuration changes in the device occur.

Possible values:

- ▶ *1..8192* (default setting: 2)

A good practice is to specify the value between a minimum of 1 and a maximum of a quarter of the value in the *Transmit interval [s]* field.

Notification interval [s]

Specifies the interval in seconds for transmitting LLDP notifications.

Possible values:

- ▶ *5..3600* (default setting: 5)

After transmitting a notification trap, the device waits for a minimum of the time specified here before transmitting the next notification trap.

Table

Port	<p>Displays the port number.</p>
Operation	<p>Specifies if the port transmits and receives LLDP data packets.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>transmit</i> The port transmits LLDP data packets but does not save any information about neighboring devices. ▶ <i>receive</i> The port receives LLDP data packets but does not transmit any information to neighboring devices. ▶ <i>receive and transmit</i> (default setting) The port transmits LLDP data packets and saves information about neighboring devices. ▶ <i>disabled</i> The port does not transmit LLDP data packets and does not save information about neighboring devices.
Notification	<p>Activates/deactivates the LLDP notifications on the port.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> LLDP notifications are active on the port. ▶ <i>cleared</i> (default setting) LLDP notifications are inactive on the port.
Transmit port description	<p>Activates/deactivates the transmitting of a TLV (Type Length Value) with the port description.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> (default setting) The transmitting of the TLV is active. The device transmits the TLV with the port description. ▶ <i>cleared</i> The transmitting of the TLV is inactive. The device does not transmit a TLV with the port description.
Transmit system name	<p>Activates/deactivates the transmitting of a TLV (Type Length Value) with the device name.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <i>selected</i> (default setting) The transmitting of the TLV is active. The device transmits the TLV with the device name. ▶ <i>cleared</i> The transmitting of the TLV is inactive. The device does not transmit a TLV with the device name.

Transmit system description	<p>Activates/deactivates the transmitting of the TLV (Type Length Value) with the system description.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) The transmitting of the TLV is active. The device transmits the TLV with the system description.▶ <code>cleared</code> The transmitting of the TLV is inactive. The device does not transmit a TLV with the system description.
Transmit system capabilities	<p>Activates/deactivates the transmitting of the TLV (Type Length Value) with the system capabilities.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> (default setting) The transmitting of the TLV is active. The device transmits the TLV with the system capabilities.▶ <code>cleared</code> The transmitting of the TLV is inactive. The device does not transmit a TLV with the system capabilities.
Neighbors (max.)	<p>Limits the number of neighboring devices to be recorded for this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>1..50</code> (default setting: 10)
FDB mode	<p>Specifies which function the device uses to record neighboring devices on this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>lldpOnly</code> The device uses only LLDP data packets to record neighboring devices on this port.▶ <code>macOnly</code> The device uses learned MAC addresses to record neighboring devices on this port. The device uses the MAC address only if there is no other entry in the address table (FDB, Forwarding Database) for this port.▶ <code>both</code> The device uses LLDP data packets and learned MAC addresses to record neighboring devices on this port.▶ <code>autoDetect</code> (default setting) If the device receives LLDP data packets at this port, then the device operates the same as with the <code>lldpOnly</code> setting. Otherwise, the device operates the same as with the <code>macOnly</code> setting.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

LLDP Topology Discovery

[Diagnostics > LLDP > Topology Discovery]

Devices in networks send notifications in the form of packets which are also known as "LLDPDU" (LLDP data units). The data that is sent and received via LLDPDU are useful for many reasons. Thus the device detects which devices in the network are neighbors and via which ports they are connected.

The dialog lets you display the network and to detect the connected devices along with their specific features.

The dialog contains the following tabs:

- ▶ [LLDP]
- ▶ [LLDP-MED]

[LLDP]

This tab displays the collected LLDP information for the neighboring devices. This information enables a network management station to map the structure of your network.

When devices both with and without an active topology discovery function are connected to a port, the topology table hides the devices without active topology discovery.

When only devices without active topology discovery are connected to a port, the table contains one line for this port to represent every device. This line contains the number of connected devices.

The Forwarding Database (FDB) address table contains MAC addresses of devices that the topology table hides for the sake of clarity.

When you use one port to connect several devices, for example via a hub, the table contains one line for each connected device.

Table

Port	Displays the port number.
Neighbor identifier	Displays the chassis ID of the neighboring device. This can be the basis MAC address of the neighboring device, for example.

FDB	<p>Displays if the connected device has active LLDP support.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ selected The connected device does not have active LLDP support. The device uses information from its address table (FDB, Forwarding Database)▶ cleared (default setting) The connected device has active LLDP support.
Neighbor IP address	Displays the IP address with which the access to the neighboring device management is possible.
Neighbor port description	Displays a description for the port of the neighboring device.
Neighbor system name	Displays the device name of the neighboring device.
Neighbor system description	Displays a description for the neighboring device.
Port ID	Displays the ID of the port through which the neighboring device is connected to the device.
Autonegotiation supported	Displays if the port of the neighboring device supports autonegotiation.
Autonegotiation	Displays if autonegotiation is enabled on the port of the neighboring device.
PoE supported	Displays if the port of the neighboring device supports Power over Ethernet (PoE).
PoE enabled	Displays if Power over Ethernet (PoE) is enabled on the port of the neighboring device.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

[LLDP-MED]

LLDP for Media Endpoint Devices (LLDP-MED) is an extension to LLDP that operates between endpoint devices and network devices. It specifically provides support for VoIP applications. In this support rule, it provides an additional set of common advertisement, Type Length Value (TLV), messages. The device uses the TLVs for capabilities discovery such as network policy, Power over Ethernet, inventory management and location information.

Table

Port	Displays the port number.
Device class	Displays the device class of the remotely connected device. <ul style="list-style-type: none">▶ A value of <code>notDefined</code> indicates that the device has capabilities not covered by any of the <code>LLDP-MED</code> classes.▶ A value of <code>endpointClass1..3</code> indicates that the device has "endpoint class 1..3" capabilities.▶ A value of <code>networkConnectivity</code> indicates that the device has network connectivity device capabilities.
VLAN ID	Displays the extension of the VLAN Identifier for the remote system connected to this port, as defined in IEEE 802.3. <ul style="list-style-type: none">▶ The device uses a value from 1 through 4042 to specify a valid Port VLAN ID.▶ The device displays the value 0 for priority tagged packets. This means that only the 802.1D priority is significant and the device uses the default VLAN ID of the ingress port.
Priority	Displays the value of the 802.1D priority which is associated with the remote system connected to the port.
DSCP	Displays the value of the Differentiated Service Code Point (DSCP) which is associated with the remote system connected to the port.
Unknown bit status	Displays the unknown bit status of incoming traffic. <ul style="list-style-type: none">▶ A value of <code>true</code> indicates that the network policy for the specified application type is undefined. In this case, the VLAN ID ignores the Layer 2 priority and value of the <code>DSCP</code> field.▶ A value of <code>false</code> indicates a specified network policy.
Tagged bit status	Displays the tagged bit status. <ul style="list-style-type: none">▶ A value of <code>true</code> indicates that the application uses a tagged VLAN.▶ A value of <code>false</code> indicates that for the specific application the device uses untagged VLAN operation. In this case, the device ignores both the VLAN ID and the Layer 2 priority fields. The DSCP value, however, is relevant.
Hardware revision	Displays the vendor-specific hardware revision string as advertised by the remote endpoint.
Firmware revision	Displays the vendor-specific firmware revision string as advertised by the remote endpoint.
Software revision	Displays the vendor-specific software revision string as advertised by the remote endpoint.
Serial number	Displays the vendor-specific serial number as advertised by the remote endpoint.
Manufacturer name	Displays the vendor-specific manufacturer name as advertised by the remote endpoint.

Model name	Displays the vendor-specific model name as advertised by the remote endpoint.
Asset ID	Displays the vendor-specific asset tracking identifier as advertised by the remote endpoint.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Report

[Diagnostics > Report]

The menu contains the following dialogs:

- ▶ [Report Global](#)
- ▶ [Persistent Logging](#)
- ▶ [System Log](#)
- ▶ [Audit Trail](#)

Report Global

[Diagnostics > Report > Global]

The device lets you log specific events using the following outputs:

- ▶ on the console
- ▶ on one or more syslog servers
- ▶ on a connection to the Command Line Interface set up using SSH
- ▶ on a connection to the Command Line Interface set up using Telnet

In this dialog you specify the required settings. By assigning the severity you specify which events the device registers.

The dialog lets you save a ZIP archive with system information on your PC.

Console logging

Operation

Enables/disables the *Console logging* function.

Possible values:

- ▶ *On*
The *Console logging* function is enabled.
The device logs the events on the console.
- ▶ *Off* (default setting)
The *Console logging* function is disabled.

Severity

Specifies the minimum severity for the events. The device logs events with this severity and with more urgent severities.

The device outputs the messages on the serial interface.

Possible values:

- ▶ *emergency*
- ▶ *alert*
- ▶ *critical*
- ▶ *error*
- ▶ *warning* (default setting)
- ▶ *notice*
- ▶ *informational*
- ▶ *debug*

SNMP logging

When you enable the logging of SNMP requests, the device sends these as events with the preset severity *notice* to the list of syslog servers. The preset minimum severity for a syslog server entry is *critical*.

To send SNMP requests to a syslog server, you have a number of options to change the default settings. Select the ones that meet your requirements best.

- Set the severity for which the device creates SNMP requests as events to *warning* or *error*. Change the minimum severity for a syslog entry for one or more syslog servers to the same value.
You also have the option of creating a separate syslog server entry for this.
- Set only the severity for SNMP requests to *critical* or higher. The device then sends SNMP requests as events with the severity *critical* or higher to the syslog servers.
- Set only the minimum severity for one or more syslog server entries to *notice* or lower. Then it is possible that the device sends many events to the syslog servers.

Log SNMP get request	<p>Enables/disables the logging of SNMP Get requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>On</i> The logging is enabled. The device registers SNMP Get requests as events in the syslog. In the <i>Severity get request</i> drop-down list, you select the severity for this event.▶ <i>Off</i> (default setting) The logging is disabled.
Log SNMP set request	<p>Enables/disables the logging of SNMP Set requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>On</i> The logging is enabled. The device registers SNMP Set requests as events in the syslog. In the <i>Severity set request</i> drop-down list, you select the severity for this event.▶ <i>Off</i> (default setting) The logging is disabled.
Severity get request	<p>Specifies the severity of the event that the device registers for SNMP Get requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>emergency</i>▶ <i>alert</i>▶ <i>critical</i>▶ <i>error</i>▶ <i>warning</i>▶ <i>notice</i> (default setting)▶ <i>informational</i>▶ <i>debug</i>
Severity set request	<p>Specifies the severity of the event that the device registers for SNMP Set requests.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <i>emergency</i>▶ <i>alert</i>▶ <i>critical</i>▶ <i>error</i>▶ <i>warning</i>▶ <i>notice</i> (default setting)▶ <i>informational</i>▶ <i>debug</i>

Buffered logging

The device buffers logged events in 2 separate storage areas so that the log entries for urgent events are kept.

This dialog lets you specify the minimum severity for events that the device buffers in the storage area with a higher priority.

Severity Specifies the minimum severity for the events. The device buffers log entries for events with this severity and with more urgent severities in the storage area with a higher priority.

Possible values:

- ▶ `emergency`
- ▶ `alert`
- ▶ `critical`
- ▶ `error`
- ▶ `warning` (default setting)
- ▶ `notice`
- ▶ `informational`
- ▶ `debug`

CLI logging

Operation Enables/disables the *CLI logging* function.

Possible values:

- ▶ `On`
The *CLI logging* function is enabled.
The device logs every command received using the Command Line Interface.
- ▶ `Off` (default setting)
The *CLI logging* function is disabled.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Download support information Generates a ZIP archive which the web browser lets you download from the device.

The ZIP archive contains system information about the device. You will find an explanation of the files contained in the ZIP archive in the following section.

Support Information: Files contained in ZIP archive

File name	Format	Comments
<code>audittrail.html</code>	HTML	Contains the chronological recording of the system events and saved user changes in the Audit Trail.
<code>config.xml</code>	XML	Contains the settings of the device saved in the selected configuration profile. The file name is the same as the name of the selected configuration profile.
<code>defaultconfig.xml</code>	XML	Contains the default settings of the device.

File name	Format	Comments
runningconfig.xml	XML	Contains the configuration profile with the operating settings.
script	TEXT	Contains the output of the command <code>show running-config script</code> .
supportinfo.html	HTML	Contains device internal service information.
systeminfo.html	HTML	Contains information about the settings and operating parameters.
systemlog.html	HTML	Contains the logged events in the Log file. See the Diagnostics > Report > System Log dialog.

Meaning of the event severities

Severity	Meaning
emergency	Device not ready for operation
alert	Immediate user intervention required
critical	Recoverable error detected on a component that may lead to system error
error	Error condition, recoverable error detected on a component
warning	Minor error detected, for example misconfiguration of a component
notice	Normal but significant condition
informational	Informational message
debug	Debug message

Persistent Logging

[Diagnostics > Report > Persistent Logging]

The device lets you save log entries permanently in a file in the external memory. Therefore, even after the device is restarted, you have access to the log entries.

In this dialog you limit the size of the log file and specify the minimum severity for the events to be saved. When the log file reaches the specified size, the device archives this file and saves the following log entries in a newly created file.

In the table the device displays the log files held in the external memory. As soon as the specified maximum number of files has been attained, the device deletes the oldest file and renames the remaining files. This helps ensure that there is enough memory space in the external memory.

NOTE: Verify that an external memory is connected, see the [Status](#) column in the [Basic Settings > External Memory](#) dialog. Monitor the external memory connection using the [Device Status](#) function, see the [External memory removal](#) parameter in the [Diagnostics > Status Configuration > Device Status](#) dialog.

Operation

Operation

Enables/disables the *Persistent Logging* function.

Only activate this function if the external memory is available in the device.

Possible values:

- ▶ *On* (default setting)
The *Persistent Logging* function is enabled.
The device saves the log entries in a file in the external memory.
- ▶ *Off*
The *Persistent Logging* function is disabled.

Configuration

Max. file size [kbyte]

Specifies the maximum size of the log file in KBytes. When the log file reaches the specified size, the device archives this file and saves the following log entries in a newly created file.

Possible values:

- ▶ *0..4096* (default setting: *1024*)

The value *0* deactivates saving of log entries in the log file.

Files (max.)

Specifies the number of log files that the device keeps in the external memory.

As soon as the specified maximum number of files has been attained, the device deletes the oldest file and renames the remaining files.

Possible values:

- ▶ *0..25* (default setting: *4*)

The value *0* deactivates saving of log entries in the log file.

Severity

Specifies the minimum severity of the events. The device saves the log entry for events with this severity and with more urgent severities in the log file in the external memory.

Possible values:

- ▶ *emergency*
- ▶ *alert*
- ▶ *critical*
- ▶ *error*
- ▶ *warning* (default setting)
- ▶ *notice*
- ▶ *informational*
- ▶ *debug*

Log file target Specifies the external memory device for logging.

Possible values:

- ▶ `usb`
External USB memory (EAM)

Table

Index Displays the index number to which the table entry relates.

Possible values:

- ▶ `1..25`

The device automatically assigns this number.

File name Displays the file name of the log file in the external memory.

Possible values:

- ▶ `messages`
- ▶ `messages.X`

File size [byte] Displays the size of the log file in the external memory in bytes.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Delete persistent log file Removes the log files from the external memory.

System Log

[Diagnostics > Report > System Log]

The device logs device-internal events in a log file (System Log).

This dialog displays the log file (System Log). The dialog lets you save the log file in HTML format on your PC.

In order to search the log file for search terms, use the search function of your web browser.

The log file is kept until a restart is performed in the device. After the restart the device creates the file again.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Save log file

Opens the HTML page in a new web browser window or tab. You can save the HTML page on your PC using the appropriate web browser command.

Delete log file

Removes the logged events from the log file.

Audit Trail

[Diagnostics > Report > Audit Trail]

This dialog displays the log file (Audit Trail). The dialog lets you save the log file as an HTML file on your PC.

In order to search the log file for search terms, use the search function of your web browser.

The device logs system events and writing user actions in the device. This lets you keep track of WHO changed WHAT in the device and WHEN. The prerequisite is that the user role `auditor` or `administrator` is assigned to your user account.

The device logs the following user actions, among others:

- ▶ A user logging in with the Command Line Interface (local or remote)
- ▶ A user logging off manually
- ▶ Automatic logging off of a user in the Command Line Interface after a specified period of inactivity
- ▶ Device restart
- ▶ Locking of a user account due to too many unsuccessful login attempts
- ▶ Locking of the access to the device management due to unsuccessful login attempts
- ▶ Commands executed in the Command Line Interface, apart from `show` commands
- ▶ Changes to configuration variables
- ▶ Changes to the system time
- ▶ File transfer operations, including firmware updates
- ▶ Configuration changes via Ethernet Switch Configurator
- ▶ Firmware updates and automatic configuration of the device via the external memory
- ▶ Opening and closing of SNMP via an HTTPS tunnel

The device does not log passwords. The logged entries are write-protected and remain saved in the device after a restart.

During the restart, access to the system monitor is possible using the default settings of the device. If the device is reset to its default settings using the system monitor, the device and log file are accessible using the default password.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Take appropriate measures to restrict physical access to the device.
- Alternatively, deactivate access to the system monitor, clearing the *SysMon1 is available* checkbox, in the *Diagnostics > System > Selftest* dialog.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Buttons

You find the description of the standard buttons in section “[Buttons](#)” on page 18.

Save audit trail file

Opens the HTML page in a new web browser window or tab. You can save the HTML page onto your PC using the appropriate web browser command.

Advanced

The menu contains the following dialogs:

- ▶ [DHCP Server](#)
- ▶ [Industrial Protocols](#)
- ▶ [Command Line Interface](#)

DHCP Server

[Advanced > DHCP Server]

With the DHCP server, you manage a database of available IP addresses and configuration information. When the device receives a request from a client, the DHCP server validates the DHCP client network, and then leases an IP address. When activated, the DHCP server also allocates configuration information appropriate for that client. The configuration information specifies, for example, which IP address, DNS server and default route a client uses.

The DHCP server assigns an IP address to a client for a user-defined interval. The DHCP client is responsible for renewing the IP address before the interval expires. When the DHCP client is unable to renew the address, the address returns to the pool for reassignment.

The menu contains the following dialogs:

- ▶ [DHCP Server Global](#)
- ▶ [DHCP Server Pool](#)
- ▶ [DHCP Server Lease Table](#)

DHCP Server Global

[Advanced > DHCP Server > Global]

Activate the function either globally or per port according to your requirements.

Operation

Operation

Enables/disables the DHCP server function of the device globally.

Possible values:

- ▶ *On*
- ▶ *Off* (default setting)

Table

Port	Displays the port number.
DHCP server active	<p>Activates/deactivates the DHCP server function on this port.</p> <p>The prerequisite is that you enable the function globally.</p> <p>Possible values:</p> <ul style="list-style-type: none"> ▶ <code>selected</code> (default setting) The DHCP server function is active. ▶ <code>cleared</code> The DHCP server function is inactive.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

DHCP Server Pool


[Advanced > DHCP Server > Pool]

Assign an IP address to an end device or switch connected to a port or included in a VLAN.

The DHCP server provides IP address pools from which it allocates IP addresses to clients. A pool consists of a list of entries. Specify an entry as static to a specific IP address, or as dynamic to an IP address range. The device holds a maximum of 128 pools. The pools together hold a maximum of 1000 entries.

With static allocation, the DHCP server assigns an IP address to a specific client. The DHCP server identifies the client using a unique hardware ID. A static address entry contains one IP address. You apply this IP address to every port or to a specific port of the device. For static allocation, enter an IP address for allocation in the *IP address* field, and leave the *Last IP address* column empty. Enter a hardware ID with which the DHCP server uniquely identifies the client. This ID is either a MAC address, a Client ID, a Remote ID, or a Circuit ID. When a client contacts the device with a defined hardware ID, the DHCP server allocates the static IP address.

In dynamic allocation, when a DHCP client makes contact on a port, the DHCP server assigns an available IP address from a pool for this port. For dynamic allocation, create a pool for the ports by assigning an IP address range. Specify the first and last IP addresses for the IP address range. Leave the *MAC address*, *Client ID*, *Remote ID* and *Circuit ID* fields empty. You have the option of creating multiple pool entries. This lets you create an IP address range that contains gaps.

This dialog displays the different information that is required for the assignment of an IP address for a port or a VLAN. Use the  button to add an entry. The device adds a writable and readable entry.

Table

Index	Displays the index number to which the table entry relates.
Active	<p>Activates/deactivates the DHCP server function on this port.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> The DHCP server function is active.▶ <code>cleared</code> (default setting) The DHCP server function is inactive.
IP address	<p>Specifies the IP address for static IP address assignment. When using dynamic IP address assignment, this value specifies the start of the IP address range.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
Last IP address	<p>When using dynamic IP address assignment, this value specifies the end of the IP address range.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
Port	Displays the port number.
VLAN ID	<p>Displays the VLAN to which the table entry relates.</p> <p>A value of <code>1</code> corresponds to the default device management VLAN.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>1..4042</code>
MAC address	<p>Specifies the MAC address of the device leasing the IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid Unicast MAC address Specify the value with a colon separator, for example <code>00:11:22:33:44:55</code>.▶ <code>-</code> For the IP address assignment, the server ignores this variable.
DHCP relay	<p>Specifies the IP address of the DHCP relay through which the clients transmit their requests to the DHCP server. When the DHCP server receives the client's request through another DHCP relay, it ignores this request.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address IP address of the DHCP relay.▶ <code>-</code> Between the client and the DHCP server there is no DHCP relay.

Client ID	<p>Specifies the identification of the client device leasing the IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..80 bytes (format <code>XX XX .. XX</code>)▶ - For the IP address assignment, the server ignores this variable.
Remote ID	<p>Specifies the identification of the remote device leasing the IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..80 bytes (format <code>XX XX .. XX</code>)▶ - For the IP address assignment, the server ignores this variable.
Circuit ID	<p>Specifies the Circuit ID of the device leasing the IP address.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ 1..80 bytes (format <code>XX XX .. XX</code>)▶ - For the IP address assignment, the server ignores this variable.
Schneider Electric device	<p>Activates/deactivates Schneider Electric multicasts.</p> <p>If the device in this IP address range serves only Schneider Electric devices, then activate this function.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>selected</code> In this IP address range, the device serves only Schneider Electric devices. Schneider Electric multicasts are activated.▶ <code>cleared</code> (default setting) In this IP address range, the device serves the devices of different manufacturers. Schneider Electric multicasts are deactivated.
Configuration URL	<p>Specifies the protocol to be used as well as the name and path of the configuration file.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 0..70 characters Example: <code>tftp://192.9.200.1/cfg/config.xml</code> <p>When you leave this field blank, the device leaves this option field blank in the DHCP message.</p>
Lease time [s]	<p>Specifies the lease time in seconds.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ <code>60..220752000</code> (default setting: <code>86400</code>)▶ <code>4294967295</code> Use this value for assignments unlimited in time and for assignments via BOOTP.

Default gateway	<p>Specifies the IP address of the default gateway.</p> <p>A value of 0.0.0.0 disables the attachment of the option field in the DHCP message.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
Netmask	<p>Specifies the mask of the network to which the client belongs.</p> <p>A value of 0.0.0.0 disables the attachment of the option field in the DHCP message.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 netmask
WINS server	<p>Specifies the IP address of the Windows Internet Name Server which converts NetBIOS names.</p> <p>A value of 0.0.0.0 disables the attachment of the option field in the DHCP message.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
DNS server	<p>Specifies the IP address of the DNS server.</p> <p>A value of 0.0.0.0 disables the attachment of the option field in the DHCP message.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Valid IPv4 address
Hostname	<p>Specifies the hostname.</p> <p>When you leave this field blank, the device leaves this option field blank in the DHCP message.</p> <p>Possible values:</p> <ul style="list-style-type: none">▶ Alphanumeric ASCII character string with 0..64 characters

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

DHCP Server Lease Table

[Advanced > DHCP Server > Lease Table]

This dialog displays the status of IP address leasing on a per port basis.

Table

Port Displays the port number to which the address is being leased.

IP address Displays the leased IP address to which the entry refers.

Status Displays the lease phase.

According to the standard for DHCP operations, there are 4 phases to leasing an IP address: Discovery, Offer, Request, and Acknowledgement.

Possible values:

- ▶ `bootp`
A DHCP client is attempting to discover a DHCP server for IP address allocation.
- ▶ `offering`
The DHCP server is validating that the IP address is suitable for the client.
- ▶ `requesting`
A DHCP client is acquiring the offered IP address.
- ▶ `bound`
The DHCP server is leasing the IP address to a client.
- ▶ `renewing`
The DHCP client is requesting an extension to the lease.
- ▶ `rebinding`
The DHCP server is assigning the IP address to the client after a successful renewal.
- ▶ `declined`
The DHCP server denied the request for the IP address.
- ▶ `released`
The IP address is available for other clients.

Remaining lifetime Displays the time remaining on the leased IP address.

Leased MAC address Displays the MAC address of the device leasing the IP address.

Gateway Displays the Gateway IP address of the device leasing the IP address.

Client ID Displays the client identifier of the device leasing the IP address.

Remote ID Displays the remote identifier of the device leasing the IP address.

Circuit ID Displays the Circuit ID of the device leasing the IP address.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Industrial Protocols

[Advanced > Industrial Protocols]

The menu contains the following dialogs:

- ▶ IEC61850-MMS
- ▶ Modbus TCP
- ▶ EtherNet/IP

IEC61850-MMS

[Advanced > Industrial Protocols > IEC61850-MMS]

The IEC61850-MMS is a standardized industrial communication protocol from the International Electrotechnical Commission (IEC). For example, automatic switching equipment uses this protocol when communicating with power station equipment.

The packet orientated protocol defines a uniform communication language based on the transport protocol, TCP/IP. The protocol uses a Manufacturing Message Specification (MMS) server for client server communications. The protocol includes functions for SCADA, Intelligent Electronic Device (IED) and the network control systems.

NOTE: IEC61850/MMS does not provide any authentication mechanism. If the write access for IEC61850/MMS is activated, then every client that can access the device using TCP/IP is capable of changing the settings of the device. This in turn can result in an incorrect configuration of the device and possible issues in the network.

Activate the write access only if you have taken additional measures (for example Firewall, VPN, etc.) to reduce possible unauthorized access.

This dialog lets you specify the following MMS server settings:

- ▶ Activates/deactivates the MMS server.
- ▶ Activates/deactivates the write access to the MMS server.
- ▶ The MMS server TCP Port.
- ▶ The maximum number of concurrent MMS server sessions.

Operation

Operation

Enables/disables the *IEC61850-MMS* server.

Possible values:

- ▶ *On*
The *IEC61850-MMS* server is enabled.
- ▶ *Off* (default setting)
The *IEC61850-MMS* server is disabled.
The IEC 61850 MIBs stay accessible.

Configuration

Write access

Activates/deactivates the write access to the MMS server.

Possible values:

- ▶ *selected*
The write access to the MMS server is activated. This setting lets you change the device settings using the IEC 61850 MMS protocol.
- ▶ *cleared* (default setting)
The write access to the MMS server is deactivated. The MMS server is accessible as read-only.

Technical key

Specifies the IED name.

The IED name is eligible independently of the system name.

Possible values:

- ▶ Alphanumeric ASCII character string with 0..32 characters
The following characters are allowed:
 -
 - *0..9*
 - *a..z*
 - *A..Z* (default setting: *KEY*)

To get the MMS server to use the IED name, click the button and restart the MMS server. The connection to connected clients is then interrupted.

TCP port

Specifies TCP port for MMS server access.

Possible values:

- ▶ *1..65535* (default setting: *102*)
Exception: Port *2222* is reserved for internal functions.

NOTE: The server restarts automatically after you change the port. In the process, the device terminates open connections to the server.

Sessions (max.) Specifies the maximum number of concurrent MMS server connections.

Possible values:

- ▶ 1..15 (default setting: 5)

Information

Status Displays the *IEC61850-MMS* server status.

Possible values:

- ▶ *unavailable*
- ▶ *starting*
- ▶ *running*
- ▶ *stopping*
- ▶ *halted*
- ▶ *error*

Active sessions Displays the number of active MMS server connections.

Buttons

You find the description of the standard buttons in section [“Buttons” on page 18](#).

Download ICD file Copies the ICD file to your PC.

Modbus TCP

[Advanced > Industrial Protocols > Modbus TCP]

Modbus TCP is a protocol used for Supervisory Control and Data Acquisition (SCADA) system integration. *Modbus TCP* is a vendor-neutral protocol used to monitor and control industrial automation equipment such as Programmable Logic Controllers (PLC), sensors and meters.

This dialog lets you specify the parameters of the protocol. To monitor and control the parameters of the device, you need Human-Machine Interface (HMI) software and the memory mapping table. Refer to the tables located in the Configuration User Guide for the supported objects and memory mapping.

The dialog lets you enable the function, activate the write access, control which TCP port the Human-Machine Interface (HMI) polls for data. You can also specify the number of sessions allowed to be open at the same time.

NOTE: When *Modbus TCP* write access is active, the protocol does not authenticate user access. To help avoid an unauthorized access, specify the IP address range located in the *Device Security > Management Access* dialog. Enter only the IP addresses assigned to your devices before enabling the function. Furthermore, the default setting for monitoring function activation in the *Diagnostics > Status Configuration > Security Status* dialog, *Global* tab, is active.

Operation

Operation

Enables/disables the *Modbus TCP* server in the device.

Possible values:

- ▶ *On*
The *Modbus TCP* server is enabled.
- ▶ *Off* (default setting)
The *Modbus TCP* server is disabled.

Configuration

Write access

Activates/deactivates the write access to the *Modbus TCP* parameters.

NOTE: When *Modbus TCP* write access is active, the protocol does not authenticate user access. To help avoid an unauthorized access, specify the IP address range located in the *Device Security > Management Access* dialog. Enter only the IP addresses assigned to your devices before enabling the function. Furthermore, the default setting for monitoring function activation in the *Diagnostics > Status Configuration > Security Status* dialog, *Global* tab, is active.

Possible values:

- ▶ *selected* (default setting)
The *Modbus TCP* server read/write access is active. This lets you change the device configuration using the *Modbus TCP* protocol.
- ▶ *cleared*
The *Modbus TCP* server read-only access is active.

TCP port

Specifies the TCP port number that the *Modbus TCP* server uses for communication.

Possible values:

- ▶ `<TCP Port number>` (default setting: 502)
Specifying 0 is not allowed.

Sessions (max.)	Specifies the maximum number of concurrent sessions that the <i>Modbus TCP</i> server maintains. Possible values: ▶ 1..5 (default setting: 5)
-----------------	---

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

EtherNet/IP

[Advanced > Industrial Protocols > EtherNet/IP]

This dialog lets you specify the *EtherNet/IP* settings. You have the following options:

- Enable/disable the *EtherNet/IP* function in the device.
- Activate/deactivate the read/write capability of the *EtherNet/IP* protocol.
- Download the Electronic Data Sheet (EDS) file from the device.

Operation

Operation	Enables/disables the <i>EtherNet/IP</i> function in the device. Possible values: ▶ <i>On</i> The <i>EtherNet/IP</i> function is enabled. ▶ <i>Off</i> (default setting) The <i>EtherNet/IP</i> function is disabled.
-----------	---

Configuration

Write access	Activates/deactivates the read/write capability of the <i>EtherNet/IP</i> protocol. Possible values: ▶ <i>selected</i> The <i>EtherNet/IP</i> protocol accepts set/get requests. ▶ <i>cleared</i> (default setting) The <i>EtherNet/IP</i> protocol accepts only get requests.
--------------	---

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Download EDS file

Copies the following information in a zip file onto your PC:

- ▶ Electronic Data Sheet (EDS) with device related information
- ▶ Device icon

Command Line Interface

[Advanced > CLI]

This dialog lets you access the device using the Command Line Interface.

The prerequisites are:

- In the device, enable the SSH server in the *Device Security > Management Access > Server* dialog, tab *SSH*.
- On your workstation, install a SSH-capable client application which registers a handler for URLs starting with `ssh://` in your operating system.

Buttons

You find the description of the standard buttons in section “Buttons” on page 18.

Open SSH connection

Opens the SSH-capable client application.

When you click the button, the web application passes the URL of the device starting with `ssh://` and the user name of the logged in user.

If the web browser finds a SSH-capable client application, then the SSH-capable client establishes a connection to the device using the SSH protocol.

A Index

0-9

802.1D/p mapping 163
802.1X 82, 110

A

Access control 110
Access restriction 97
Address conflict detection 225
Aging time 134, 228
Alarms 222
ARP 225
ARP table 228
Audit trail 263
Authentication history 119
Authentication list 82
Auto disable 106, 186, 237, 238, 244

B

Boundary clock 65
Bridge 184

C

Certificate 22, 40, 95, 96, 214
CLI 100
Command line interface 100
Community names 103
Configuration profile 17, 30
ConneXium Network Manager 87
Context menu 17
Counter reset 50

D

Daylight saving time 53
Device software 28
Device software backup 28
Device status 20, 206
DHCP server 265
DoS 129
Download EDS for EtherNet/IP 275
DSCP 164

E

EAPOL 118
EDS for EtherNet/IP 275
Egress rate limiter 136
Encryption 30
ENVM 29, 30, 35, 41, 208, 213, 219, 262
Ethernet Switch Configurator 24, 213, 263
EtherNet/IP 215, 275
EtherNet/IP, Download EDS 275
EtherNet/IP, Read/write capability 275
Event severity 260
External memory 29, 30, 35, 41, 262

F

FDB 138
Filter MAC addresses 138
Fingerprint 91, 95
Flash memory 29, 224
Flow control 134
Forwarding database 138

G

Guards 193

H

Hardware clock 52
Hardware state 224
Host key 92
HTML 224, 262
HTTP 93
HTTP server 212
HTTPS 94

I

IAS 82, 121
IEC61850-MMS 214, 271
IEEE 802.1X 82
IGMP snooping 140
Ingress filtering 171
Ingress rate limiter 136
Integrated authentication server 82, 121
IP access restriction 97
IP address conflict detection 225
IP DSCP mapping 164

L

Link aggregation 196
Link backup 202
LLDP 249
Load/save 30
Log file 50, 262
Login banner 102, 103
Loops 183

M

MAC address table 138
MAC flood 105
MAC spoof 105
Management access 24, 97
Management VLAN 25
Manufacturing message specification 271
Media redundancy protocol 174
Menu 16
MMRP 153
MMS 271
Modbus TCP 214, 273
MRP 174
MRP-IEEE 151
MVRP 157

N

Network load 49
NVM 16, 17, 24, 29, 35

P

Parallel redundancy protocol 178
Password 79, 211
Password length 78, 211
Persistent logging 260
Port clients 117
Port configuration 112, 161
Port mirroring 247
Port monitor 244
Port priority 161
Port security 105
Port statistics 118
Port VLAN 170
Port-based access control 110
Power supply 22, 208, 219
Pre-Login banner 103
Priority queue 161
PRP 178

Q

Queue management 165
Queues 161

R

RADIUS 82, 122
RAM 34
RAM test 229
Rate limiter 136
Read/write capability for EtherNet/IP 275
Reboot 50
Request interval 57
Ring structure 174
Root bridge 184
RSTP 183, 184

S

Secure shell 89
Security status 21, 210
Self-test 229
Serial interface 212
Settings 30
Severity 260
SFP module 233
Signal contact 21, 216
SNMP server 86, 212
SNMP traps 47, 107, 184, 198, 207, 210, 218, 222, 227, 237
SNMPv1/v2 103
SNTP 56
SNTP client 56
SNTP server 60
Software backup 28
Software update 28
Spanning tree protocol 183
SSH server 89
Switch dump 259
Syslog 231
System information 224
System log 262
System monitor 229
System time 52

T

Telnet server 88, 212
Temperature 23, 208, 219
Threshold values network load 136
Topology discovery 253
Transparent clock 73
Trap destination 222
Traps 47, 107, 184, 198, 207, 210, 218, 222, 227, 237
Trust mode 161

U

Unaware mode 134
User administration 78
Utilization 49

V

Virtual local area network 167
VLAN 25, 167
VLAN configuration 168
VLAN ports 170
VLAN unaware mode 134

W

Watchdog 30, 34
Web server 93, 94

Z

ZIP archive 259

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison
France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time,
please ask for confirmation of the information given in this publication.

© 2024 Schneider Electric. All rights reserved.

EIO0000005411.00