


EM3570 Series Firmware upgrade procedure

1. Open the web browser and type the IP in the address field based on the following modes and press Enter:
 - a. DHCP mode (Default): Use the IP address which is automatically assigned.
 - b. Other than DHCP mode: Use the default IP [169.254.YY.ZZ] based on the MAC address
 - c. YY.ZZ are the last 2 bytes of the meter's MAC address. For example, a meter with MAC address 00-B0-D0-86-BB-F7 (hexadecimal) or 0-176-208-134-187-247 (decimal), set the IP address as 169.254.187.247
2. Enter the User Name (default: Administrator) and Password (default: MAC address which is unique for each meter)
 - a. Enter the MAC address of the meter without colon in capital letters (For example: if the MAC address of the meter is 00:80:f4:02:14:38, then password is 0080F4021438)
3. Click Login


Note:

1. above 3 steps will be supported by industrialization
 2. with same setup as above, please follow below steps to firmware upgrade
-


4. Click Maintenance > Upgrade > Firmware

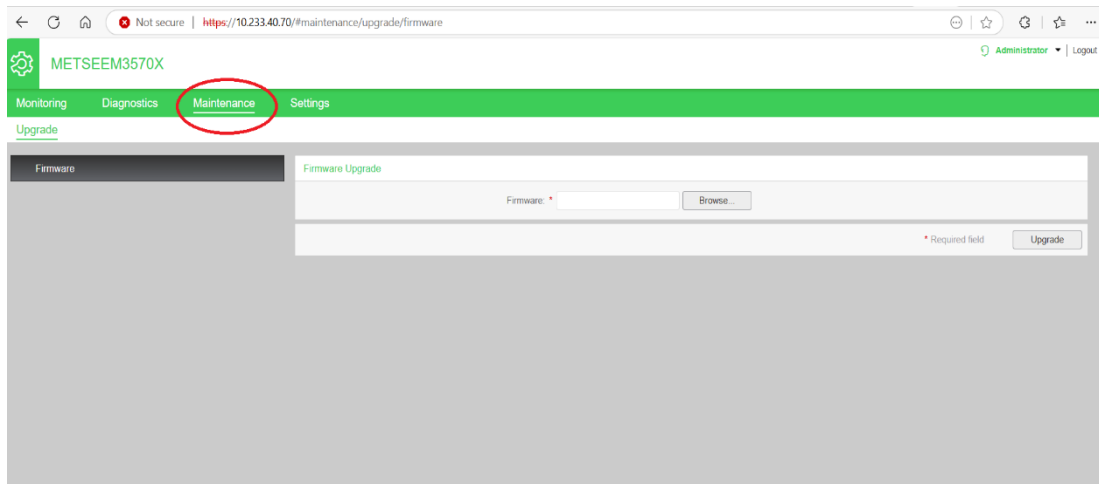

5. In the Firmware Upgrade section, click Browse button. The Choose File Open dialog box opens

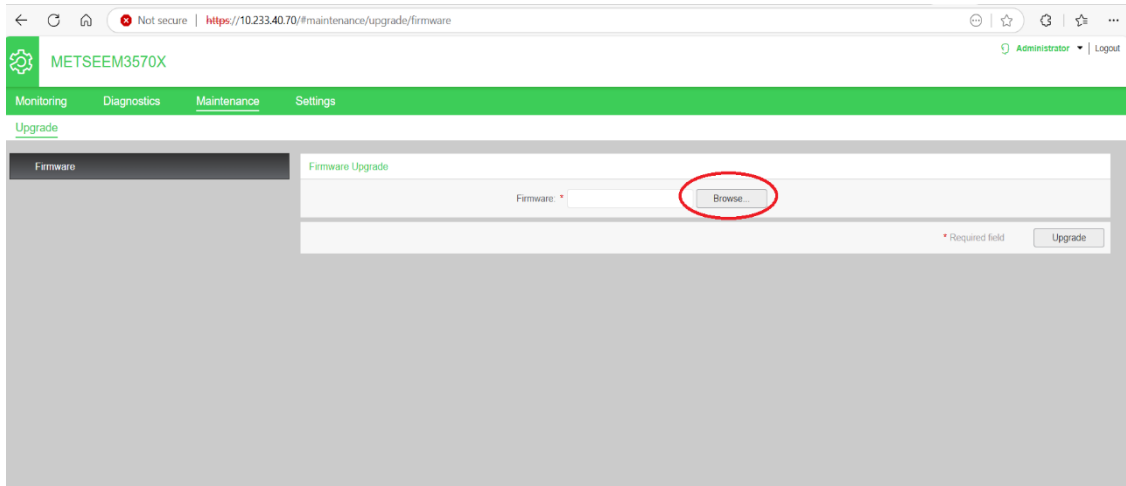

6. Select the .sedp file from the folder
 - a. File name for upgrade firmware is
METSEEM3570_Series_V114.260.225.015_PROD.sedp
7. Click Upgrade button.

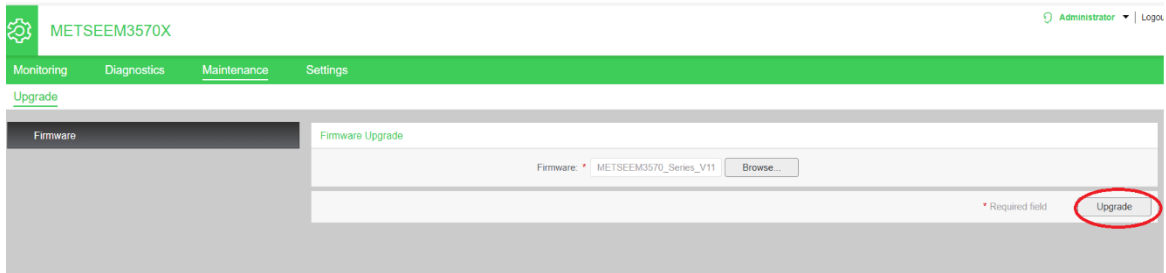

8. Click Yes to apply the firmware upgrade.
9. Wait for upgrade successful popup screen.
10. Using HMI RESET The meter to default setting.

Resetting to default values

1. Press and hold **OK** and **ESC** at the same time for 2 seconds.
2. Use the **▼** or **▲** button to enter the meter **Passcode (High)** (Default is "0010") and press **OK**.
3. Use the **▼** button to scroll to **Dfault** and press **OK**.
4. Press **OK** to reboot (reset to default).

NOTE: The webpage password resets to default but the HMI passcode does not reset to default.