



APPLICATION GUIDE
Momentary Switch

CAT. NO.

E8231PRL1F




E8232PRL1F

E8233PRL1F

Pieno

Thank you for choosing **Schneider Electric Pieno's** electronic accessories. To ensure proper application of our products, please read through the following information before installation and use .

This application guide applies to the following products.

	Cat. no.	Description
	E8231PRL1F	10A 250V 1 Gang Momentary Switch with Fluorescent Locator
	E8232PRL1F	10A 250V 2 Gang Momentary Switch with Fluorescent Locator
	E8233PRL1F	10A 250V 3 Gang Momentary Switch with Fluorescent Locator

SPECIFICATIONS


Rated Voltage Rated	: 250V~
Current:	: 10A
Dimension	: 87mm x 87mm
Mounting Centre	: 60.3mm
Compliance	: GB 16915.1, IEC 60669-1, ESEN 60669-1, MSIEC 60669-1, SS 227-1

IMPORTANT NOTE

1. The products must be installed by qualified electricians.
2. Please check your local wiring regulations before installation.
3. Safekeeping the faceplate to prevent damage during product installation.
4. Turn off the power supply when you clean the product. Use a soft, slightly-moistened cloth or tissue paper to wipe off the dust and dirt on the surface. Clean with much diluted detergent if necessary but avoid using corrosive chemicals.


WIRING DIAGRAMS

E8231PRL1F , E8232PRL1F & E8233PRL1F

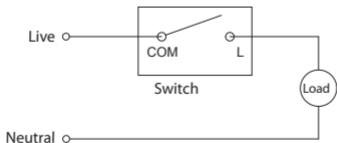

MOUNTING INSTRUCTION

1. Connect the wires to the terminals (recommend to leave 10-12mm bare metal wire) and tighten the terminal screws.
2. Screw the grid plate onto the wall box.
3. Snap the faceplate onto the grid plate.

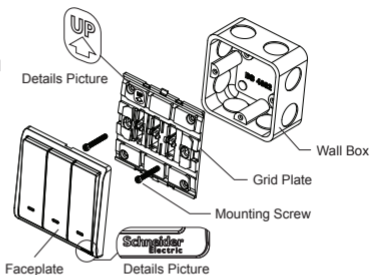

Insert a screwdriver into the clip lock, and twist the screwdriver to remove the faceplate.

