




 

**Application Guide**  
**Double Pole Switches**

**CAT. NO.**  
MGU5.222.XXS  
MGU5.252.XX  
MGU5.257.XX

**Unica**

Thank you for choosing **Schneider Electric** Unica Double Pole Switches. To ensure proper application of our products, please read through the following information before installation and use.

**This application guide applies to the following Unica products.**

<b>Cat No.</b>	<b>Description</b>
 MGU5.222.XXS	20 A 250 V 1 Gang Double Pole Switch With Neon and Earth
 MGU5.252.XX	45 A 250 V Double Pole Switch with Neon
 MGU5.257.XX	45 A 250 V Twin Gang Vertical Double Pole Switch with Neon

### **IMPORTANT NOTE**

1. Electrical installation must be carried out by a qualified electrician.
2. Please check your local wiring regulations before actual installation.

## SPECIFICATIONS


Voltage	: 250 Vac
Ampere	: 20 A (for MGU5.222.XXS) 45 A (for MGU5.252.XX, MGU5.257.XX)
Mounting Centre	: 60.3 mm (except MGU5.257.XX) 120.6 mm (for MGU5.257.XX)
Compliance	: IEC 60669-1 , SASO GSO IEC 60669-1

## IMPORTANT NOTE

Please check your local wiring regulations before installation.

## WIRING DIAGRAM

1 way Double Pole Switch

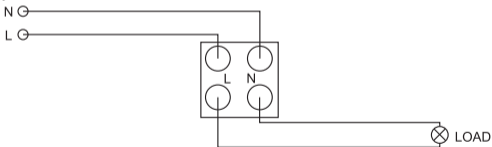


## PRODUCT CARE


When cleaning, use a soft damp cloth / tissue to remove dust or dirt. Ensure the product is switched off during cleaning. DO NOT USE caustic cleaning agents.

## MOUNTING INSTRUCTION


1. Align and place the Insert on the wall box.

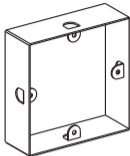

2. Fasten with screws on both sides.

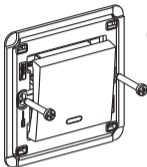

3. Assemble the Cover frame on the Insert, ensuring proper engagement by a clear "click" sound.

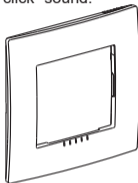

## UNMOUNTING INSTRUCTION

1. To remove the Cover frame, carefully insert a screwdriver between the Cover frame and the Wall surface. Then twist the screwdriver to dislodge the Cover frame from the Insert.
2. Use the other hand to support and remove the Cover frame.

