



AOABS3CZSSXMZZ

EcoStruxure Augmented Operator Advisor Builder Essential

To build an unlimited number of projects
Single license, 1 year license



AOABM3CZMSXMZZ

EcoStruxure Augmented Operator Advisor Builder Performance

To build an unlimited number of projects with Procedures
Single license, 1 year license



AOARS1CZSSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Essential Level 1

To run mono-area projects containing up to 20 Points of Interest
Single license, permanent license



AOARS2CZSSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Essential Level 2

To run mono-area projects containing up to 50 Points of Interest
Single license, permanent license



AOARS3CZSSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Essential Level 3

To run mono-area projects containing an unlimited number of Points of Interest
Single license, permanent license



AOARM1CZMSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Performance Level 1

To run mono-area projects containing up to 20 Points of Interest and up to 10 Procedures
Single license, permanent license



AOARM2CZMSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Performance Level 2

To run mono-area projects containing up to 50 Points of Interest and up to 20 Procedures
Single license, permanent license



AOARM3CZMSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Performance Level 3

To run mono-area projects containing an unlimited number of Points of Interest and unlimited number of Procedures
Single license, permanent license



AOARX3CZXSPMZZ

EcoStruxure Augmented Operator Advisor Runtime Multi-areas

To run multi-area projects containing an unlimited number of Points of Interest and unlimited number of Procedures
Single license, permanent license