





S1A4558801

Altivar 32


VZ3V32A100, VZ3V32B100
VZ3V32C100, VZ3V32D100

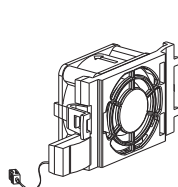


VZ3V32 A100

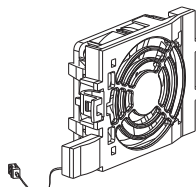

VZ3V32 B100

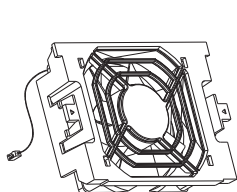

VZ3V32 C100

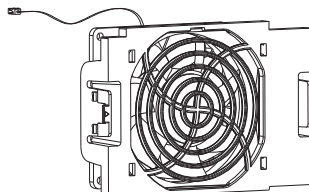

VZ3V32 D100

ATV32H018M2...H075M2, ATV32H037N4...HU15N4	VZ3V32 A100
ATV32HU11M2...HU22M2, ATV32HU22N4...HU40N4	VZ3V32 B100
ATV32HU55N4...HU75N4	VZ3V32 C100
ATV32HD11N4...HD15N4	VZ3V32 D100

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


- Read and understand this manual and the manuals of the drive before installing this option.
- Installation must be performed by qualified personnel
- The user is responsible for compliance with all international and national electrical code requirements with respect to grounding of all equipment.
- Many parts of this drive, including the printed circuit boards, operate at the line voltage. DO NOT TOUCH. Use only electrically insulated tools.
- DO NOT touch unshielded components or terminal strip screw connections with voltage present.
- DO NOT short across terminals PA/+ and PC/- or across the DC bus capacitors.
- Before servicing the drive:
 - Disconnect all power, including external control power that may be present.
 - Place a "DO NOT TURN ON" label on all power disconnects.
 - Lock all power disconnects in the open position.
 - WAIT 15 MINUTES to allow the DC bus capacitors to discharge.
 - Measure the voltage of the DC bus between the PA/+ and PC/- terminals to ensure that the voltage is less than 42 Vdc.
 - If the DC bus capacitors do not discharge completely, contact your local Schneider Electric representative. Do not repair or operate the drive.
- Install and close all covers before applying power or starting and stopping the drive.

Failure to follow these instructions will result in death or serious injury.


Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this product.

© 2010 Schneider Electric. All Rights Reserved.


VZ3V32 A100, VZ3V32 B100

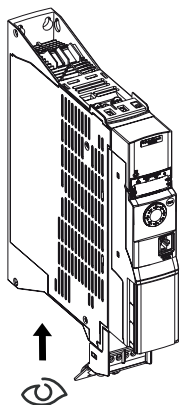


1

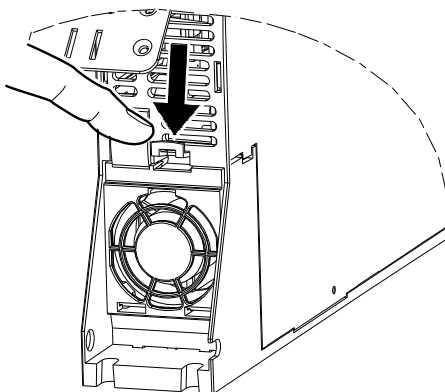


2

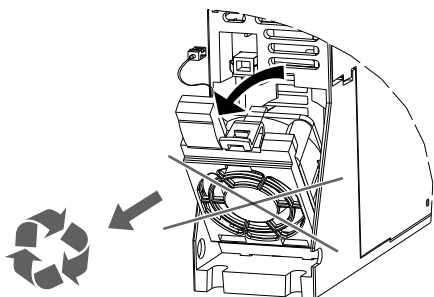


3

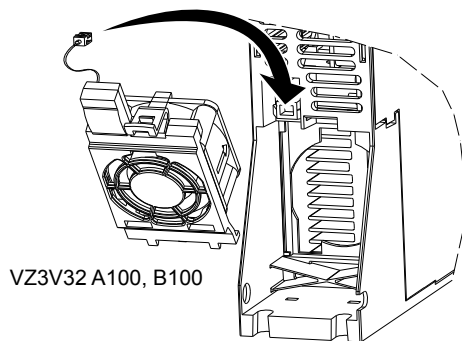


4

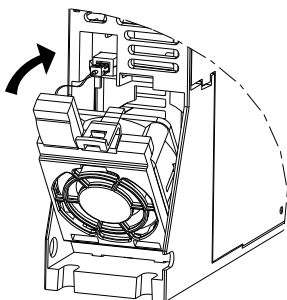


5

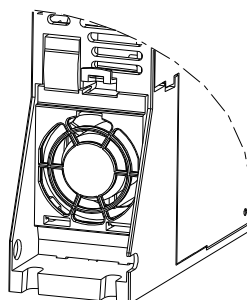


VZ3V32 C100

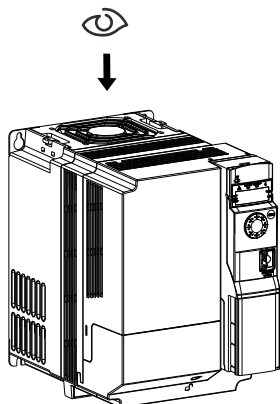


1

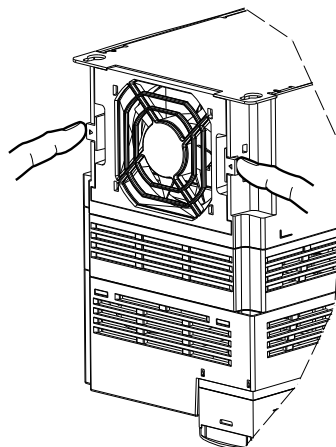


2

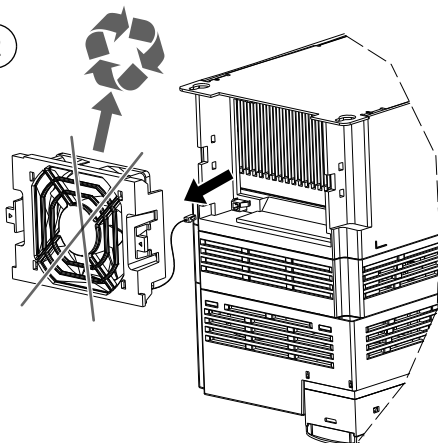


3

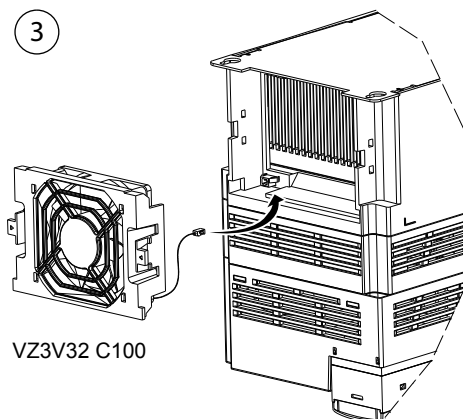


4

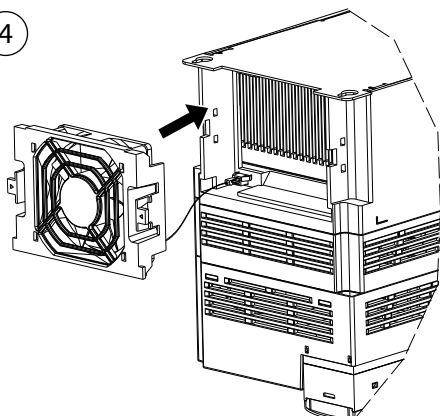


5

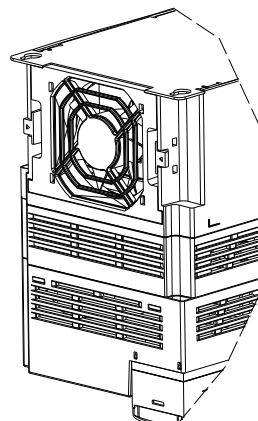


VZ3V32 D100

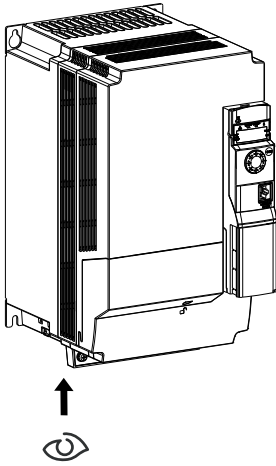


1

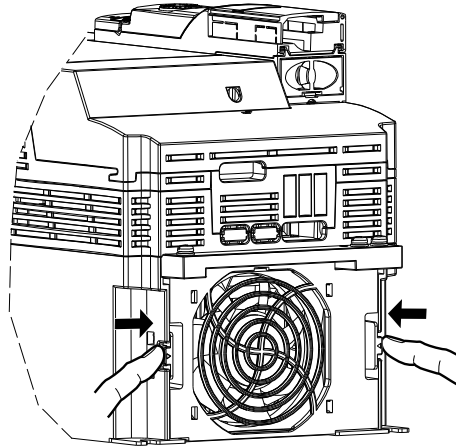


2

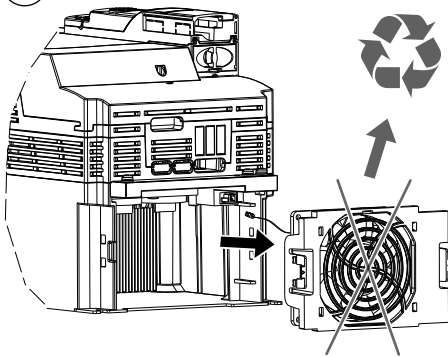

3

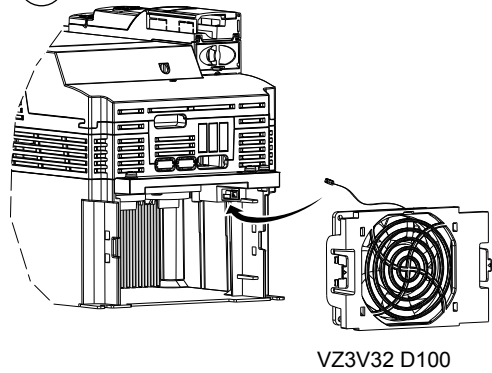

4

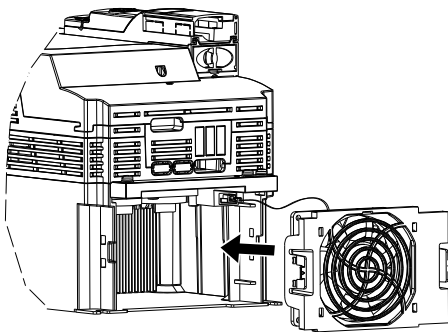

5

