

APC™ Back-UPS™ BE 500/650/850/1050 G2 -FR/-GR/-IT/-UK

Important Information



This is the “Read user manual” symbol. Read the instructions, in the Safety Guide supplied with the UPS and the user manual “Back-UPS BE 500/650/850/1050 G2 -FR/-GR/-IT/-UK” (TME37615), carefully, to become familiar with the equipment before trying to install or operate the UPS.

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install and operate it.

Inspect the package contents upon receipt. Notify the carrier and dealer if there is any damage.

Detailed user manual is available online and can be downloaded either by scanning the QR Code on the UPS or from URL
<https://www.go2se.com/ref=<UPS model number>/DownloadDocuments>.

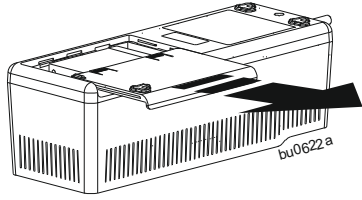
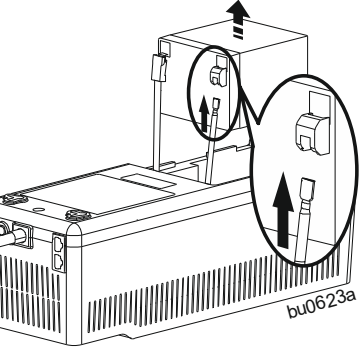
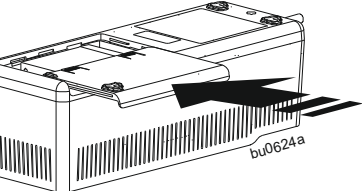
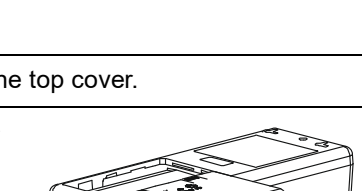
Safety and General Information

- This UPS is for indoor use only.
- Do not operate this UPS in direct sunlight, in contact with fluids, or where there is excessive dust or high humidity.
- Do not operate the UPS near open windows or doors.
- Be sure the air vents on the UPS are not blocked. Allow adequate space for proper ventilation.
NOTE: Allow a minimum of 20 cm clearance on both front and rear sides of the UPS.
- Environmental factors impact battery life. Elevated ambient temperatures, poor quality utility power, and frequent discharges will shorten battery life. Follow the battery manufacturer recommendations.
- Connect the UPS power cable directly to a wall outlet. Do not use surge protectors or extension cords.
- CAUTION: Before installing or replacing the batteries, remove jewelry such as wristwatches and rings.
High short circuit current through conductive materials could cause severe burns.
- CAUTION: Do not open or mutilate batteries. Released material is harmful to the skin and eyes and may be toxic.

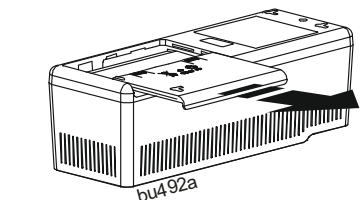
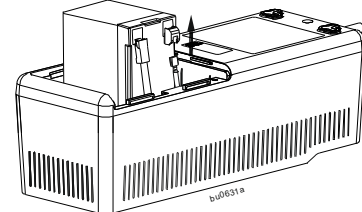
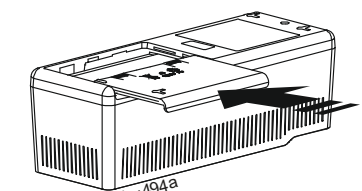
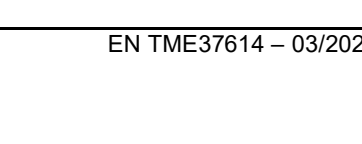
Electrical equipment should be installed and operated only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Connect the Battery

500 VA models

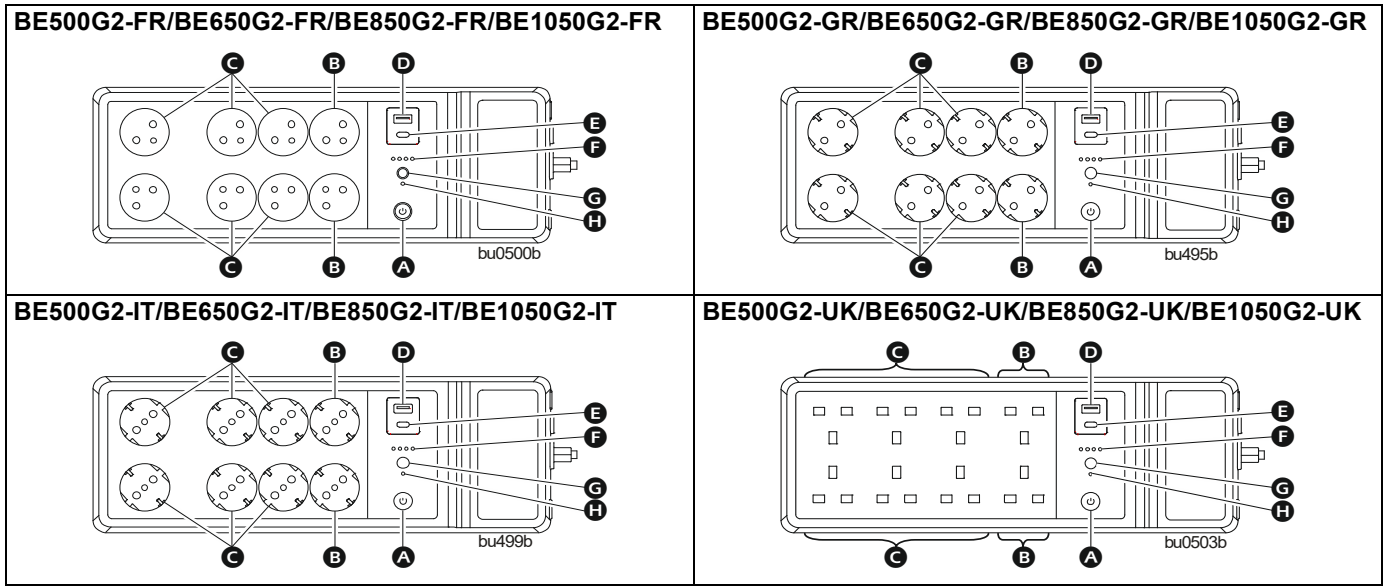 
❶	Remove the “⚠ <i>Connect Battery First</i> ” label from the top cover.	
❷	Invert the Back-UPS. Press the battery compartment cover and release the tabs. Slide open the battery cover.	
❸	Lift the battery up and connect the battery cable securely to the battery terminal. NOTE: It is normal for small sparks to be seen when the battery cable is connected to the battery terminal.	
❹	Reinstall the battery compartment cover. Be sure that the release tabs lock into place.	

650/850/1050 VA models

❶	Remove the “⚠ <i>Connect Battery First</i> ” label from the top cover.	
❷	Invert the Back-UPS. Press the battery compartment cover and release the tabs. Slide open the battery cover.	
❸	Connect the battery cable securely to the battery terminal. NOTE: It is normal for small sparks to be seen when the battery cable is connected to the battery terminal.	
❹	Reinstall the battery compartment cover. Be sure that the release tabs lock into place.	

Panel Features

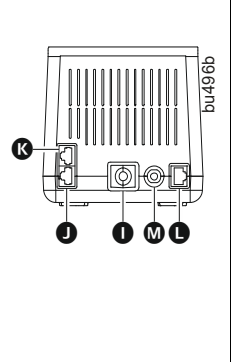
Top panel



<p>A POWER ON/OFF button and LED</p>	<p>Use to switch the Back-UPS on or off.</p> <p>The LED illuminates green indicating that power is supplied to the connected equipment both on utility power and on battery.</p>
<p>B Surge protection outlets</p>	<p>Surge protection outlets help to provide protection to connected equipment from power surges or spikes, when the Back-UPS is turned on and connected to utility power. Connect peripheral devices (such as printer, scanner, etc.) that do not need to remain on during power outages or brownout condition, to these outlets.</p>
<p>C Battery backup + surge protection outlets</p>	<p>Battery backup outlets provide power from the battery for a limited period of time during power outage, or brownout condition. Battery backup outlets help to provide protection to connected equipment from power surges or spikes, when the Back-UPS is turned on and connected to utility power. Connect a computer, monitor and other peripheral devices which need to remain on during power outages or brownout condition, to these outlets.</p>
<p>D Type A USB charging port</p>	<p>This USB charging port provides a maximum of 2.4 A DC power. The port will charge the connected equipment when the Back-UPS is turned on.</p>
<p>E Type C USB charging port †</p>	
<p>F Battery status LED</p>	<p>The four Battery status LEDs indicate the remaining runtime. When battery is fully charged, all four LEDs illuminate.</p>
<p>G MUTE button</p>	<p>Press MUTE button to Enable or Disable the mute function.</p>
<p>H Mute status LED</p>	<p>Illuminates when the mute function is enabled.</p>

† Type C USB charging port is available only in 850 VA and 1050 VA models.

Side panel

I	Input power cord	Connect the Input power cord to a wall outlet (utility power). Do not connect the power cord to a surge protector or power strip.	
I	DSL/modem network/fax port	Connect a DSL or dial-up modem, phone, fax machine, or 10/100 Base-T Ethernet equipment. NOTE: Do not connect the UPS telephone protection ports to both the telephone and network system cables at the same time.	
K	Wall outlet	Connect the Back-UPS to a data line wall outlet.	
L	Data port	Connect a USB cable to connect the Back-UPS to a computer for installing the software. Refer "PowerChute™ Serial Shutdown" below, for details.	
M	Circuit breaker	Trips when the Back-UPS experiences an overload condition.	

Turn On the Back-UPS

Press the POWER ON/OFF button located on the top of the Back-UPS. The **Power on/off** LED will illuminate green and a single short beep will indicate that the Back-UPS is on and providing protection to the connected equipment.

The Back-UPS battery charges to capacity during the first 24 hours while connected to the utility power. The Back-UPS battery will charge while the Back-UPS is turned on or off and as long as it is connected to utility power.

Do not expect the battery to run for its expected capacity during the initial charge period. The UPS will have full runtime capability after the initial charging period.

Turn Off the Back-UPS

Press the POWER ON/OFF button for at least 2 seconds to turn off the Back-UPS. At the first beep, release the button and the UPS will turn off.

A 2 second delay has been added to mitigate unintentional contact with the POWER ON/OFF button.

PowerChute™ Serial Shutdown

Overview

Use PowerChute™ Serial Shutdown software to configure the UPS settings, protect your computer and other equipment during a utility power outage. During a power outage, PowerChute will save any open files on your computer and shut it down. When utility power is restored, it will restart the computer.

NOTE: PowerChute is only compatible with a Windows operating system. If you are using Mac OSX, use the native shutdown feature to protect your system. See the documentation provided with your computer.

Installation

Use the USB cable to connect the Data port on the UPS to the USB port on your computer. Download PowerChute Serial Shutdown Software from www.apc.com/pcss and follow the directions to install the software.

Warranty Registration

Register your product on-line at <http://warranty.apc.com>.

Worldwide Customer Support

For country specific customer support and warranty extension, go to our Web site, www.apc.com.