



Quick Installation Guide for Battery Cartridge Replacement

CAUTION:

- Only qualified persons should remove the battery.
- Use APC authorized batteries only.
- Use authorized battery recycler. See www.apc.com/recycle for information on recycling services offered in your country.



SRV/SRVS Rack-Mount 1000/2000/3000 VA

1. Remove the front bezel of the UPS and disconnect the battery cable.
2. Locate the screws (4 nos.) securing the battery plate and unfasten them.

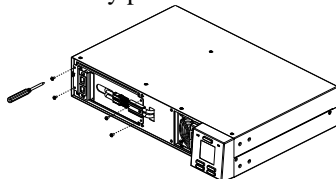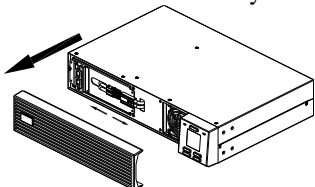



3. Remove the battery plate.

4. Slide out the old battery.

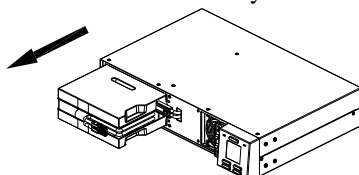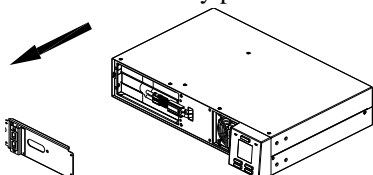



5. Insert the new battery.

6. Re-install the battery plate removed in step 2.

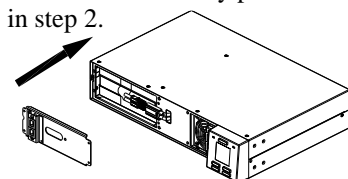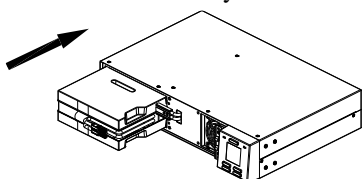

7. Secure the battery plate by fastening the screws (4 nos.).

8. Re-connect battery cable and re-install the front bezel of the UPS.

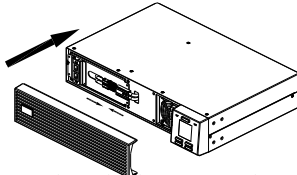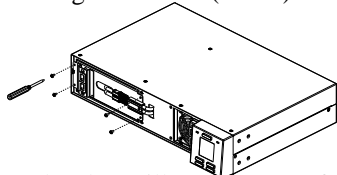

NOTE: The above illustrations are for representation only. The battery replacement procedure remains the same for all the UPS ratings.