



by Schneider Electric


Quick Installation Guide for Battery Cartridge Replacement.

CAUTION:


- Only qualified persons should remove the battery.
- Use APC authorized batteries only.
- Use authorized battery recycler. See www.apc.com/recycle for information on recycling services offered in your country.

SRV/SRVS 1000VA


1. Locate the screws (8 nos.) securing the top cover and unfasten the screws.

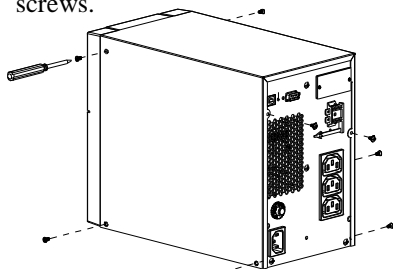


2. Remove the cover of the UPS.

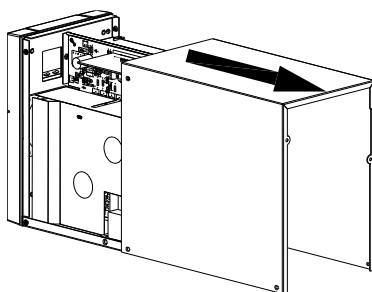


3. Disconnect and remove the battery cables.

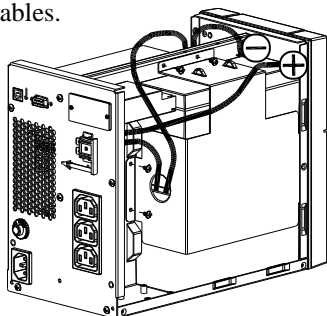


4. Locate the screws (5 nos.) securing the battery plate and unfasten them.

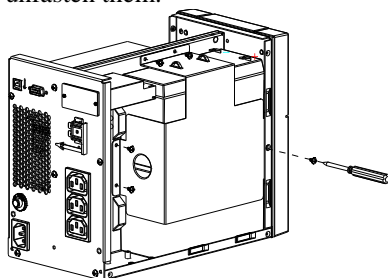


5. Remove the battery plate and the old batteries.

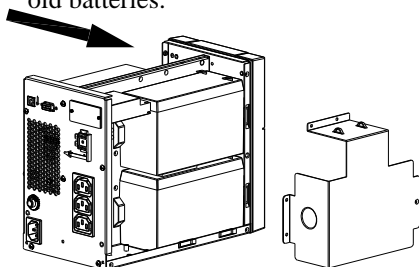


6. Insert the new batteries.

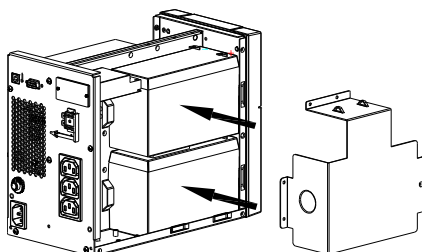


7. Make series connections as original one. Connect batteries again to PCB. Put back the battery plate.

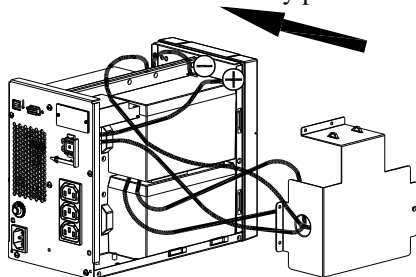


8. Fix the screws (5 nos.) securing the battery plate.

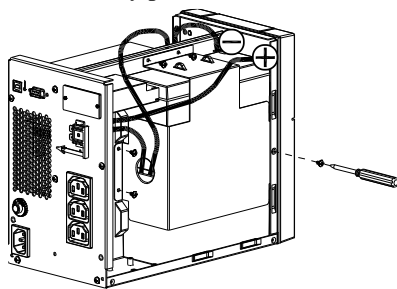

9. Put back the top cover of the UPS again.

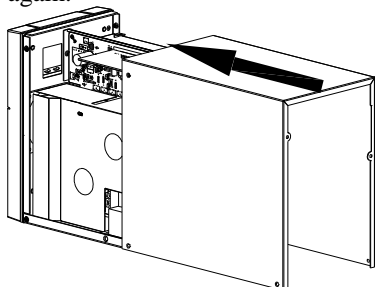


10. Fix the screws (8 nos.) securing the top cover.

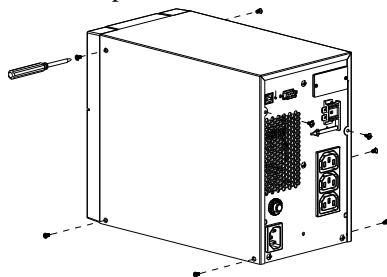


SRV/SRVS 2000VA


1. Locate the screws (10 nos.) securing the top cover and unfasten the screws. Please cross check the number of screws.

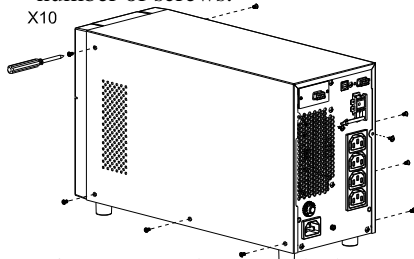


2. Remove the cover of the UPS.

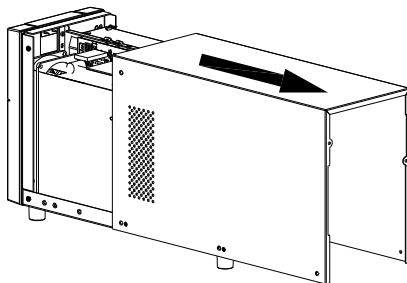


3. Disconnect and remove the battery cables.

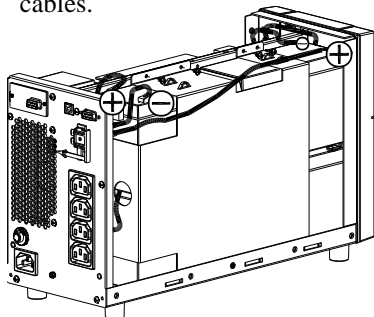


4. Locate the screws (10 nos.) securing the battery plate and unfasten them. Please cross check the number of screws.

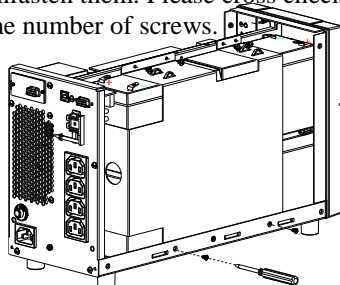


5. Remove the battery plate and the old batteries.

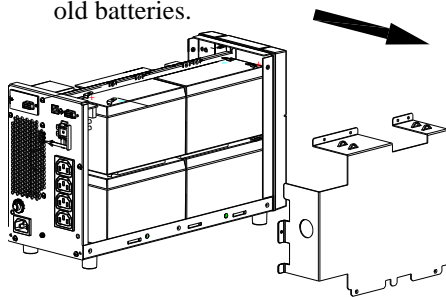


6. Insert the new batteries.

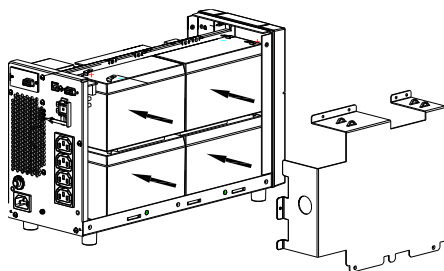


7. Make series connections as original one. Connect batteries again to PCB. Put back the battery plate.

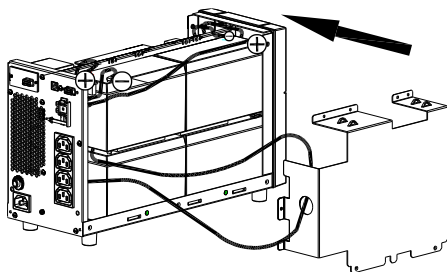


8. Fix the screws (10 nos.) securing the battery plate. Please cross check the number of screws.

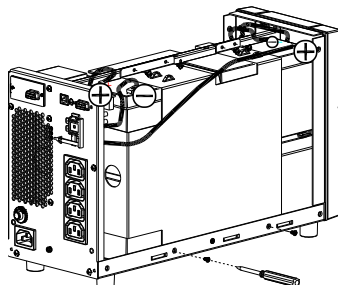

9. Put back the top cover of the UPS again.

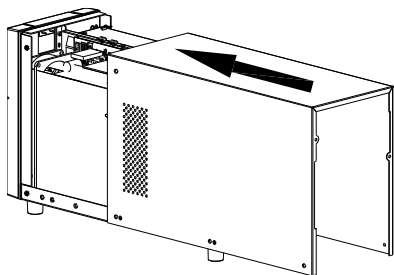


10. Fix the screws (10 nos.) securing the top cover. Please cross check the number of screws.

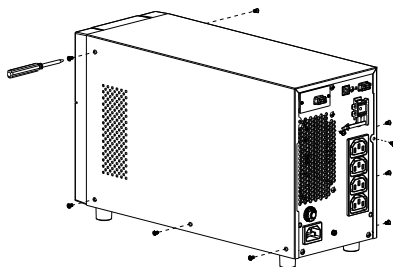


SRV/SRVS 3000VA


1. Locate the screws (8 nos.) securing the top cover and unfasten the screws.

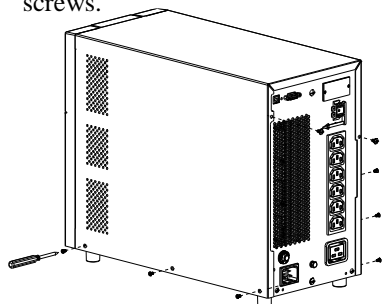


2. Remove the cover of the UPS.

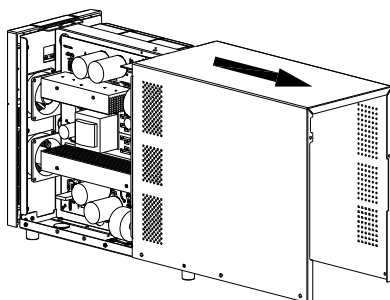


3. Locate the screws (8 nos.) securing the battery plate and unfasten them. Please cross check the number of screws.

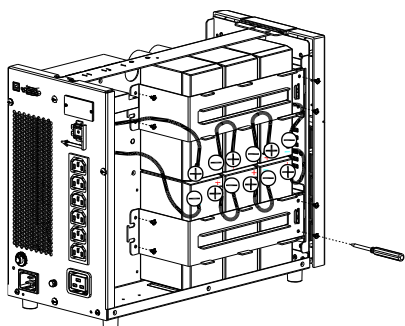


4. Disconnect battery cables and remove the old battery.

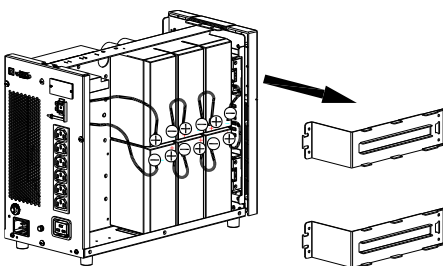


5. Insert the new battery. Make series connections as original one. Connect batteries again to PCB. Put back the battery plate

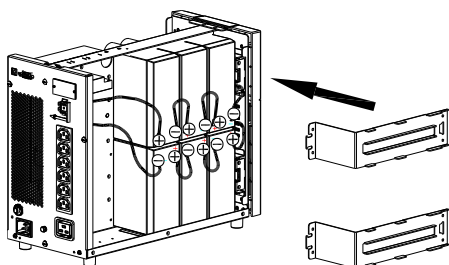

6. Fix the screws (8 nos.) securing the battery plate. Please cross check the number of screws.

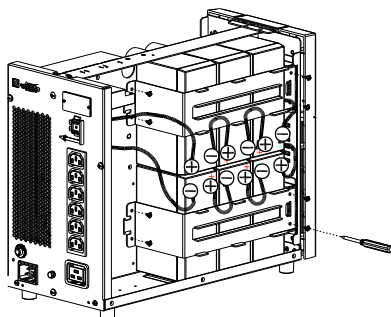

7. Put back the top cover of the UPS again.

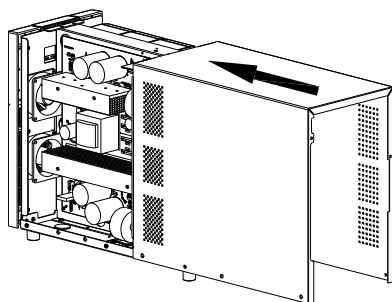

8. Fix the screws (8 nos.) securing the top cover.

