

Version:

=====

UPS 10.0

Applicable Models:

=====

SMC 120V SKUs (serial numbers AS1208 and earlier)

Compatibility:

=====

PCBE 9.0.1

Release Notes: (UPS 10.0)

=====

- 1.To improve the LCD response after a fault is cleared allowing it to go back to normal operation.
- 2.To improve the transferring from GREEN to SELFTTEST and avoid improper message generated by customer server.
- 3.To improve the LCD Speaker symbol to work correct when enable from Simulator
- 4.To improve the Transfer-point should vary from PCBE Setting.

Release Notes: (UPS 09.8)

=====

- 1.To improve the LCD response after a fault is cleared allowing it to go back to normal operation.
- 2.To improve the transferring from GREEN to SELFTTEST and avoid improper message generated by customer server.