

NetBotz[®] 0-5V Cable (NBES0305) Installation Instructions


Overview

Thank you for purchasing this NetBotz 0-5V Cable. This cable enables you to connect a single 0-5V sensor to your NetBotz appliance. With this cable you can now use many standard 0-5V sensors as external NetBotz sensors.

The NetBotz 0-5V Cable package includes the following items:




NetBotz 0-5V Cable

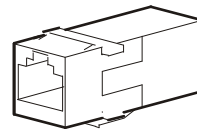

RJ-45 coupling



203-mm (8-in) Tie Wraps (10)

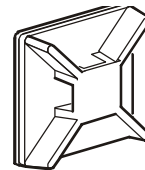

Adhesive Cable Tie Holders (5)



Note: You can extend the length of the sensor cable up to 30.5 m (100 feet) using the RJ-45 coupling and standard CAT-5 cabling

Installation

To use your NetBotz 0-5V Cable, connect the two wire leads at the end of the NetBotz 0-5V Cable to the 0-5V sensor. Use the instructions included with your sensor to determine the proper wiring for the sensor.

Connect the RJ-45 jack of the NetBotz 0-5V Cable to a Sensor port on your NetBotz appliance.

When you have finished installing, use the Advanced View to specify the conditions that will cause this sensor to generate a NetBotz alert notification. For more information, refer to the documentation that came with your appliance.



Customer support and warranty information is available at the APC Web site, www.apc.com.

© 2008 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-3292
05/2008

