


# Earthing instructions

The I/O units should be earthed to switchgear earth as below:

## OPTION 1

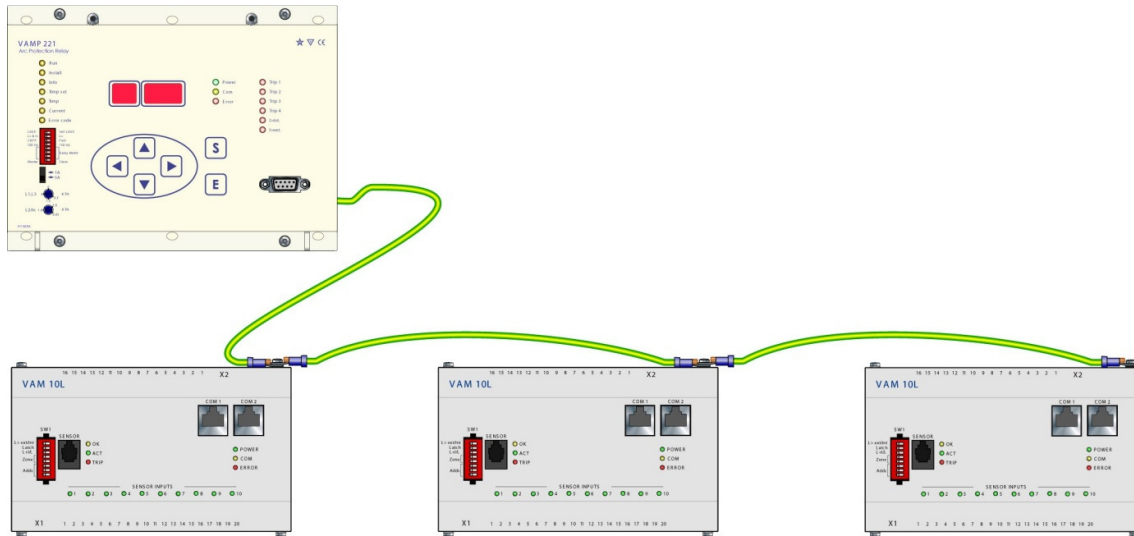


earthing instruction 1

## NOTICE

If the earthing potential varies in the switchgear installation, the earthing should be done from the central unit, in parallel with the communication cable (VX001). In this case the dinrail connection between slaves and switchgear should be isolated!

**OPTION 2**

If the switchgear earthing solid!

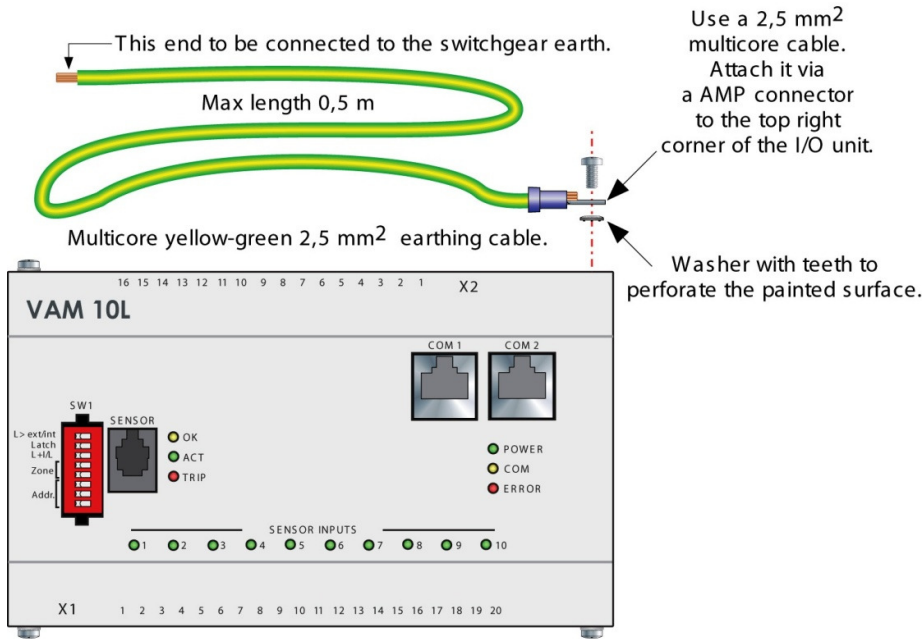

earthing instruction 2

**Schneider Electric**

35 rue Joseph Monier  
92506 Rueil-Malmaison  
FRANCE

Phone: +33 (0) 1 41 29 70 00  
Fax: +33 (0) 1 41 29 71 00

[www.schneider-electric.com](http://www.schneider-electric.com)

Publishing: 4/2013

© 2012 Schneider Electric Industries SAS - All rights reserved. Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.