



NOTES:

- ⚠ CLASS 8638 DEVICE SHOWN. DISCONNECT MEANS IS A MOLDED CASE SWITCH, AND FUSES FU1, FU2 AND FU3 ARE USER SUPPLIED. FUSE HOLDERS ARE CLASS J FOR FRAME SIZES A-D AND CLASS L FOR FRAME SIZE E.
- FOR THE CLASS 8639 DEVICE THE DISCONNECT MEANS IS A CIRCUIT BREAKER, AND THE FUSE HOLDERS FOR FU1, FU2 AND FU3 ARE NOT SUPPLIED.
- ⚠ FUSES FU9 AND FU10 ARE ONLY SUPPLIED ON FRAME SIZE D AND E.
- ⚠ FOR FRAME SIZE B, 8839 DEVICES CONTROL POWER TAKE OFF IS L1 & L2 FOR ALL OTHER DEVICES CONTROL POWER TAKE OFF IS FROM L1 & L3.
- 4. () INDICATES DEVICE TERMINALS UNLESS OTHERWISE NOTED.

ENCLOSED 48 SOFT START
POWER ELEMENTARY - POWER CIRCUIT S
NON-REVERSING W/ SHUNT TRIP



DWC# 8636-751-1
NO.