



- NOTES:
- ⚠ CLASS 8638 DEVICE SHOWN. DISCONNECT MEANS IS A MOLDED CASE SWITCH, AND FUSES FU1, FU2 AND FU3 ARE USER SUPPLIED. FUSE HOLDERS ARE CLASS J FOR FRAME SIZES A-D AND CLASS L FOR FRAME SIZE E.
 - ⚠ FOR THE CLASS 8639 DEVICE THE DISCONNECT MEANS IS A CIRCUIT BREAKER, AND THE FUSE HOLDERS FOR FU1, FU2 AND FU3 ARE NOT SUPPLIED.
 - ⚠ FUSES FU9 AND FU10 ARE ONLY SUPPLIED ON FRAME SIZE D AND E.
 - ⚠ FOR FRAME SIZE B, 8839 DEVICES CONTROL POWER TAKE OFF IS L1 & L2 FOR ALL OTHER DEVICES CONTROL POWER TAKE OFF IS FROM L1 & L3.
 - 4. () INDICATES DEVICE TERMINALS UNLESS OTHERWISE NOTED.

ENCLOSED FACTORY CONFIGURATION
(VARIATIONS FROM ATS-48 FACTORY DEFAULTS)

SHUNT TRIP	
MENU/PARAMETER	SETTING
10	r1
10	L13
10	L1r

DESCRIPTION
ISOLATION RELAY
FAULT RESET OPTION (007)
reset faults

CONFIGURATION NOTE: IF FREEWHEEL STOP IS SELECTED A TIMING FUNCTION MUST BE ADDED TO ALLOW THE MOTOR COAST TO STOP BEFORE REVERSING.

ENCLOSED 48 SOFT START
POWER ELEMENTARY – POWER CIRCUIT R
REVERSING W/ ISOLATION CONTACTOR OR SHUNT TRIP



DWC# 8636-752-1
NO.