
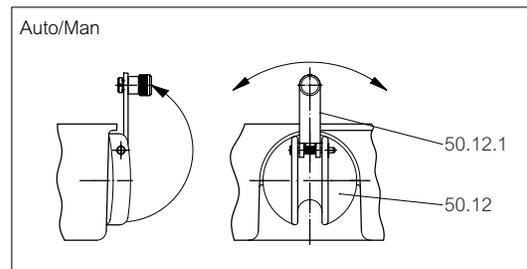
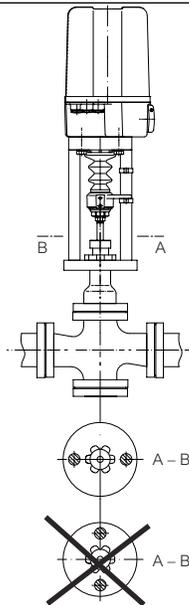
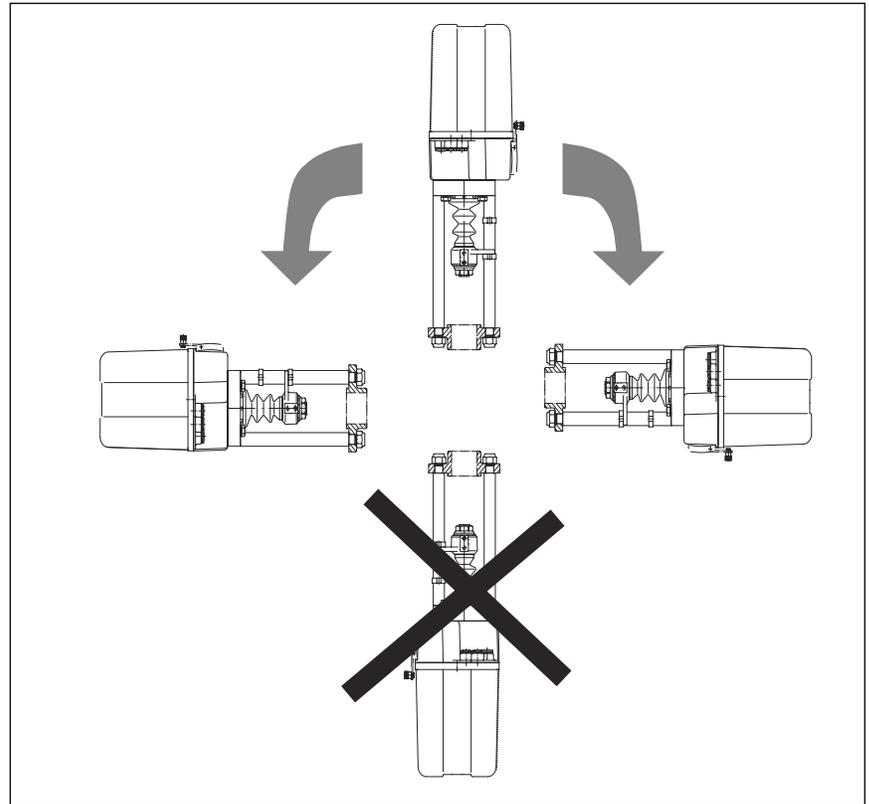


# M22 and M50

Actuator mounted on a valve DN 125 or 150. Type V222, V292, V321

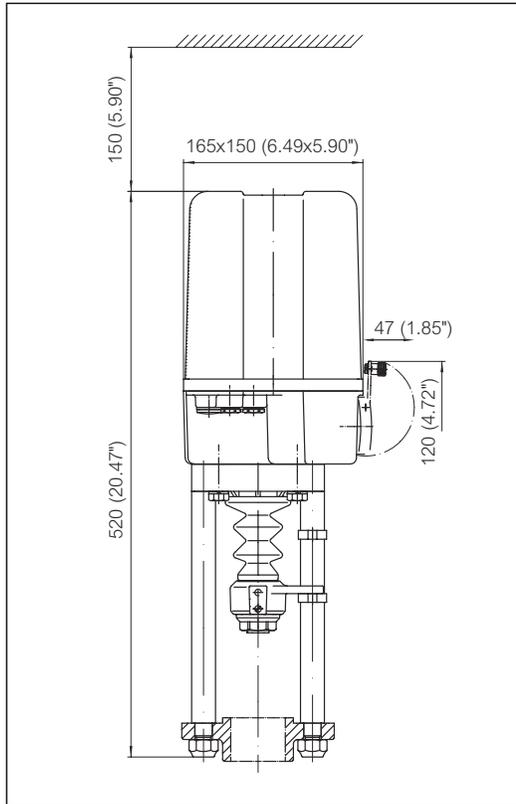

**ATTENTION!**

- The handwheel always rotates during motor-driven operation (running indicator). Never activate manual operation while the motor is running. Injury hazard!
- In the manual operating mode pay careful attention in the final positions that the handwheel is only turned to the point where the torque switch trips (audible click) as otherwise damage will be caused to the thrust actuator! Since the handwheel always follows during motor-driven operation (running indication), never operate by hand

