



To remove cover when combined core is not in place: remove cover screws, insert screwdriver between pins, rotate locking mechanism either clockwise or counterclockwise, slide cover down and lift off.