

APPLICATION GUIDE TV socket

CAT. NO.












E8231TVMÉ	E8231TVS
E8231TVÊÉ	E8232TVÊ
E8231TVMFÊÉ	E8231TVSFÊ
E8231TVFÊÉ	E8232TVFÊ
E8232TVFMMÊ	E82T32SCVÊ
E8233SMATV	

Pieno

MS18541

      Thank you for choosing Schneider Electric Pieno's electronic accessories. To ensure proper application of our products, please read through the following information before installation and use .

 This application guide applies to the following products.

	Cat. no.	Description	
	E8231TVM	1 Gang TV Socket Master, 75 5-862MHz	Ω ,
	E8231TVS	1 Gang TV Socket Slave, 75 5-862MHz	Ω ,
	E8231TV	1Gang TV Socket, 75 Through-Connection	Ω ,
	E8232TV	2 Gang TV Socket, 75 Through-Connection	Ω ,
	E8231TVMF	1 Gang TV Socket Master, 5-1000 MHz, F Connection	
	E8231TVSF	1 Gang TV Socket Slave, 5-1000 MHz, F Connection	
	E8231TVF	1 Gang CATV Socket	
	E8232TVF	2 Gang TV Socket, F Connection	
	E8232TVFMM	2 Gang TV Master/FM Socket	
	E82T32SCV	2 Gang TV/FM SCV Socket	
	E8233SMATV	TV/FM/SAT TV Socket, F Connection, Triangle Arrangementt	

SPECIFICATIONS


Dimension	:87mm x 87mm
Mounting Centre	:60.3mm

IMPORTANT NOTE


1. The products must be installed by qualified electricians.
2. Please check your local wiring regulations before installation.
3. Safekeeping the faceplate to prevent damage during product installation.
4. Turn off the power supply when you clean the product. Use a soft, slightly-moistened cloth or tissue paper to wipe off the dust and dirt on the surface. Clean with much diluted detergent if necessary but avoid using corrosive chemicals.

INSTALLATION

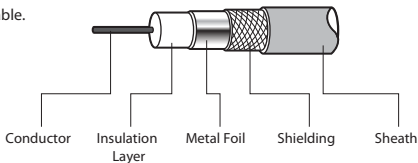
1. Structure of coaxial cable.



 2. Cut the sheath of coaxial cable according to the following diagram.




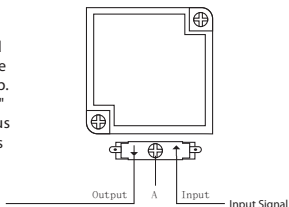3. Loosen screw "A", install the cable to "Input" terminal. The conductor should place firmly on metal grip while the shielding is placed in the cable grip. Install another cable to "Output" terminal by repeating the previous step. Then tighten the screw "A" as shown below.



MOUNTING INSTRUCTION

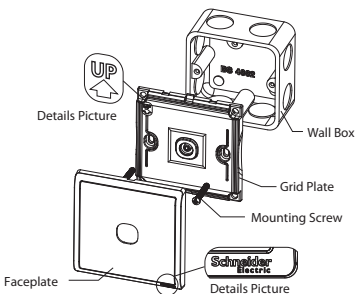1. Connect the wires to the terminals (recommend to leave 10-12mm bare metal wire) and tighten the terminal screws.
2. Screw the grid plate onto the wall box.
3. Snap the faceplate onto the grid plate.



Insert a screwdriver into the clip lock, and twist the screwdriver to remove the faceplate.

