

Replacement Socket Interior to suit 66CVXXX Series

Installation and Operating Instructions

66SOXXXG

Please note: This product is to be installed in accordance to Australian Standards.

To Remove

1. Slide interlock/switch actuator from switch mechanism shaft.
2. Remove switch mechanism from DIN rail by opening clip at base of switch mechanism with a screw driver.
3. Slide existing socket interior from socket housing mounting bracket.
4. Back off terminal screws fully and disconnect cables from socket interior noting cable locations.
Care should be taken to ensure ferrule remains on cable.

To Assemble

1. Connect cables to the new socket interior (ensure correct location).
2. Slide new socket interior onto socket mounting bracket and locate into keyway. Clip switch mechanism to DIN rail.
3. Install interlock/switch actuator onto switch mechanism shaft.
4. Check all switch mechanism terminals are tight as they may have loosened during installation.

Products of Gerard Industries Pty Ltd

ACN 007 873 529

12 Park Terrace, Bowden, South Australia 5007

Telephone (08) 8269 0511

Facsimile (08) 8340 1724

Internet <http://www.clipsal.com.au>

E-Mail plugin@clipsal.com.au