

# 7000 Series Non–Automatic Transfer Switches Operators Manual Insert

381333-151B  
12/2016

This manual insert applies to product catalog numbers beginning with:  
7NTS, 7NCTS, 7NDTS, 7NTB, 7NCTB, 7NDTB

Refer to the outline and wiring drawings provided with your 7000 Series NTS for all installation and connection details and accessories.

Refer to the *Operator's Manual* provided with your 7000 Series NTS for installation, testing, and service. For electrical operation refer to the illustration below for **Manual Transfer Control**.

Refer to *Group 5 Controller User's Guide* 381333–126 for ATS status display messages, time delays, pickup & dropout settings, and adjustments.

**⚠ WARNING**

Do not exceed the values on the rating label. Exceeding the rating can cause personal injury or serious equipment damage.

## Non–Automatic Manual Operation

This Transfer Switch does not transfer the electrical load automatically if the connected source fails. The **Manual Transfer Control** must be turned clockwise to transfer to the Emergency source or turned counterclockwise to transfer to the Normal source (see Figure 1).

## Rating Label

Each Non–Automatic Transfer Switch contains a rating label to define the loads and fault circuit withstand/closing ratings. Refer to the label on the Transfer Switch for specific values.

## Nameplate

The Transfer Switch nameplate includes data for each specific 7000 Series NTS. Use the switch only within the limits shown on this nameplate.

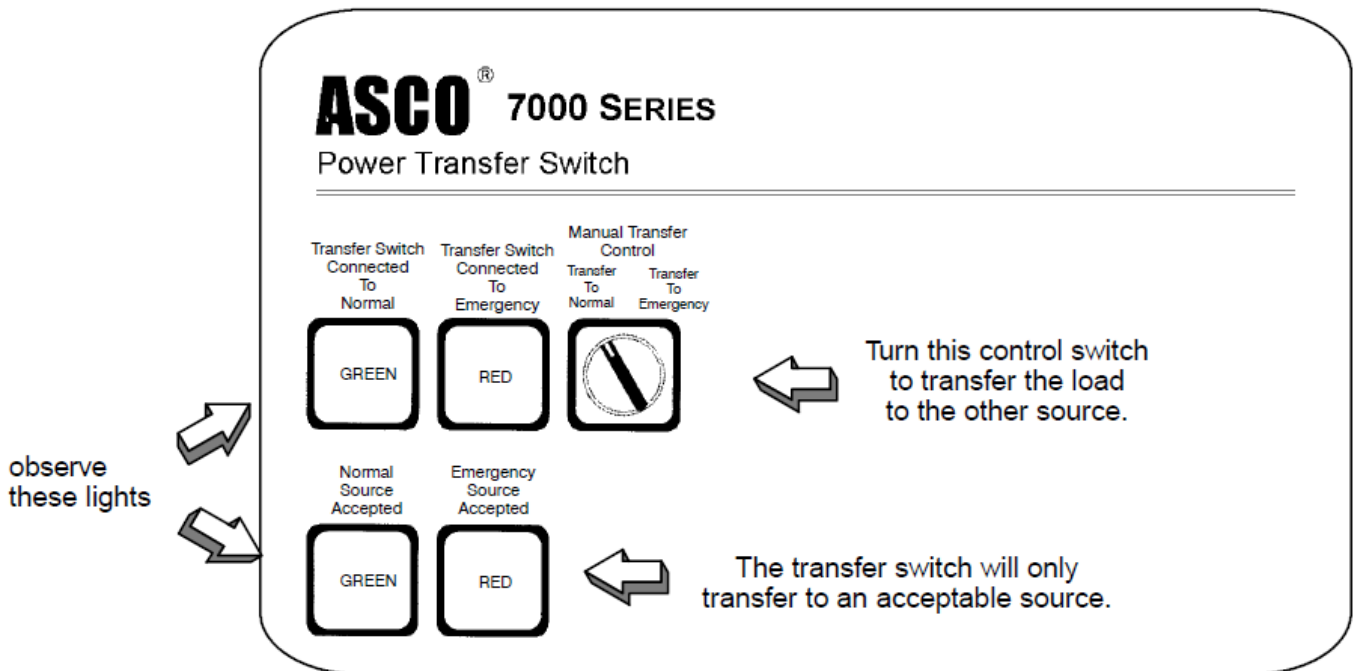


Figure 1. Standard controls and indicators.

For sales or service, call 1-800-800-2726 (ASCO)