


Modicon 584 Remote I/O System Installation and Troubleshooting Guide

PI-584B-001 Rev. C

AEG

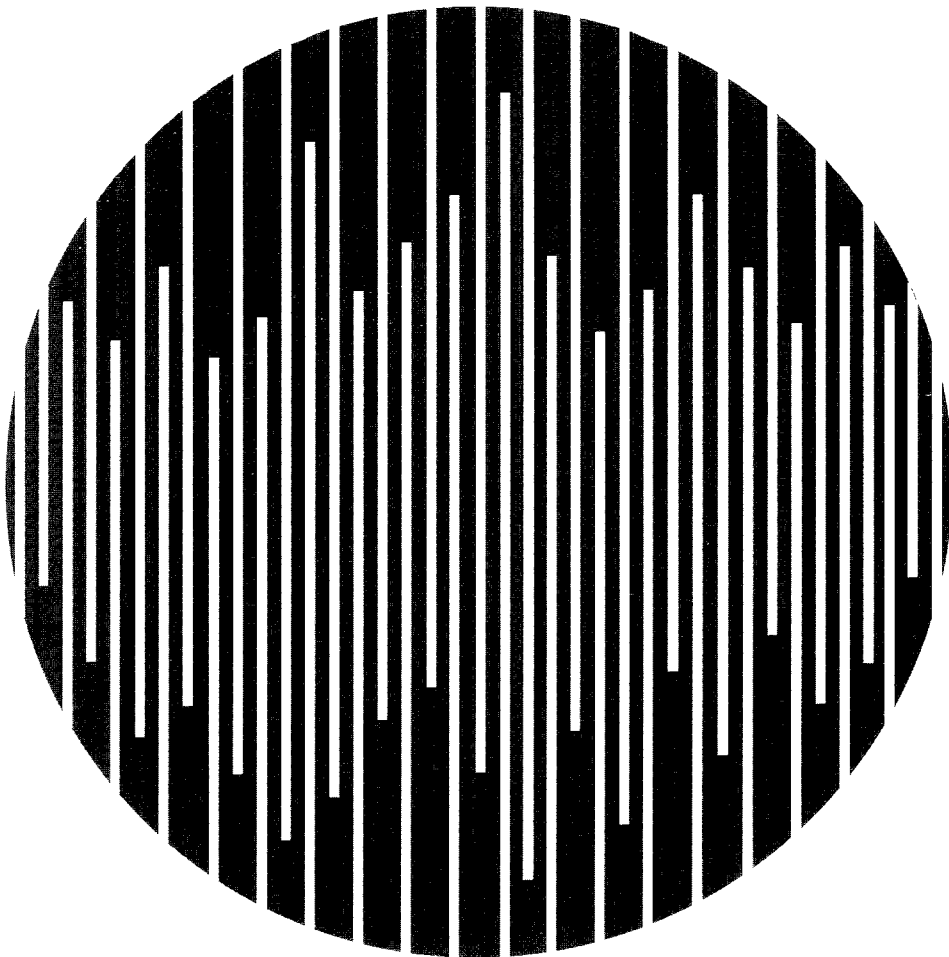

MODICON



Modicon 584 Remote I/O System Installation and Troubleshooting Guide

PI-584B-001 Rev. C

July, 1991

**MODICON, Inc., Industrial Automation Systems
One High Street
North Andover, Massachusetts 01845**

Preface

The data and illustrations found in this book are not binding. We reserve the right to modify our products in line with our policy of continuous product development. The information in this document is subject to change without notice and should not be construed as a commitment by Modicon, Inc., Industrial Automation Systems.

Modicon, Inc. assumes no responsibility for any errors that may appear in this document. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify by using the form on the last page of this publication.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, without the express written permission of Modicon, Inc., Industrial Automation Systems. All rights reserved.



Caution All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to ensure compliance with documented system data, repairs to components should be performed only by the manufacturer.

The following are trademarks of Modicon, Inc.:

Modicon	P190	984-380
Micro 984	984	984-480
Modbus	984A	984-680
Modvue	984B	984-780
Modway	984X	

IBM® is a registered trademark of International Business Machines Corporation; IBM PC™, IBM XT™, and IBM AT™ are trademarks of International Business Machines Corporation.

© Copyright 1991, Modicon, Inc.
Printed in U. S. A.

TABLE OF CONTENTS

		Page
SECTION 1	MEDIA	
1.1	CABLE SELECTION GUIDE	1-1
1.1.1	Recommended C.A.T.V. Cable (1/2 inch family)	1-1
1.1.2	Recommended Coaxial Cable	1-3
1.1.2.1	RG-6/U Coaxial Type	1-3
1.1.2.2	RG-11/U Coaxial Type	1-4
1.2	CABLE CONNECTORS	1-5
1.2.1	Line Taps	1-5
1.2.2	Line Splitters	1-6
1.2.3	C.A.T.V. Cable to Male F Connector	1-7
1.2.4	Cable Terminator - 75 ohm	1-7
1.2.5	RG-6/U Male F Connector	1-8
1.2.6	RG-11/U Male F Connector	1-8
SECTION 2	MEDIA INSTALLATION	
2.1	CABLING REQUIREMENTS	2-1
2.2	TOPOLOGY DRAWING	2-2
2.3	NATIONAL ELECTRICAL CODE (N.E.C.)	2-2
2.4	INSTALLATION	2-2
2.4.1	Tools	2-2
2.4.2	Construction	2-3
2.4.3	Connections	2-3
2.4.3.1	F Coax	2-3
2.4.3.2	F to C.A.T.V.	2-4
SECTION 3	MEDIA TEST	
3.1	PURPOSE	3-1
3.2	TEST EQUIPMENT REQUIRED	3-1
3.3	PROCEDURES	3-1
3.3.1	Induced 60 Hz Voltage Check	3-1
3.3.2	Network Integrity Check	3-2
3.3.3	Transmission Loss Measurements	3-5
3.3.4	Ground Loops	3-6

CONTENTS (cont)

SECTION 4 SYSTEM INTEGRATION

4.1 PURPOSE 4-1

4.2 SWITCH SETTINGS 4-1

4.2.1 J200 Unit 4-1

4.2.2 P451 Unit 4-1

4.2.3 P453 Unit 4-4

4.2.3.1 ASCII Board (P.N. AS-212P-020) RS-232-C
Port Address Switch Settings for ASCII
Board 4-4

4.2.3.2 ASCII Board (P.N. AS-212P-220)
Switch Settings 4-7

4.2.3.3 I/O Board (P.N. AS-212P-010) Switch
Settings for Nonredundant System
I/O Board 4-10

4.2.3.4 I/O Board (P.N. AS-212P-110) Switch
Settings for Redundancy System
I/O Board 4-12

4.2.3.5 I/O Board (P.N. AS-212P-210) Switch
Settings for Redundant System
I/O Board 4-16

SECTION 5 SYSTEM TEST

5.1 PURPOSE 5-1

5.2 LOCATION STATUS INDICATORS 5-1

5.2.1 J200 5-1

5.2.2 P451 5-2

5.2.3 P453 5-5

5.2.3.1 Chassis 5-5

5.2.3.2 S200 Card 5-5

5.2.3.3 ASCII Card 5-7

5.2.3.4 Modem Card 5-7

5.3 SYSTEM STATUS INDICATORS 5-8

5.3.1 584 Status 5-8

5.3.2 J200 Status 5-10

5.3.3 Input/Output Module Status 5-11

5.3.4 R.I.O. Status (P451 and/or P453) 5-12

5.3.5 "STAT" Block Applications Programs 5-17

APPENDIX A HOW TO USE THE T.D.R.

APPENDIX B N.E.C. ARTICLE 820

CONTENTS (cont)

APPENDIX C MODEL LMT 1544 USER MANUAL

APPENDIX D MODEL LMR 1544 USER MANUAL

APPENDIX E TOPOLOGY DRAWING

APPENDIX F SNUBBER CIRCUITS

APPENDIX G 584 GET STAT BLOCK APPLICATION

FIGURES

2-1 Shaping the Cable with the Connector 2-3

2-2 Inserting Cable Into the Connector 2-4

2-3 Cored Cable Measurements 2-4

2-4 Insertion of Connectors onto Cored Cable 2-5

3-1 Sample Impedance Mismatches 3-3

3-2 T.D.R. Reading for System with Closely
Spaced Taps 3-4

3-3 T.D.R. Reading for Long Cable Run 3-5

3-4 Placement of Ohm Meter for Ground Loop Test . . . 3-6

3-5 Placement of Ohm Meter for Resistance
Measurement 3-7

4-1 P451 Power Supply Physical Design 4-2

4-2 ASCII Board Address DIP Switches 4-5

4-3 ASCII Board Address DIP and Rotary Switches . . . 4-7

4-4 I/O Board Address DIP Switches, Nonredundant
System 4-10

4-5 I/O Board Address DIP Switches (Regular and
Auxiliary), Redundant System 4-13

4-6 I/O Board Address Switches (DIP and Rotary),
Redundant System 4-16

A-1 T.D.R. Front Panel Controls A-1

CONTENTS (cont)

TABLES

3-1	Summary of Transmission Losses	3-2
4-1	DIP Switch Settings/Channel Numbers - P451 and P421	4-3
4-2	RS-232-C Port Address Switch Settings for ASCII Board	4-6
4-3	Switch Settings for P453 ASCII Board	4-8
4-4	Switch Settings for P453 I/O Board, Nonredundant System	4-11
4-5	Switch Settings for P453 I/O Board with Auxiliary DIP Switch, Redundant System	4-14
4-6	Switch Settings for P453 I/O Board with Rotary Switch, Redundant System	4-17
5-1	P451 LED Error Patterns	5-4
5-2	P453 S200 I/O Board Error Codes	5-6
5-3	READY Light Diagnostic Codes	5-7
5-4	584 Status Table	5-8
5-5	Get Stat Words	5-9
5-6	J200 Status Word Definition	5-10
5-7	J200 Status Code Definition	5-10
5-8	I/O Module Status Word Definition	5-11
5-9	R.I.O. Status Words	5-12
5-10	R.I.O. Word 1 Status	5-14
5-11	R.I.O. Word 2 Status	5-16