

Modicon 984 Student Reference Guide

 
GJ-0001-000 Rev. D

**AEG SCHNEIDER
AUTOMATION**
Modicon • Square D • Telemecanique

MODICON

GJ-0001-000 Rev. D

984 Student Reference Guide



Preface

The information in this document is subject to change without notice and should not be construed as a commitment by MODICON Inc., Industrial Automation Systems Group. MODICON Inc. assumes no responsibility for any errors that may appear in this document. No part of this document may be reproduced in any form without the express written permission of MODICON Inc., Industrial Automation Systems Group. All rights reserved.

The following are trademarks of MODICON Inc.:

MODICON	084	184
Micro 84	284	884
Compact 984	484	984
Modbus	584	P180
Modvue	384	P190
Modway		

IBM is a registered trademark of International Business Machines, Inc.;
IBM PC is a trademark of International Business Machines, Inc.

Copyright 1992, MODICON Inc.

Printed in U. S. A.

Table of Chapters

Chapter 1	Introduction to Programmable Control
Chapter 2	984 Controller and Remote I/O Processor Models
Chapter 3	800 Series Local and Remote I/O
Chapter 4	200 and 500 Series Remote I/O
Chapter 5	Input and Output Module Specifications
Chapter 6	System Level Configuration, Planning and Cabling
Chapter 7	984 Man-Machine Interfaces
Chapter 8	Software System Configuration
Chapter 9	Programming Ladder Logic
Chapter 10	Load, Record, Verify
Chapter 11	Ladder Lister
Chapter 12	Trouble shooting
Chapter 13	Compact 984 and A120 I/O
Appendix A	Glossary
Appendix B	Error Codes

Table of Contents

Title	
Preface	i
Table of Chapters	iii
Table of Contents	v
Chapter 1 Introduction To Programmable Control	1-1
Numbering Systems	1-2
Decimal	1-2
Binary	1-3
Binary Coded Decimal (BCD)	1-3
Hexadecimal (Hex)	1-4
Number System Examples	1-4
Controller Basics	1-6
Processes Under Control	1-8
Input/Sensing Devices	1-9
Input Modules	1-10
Controller	1-13
Output Modules	1-14
Output/Working Devices	1-17
Man-Machine Interface	1-18
Introduction To Data Communications	1-19
Information Structure	1-19
Serial Communications	1-20
Modulated Serial Communication	1-21
RS-232-C	1-22
Parallel Communications	1-23
Chapter 2 984 Controller and Remote I/O Processor Models	2-1
984-380,984-381 and 984-385	2-2
Features	2-2
Controller Status Indicators	2-3
Controller Cartridges	2-4
MODBUS DIP Switch Configuration	2-5
984-480 and 984-485	2-6
Features	2-6
Controller Status Indicators	2-7
Controller Cartridges	2-8
MODBUS DIP Switch Configuration	2-9
984-680 and 984-685	2-10
Features	2-10
Controller Status Indicators	2-11
Controller Cartridges	2-12
MODBUS DIP Switch Configuration	2-13
Remote I/O Processor	2-14

984-780 and 984-785	2-16
Features	2-16
Controller Status Indicators	2-17
Controller Cartridges	2-18
MODBUS DIP Switch Configuration	2-19
Remote I/O Processors	2-20
Controller Housings for 984 Slot Mount Series	2-22
Back plane Connectors	2-23
Compact 984 - 120, 130 and 145	2-24
Features	2-24
Controller Status Indicators	2-25
Back plane for the Compact 984	2-26
The DTA Primary Back plane	2-26
DTA 201 and DTA 202 Secondary Back planes	2-27
Controller Option Modules for 984 Slot Mount Series	2-28
Hot-Standby Processor	2-28
984X 2-30	
Features	2-30
Power Supply	2-31
Central Processing Unit	2-32
Multi-Option Processor	2-33
984A 2-34	
Features	2-34
Power Supplies	2-35
Central Processing Unit	2-36
Memory Module	2-36
Remote I/O Processors	2-38
Communications Processor	2-40
984B 2-42	
Features	2-42
Power Supplies	2-43
Central Processing Unit	2-44
Memory Module	2-44
Remote I/O Processors	2-46
Communications Processor	2-48
Controller Chassis for 984 A, B, and X	2-49
Controller Option Modules For 984 A, B, and X	2-50
Hot-Standby Processor	2-50
MODBUS II Communications Processor	2-52
Dual RS-232 Modem	2-54
Integrated Control Processor	2-56
Resident Instruction Sets for 984 Controllers	2-58
Standard Set for all 984 Controllers	2-58
Enhanced Set for 984 Slot Mount Series	2-59
Loadable Options for All Controllers	2-60
984 System Capabilities Table	2-61

Chapter 3 Local and Remote 800 Series I/O 3-1

I/O Drop Overview	3-2
Local I/O	3-2
Remote I/O	3-3
Components Common to Local and Remote Drops	3-5
Controller Housings and Chassis	3-5
Secondary Housings	3-7
Auxiliary Power Supplies	3-8
Cables	3-16
Local Drop Configurations	3-17
984-380, 381, 385 Controller	3-17
984-480, 485 Controller	3-18
984-680, 685 Controller	3-19
984-780, 785 Controller	3-20
984X Controller	3-21
Local Drop Size Summary Matrix	3-22
Remote Drop Hardware for S908/S929 and S901 I/O Processors	3-23
800 Series Remote I/O Drops	3-23
Remote I/O Interfaces for S908/929 Systems	3-25
J890/892 Interface	3-30
800 Series Remote I/O with the S901 I/O Processor	3-35
J810/812 Interface	3-35
D908 Distributed Control Drop with 984-680	3-41
Distributed Control Drop	3-42
Remote Drop Configurations for S908/S929 I/O Processors	3-44
800 Series Drop	3-44
S908/S929 Drop Size Summary Matrix	3-46

Chapter 4 200 and 500 Series Remote I/O 4-1

P451/P453 Interface using 200 series I/O	4-2
P451 Interface Module	4-4
P453 Interface Module	4-7
P453 Power Supply/Interface for the S908/S929 I/O Processor	4-11
P453 Power Supply/ Interface for the S901 I/O Processor	4-15
Auxiliary Power Supplies	4-21
Cables	4-22
200 Series I/O Drop - Summary	4-24
P451/P453 Interface using 500 Series I/O	4-25
500 Series I/O Housings	4-26
500 Series Word/Byte Organization	4-27
J540 Adapter	4-29
Interface Connections	4-30
Cables	4-32
500 Series I/O Drop - Summary	4-34

Chapter 5 Input and Output Module Specifications 5-1

800 Series Input/Output Module Overview	5-2
I/O Terminal Connectors	5-3
I/O Module Keying System	5-4
Input Module Characteristics and Typical Set-up	5-6
Output Module Characteristics and Set-up	5-14
Input/Output Module Specifications	5-22
800 Series	5-22
200 Series	5-26
500 Series	5-28
A120 (Compact 984) Series I/O Modules	5-30
DEP 208 Discrete Input Module	5-31
LED's	5-31
DEP 208 Characteristics	5-32
DEP 209 Discrete Input Module	5-33
LED's	5-33
DEP 209 Characteristics	5-34
DEP 216 Discrete Input Module	5-35
LED's	5-35
DEP 216 Characteristics	5-36
DEO 216 Discrete Input Module	5-37
LED's	5-37
DEO 216 Characteristics	5-38
DEP 220 Discrete Input Module	5-39
LED's	5-39
DEP 220 Characteristics	5-40
DAP 204 Relay Output Module	5-41
LED's	5-41
DAP 204 Characteristics	5-43
DAP 208 Relay Output Module	5-45
LED's	5-45
DAP 208 Characteristics	5-47
DAP 209 Discrete Output Module	5-49
LED's	5-49
DAP 209 Characteristics	5-50
DAP 216 Discrete Output Module	5-51
LED's	5-51
Resetting the Module After an Overload or Short Circuit	5-52
Protecting the Module from Inductive Back EMF	5-53
DAP 216 Characteristics	5-54
DAP 212 Combined I/O Module	5-55
LEDs	5-55
DAP 212 Characteristics	5-57
ADU 204 Analog Input Module	5-59
LED	5-60
Noise Suppression DIP Switch	5-60
Field Wiring	5-61
Calibrating the Analog Input Channels	5-61
ADU 204 Characteristics	5-64
ADU 205 Analog Input Module	5-65
LED	5-65

DIP Switch Settings	5-66
Field Wiring	5-66
Calibrating the Analog Input Channels	5-68
ADU 205 Characteristics	5-70
DAU 202 Analog Output Module	5-71
LEDs	5-71
Field Wiring	5-72
Calibrating the Analog Output Channels	5-73
DAU 202 Characteristics	5-75

Chapter 6 System Level Configuration, Planning, and Cabling 6-1

System Cable Topologies	6-2
Standard Configurations	6-2
Hot Standby Configurations	6-5
Summary Of Legal Remote I/O Configurations	6-8
Illegal Remote I/O Configurations	6-9
Standard Distributed Control Configurations	6-10
Hot Standby Distributed Control Configurations	6-13
Summary of Distributed Configurations	6-16
Illegal Distributed I/O Configurations	6-18
Controller Selection	6-19
Controller Memory Usage	6-19
Controller Selection Considerations	6-21
984 System Capabilities Tables	6-22
984 Installation Planning	6-24
Controller Location	6-24
Power Sources	6-24
984 Environmental Considerations	6-26
Space Requirements	6-26
Panel Enclosures	6-28
984 PLC Mounting	6-31
Grounding and Shielding	6-34
Cable Installation and Planning	6-38
Cabling Requirements	6-38
Using a Cable Diagram	6-40
Cables, Taps, Splitters and Termination Components	6-44
Remote I/O Cable Selection	6-44
Cable Connectors and Terminators	6-48
Cable Fabrication	6-50
Recommended Tools	6-50

Chapter 7 984 Man-Machine Interfaces	7-1
P190 Programmer	7-3
General Characteristics	7-3
Front Panel	7-4
Rear Panel	7-6
Cabling	7-9
Tapes	7-13
Personal Computer	7-16
Features	7-16
Specifications	7-16
Cabling	7-17
Keyboard	7-18
Floppy Disks/Part Numbers	7-19
Back Up Disks	7-20
Preparing to use Modicon Executive Software	7-20
964/965 Hand-Held Interfaces	7-21
Features	7-21
Operations	7-21
Cabling	7-22
Keyboard	7-23
Software Label Keys	7-24
Alphanumeric Keys	7-24
Display Select Keys	7-24
Control Keys	7-25
Reference Operation Keys	7-25
ON/OFF Keys	7-25
P964 Menu	7-26
P964 Menu Selection Descriptions	7-27
P965 Menus	7-28
965 Menu Selection Descriptions	7-29
P965 MDAP Menu Selection Descriptions	7-31
Unsupported Communication Parameters	7-32
DEC PDP-11 and VAX	7-34
984/DEC PDP-11	7-34
984/DEC VAX	7-34

Chapter 8 Software System Configuration 8-1

P190/Personal Computer Characteristics	8-2
Modicon's P190 Emulation Software for IBM Computers	8-2
Program Selection	8-2
P190/Personal Computer Softkeys	8-3
P190/Personal Computer Keyboard Comparison	8-4
Configuration and Traffic Copping Software Overview	8-5
System Operation	8-6
Dim Awareness and Battery Installation	8-6
Configuration Program Features	8-7
Configuration Operations	8-7
Software Media and Part Numbers	8-8
Screen Configuration with Softkey Menu	8-9

Use of Reference Numbers	8-11	
State RAM	8-12	
Segmentation and Scheduling of Logic Networks		8-14
Move Segment Procedure	8-15	
Configuration Procedure	8-16	
Configuration Example	8-18	
Configuration Menu Tree <984 CONFIG>		8-34
Configuration Menu Tree <984 ATTACH>		8-35
ATTACH UNIT #	8-37	
Traffic Cop Program Features	8-38	
P190/Personal Computer Software		8-38
Traffic Cop Procedure	8-40	
S908 Traffic Cop Example	8-42	
Traffic Copping a Standard Drop	8-42	
Traffic Copping a Distributed Control Drop		8-54
Traffic Copping a J290/J291 I/O Drop	8-56	
S908 Traffic Cop Menu Tree	8-62	
ATTACH UNIT #	8-63	
RELEASE 984	8-63	
S901 Traffic Cop Example	8-64	
Traffic Copping a Standard Drop	8-66	
S901 Traffic Cop Menu Tree	8-72	
ATTACH UNIT #	8-73	
RELEASE 984	8-73	

Chapter 9 Programming Ladder Logic 9-1

Programmer Tape/disc	9-2	
Features	9-2	
Functions	9-2	
Operations	9-2	
Battery Backup	9-3	
Pre-Programming Information	9-4	
Overview	9-4	
984 Set Up	9-4	
Reference Numbers	9-6	
OXXXX: Coil or Discrete Output		9-6
1XXXX: Discrete Input	9-6	
3XXXX: Input Register	9-6	
4XXXX: Output Register or Holding Register		9-6
6XXXX: Extended Memory Register	1-6	
984 Ladder Logic Elements	9-7	
Network Structure	9-8	
Logic Solving Sequence	9-9	
Element Positional Relationships	9-10	
Programming Information	9-12	
Program Tape Screens	9-12	
Alternate or Reference Screen	9-14	
Main Loop Sequence	9-15	
Background Diagnostics	9-27	
Hints to Minimize Scan Time	9-27	

P190 Keyboard Functions	9-28
Discrete Traffic Cop Numbers	9-30
Programming Elements	9-31
Relay Contacts	9-31
Transitional Contacts	9-33
Vertical and Horizontal Shorts	9-34
Coils	9-35
Duplication of Programmed Output Reference	9-37
Programming Functions	9-38
Timers	9-38
Counters	9-40
Calculates	9-42
Data Transfer (DX) Move Functions	9-50
Extended Memory Write	9-71
Subroutine Functions – Models 984 - x8x Only	9-76
Data Transfer (DX) Matrix Functions Overview	9-81
Special Instructions	9-99
Simple ASCII	9-106
Simple ASCII Overview	9-106
Simple ASCII Configuration	9-107
Simple ASCII Screen	9-108
Simple ASCII Message	9-109
Editing	9-114
Function Blocks	9-114
Networks	9-114
984 Optimize vs Run Modes	9-118
Programming Menu Tree	9-119
984 Programmer Tape (Reset Level)	9-119
984 Programmer Tape (Exit Level)	9-120
984 Programmer Tape (Exit Level)	9-121
Chapter 10 Load, Record, Verify	10-1
LRV Disk And Tape Loader Tape	10-3
Features	10-3
LRV Examples	10-4
LRV Menu Tree	10-12
Chapter 11 Ladder Lister	11-1
Ladder Lister Floppy Disk and Utility Tape	11-2
Features	11-2
Ladder Lister Examples	11-2
Ladder Lister Menu Tree	11-8

Chapter 12 Trouble shooting 12-1

Introduction	12-3
Tools, Equipment, and the Trouble shooting Process	12-4
Types of Faults	12-4
Isolating Faults	12-5
Flow Charts	1-6
Monitoring System Status	12-7
Trouble shooting Flow Chart	12-8
Flow Chart Procedures	12-10
The 984/S908 STAT Block	12-16
The S908 STAT Block	12-16
System Mainframe Status	12-20
I/O Module Health Status	12-23
Drop Communication Status	12-25
STAT Block Applications	12-32
I/O Module Health Status Application	12-32
Communication Status	12-35
P190 or Personal Computer	
Direct Access to S908 STAT Data	12-38
Procedure for Retrieving 984	
Register Information Using the P190	12-38
P965 Direct Access to S908 STAT Data	12-40
Procedure for Retrieving 984 Register	
Information Using the P965	12-40
The 984/S901 STAT Block	12-42
The S901 STAT Block	12-42
Controller Status	12-46
I/O Module Health Status	12-49
Remote I/O Communication Status	12-50
P190 or Personal Computer Direct	
Access to S901 STAT Data	12-51
Procedure for Retrieving 984 Register Information Using the	
P190	12-53
P965 Direct Access to S901 STAT Data	12-54
Procedure for Retrieving 984 Register Information Using the	
P965	12-55
Replacement Parts and Technical Support	12-56

Chapter Thirteen Compact 984 Controllers and A120 I/O 13-1

General Overview	13-2
Special Features of the Compact 984	13-4
CPU User Memory Options	13-4
Auxiliary Memory Upload-Download Capabilities	13-6
Slide Switches	13-7
Modbus Communication Interface	13-7
LED Indicators	13-8
A120 I/O Support	13-9
Power Supplies	13-11

I/O Housings and Drop Configurations	13-13	
DTA Back planes	13-13	
Drop Layout	13-15	
Modbus Plus Hardware on the Compact	984-145	13-18
The MB Plus LED	13-19	
The comm parameter slide switch	13-19	
Modbus Plus Addressing DIP Switch	13-19	
Appendix A	Glossary	
Appendix B	Error Codes	