




# Receiving and Unpacking

## Smart-UPS® VT 10–40 kVA, 380/400/415 V

10-20 kVA

30-40 kVA

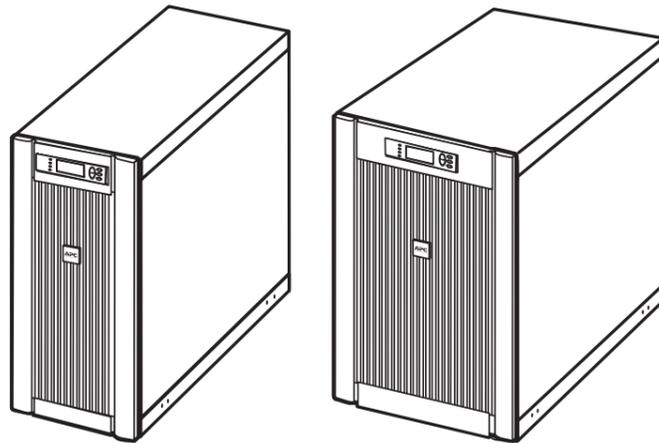

### IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

#### Symbols used



**Warning:** ALL safety instructions in this document must be read, understood and followed. Failure to do so could result in equipment damage, serious injury, or death.



If the receiving area is far from the installation site, we recommend that you move the UPS by using a pallet jack before rolling it off the pallet.



**Caution:** Do not unpack the units before the time of the installation.



The shipping materials are recyclable. Save them for later use, or dispose of them appropriately.

## Shipping Weights and Dimensions

APC Part Nos.	Weight (kg)	Height (mm)	Width (mm)	Depth (mm)
SUVTP10KH	173	1290	720	1110
SUVTP15KH	173	1290	720	1110
SUVTP20KH	173	1290	720	1110
SUVTP30KH	221.5	1290	720	1110
SUVTP40KH	221.5	1290	720	1110

## Receiving

**External inspection.** When the shipment arrives, inspect the shipping material for any signs of damage or mishandling. Do not attempt to install the system if damage is apparent. If any damage is noted, contact APC and file a damage claim with the shipping agency within 24 hours.

Compare the components of the shipment with the bill of lading. Report any missing items to the carrier and to APC immediately.

Verify that labelled units match the order confirmation.

## Move to Installation Site



The Smart-UPS VT has wheels making it easy to move the UPS to the installation site after it has been unpacked. However, if the receiving area is far from the installation site, we recommend that you move the UPS by using a pallet jack before you start to unpack the UPS.

## Unpacking



If the receiving area is far from the installation site, we recommend that you move the UPS by using a pallet jack before rolling it off the pallet.




**Caution:** Do not unpack the units before the time of the installation.




The shipping materials are recyclable. Save them for later use, or dispose of them appropriately.

1 Cut carefully around the edges to remove the plastic and free the ramp.

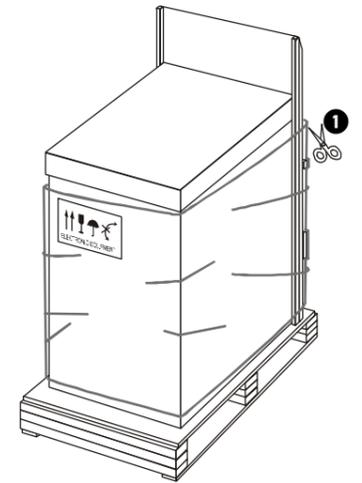


2 Place the ramp by aligning the velcro strips on the ramp with the velcro strips on the front edge of the pallet.

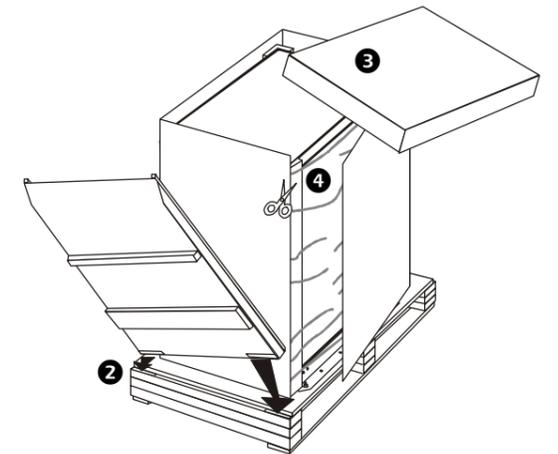

3 Remove the cardboard cover.


4 Cut along the edges of the cardboard material and remove it.

5 Remove the corner protection and the plastic bag.

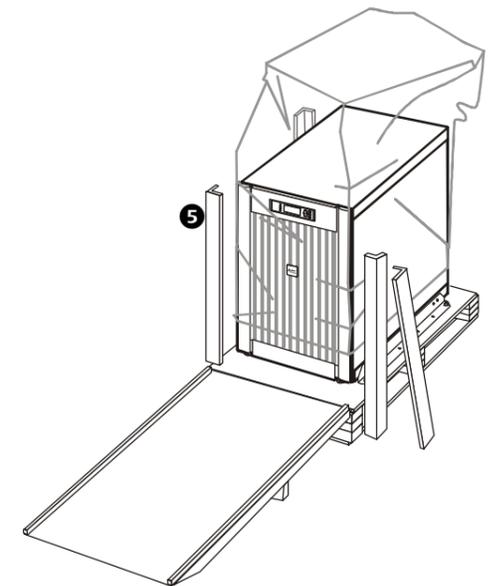

6 Remove the bolts from the two brackets attaching the UPS to the pallet and save the brackets for floor anchoring, if required.


7 Roll the UPS off the pallet.

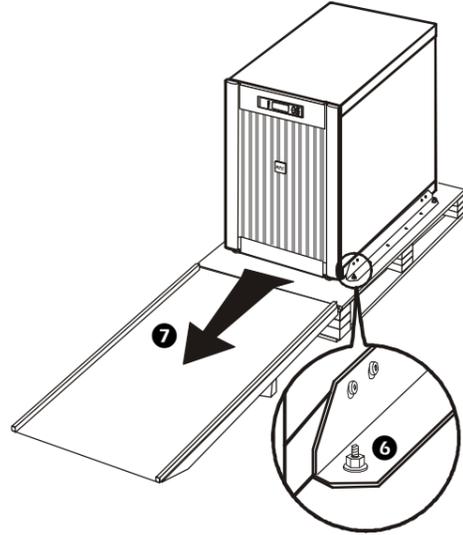

## Storage Conditions

<p>Operating temperature: 0°C to 40°C/32°F to 104°F</p>	<p>Relative Humidity: 0-95% Non-condensing</p>	<p>Storage place free from vibration, dust, direct sunlight, and moisture.</p>

## Documentation Storage

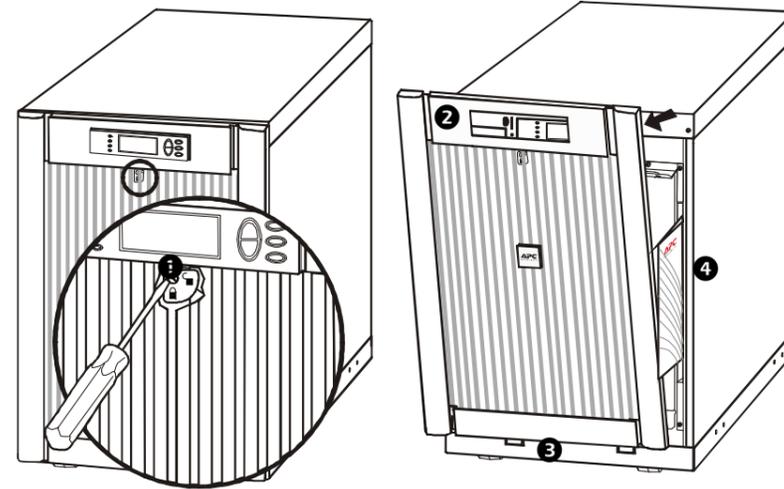

1 Remove the front panel by turning the screw to the right to the unlocked position.

2 Pull the upper part of the front panel free of the UPS.

3 Lift the front panel free of the two slots at the bottom of the UPS.

4 Find the manuals behind the front panel to the right.

## Contact Information

For local, country-specific centers: go to [www.apc.com/support/contact](http://www.apc.com/support/contact).