




# InfraStruXure® Cooling Distribution Unit (CDU)

## Guide for Receiving, Unpacking, and Moving

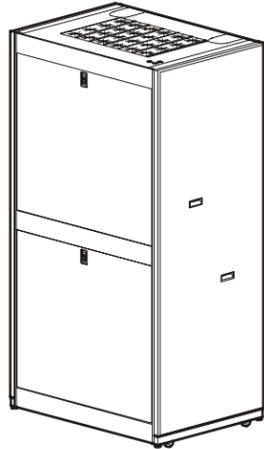

### Safety Information




**Heavy:** Do not attempt to move the equipment without the assistance of at least one other person.



**Warning:** Use extreme caution to prevent tipping when unpacking or moving the equipment to its final location. Push the equipment only from the front or rear, never from the sides.

### Moving the equipment

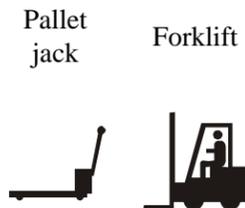

### Receiving

#### Inspect the exterior packaging

Before unpacking the equipment, verify that the labeled boxes match the bill of lading.

 
#### Inspect the equipment

Once you have unpacked the equipment, carefully inspect its exterior.




**Note:** In case of shipping damage such as scratches or dents, see APC Worldwide Customer Support for contact information.

### Tools Required



Utility knife

 

13-mm wrench

### Unpacking



**Caution:** Leaving the equipment uncovered and exposed to the elements will cause damage and void the factory warranty.




**Recyclable materials:** The shipping materials are recyclable. Save them for later use, or dispose of them appropriately.



**Note:** When possible, leave the equipment on the pallet until you are ready to move it to its final location.


- 1 Remove the plastic wrap securing the ramps to the unit, and set the ramps aside. Continue removing the plastic wrap from the unit

ACFD12-B

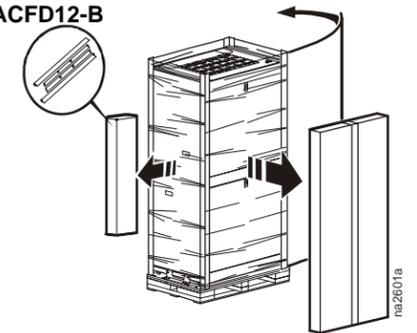


The protective skirt for bottom piped configurations will also be secured with the plastic wrap. Remove this box and set aside.

- 2 Remove the cardboard packaging and the plastic bag containing literature and hardware taped to the front of the unit.

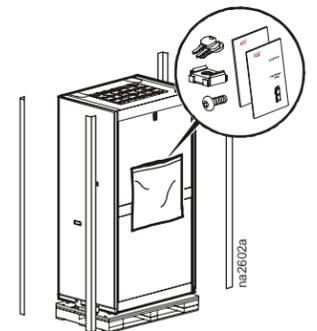

- 3 Remove the plastic bag covering the unit.

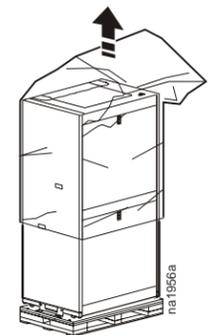


**Important.** Save these instructions. This guide contains information for receiving, unpacking, and moving the equipment.



# Weights and Dimensions


# APC Worldwide Customer Support

4 Using a 13 mm wrench, remove the eight bolts, eight washers, and two brackets holding the CDU to the pallet.

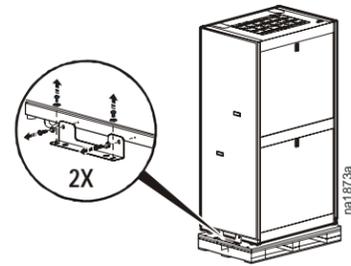


**Note:** If the unit is to be secured to the floor, save the bolts, washers and brackets.



5 Remove the ramps from the cardboard packaging.

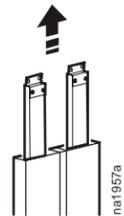

6 Attach each ramp to the pallet by placing the attachment tabs on the ramps into the tab holes on the pallet.

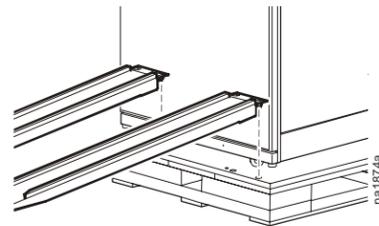

7 Roll the unit off the pallet using two people.

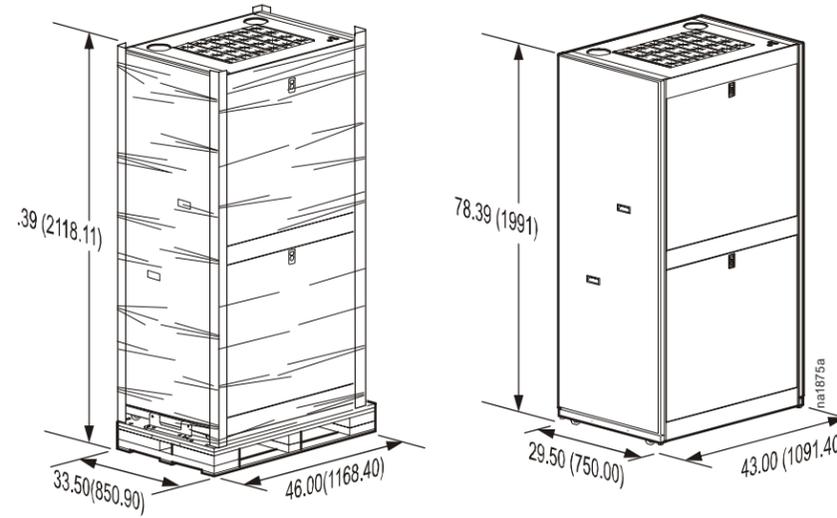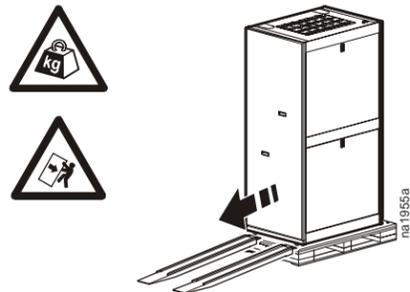

\* Dimensions are shown in inches with millimeters in parentheses.

SKU	Packaged Weight	Unpackaged Weight
ACFD12-B,	314.5 kg (692 lb)	269.5 kg (593 lb)
ACFD12-T	314.5 kg (692 lb)	269.5 kg (593 lb)

Direct InfraStruXure Customer Support Line	(1)(877)537-0607 (toll free)
APC headquarters U.S., Canada	(1)(800)800-4272 (toll free)
Latin America	(1)(401)789-5735 (USA)
Europe, Middle East, Africa	(353)(91)702000 (Ireland)
Japan	(0) 3 6402-2001
Australia, New Zealand, South Pacific area	(61) (2) 9955 9366 (Australia)