

NetBotz Wide Angle Replacement Lens

Thank you for purchasing this NetBotz Wide Angle Replacement Lens, for use only with the Camera Pod 120. This wide angle lens has the following specifications:

- 4.8mm, fixed objective lens
- f1.4
- Manual iris
- C-mount

Your Camera Pod 120 features a CS-standard lens mount, enabling you to replace your lens with any standard CS- or C-mount lens that supports a .5" or larger imager. C-mount lenses require a C-to-CS adapter ring, which is already installed on your Camera Pod 120.

Installing Your Replacement Lens



Note

Important! Once the lens is removed, the digital imager assembly is exposed. Do not touch the imager. Take care to ensure that dust and dirt do not fall on the imager. If dust or dirt fall on the imager, use a can of compressed air to clean the imager by blowing the dust or dirt clear.

To change the lens:

1. Rotate the lens counter-clockwise until it is fully extended. Then, using a small amount of force, continue rotating the lens counter-clockwise until the lens unscrews from the housing.
2. Remove the C-to-CS adapter ring from the base of the lens by gripping the top of the lens and then turning the base of the lens counter-clockwise until the adapter ring unscrews from the lens.
3. Screw the C-to-CS adapter ring onto the base of your replacement lens. When the ring is fully screwed onto the lens, apply a small amount of additional force in a clockwise direction to ensure that the ring is securely fastened to the lens.
4. Install the replacement lens by screwing it into the housing in a clockwise direction. When the lens is fully screwed in, apply a small amount of additional force in a clockwise direction to ensure that it is securely installed.