
Eco Fruxure Facility Expert For Energy Management

User Guide

EcoStruxure offers IoT-enabled architecture and platform.

ESXFEUG003EN-01 02/2022

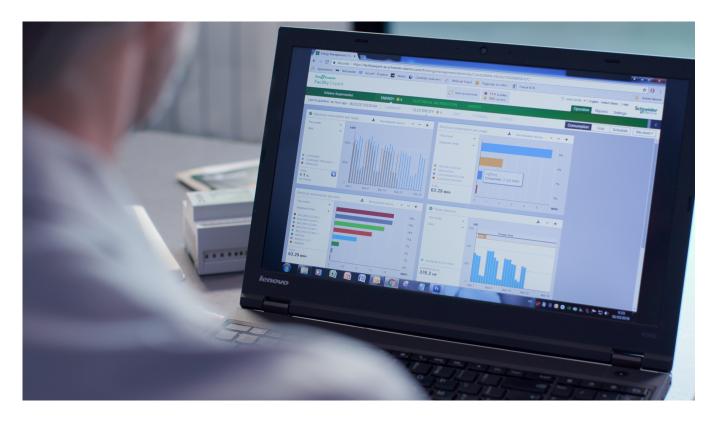



Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

As part of a group of responsible, inclusive companies, we are updating our communications that contain non-inclusive terminology. Until we complete this process, however, our content may still contain standardized industry terms that may be deemed inappropriate by our customers.

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION indicates a hazardous situation which, if not avoided, **could result** in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Before you Begin

Electrical monitoring and control equipment and related software are used in a variety of buildings. The type or model of electrical monitoring and control equipment suitable for each application will vary depending on factors such as the system dependability level, unusual conditions, and government regulations.

Only the user can be aware of all the conditions and factors present during setup, operation and maintenance of the solution. Therefore, only the user can determine the electrical monitoring and control equipment and the related safety mechanisms and interlocks which are appropriate. When selecting electrical monitoring and control equipment and related software for a particular application, the user should refer to the applicable local and national standards and regulations. The National Safety Council's Accident Prevention Manual also provides useful information.

Ensure that appropriate safety mechanisms and mechanical/electrical interlocks protection have been installed and are operational before placing the equipment into service. All safety mechanisms and mechanical/electrical interlocks protection must be coordinated with the related equipment and software programming.

Start-up and Test

Before using electrical control and automation equipment for regular operation after installation, the system should be given a start-up test by qualified personnel to verify correct operation of the equipment. It is important that arrangements for such a check be made and that enough time is allowed to perform complete and satisfactory testing.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future reference.

Software testing must be done in both simulated and real environments.

Verify that the completed system is free from all short circuits and grounds, except those grounds installed according to local regulations (according to the US National Electrical Code, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to prevent accidental equipment damage. Before energizing equipment:

- Remove tools, meters, and debris from equipment.
- Close the equipment enclosure door.
- · Perform all start-up tests recommended by the manufacturer.

Operation and Adjustments

The following precautions are from the NEMA Standards Publication ICS 7.1-195 (English version prevails):

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, there are hazards that can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation. Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment manufacturer's instructions and the machinery used with the electrical equipment.
- Only those operational adjustments actually required by the operator should be accessible to the operator. Access to other controls should be restricted to prevent unauthorized changes in operating characteristics.

Safety Precautions

The following safety messages apply to installation, configuration and operation of EcoStruxure Power solutions, based on EcoStruxure Facility Expert cloud-based software, electrical and digital architectures using Com'X, Acti 9 PowerTag Link C or PrismaSeT Active as a gateway to cloud, and to the Schneider Electric connected products and sensors mentioned in the document.

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only qualified personnel familiar with low and medium voltage equipment are to perform work described in this set of instructions. Workers should understand the hazards involved in working with or near low and medium voltage circuits. Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E, CSA Z462, NOM 029-STPS or local equivalent.
- Perform such work only after reading and understanding all of the instructions contained in this bulletin.
- Turn off all power supplying this equipment before working on or inside equipment.
- · Use a properly rated voltage sensing device to confirm that the power is off
- Before performing visual inspections, tests, or maintenance on this equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, grounded, and tagged. Understand the connection of sources within the power system. Equipment may be supplied from multiple power sources including back feeding.
- Handle this equipment carefully and install, operate, and maintain it correctly in order for it to function properly. Neglecting fundamental installation and maintenance requirements may lead to personal injury, as well as damage to electrical equipment or other property.
- Do not make any modifications to the equipment or operate the system with the interlocks removed. Contact your local field sales representative for additional instruction if the equipment does not function as described in this guide.
- Carefully inspect your work area and remove any tools and objects left inside the equipment.
- Replace all devices, doors, and covers before turning on power to this equipment.
- All instructions in this guide are written with the assumption that the customer has taken these measures before performing maintenance or testing.

Failure to follow these instructions will result in death or serious injury.

UNINTENDED EQUIPMENT OPERATION

- Do not use the software to control time-critical functions because communication delays can occur between the time a control is initiated and when that action is applied.
- Do not use the software to control remote equipment without creating an authorized access level, and without including a status object to provide feedback about the status of the control operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

INACCURATE DATA RESULTS

- Ensure correct configuration of the software. Incorrect configuration can lead to inaccurate reports and/or data results.
- Use messages displayed by the software as one input to maintenance, service actions or to determine the system is meeting all applicable standards and requirements. Follow all maintenance and service recommendations in the instruction material.
- Consider the implications of unanticipated transmission delays or failures of communications links.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE

LOSS OF DATA

- Activate product and component licenses prior to the expiry of the trial license.
- Activate sufficient licenses for the servers and devices in your system.
- Backup or archive any SQL Server database data before adjusting any database memory options.
- Only personnel with advanced knowledge of SQL Server databases should make database parameter changes.

Failure to follow these instructions can result in loss of data.

NOTICE

UNAUTHORIZED OR UNINTENDED ACCESS TO CUSTOMER DATA

Do not set up access links to sensitive or secure data. Data links are not secure

Failure to follow these instructions can result in unauthorized or unintended access to customer data.

NOTICE

NETWORK INOPERABILITY

Do not make unauthorized changes in the network configuration.

Failure to follow these instructions can result in an unstable or unusable network.

Cybersecurity Safety Information

AWARNING

POTENTIAL COMPROMISE OF SYSTEM AVAILABILITY, INTEGRITY, AND CONFIDENTIALITY

- Change default passwords at first use to help prevent unauthorized access to device settings, controls, and information.
- Disable unused ports/services and default accounts to help minimize pathways for malicious attackers.
- Place networked devices behind multiple layers of cyber defenses (such as firewalls, network segmentation, and network intrusion detection and protection).
- Use cybersecurity best practices (for example, least privilege, separation of duties) to help prevent unauthorized exposure, loss, modification of data and logs, or interruption of services.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Table of Contents

Introduction	11
About the Book	
Reference Architectures	14
Architecture with Com'X Gateway	15
Architecture with PowerTag Link C	16
Architecture with PrismaSeT Active Wireless Panel Server	17
EcoStruxure Facility Expert	20
Overview	21
Discover EcoStruxure Facility Expert - Energy	21
Prerequisites	22
I START: I Create a User Account and I Activate the Service	23
Introduction	24
Using Com'X as a Gateway to Cloud	25
Activating PrismaSeT Active Wireless Panel Server	
I SET UP PARAMETERS	
My Customers and Sites Settings	
Meters Configuration: Main Meter, Usages, and Zone	
Building Characteristics	42
Predefined Normalization Factors	42
Energy Efficiency and Targets	44
Tariffs and Costs Settings	45
Schedule Association	47
Monthly Reports and KPIs	48
Events and Alerts Settings	51
Utility and Type of Tariff Entry	54
Calendar and Schedules Entry	60
I OPERATE	63
Introduction	64
A Portfolio of Sites	65
Benchmarking Energy Consumption of All Your Sites	66
Analyzing Aggregated Data	68
A Site	69
Analyzing Site Energy Consumption	70
Reviewing Total Consumption	70
Comparing a Consumptions Period Over-years	
Using Normalization Factors	
Using Cost Data	
Using Schedules Data	
Analyzing in Detail per Usage, per Zone, or per Meter	
Usage Review	
Zone Review	
Using Meter Level	
Exporting Data for the Customer	76
Reviewing Consumption of Other Utilities (Gas, Thermal, or	
Fluids)	
I HAVE A QUESTION	
Performance and Limitation	80

Cloud-based Software Cybersecurity Details	. 81
Troubleshooting	.83
Frequently Asked Questions	.85
Schneider Electric Contact	. 87

Introduction

What's in This Part

About the Book	12
Reference Architectures	
EcoStruxure Facility Expert	

About the Book

EcoStruxure Master Range

EcoStruxure is Schneider Electric's IoT-enabled, plug-and-play, open, interoperable architecture and platform, in Homes, Buildings, Data Centers, Infrastructure and Industries. Innovation at Every Level from Connected Products to Edge Control, and Apps, Analytics and Services.

Document Scope

This guide intends to help users get the best of EcoStruxure™ Facility Expert by:

- Supporting beginners in the configuration of their account and in the daily use of their interface and energy dashboards.
- Getting a general view of the EcoStruxure Facility Expert features and capabilities that evolve with the periodic releases according to software development or to new equipment, gateway, or sensors integration.

Refer to your *EcoStruxure Facility Expert Release Notes* to be informed of the latest improvements. Release Notes are automatically sent at software release on the user email indicated during the account creation. All EcoStruxure Facility Expert release notes are also available on Schneider Electric Exchange for EcoXpert partners.

 Promoting best practices to set up easily and efficiently the parameters of your energy dashboards depending on the electrical architecture that has been installed.

This guide does not detail all the software functionalities.

Validity Note

This guide applies to EcoStruxure Facility Expert with software release 13.0.

Online Information

The information contained in this guide is likely to be updated at any time. Schneider Electric strongly recommends that you have the most recent and up-todate version available on www.se.com/ww/en/download.

The technical characteristics of the devices described in this guide also appear online. To access the information online, go to the Schneider Electric home page at www.se.com.

For detailed information go to:

- EcoStruxure Facility Expert
- EcoStruxure Power
- PrismaSeT Active

Related Documents

Title of documentation	Reference number
EcoStruxure Facility Expert Starter Guide for Operations	ESXUG001EN
EcoStruxure™ Power - Commissioning Guide for Digital Solutions based on PrismaSeT Active	ESXP1G005EN

Title of documentation	Reference number
EcoStruxure™ Power- Design & Selection Guide for Energy & Operations Management Solutions	ESXP1G001EN
PrismaSeT Active - Installation and Maintenance Guide	DOCA0203EN
PrismaSeT Wireless Panel Server (SMT10015 / SMT10016 / SMT10019) - Instruction Sheet	NNZ50846
Com'X 210 Energy Server - User Manual	DOCA0098EN
Com'X 510 Energy Server - User Manual	DOCA0036EN
How Can I Reduce Vulnerability to Cyber Attacks?	Cybersecurity System Technical Note
Top 3 technologies that improve energy and asset performance for buildings with limited resources	Web access

You can download these technical publications and other technical information from our website at www.se.com/ww/en/download.

Reference Architectures

What's in This Chapter

Architecture with Com'X Gateway15
Architecture with PowerTag Link C
Architecture with PrismaSeT Active Wireless Panel Server

EcoStruxure Facility Expert cloud-based platform collects energy data from different Schneider Electric gateways depending on the application type and the project size.

- For large sites and advanced projects, Com'X gateway supports many metering devices types including third party and custom devices.
- For small businesses, PowerTag Link C gateway connects up to 8 wireless energy sensors with Ethernet connection.
- For simple and native connectivity, Wireless Panel Server connects up to 15 wireless energy sensors to the cloud through LoRa network.


Each reference architecture presents the system overview, limits, and capabilities.

Architecture with Com'X Gateway

The following topic presents a typical architecture with a Com'X gateway to cloud using Ethernet network .

This solution offers the following advantages and services:

- 24/7 notifications to the maintenance team when equipment is no longer supplied.
- Record of all regulatory maintenance interventions with an associated report.
- Monitoring of when and where the energy is consumed in the building and over-target consumption alerts.
- Alerts in case of peaks or low power factor to avoid penalties on the electricity bill.
- Alerts in case of high harmonics on your electrical network and planning of corrective actions to avoid lighting disturbances.
- Display of energy savings on a screen at the building entrance (optional).

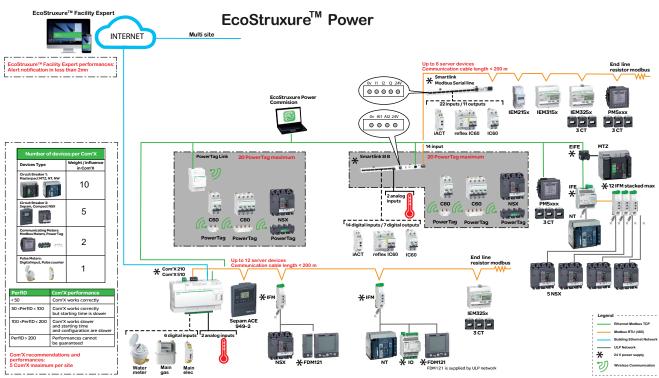

More Information

For more information about Com'X gateway, refer to the following documents:


Title of documentation	Reference number
EcoStruxure™ Power - Commissioning Guide for Connected Panels and Facility Expert Software	ESXP1G004EN
EcoStruxure™ Power- Design & Selection Guide for Energy & Operations Management Solutions	ESXP1G001EN
Com'X 210 Energy Server - User Manual	DOCA0098EN
Com'X 510 Energy Server - User Manual	DOCA0036EN

Architecture with PowerTag Link C

The following topic presents a typical architecture with a PowerTag Link C.

This simple and cost-effective solution offers the following advantages and services:

- 24/7 notifications to the maintenance team when equipment is no longer supplied or stops running.
- Record of all regulatory maintenance interventions with an associated report.
 - Monitoring of when and where the energy is consumed and over-target consumption alerts.
- Energy costs dashboard with time of use.
- Display of energy savings on a screen at the building entrance (optional).

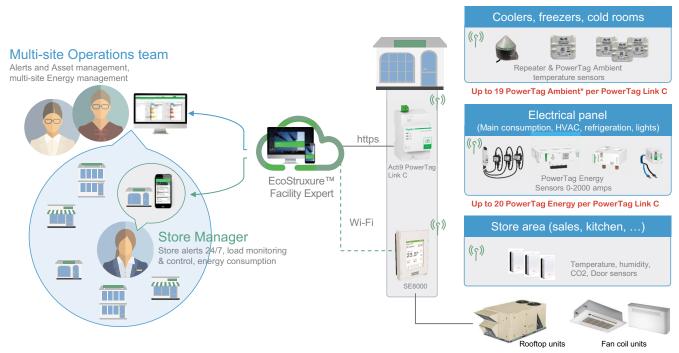

* Recommendation to install PowerTag Ambient sensors: consider the distance from the closest PowerTag Link C:

- Consider the distance from the closest PowerTag Link C:
 - < 5 meters: direct connection between PowerTag Ambient and PowerTag Link C.
 - 5 to 15 meters: additional repeater may be required.
 - > 15 meters: add another gateway closer to the PowerTag Ambient.
- Consider the environment:

Do not use PowerTag Ambient with PowerTag Link C installed in a metallic enclosure. If this is the case, use Kaedra plastic box or equivalent.

More Information

- For more information about Acti9 PowerTag Link C visit the product range webpages.
- To commission Acti9 PowerTag Link C with eSetup application, refer to the system installation guide FESBSUG0001EN EcoStruxure Facility Expert Installation Guide

Architecture with PrismaSeT Active Wireless Panel Server

The following topic presents a typical PrismaSeT Active architecture with Wireless Panel Server using LoRa communication.

The Wireless Panel Server is a gateway embedded in the roof of PrismaSeT P Active or PrismaSeT G Active switchboards, enabling wireless connectivity to Schneider Electric cloud.

The Wireless Panel Server offers the following advantages and services:

- Switchboard voltage loss monitoring
- · Fire prevention in electrical distribution switchboards
- Power availability alarming
- Energy consumption management

The Wireless Panel Server provides monitoring of the switchboard via EcoStruxure Facility Expert software.

The Wireless Panel Server provides the following features:

- Voltage presence indicator, locally with the Wireless Panel Server LEDs.
- Voltage loss detected in the switchboard:
 - Locally with the Wireless Panel Server LEDs.
 - Remotely by notifications on mobile devices (smartphone or tablet).
- LoRa communication enables voltage loss monitoring through long range communication.
- IEEE 802.15.4 wireless communication enables communication with wireless devices installed in the switchboard:
 - HeatTag sensors
 - PowerTag Energy sensors
 - Wireless indication auxiliaries for ComPacT NSX and ComPacT NSXm (available beginning 2022)
 - Acti9 Active (available end 2022)
- Remote communication with a smartphone or tablet through Bluetooth[®] wireless technology.
- Remote alerts with actionable details through EcoStruxure Facility Expert App Operations subscription.
- Continuous monitoring and trends through EcoStruxure Facility Expert App -Energy subscription.
- Firmware update.

For more information about LoRaWAN protocol, refer to DOCA0203EN *PrismaSeT Active - Installation and Maintenance Guide*.

Server. LoRa chneider Electric Ethernet/Wi-Fi cloud Recommendations and performances: Up to 20 PrismaSeT Active switchboards per siste LoRa Up to 3 HeatTag sensors (B) EcoStruxure Facility Expert (* (A) EcoStruxure Power Commission Up to 15 PowerTag Energy sensors if no HeatTag ensors connected Up to 7 PowerTag Energy sensors if 1 HeatTag connected LoRa[™] LoRa[™] communication ∦ Bluetooth® communication IEEE 802.15.4™ wireless communication A. EcoStruxure Power Commission App for wireless devices configuration

B. EcoStruxure Facility Expert cloud-based software for asset and energy management:

The following illustration shows a possible architecture of the Wireless Panel

- Voltage loss notification
- Sensors' alert system through App and webpages (with EcoStruxure Facility Expert Operations subscription)
- Energy management through webpages (with EcoStruxure Facility Expert Energy subscription)

Maximum Performance

Supported Wireless Devices

The following table presents the IEEE 802.15.4 wireless devices installed in a PrismaSeT switchboard and able to communicate with the embedded Wireless Panel Server.

Application	Wireless device	Description
(&)	HeatTag sensors	Innovative smart sensor, able to analyze gas and particles in the switchboard and alert before any smoke or insulator browning occurs.
Fire prevention	Acti9 Active (available end 2022)	Arc Fault Detection Device that helps protect circuits against short-circuits and overcurrent, persons against earth-leakage, and assets thanks to an in-built arc flash detection device.
Power availability	Wireless indication auxiliary for ComPacT NSX and ComPacT NSXm (available beginning 2022)	Wireless indication auxiliary that provides remote and local information about the circuit breaker status (open, close, trip, trip on electrical default).
Energy management	PowerTag Energy sensors	Compact and easy-to-install Class 1 wireless communication energy sensor that monitors and measures energy and power in real-time. PowerTag Energy sensor sends alerts in the event of an electrical anomaly.

More Information

For more information about Wireless Panel Server, visit the product range webpage and refer to the following documents:

Title of documentation	Reference number
PrismaSeT Wireless Panel Server (SMT10015 / SMT10016 / SMT10019) - Instruction Sheet	NNZ50846
PrismaSeT Active - Installation and Maintenance Guide	DOCA0203EN
EcoStruxure™ Power - Commissioning Guide for Digital Solutions based on PrismaSeT Active	ESXP1G005EN
EcoStruxure Facility Expert Starter Guide for Operations	ESXUG001EN
How Can I Reduce Vulnerability to Cyber Attacks?	Cybersecurity System Technical Note

EcoStruxure Facility Expert

What's in This Chapter

Overview	21
Discover EcoStruxure Facility Expert - Energy	21
Prerequisites	

Overview



EcoStruxure Facility Expert - Energy is a license from EcoStruxure Facility Expert, a cloud-based software merging mobile App, Web platform, and IoT, that helps customers deliver valuable services to optimize operational efficiency, energy consumption in single or multi-site buildings.

Discover EcoStruxure Facility Expert and EcoStruxure Facility Expert - Energy subscription.

Discover EcoStruxure Facility Expert - Energy

Objectives

EcoStruxure Facility Expert - Energy helps you to reduce costs and provide savings on energy:

- Gain a better understanding of energy usage and costs.
- Use multi-site comparison to easily identify poorly performing sites.
- Save time by avoiding manual data logging and spreadsheets.
- Offer opportunity to promote a sustainable image.

Features

EcoStruxure Facility Expert - Energy provides the following features:

- · Energy consumption and cost monitoring: mains, usage, zone, meter
- · Monthly scorecards and KPIs
- Manual reading collection and storage
- · Energy consumption benchmark by aggregated or multi-site comparison view
- Cost allocation for budget optimization
- · Power demand and power factor monitoring and alerts
- · Alerts for over-target energy consumption
- Multi-site comparisons, consumption aggregation
- · Energy site performance vs. standards
- Energy kiosk Option

To discover the main features of your EcoStruxure Facility Expert web portal, watch the video.



Prerequisites

How to Get EcoStruxure Facility Expert

NOTICE

DENIAL OF ACCESS TO THE APPLICATION

To access the cloud-based platform you must have a valid EcoStruxure Facility Expert - Energy subscription.

Failure to follow these instructions can result in not accessing data application.

You can purchase the best adapted subscription from your Schneider Electric sales representative using the reference table below:

EcoStruxure Facility Expert - Energy		
Description	Subscription reference	
1 year	SVSFE0002	
1 year – 1 meter	SVSFE0002A2	
3 years	SVSFE0002A3	
3 years – 1 meter	SVSFE0002A4	

Once a subscription is purchased, you receive an email with subscription confirmation and a link to complete your registration on the platform. Create your user account by connecting to EcoStruxure Facility Expert home page.

Technical and IT Prerequisites to Get the Best of EcoStruxure Facility Expert

The following web browsers are recommended to access the EcoStruxure Facility Expert web application:

- Chrome (v67 or higher)
- Firefox (v59.0.2 or higher)

NOTICE

POTENTIAL COMPROMISE OF SYSTEM AVAILABILITY, INTEGRITY, AND CONFIDENTIALITY

- Change default passwords at first use to help prevent unauthorized access to device settings, controls, and information.
- Disable unused ports/services and default accounts to help minimize pathways for malicious attackers.
- Place networked devices behind multiple layers of cyber defenses (such as firewalls, network segmentation, and network intrusion detection and protection).
- Use cybersecurity best practices (for example, least privilege, separation of duties) to help prevent unauthorized exposure, loss, modification of data and logs, or interruption of services.

Failure to follow these instructions can result in non-operational system.

For recommendations about Com'X data outputs, refer to Troubleshooting, page 83.

I START: I Create a User Account and I Activate the Service

What's in This Part

Introduction	24
Using Com'X as a Gateway to Cloud	25
Activating PrismaSeT Active Wireless Panel Server	

Introduction

NOTICE

DENIAL OF ACCESS TO THE APPLICATION

To access the cloud-based platform you must have a valid EcoStruxure Facility Expert - Energy subscription.

Failure to follow these instructions can result in no service provision.

Refer to the following instructions as the process is gateway dependent.

For account creation:

- 1. Contact your local Schneider Electric representative who must register your email to initiate the process.
- 2. Once you have received credentials to set up your user account, connect to the home page of EcoStruxure Facility Expert.





Using Com'X as a Gateway to Cloud

What's in This Chapter

Data Required to Set Up EcoStruxure Facility Expert	
Mandatory Details to Configure Data Publication (Com'X	
Activating the Service with Com'X as a Gateway to Cloud	ģ29

To learn more about the performance and limitations of a system using Com'X gateway, read chapter I have a question, page 79.

Data Required to Set Up EcoStruxure Facility Expert

Prerequisites

NOTICE

SERVICE NOT ACTIVATED

To activate the service, all mandatory fields must be completed.

Failure to follow these instructions can result in not providing service.

All fields (mandatory or not) can be modified later on during service operation.

Data Required to Create a Customer

Customer details	
Name ¹	
Email	
Country ¹	
Activity ¹	
Logo	
¹ Mandatory data.	·

The non-mandatory data can be filled in at a later point.

Activity corresponds to the industrial sector concerned (for example, office buildings, factories, hotels, schools, public services).

Data Required to Create a Site

Site details	
Name ¹	
Address ¹	
Zip code ¹	
City ¹	
State ¹	
Time zone ¹	
Surface area ¹	
Site picture or logo	
Working days and opening hours	
Targets and initial values for monthly consumption: • Electricity • Gas • Fluids	
Subscribed electrical power (kW or kVA)	
Service part number ¹	
Data logger serial number1	RN-DN (for Com'X)
¹ Mandatory data.	

The non-mandatory data can be filled in at a later point.

NOTE: The surface area is used to normalize the following data in the performance table: electricity consumption, gas consumption, and monthly targets.

Data Required for Data Company Agreement Signature


At the end of the setup, an email is sent to the end user or building owner to sign the data company agreement.

Site details	
Name ¹	
Email ¹	
¹ Mandatory data.	

The non-mandatory data can be filled in at a later point.

Com'X Serial Number

The serial number of the Com'X can be found in the Com'X embedded webpage, in the **About** area or on the top of the product, as displayed in the following figure.

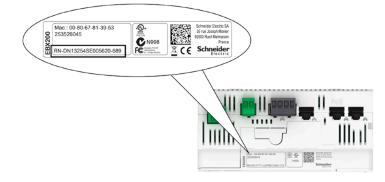

•

Mandatory Details to Configure Data Publication (Com'X)

Functions of the Com'X

The data acquisition system Com'X can perform the following functions:

- Data export through Ethernet or 3G connection (if there is no network infrastructure).
- Data collection of meters or circuit breakers in serial or Modbus TCP.
- Data collection of pulse meters.

For further details, refer to DOCA0098EN Com'X 210 Energy Server - User Manual or DOCA0036EN Com'X 510 Energy Server - User Manual.

NOTE: Recommendation for events publication: Schneider Electric recommends using Ethernet publication if you use the real-time eventing function of the Com'X.

Ethernet Publication

Contact the local IT manager to get the password and the following information.

Ethernet network details		
Proxy (if needed)	Address ¹	
	Port ¹	
	User ¹	
Ethernet (publication)	IP Address ¹	
	Mask ¹	
	Gateway ¹	
	DNS Server ¹	
Ethernet (if separate network	IP Address	
for data collection)	Mask	
¹ Mandatory data.		

The non-mandatory data can be filled in at a later point.

Activating the Service with Com'X as a Gateway to Cloud

1. Launching EcoStruxure Facility Expert setup wizard:

Follow this procedure to launch EcoStruxure Facility Expert:

- a. Go to the Settings menu (top right corner).
- b. Select the SETUP WIZARD tab.
- c. Follow each step of the wizard and click each time **Next** to go to the next step.

Eco Ø tru Facility	Expert	_		N 0 ALARM 0 ALERT	0 Operation	Reports Users Settings	hneider ØElectric
MY PROFIL	LE SETUP WIZARD	MY CUSTOMERS AND SITES	EVENTS ADVANCE	ED SETTINGS	UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	<
		-					
Select custo	omer						
Sele	ect existing customer	~					
⊖ Crea	ale new cuslomer						
						Exit Previous	Next

2. Creating a new customer

Follow this procedure to create a customer:

- a. Select Create a new customer.
- b. Enter data for the customer.
- c. Click Next.

Eco@truxure Facility Expert	Data acclusition O ala O ala	RT Operation Reports Users Settings
MY PROFILE SETUP WIZARD MY CUSTOMERS AND SIT	S EVENTS ADVANCED SETTINGS	UTILITY AND TARIFF SETTINGS SCHEDULE SETTINGS
Select customer		
	20	Nume: * Customer C Email
Select existing customer Create new customer		Country.* AUSTRALIA
23		Logo: Uplead logo
		Exit Previous Next

Activity type defines the default indicators (for example, the number of meals served for a restaurant or the number of production units for a factory). The activity type is applied to all sites of the customer. Customer logo is not mandatory and can be added later.

3. Creating a site

Follow this procedure to create a site:

- a. Select Create a new site.
- b. Enter the following information:
 - Site information

The address is used to locate the site on the map and to have relevant weather data (see Normalization factors, page 86)

- Time zone
- Name and email of the legal representative of the customer
- c. Click Next.

Eco@truxure Facility Expert		🕑 DATA ACOUR	STICN 0 ALARM 0 ALART		English - United States Help eports Users Settings	Schneider
MY PROFILE SETUP WIZ	NRD MY CUSTOMERS AND SITES	EVENTS ADVA	NCED SETTINGS UTILITY AN		SCHEDULE SETTINGS	<
Customer C > Select site						_
 Select exi 	sting site	~		Create new	site	
Site information Variance: * Country: * Address 1: * Address 2: ZIP Code: * City: * State: * GPS Coordinates: Logo:	AUSTRALIA			ng owner user name *	~	
					Exit	s Nex 30

NOTE: Other information such as **Previous Year Consumption** and **Targets** can be entered later. See step 5 in Energy efficiency and targets, page 44.

4. Assigning a subscription to the site

Select in the list the subscription you want to associate to this site.

At least one service reference must be available.

Convert cility Expert PROFILE SETUP WIZA	RD MY	CUSTOMERS AND	SITES EVENTS	ADVANCED SETTI	DWA ACTURE NCS UTILITY AND TARIEF	I ALBRI	ULE SETTINGS		Operation Reports	Users Settings	Schne
customer > test site > Select su	ibscription										
elect the service and options	you want to as	isign to the site. Th	e here below table lists the	services that are ava	ilable and the services that are a	ready assigned to the sit					
			Subscriptions								
ld 🟮	Assign	Date	Subscription name	Part numbers	Expiration date	Assets	Energy meters	Label			
manual-4c14508e-1752- 4375-a349-815410(15db0		2021-08-12	Facility Expert Energy	SVSFE0002	2022-08-31	070					
manual-7ca45e63-bc28- 421c-9573-b23a22b94126		2021-08-12	Facility Expert Energy	SVSFE0002	2022-08-31	0/0	-				
manual-81847774-47d3- 4c28-aca7-f494tid1b34bd		2021-08-12	Facility Expert Energy	SVSFE0002	2022-08-31	0/0	-				
manual-9ca52748-c9c1- 44b5-bb03-e6a1255bdb31		2021-04-21	Facility Expert Energy	SVSFE0002	2022-08-30	0/0					
manual-b320da4a-02c7- 4a6d-9c79-278c2394c397		2021-08-12	Facility Expert Energy	SVSFE0002	2022-08-31	0/0					
										Exit Previo	us Ne

5. Pairing the Com'X

To commission the Com'X, refer to ESXP1G004EN *EcoStruxure*[™] *Power* - *Commissioning Guide for Connected Panels and Facility Expert Software*.

Follow this procedure to connect the Com'X to the EcoStruxure Facility Expert server:

- a. In the Settings > Schneider Electric Services tab, enable the Schneider Electric Services. Click Save: the Com'X connects to the EcoStruxure Facility Expert server and initializes its configuration. When the connection is established, the three indicators Authenticate, Active, and Connect turn green.
- b. In the Settings > General Settings tab, select the Publication sub-tab, and then select DSP (Digital Service Platform). Change the publication frequency to Once per hour. Click Save.
- c. In the **Device Settings** tab, enter a name for the Com'X device so it can be easily identified afterwards in EcoStruxure Facility Expert. For example, Com'X_site name.
- d. Enter Com'X serial ID located on the top of the device or found in the **About** webpage of the Com'X.
- e. When the registration process has finished (after about 2 minutes), you get a message about data logger association to the site.

Activating PrismaSeT Active Wireless Panel Server

From the field, start scanning the QR code located on the PrismaSeT Active panel.

 Scan the QR code located at the top of the panel with your camera or with the feature "Scan a QR code" of your Facility Expert application if you have already used it.



If you are not already using EcoStruxure Facility Expert, you will be proposed to download the mobile application and to create a new account.

2. The activation wizard appears with the list of communicating devices if there are any. Click **Start activation**



3. **Refer to the indication to press** and hold the button located at the top of your panel for **5 seconds**.



4. On the panel, **the indicator light will go from a few seconds on** solid orange to flashing green during the service activation phase. Then click **Next**.



5. Choose between I activate my panel or Activate the panel for a customer.



NOTE: If you activate the panel for your own usage, your next step will be directly step 7.

6. Enter the name of the customer who will own the PrismaSeT Active panel. Click **Next**.



Confirm that you have received consent from your customer to access his equipment data.

Click I OBTAINED THE CONSENT to continue.



7. Create or select the switchboard site.



- 8. Enter information or simply click on the GPS location button to automatically retrieve the address if you are at customer site.
- 9. Click Next.
- 10. Select Subscription plan.

15.42 달 (문 문 +		NI TO A D
Cancel)(3(1)
Data subscripti	on plan	
Choose ye	our subscrip	tion plan
Start a	temporary	seriod
Previous		Next >
C. I.C. IOUS		
	0	<

NOTE: A valid EcoStruxure Facility Expert- Energy license is required to monitor the energy consumption and receive load availability alerts.

11. Enter your Activation code. Select **Facility Expert Energy** subscription and click **OK** to validate.



NOTE: To get an activation code, Schneider Electric recommends to purchase a subscription from your local sales representative or distributor who will send you the code by email.


12. Add the email addresses of the users who should be notified in case of an event.



NOTE: If the users do not have EcoStruxure Facility Expert, they will receive an email inviting them to download the app.

13. Click COMPLETE ACTIVATION.

14. The panel finishes its activation by attempting to connect to the cloud via the LoRa network.

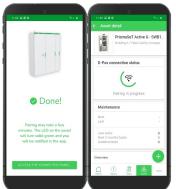

Result: All phase LED indicators are now active and the connectivity symbol is green.



- 15. Your PrismaSeT Active panel is now registered in the asset library of your application:
 - You will be notified in case of an issue with actionable details and recommendations that help you react quickly.
 - Alerts on abnormal consumption, power demand excess or power factor drift are activated, and you gain remote visibility on energy usage, from loads to multiple buildings.



	C C 4 Sector Star Bally					
		r han 🛢 na 🛊 lerecane	· · · · · · · · · · · · · · · · · · ·	an E headh		
	Redformer Facility Count		C	A REAL PROPERTY AND A REAL	Callenge of States of	
	Annual Contraction	20 mm			States in the	
		on home home				
	february (setting factors) and					
	an a					
		market a		Anna -	Constant of the	
	Contract of Contra		and a second second		-	
		and the second s		The factor lasts		
	-	Televelit and		Respirator.	-	
	_	Conceptual and		The section of the se		
		Text is set in the		THE REPORT		
		cards to chart and		Parise Springers		
	and the second se	Spiniperside -		and de land haven a		
	A CONTRACTOR OF THE OWNER.	Party 201 (10)		Annual State Sugar	_	
whited Panel	CONTRACTOR OF THE OWNER OF			Anna Anna A	_	
	11:15				_	
	In IO			and the subscript of		
	Arrente 24 arre					
Pires I	and the second					
35 MA 1	and the second					
375 VAN 1 225 VAN 1	and the second					
235 KAR 1 225 KAR 1 250 KAR 1	And Address					
375 4400 1 325 4400 1 200 4400 1 300 4400 1	And Address					
255496 1 255496 1 255496 1	And Address					
235 VAN 1 235 VAN 1 290 VAN 1 300 VAN 1	And Address	, <u> </u>				
235 коло н 235 коло н 250 коло н 200 коло н 225 коло н	And Address					
175 von. 1 135 von. 1 150 von. 1 100 von. 1 135 von. 1	And Address					
15 000 1 20 000 1 20 000 1 20 000 1 20 000 1 20 000 1 20 000 1	And Address		-		1.0 1.0 A	
(21005 - 1 20005 - 1 20005 - 1 20005 - 1 20005 - 1 20005 - 1 20005 - 1	And Address				0.0 1.0 1	
125406 1 131406 1 131406 1 130406 1 130506 1 131506 1	And Address		-		0.00 0.00 0	
335 4400 1 355 4400 1 350 4400 1 350 4400 1 355 4400 1	And Address		-		3.0 3.0 1	
171400 - 1 171400 - 2 171400 - 2 1714000 - 2 171400 - 2 1714000 - 2 171400 - 2 1714000 - 2 17140000 - 2 17140000000 - 2 17140000 - 2 1714000000000			-			
125406 1 131406 1 131406 1 130406 1 133606 1 133606 1			-			

I SET UP PARAMETERS

What's in This Part

My Customers and Sites Settings	38
Events and Alerts Settings	
Utility and Type of Tariff Entry	
Calendar and Schedules Entry	

My Customers and Sites Settings

What's in This Chapter

Presentation	39
Meters Configuration: Main Meter, Usages, and Zone	
Declaring a Main Meter for Electricity and Other Utilities	
Declaring Submeters to Monitor Usages and/or Zones	
Customer Site Parameters	

Presentation

It is important to correctly define the meter settings to get:

- · Relevant displays in your dashboards
- Relevant analysis thanks to the detailed metering data
- Complete content in your monthly reports

Meters Configuration: Main Meter, Usages, and Zone

If you want to monitor the total site consumption of an energy commodity, at least one device must be defined as a main meter in the field **Usage**.

If multiple meters are defined as main meters, their respective consumption is added automatically to calculate the site total consumption.

Example:

TGBT1 is defined as Main meter.

Settings Navigator	General properties					
Devices View 🗸	Name	TGBT1			Energy production 1	
Burgs'n Shakes	Building		0			
A Coruna			_ ~		Main meter	
Virtual devices	Floor		0			
FH Energy Portal Demo - CloneSite_2077				Usage		- + (
AD 0.1	Zone	Offices	0	Commodity	Electricity	
LT 1				commonly	Electricity	
PAC 1						
PAC 2						
PAC 5		Monitor power quality of this device				
TGBT1		(switchboard incomer)				
Barcelona		Declare this device as an asset				
Bilbao		C Deciare tria device as all asset				

Three meters are defined as submeters with zone and usage indications:

Settings Navigator	General properties					-			
Devices View 🗸	Name	AD 0.1			Energy production				
 Burgs'n Shakes A Coruna 	Building		0		Main meter				
 Virtual devices FH Energy Portal Demo - CloneSite_2077 	Floor		0	Usage	Food Refrigeration	- + 0			
AD 0.1	Zone	Restaurant	0	Commodity	Electricity	~			
PAC 1									
PAC 2 PAC 5 TGBT1	Monitor power quality of this device (switchboard incomer)								

Zone: Restaurant; Usage: Food Refrigeration

Settings Navigator		General properties					
Devices View	•	Name	LT 1			Energy production 1	
 Burgs'n Shakes A Coruna 		Building		0		Main meter	
 Virtual devices FH Energy Portal Demo - CloneSite_2077 		Floor		0	Usage	HVAC	- + (
AD 0.1		Zone	Restaurant	0	Commodity	Electricity	
PAC 1 PAC 2							
PAC 5 TGBT1			 Monitor power quality (switchboard income 				

Zone: Restaurant; Usage: HVAC

Settings Navigator	General properties					•
Devices View 🗸	Name	PAC 1			Energy production	
 Burgs'n Shakes A Coruna 	Building		0		Main meter	
 Virtual devices FH Energy Portal Demo - CloneSite_2077 	Floor		0	Usage	Cooking	+ 0
AD 0.1	Zone	Restaurant	0	Commodity	Electricity	×
PAC 1 PAC 2						
PAC 5 TGBT1		 Monitor power quality of this device (switchboard incomer) 				

Zone: Restaurant; Usage: Cooking


Declaring a Main Meter for Electricity and Other Utilities

You can monitor energy production from any renewable (solar, wind, hydro) or other energy sources produced on the site.

By tagging the meter as production meter, the energy produced on site will be displayed in the main energy dashboard, in red.


If several meters are producing energy, you can tag them all.

EcoStruxure Facility Expert will automatically sum up the total energy produced and display it in the main energy dashboard as energy produced.

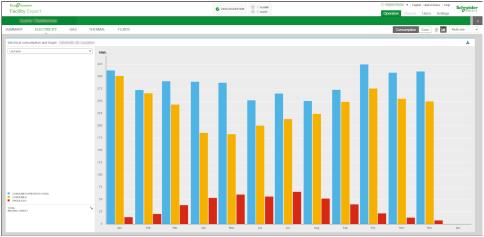

The total energy produced on the site is displayed in red in the building's aggregated consumption widget.

- 1. Open your Settings menu.
- 2. In the devices view, click to open the Com'X entry.

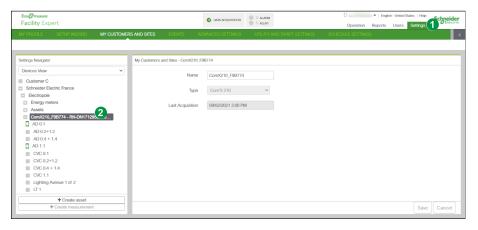

- 3. Select the meter.
- 4. Verify that the meter name is relevant. It should be easily readable and understandable when displayed on graphs.
- 5. Select the Main Meter check box.
- 6. You can declare the meter as a switchboard incomer and/or as part of your asset list by selecting the corresponding boxes.

7. Click Save.



For other utilities (water, gas, for example) verify that at least one meter is declared as Main Meter per energy and/or fluid.

Declaring Submeters to Monitor Usages and/or Zones

Declare submeters to monitor usages and/or zones such as parking lighting, heat pump, compressed air.

In case of hierarchy of 2, 3, or more submeter levels (for example, general lighting and 3 lighting submeters), each calculated percentage in graphics is established relative to the main meter consumption.

NOTICE

LACK OF READABILITY OF DASHBOARDS

Use relevant, readable, and understandable names for meters because all the fields are concatenated in the **Zone** dashboard.


Failure to follow these instructions can result in dashboards difficult to read.

- 1. Open your Settings menu.
- 2. Select the meter.
- 3. Verify that the meter name is relevant. It should be easily readable and understandable when displayed on graphs.
- 4. Enter description in Building/Floor/Zone.

NOTE: If no **Zone** is defined, the widget **Energy per zone** will not be displayed in your Electricity dashboard.

- 5. Select usage in the predefined list or create a new one with the + button.
 - **NOTE:** If no **Usage** is defined, the widget **Energy per usage** will not be displayed in your Electricity dashboard.
- 6. Enter additional information and tag the submeter according to your needs using the check boxes.

7. Click Save.

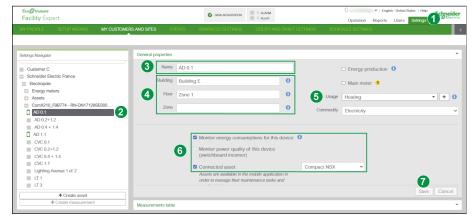

Customer Site Parameters

The **Devices View** navigator displays either customer or site information.

By selecting a customer in the list, you access customer data, country data, and group management sub-menus to set up parameters.

For more information, see Customer information settings, page 49.

By selecting a site in the list, you access sub-menus that are necessary to better determine your consumption dashboards, manage tariffs and monthly reports and to establish alert targets according to your building routine and location.

Building Characteristics

- 1. Select a site in your list.
- 2. Under **Building(s)** Characteristics, define the building operating days and hours by entering the first day of week.

These values are compared to days and schedules by EcoStruxure Facility Expert analytics to detect potential deviations.

Eco@trusure Facility Expert		S DAIA ACQUISITION	O ALARM O ALERT	Operation Reports Users Settings	Schneider
MY PROFILE SETUP WIZARD MY CUSTOMER	S AND SITES EVENTS				<
Settings Navigator Devices View Customer C Schmeider Electric France Electropole	My Customers and Stee - Electropo General Information Site Information Building(s) Characteristics First day or week Electrical Distrib Declare man Statucky - HED/CDD / Normali Energy	e 2 av 10811 T0812 Ad			•
+ Create asset + Create measurement				Save	Cancel

Predefined Normalization Factors


Select and set up the most appropriate normalization factors. Verify the main necessary values are Surface and HDD/CDD.

1. Select a site in your list.

2. Access the list of predefined factors.

Facility Expert			O ALARM O ALERT	Operation Reports Users Settings	Schneide
MY PROFILE SETUP WIZARD	MY CUSTOMERS AND SITES	EVENTS ADVANCED SETTINGS	UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	
Settings Navigator		nd Sites - Electropole			
Devices View Customer C Schneider Electric France Electropole	General Information				*
	2 Factors CDD CDD CDD CDD + 1DI Surface Period Auto		30 values are retrieved from the nearest v	weather station	
+ Create asset + Create measurement	nt interest in the second seco			Save	Cancel

3. Check the **Surface** value and adjust it if necessary.

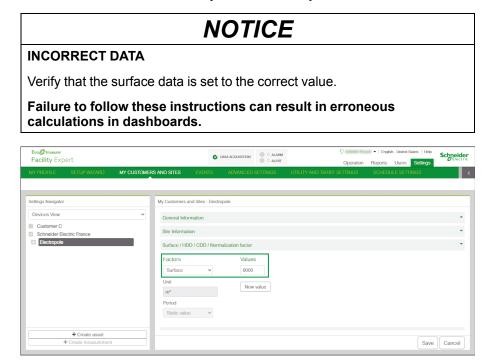

4. Select other available factors in the predefined list (for example, **HDD**, **CDD**, number of occupants, number of production units) and if necessary, set up the values.

Eco@truxure Facility Expert		O DATA ACQUISITION	 O ALARM O ALERT 	Operation Reports Users Settings	Schneider
MY PROFILE SETUP WIZARD MY	CUSTOMERS AND SITES EVI	IENTS ADVANCED SETTINGS	UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	<
Setting: Nangator Decicits View Custome C Schweider Electric France Electropole	Factors CDD + HDD Base temperature 18 Unit "C Partod Auto	DD / Normalization factor Values The HDD/CD	D values are netrieved from the nearest we	nather station	
	Energy Electrical Distributio				
+ Create asset + Create measurement	Electrical Distribute	on		Save	Cancel

In the **ADVANCED SETTINGS** menu you can create new normalization factors and apply them by activities.

HDD value is set to 18 °C by default for calculation.

The local weather data comparison algorithm is based on the building location you entered following the wizard first setup. See how to create a new customer.

Energy Efficiency and Targets

Monthly reports show electricity, gas, and the two first fluids created for the site. The monthly consumption targets must be set because they are used in the monthly performance table.

Set the information for site energy as follows:

1. In the **Energy** section, set up the **Power limit** value. In order to get relevant power overrun alerts, you mut select the **kW** unit.

NOTE: If Power Demand is much higher than Power limit, all energy data is ignored by EcoStruxure Facility Expert. It is considered incorrect data.

- 2. Set up the thermal conversion factor in primary energy which allows global energy efficiency widget calculations.
- 3. If necessary, set the gas conversion factor in kWh per m³ which is used for:
 - · Global energy efficiency widget calculations
 - · Displaying features of gas widget

Eco @truxure Facility Expert		O DATA ACQUISITION	O ALARM	9	English - United States Help Reports Users Settings	Schneider
	CUSTOMERS AND SITES EVEN	ITS ADVANCED		Operatio	n Reports Users Settings SCHEDULE SETTINGS	<
Settings Navigator	My Customers and Sites	Electropole				
Devices View	✓ Energy					•
Customer C Schneider Electric France	Power limit	_		1		
+ Electropole			kVA	·		
	Energy efficiency of		2.58			
	Electricity - Ct	primary energy	2.30			
	Thermal energy - Co	primary energy	1	2		
	Gas kWh	conversion factor	13 kWh pr	er m ³		
		Threshold value A	50 kWhep	/m²/year		
+ Create asset		Threshold value B	90 kWhep	/m²/year		
Create measurement					Save	Cancel

4. In the **Energy** section, enter the monthly objectives for consumption of energy and fluids, and CO₂ emissions for the current year.

Facility Expert			🔮 DAIA A	CQUISITION	0 alar			9 Opera		English - United		Schneider
MY PROFILE SETUP WIZARD	MY CUSTOMERS A	ND SITES EVE	NTS A	DVANCE) SETTINGS	UTILI	TY AND TA	RIFF SETTING	s sc	CHEDULE SET	TINGS	
Settings Navigator	м	y Customers and Sites	- Electropole									
Customer C Schneider Electric France	~	Previous years co Electrical consumption	onsumption	(manual	entry)							
Electropole	- 1	Jan 2013 Apr 2013	95000 88000	KWh KWh	Feb 2013 May 2013	92300 82500	kWh kWh	Mar 2013 Jun 2013	87000	kWh kWh		
	- 1	Jul 2013	78100	kWh	Aug 2013	78000	kWh	Sep 2013	80250	kWh		
	- 1	Oct 2013 Jan 2014	89245 91000	kWh kWh	Nov 2013 Feb 2014	92341 90300	kWh kWh	Dec 2013 Mar 2014	85000 92300	kWh kWh		
	L	Apr 2014 Targets	87300	kWh	May 2014	81700	kWh	Jun 2014	77700	kWh		
+ Create asset + Create measurement		iaiyets									Save	Cancel

5. You can set up targets. For example, deduct 5% from the consumption of the previous year.

Eco@truxure Facility Expert				0	ATA ACQUISITION	0 0 ALA			9	-	 English - Uni 	ited States Help	Schneider
Facility Expert						0 ALEF	IT .		Opera	ation Re	eports Use	ers Settings	Delectric
	MY CUSTOMER	S AND SITES											<
Settings Navigator Devices View C Ustomer C Schneider Electric France Electropole	~	My Customers a	and Sites				• 0 0 0 0	kWh kWh kWh kWh	Mar Jun Sep Dec	0 0 0 0	kWh kWh kWh kWh		
		Electrical Dis	stribution	n									•
		Costs											•
+ Create asset		Schedules											•
+ Create measurement												Save	Cancel

Entering consumption of previous years enables you to visualize the monthly consumption and to calculate trends. These elements are displayed on the **Electrical consumption and target** widget of your Electricity dashboard.



Tariffs and Costs Settings

NOTICE

DENIAL OF ACCESS TO CUSTOMER DATA

You must have Manager rights to carry out the tasks described in this section.

Failure to follow these instructions can result in incomplete data.

To manage tariffs and costs you must create a utility, set up tariffs, and create cost sheets. For detailed information about the procedure, see Utility and Type of Tariff Entry, page 54.

Setting up tariffs and costs enable you to understand and allocate costs through your EcoStruxure Facility Expert dashboards.

Electropole	ENERGY ELECTRICAL DISTRIBUTION						peration Reports Us	
					_			
ast Acquisition: 6 days ago - 06/03/2021 11:0	AM SUMMARY ELECTRICITY GAS THER				Consum	olion Cost	Schedule Groups	Single site
		Site level - cost sheet Close						
Total Consumption Cost		4	Cost table					
01/01/2020 - 01/31/2021	- ,			Reste	Nult	Jour	TOTAL	
Monthly	150,000		TCBT 1 TCBT 2	153,410.85 € 97,196,43 €	67,487.49 € 45.111.16 €	503,233.66 € 424,888.65 €	724,132.01 € → 567,196.24 € →	
			TOTAL	250,607.28 €	112,598.06 €	928,122.31 €	1,291,328.25 € →	
	100,000							
RESTE NUIT JOUR	50,000							
TOTAL CONSIMPTION COST			Maximum D	emend		390.22 KW		
1,291,328.25 €	0 Jan 20 Feb 20 Mar 20 Apr 20 May 20 Jun	n 20 Jul 20 Aug 20 Sep 20 Oct 20 Nov 20 Dec 20 Jan 21	 Maximum D Load Factor 	emand Event		01/22/2020 8:50 / 28 %	м	
Cost per meter	±							
-								
TCST 1								
-								
RESTE TOBT 2								

Creating a Cost Sheet for a Site or for a Group

When you create a cost sheet for a group, you assign a tariff to the group and define the meters that belong to the group.

- 1. Go to the MY CUSTOMER AND SITES menu.
- 2. For a site: In the Settings Navigator panel, expand the customer item and then select the site.

Result: Information for the site is displayed.

3. In the **Costs** field, click the arrow to expand the cost area, and then click **Add a sheet**.

Result: The **CREATE COST SHEET** window is displayed.

- 4. In the **CREATE COST SHEET** window, enter the following information:
 - Name: Enter a name for the cost sheet.
 - Tariff: Select a tariff from the list.
 - Level: Select Site or Group.

You must assign the current tariff structure on the main meter to be enabled to assign the tariff structure to a meter and/or submeters.

NOTE: The Meters option cannot be selected for a site.

Eco I truxure Facility Expert	CREATE COST SHEET		0 Operal	 Help S	Electric
Facility Expert MY PROFILE SETUP WORKS MY CUSTOMERS AN Settings Navigator My Devices Yeav Image: Customer C Schneider Electric France Electropole		Tarif exemple Site Group OtherseLT TWHIP OtherseLT TWHIP OtherseLT TWHIP Heating-CVC 0.4 + 1.4 (WH) Heating-CVC 0.4 (WH) Heating-CVC 0.1 (WH)	F SETTINGS ariff ariff 2		C B A shoet
Create asset Create measurement	* Please enter a name for this cost sheet.	Heating:AD 0.2+12 (WHr) Others:AD 1.1 (WHr) Heating:AD 0.1 (WHr) Ok Cancel		Save	Cancel

5. For a group: Select a group name or click + to create a new group. Select meter boxes for the group. The consumption of each meter is added together to calculate the total energy cost of the group.

6. Click **Save** to save the cost sheet.

Result: The cost sheet is displayed under the Costs panel.

Facility Expert					ORIA A	O AAM				English - United States H	
	ERS AND SITES EVENTS	ADV/NCED	SETTINGS	UTILITY AND	TARIFF SETTINGS	SCHEDULE SETTING	8		pearer rep	tons users count	
	•										
Settings Navigator	My Customers and Sites - Amph	тах									
Devices View V	General Information										
C Université de Lauranne	Site Information										
2	Surface / HDD / CDD / Norm	valitation factor									
•	Energy	Kanzardorri Nacior									
	Electrical Distribution										
	Costs										
	Sheet Name	Level	Group	Commodity			Meters	1			
	New Quotation 5	Group	EFTCP	Electricity		ELEC_Tarf direct A_2018	Main meter Alimentation_Batiment (Wilr) Main meter:Intro_PV (Wilr) UPS.UPS1 (Wilr) UPS.UPS2 (Wilr)				CK 8
	Facture Electric	Ste		Electricity	D	ELEC_Tarlf direct B	Main meter Alimentation_Batiment (WHr)				C7 8
	•									3	Add a sheet
	Schedules										
	Monthly reports										
Create asset											7
Create measurement											ave Cancel


To assign the tariff structure to a meter and/or sub-meters, you must at least assign the current tariff structure on main meter.

You can assign a simulated or a competitor tariff structure.

You can assign any tariff structure on main meter or on any sub-meter.

Schedule Association

The **Schedule** settings define the alert activation in case of abnormal consumption during closed hours.

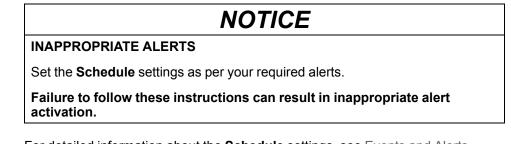

For detailed information about the **Schedule** settings, see Events and Alerts Settings, page 51.

When opening the **Schedules** panel, you can create an association between your schedules and the selected customer site. Follow these steps.

1. Click Associate a schedule to the site.

Eco@truxure Facility Expert			🔮 DATA ACQUISI			Operation	English - United States Help Reports Users Settings	Schneider Electric
MY PROFILE SETUP WIZARD MY CUSTON	IERS AND SITE	S EVEN	TS ADVAN	CED SETTING	s utili	ITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	<
Settings Navigator	My Custorr	ners and Sites -	Electropole					_
Devices View ~	Energy							•
Customer C Schneider Electric France	Electric	al Distribution						
Electropole	Costs							
	Schedu	les						
	Name	Level	Group	Commodity	Schedule	Meters		
	S	Site	-	Electricity	Schedule	Main meter:TGBT 1 (WHr) Main meter:TGBT 2 (WHr)		8 8
							Associate a schedul	e to the site
	Monthly	reports						•
+ Create asset + Create measurement							Save	Cancel

 In the window that displays, select one schedule in your list of schedules. To learn how to create your list of schedules, see Calendar and Schedules Entry, page 60.

- 3. Associate the schedule to an energy (for example, electricity, gas, thermal, water).
- 4. Associate the schedule to main meters.
- 5. Associate the schedule to a zone or group (for example, restaurant, offices).
- 6. Name the new association created.
- 7. Validate the settings by clicking **Ok**.

CREATE SCHEDULE AS	SOCIATION
6 Name •	
2 Schedule	Schedule
Commodity:	Electricity
5 Level	Site
4 Motors	Others:LT 1 (WHr) Others:LT 3 (WHr) Heating:CVC 1.1 (WHr) Heating:CVC 0.4 + 1.4 (WHr) Heating:DVC 0.4 + 1.4 (WHr) Main meter:TGBT 1 (WHr) Main meter:TGBT 2 (WHr) Heating:VRV 1 (WHr) Heating:VRV 2 (WHr) Heating:VRV 2 (WHr) Heating:VRV 2 (WHr) Usernitian:VRV 2 (WHr) Heating:VRV 4 (WHr) Usernitian:VRV 4 (WHr) Lighting:Park lighting (WHr)
 Please enter a name for this association. 	Ok Cancel

Monthly Reports and KPIs

Konthly performance	numre Legning Office Egujorent Venitetor O	Consumpl	4 5	6 1		9 1	0 15	12	20 15 16 13	6% 6% 3%	20 10 10 10 10 10 10 10 10 10 10 10 10 10		1		•		54000	,					
Electricity 68.51 MWh	Lighting Office Epiponent Vestilation			6 7		9 1	0 11	12	15 14 0	6% 6% 3%	www www		1	1	1								
Electricity 68.51 MWh	Lighting Office Epiponent Vestilation		. 5	0 1		9 1	0 11	12	15 14 0	6% 6% 3%	4MM		1		1	1							
Electricity 68.51 MWh	Office Equipment Vestilation		. 5	0 1		9 1	0 11	12	14	15	4MM		1		1								
Electricity 68.51 MWh	Office Equipment Vestilation		4 5			9 1	0 11	12	14	15	4MM		I	1	1								
Electricity 68.51 MWh	Vanilation		+ 5	6 7		9 1	0 11	12		15	-		I	1	1	1			Ĺ	1	Ē	ľ	
Electricity 68.51 MWh	Vanilation		4 5	0 1		9,	0 11	12		15	-		١	1	h	ł.		L	Ľ	Ē	Ē		F
68.51 MWh	Vanilation		* 5	6 1		.,	0 11	12		15	-		I	1	l	l.	L			Ľ	E		
68.51 MWh			4 5	6 1		9,	0 11	12					ł	ł	L		L				L .		L .
68.51 MWh			4 5	6 1		.,	0 11	12			5	•					-						
rend va Nay 2017 💊	1		4 5	6 1		9 1	0 11	12	13 14	15													
rend va Nay 2017 💊			* 5	0 1			0 11	u	13 14	15													
		Consumo															Ι.,		Ι.,	Ι.,	Ι.,	Ι.,	L.,
		Consumo										Jan.	Feb.	Mar.	Apr.	May 2017		July		Sep.	Out.	Nov.	Dec.
anance a serger s. e re																2017	2018		arðar.				
			non by 2	sone (M	Wh)																		
	Building EliZone 5			-	_	-		-	19	7%			in.	Deb.	Mar.	400	Nex	dana.	-		640.	det .	No.
ear to date performance	Building ElZone 1								10	25	2218.0000-1		112.4			20.72							
our to date performance	Building #Zone 2				_				10	-													
	Building \$20mm 4										Terget (WWh)					76.18							
Electricity	Dukling DiZone V1									15	Variance to be	9et (%)	-15.8	+11.8	+2.5	-7.5	-15.9						
<u> </u>											2917 (MWR)		142.7	101.4	96.12	80.11	63.73						
452.8 MWh	Avenue/Avenue 1 012									476	Treed vs 2217	64	-99.2	+6.2	-2.6	-11.7	-18.2						
	Avenue									15													
tariance to target -6.7 N	Parking									15													
		1 2		5.0		÷.,	÷ ,	6.1	- 12	12													

NOTE: One complete month of data is necessary to enable the automated generation of Monthly Reports.

Results are generated by the software every 5th day of month, and the documents are stored in the Reports library.

- 1. In the **My Customers and Sites** menu click the arrow to open the **Monthly Report** panel.
- 2. Select the monthly report language.

NOTE: By default, report language is the country language. For multiplelanguage country select the language in which the report is to be released. Select the access and notifications. You can choose who has access to the report repository and who is notified by email when a new monthly report is available.

Eco 🕑 truxure			DATA ACQUISITION	9 mm	 English - United States Help 	Schneide
Facility Expert			O ALERT	Operation	Reports Users Settings	OElectr
IY PROFILE SETUP WIZAR	MY CUSTOMERS AND SIT	S EVENTS	ADVANCED SETTINGS	UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	
ettings Navigator	My Cust	mers and Sites - Elec	ctropole			
Devices View	~ Sche	ules				
Customer C Schneider Electric France	Mont	y reports				1 .
Electropole		uages	Access 8	notifications		
	4	French	User	Access	Notifications ()	~
			Adam Park	nne e		
			Brans HER			
			Variante 700	060		
			Era; Franke	in 🔽		*
	Perfo	mance indicator	s			
			05.11.11.1			
+ Create asse	et		Click add to report' to sel	ect performance indicator in the monthly		
+ Create measure	ement				Save	Cancel

4. Select Key Performance Indicators (KPI) by clicking the **Add to report** button.

NOTE: For each KPI to be integrated in the report, select the total site consumption (Electricity, Gas or Fluids) and the normalization factor to compute the KPI.

You can create up to 3 KPIs.

5. Set up utility and tariffs by clicking **Add to report** after selecting the tariff and the energy provider.

NOTE: The tariff structures must be defined previously.

6. Click Save.

Eco			0 ALARM	0	 English - United St 	tates Help Schneider
Facility Expert		0	0 ALERT	Operation	Reports Users	Settings
MY PROFILE SETUP WIZARD	MY CUSTOMERS AND SITES EVE	ADVANCED SETT	INGS UTILITY	AND TARIFF SETTINGS	SCHEDULE SETTI	INGS <
Settings Navigator Devices View Customer C Schneider Electric France Electropole	My Customers and Stee Performance indi 1. Select Water Electricit Tariffs 1. EDF	cators a commodity •	per .	Select a normalization fac	itor •	Add to report
+ Create asset + Create measurement		4			6	Add to report

Customer Information and Multi-site Settings

When following the EcoStruxure Facility Expert wizard you have already implemented several mandatory fields (see Activating the service with Com'X as a gateway to cloud, page 29).

In the three panels displayed under the **My Customers and Sites** menu, you can complete customer information and define data that are necessary to monitor the aggregated consumption of the group and benchmark the consumption of the sites.

Under Customer Data you can modify customer information and upload a logo.

Eco Trucure Facility Expert		O DATA ACQUISITION	0 ALARM0 ALERT		I English - United States Help leports Users Settings	Schneider
MY PROFILE SETUP WIZARD MY CUST	TOMERS AND SITES					<
Settings Navigator	My Customers and Si	ites - Finarest				
Devices View	Y General Data					•
		Name:		Address 1		
		Email:		Address 2		
		ן א ר	load logo	Zip code		
		Sites: 2		City		
				State		
+ Create asset	_			Country	FRANCE	~
+ Create asset + Create measurement					Save	Cancel

• Under **Country Data** you can verify and modify default units for temperature, surface, fluid, energy consumption, gas volume, for example.

Eco Trucure Facility Expert	0	DATA ACQUISITION		English - United States Help eports Users Settings	Schneider
MY PROFILE SETUP WIZARD MY CUSTOME	RS AND SITES EVENTS				<
Settings Navigator Davices View	My Customers and Sites - Finare Country Data	st			•
		Units	Schn	eider Electric Contact	
	Temperature	°C ~	. Web site		
	Surface Area	m² ~	Phone		
	Fluid	m ³			
	Energy	kWh			
	Gas Volume	m ^a			
	Gas Energy	kWh ~			
+ Create asset + Create measurement				Save	Cancel

• Under **Group management** you can associate the site to others by selecting an existing one in your list, create a new group by clicking the + button, or delete a group by selecting it and clicking on the bin icon.

Eco@truxure Facility Expert		O DATA ACQUISITION	0 alarm		0	🔻 English - Uni		Schneider
	OMERS AND SITES EVEN	ITS ADVANCED		UTILITY AND	Operation D TARIFF SETTINGS	Reports Use		<
Settings Navigator	My Customers and Sites	- Finarest						
Devices View	Group management							
	Select a group:						~ +	•
	Group nan	ne : •						
	Pare							~
	Available sites				Selected sites for the gr	oup		
				*				^
				>				
+ Create asset								
+ Create measurement							Save	Cancel

NOTE: You can access and download a report by connecting to the site. All your monthly reports are stored in the **Reports** menu.

EcoØtruxure Facility Expe	ert	S D) ALARM) ALERT	• English - United States He Operation Reports Users Setting	Schneider
Elect	tropole MONT	HLY REPORTS				<
November 2020	Coproce allongs	French		r_2020-11.pdf		ž
November 2020	the law and	French	-	_2020-11.pdf		±
December 2020		French	-	,2020-12.pdf		*
December 2020	the land	French	Contract Contract	_2020-12.pdf		*
January 2021		French	-	.2021-01.pdf		*
January 2021	The Second	French		_2021-01.pdf		±
February 2021		French	-	2021-02.pdf		*
February 2021	the last the	French	-	_2021-02.pdf		*
May 2021		French	-	,2021-05.pdf		±
May 2021	the lands	French		_2021-05.pdf		±

Events and Alerts Settings

EVENTS Menu

Under the **EVENTS** menu you can manage events sent from your gateway to the cloud to be notified quickly about an issue that has occurred on site.

The Com'X gateway includes predefined and custom events that you can set up to better define alerts threshold.

Understanding your Event List

		_			Opera		ports Users		_
AY PROFILE SETUP WIZARD MY	Y CUSTOMERS AND SITES	EVENTS	ADVANCED SETTINGS	UTILITY AND TAI	RIFF SETTING	is s	CHEDULE SET	TINGS	
					0	0			
iettings Navigator	Event settings	A			В	С	D	Θ	G
Customer C Schneider Electric France	Category	Sub Category	Event Family		Related to	Level	Notifications	Recipients	Enabled
Electropole	Energy	Electricity	Electricity consumption	0	Electropole	٠	v		
	Energy	Electricity	Power demand	0	Electropole	•		-	
	Energy	Electricity	Site Power Factor	0	Electropole	0			
	Facility Expert		Data acquisition	0	Electropole	•		-	
	1.11					٠			
	Contrast of Contrasts		100-100 at 1100		- 100				
		-	for the first		-	:			

- A. Three levels of information to define the type of event
- B. Identification of site or energy related to the event
- C. Level of alerts or alarm received (orange/red)
- D. Notification selector to receive alerts (email/phone)
- E. List of alert recipients
- F. Toggle button to activate/ deactivate the event service

Detailed Alert Configuration

Click an event line to define information, such as recipient list, to set up alert and alarm thresholds or to associate alerts with building schedules.

Examples of events and alert settings:

Power demand settings

Eco@truxure Facility Expe	ert			¢	DATA ACQUISITION		9 Opera		English - United		Schneide
MY PROFILE	SETUP WIZARD	MY CUSTOMER	IS AND SITES	EVENTS	ADVANCED SETTINGS	UTILITY AND TA	RIFF SETTING	5 S	CHEDULE SET	TINGS	
iettings Navigator			Event settings								
Customer C Schneider Elec	ctric France		Category	Sub Category	Event Family		Related to	Level	Notifications	Recipients	Enabled
Electropole		Energy	Electricity	Electricity consumption	6	Electropole	•		Adedamola OL.		
			Energy	Electricity	Power demand		Electropole	0		Adedamola (X	
					Alert Alarm		Recip	ients		E	mail ^
				Threshold (kV/	A) 740 750						•
						•					✓
											<u> </u>
					Associate to schedule						U *
			Com'X cus	tom event 🔳	Court on mobile app	ort or mobile app	decorrected	anset)		Save	Cance

Power factor settings

AND SITES	EVENTS	ADVANCED SETTINGS	S UTILITY AND TARIFF	SETTINGS SCHEDULE SETTIN	NGS
Event settings					
_					
	_		-		
Energy	Electricity	Site Power Factor	🚺 Ele	ctropole 🎽 🔳	
٦		Alert Alarm		Recipients	Email 🏠
	Threshold (%)	0.35 0.3		Adma Adma	0
		0.00		Admin Admin	
				Adma Adma Adma	0
				Adrea Adrea	
				Adma Adma	
				Adrea Adrea	
		Associate to schedule			
Facility Expert		Data acquisition	🚺 Ele	ctropole 🤚 🗾 .	Adedamala (X.
Com'X custor	m event		No. over a weath any liter		Save Cancel
	Facility Expert	Threshold (%)	Alert Alarm Threshold (%) 0.35 0.3 Associate to schedule Facility Expert - Data acquisition	Alert Alarm Treeshold (%) 0.35 0.3 Associate to schedule Facility Expert - Data acquisition I Electronic El	Alert Alarm Threshold (%) 0.35 0.3 0.3 Associate to schedule Facility Expert • Data acquisition Facility Expert • Data acquisition

· Period and type of schedule settings

Eco@trunure Facility Expert	DRA.AC	RAISTION O ALARM		Finglish - United States Help ports Users Settings
MY PROFILE SETUP WIZARD MY CUSTOME	IS AND SITES EVENTS ADVANCED SETTINGS	UTILITY AND TARFF SETTINGS SCHEDUL	E SETTINGS	<
Softing: Nanjater Softing: Nanjater Softing: Nanjater Softing: Calculated Softing: S	Every soling Every Bactory Decking prove Decking Corpy Bactory Decking prove Every Soling		Perinter Perinter Perinter Activation schedule: Perint Perint Workg reux Enter han Ben han Ben han Ben han	Ented C C C C C C C C C C C C C C C C C C C
			Extra hour2	۵
	Energy Electricity Power demand		🕽 Electropole 🤒 🚺 🖪	Adedemole Okaak
	Energy Electricity Site Power Factor		🕽 Electropole 🙁 🤨 🚺 🗌	
	Com'X custom event	a nuble ap (decreated and)		Save Cancel

Main Alert Notification

Watch the video showing the main alert notification with visualization of the related event.

The following screens illustrate different types of alerts:

· Alert on Electricity overconsumption and target drifts





· Alert on Power demand excess to avoid penalties





• Alert on Power factor drift

 Control
 <thControl</th>
 <thControl</th>
 <thControl</th>



• Alert on Data acquisition issue

Endowie President eine Endowie Bertry eichtig Endowie Endowie ist ei	The OLOGODO TO NORMOUSE TO AN inclusion of and houses many bulk is not to accept		Advended . •] [userin]	:	10002310174	0/020112174	
Endown Bolly mitch Endown Endown a M	mungahi kawa ta seringik mungahi kawa ta seringik	_					
inter interest of	a namanfile di tanan di manan daka manan Gambirdi (1867) k	_		•	100400-0078		
• Electropolic no data re							
		e: Conit216_F98774				9	
Evenuels		0010/2020 2:20 PM	Addbord Information				
Publicities (2004)			Nationalities				
The last legger has stopped correction	ing with Facility Legent server.						
Putertial results							
Edite lapper communication in not real	ni, deterney becket.						
Representations							
1 Boly had be deta hope is well	par sile.						
2 New Address of Appendix							
3 Carnet Schweiter Darmie fer sein	1971 CO.						
Enste history							



Utility and Type of Tariff Entry

What's in This Chapter

Creating a Utility	55
Creating a Single-Rate Tariff	
Creating a Time-of-Use Tariff	56
Creating a Block Tariff	
Duplicating and Updating a Tariff	

Creating a Utility

- 1. Select the UTILITY AND TARIFF SETTINGS menu.
- 2. Click Create utility.
- 3. Enter the utility name and its country.
- 4. (Optional) Add one or more special days.
 - In Special Days, click Add special day
 - Enter the name of the special day and the date.
 - If the special day occurs at the same date each year, select Recurrent.
 - Click Add special day to add more special days.

5. Click Save.

Eco@truxure Facility Expert				• English - United States Help Operation Reports Users Settings	Schneider
MY PROFILE SETUP WIZARD MY (CUSTOMERS AND SITES	EVENTS ADVANCED SETTINGS	UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	<
Utilities and Tanifs	Properties				_
EDF	General				
Tarif exemple Supplier2 Tariff 2	3	Name: Country: AUSTRALIA •			
	4 Special Days				
		1:	01/01 🛗 🛛 Recurrent 🍵		
		2:	05/01 🛗 🗹 Recurrent 📋		
		+ Add special day			
				1	
2				6	
+ Create utility + Create tar	nff			Please enter a name Savo	Cancel

Creating a Single-Rate Tariff

When you use single-rate tariff, the rate for the commodity is constant.

- 1. Click Create tariff.
- 2. In the General panel, enter the following information:
 - Name: Enter a name for the tariff.
 - Commodity: Select a commodity from the list.
 - **Currency**: Enter up to three letters for the tariff currency. By default, the tariff is in euros.
 - Type: Select Single rate.

EcoØtruxure Facility Expert		O Performance Performace Performace Performance Performance Perfo	Schneider
MY PROFILE SETUP WZARD MY CUSTOMERS	AND SITES EVENTS ADVIANCED SETTINGS UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	<
Utilities and Tariffs	Properties		
Contract exemple Tart exemple Suppler2 Tartf 2	General Name: Commodify: Electricity Consumption unit With Contigues Tarter Type Type Type Type Type Type Type Type		

NOTE: You cannot Configure Tariff for a single-rate tariff.

- 3. In the third **Tariff Price** panel, click **+ Add price** and enter the following information:
 - Select a date after which the tariff is valid.
 - (Optional) Fixed charge: Enter a fixed charge for each month.
 - (Optional) **Demand charge**: Enter a demand charge (in kW) and the threshold above which the demand charge applies. The power limit is displayed in the **Power demand** widget of your dashboard.
 - Price: Enter the commodity price (in euros/kWh).

Properties	
General	
Name:	
Commodity:	SELECT DATE
Consumption unit:	kV 01/01/2021 🗰
Currency:	
Туре:	Sir Ok Cancel
Configure Tariff	
Not applicable to single ra	e tariff

4. Click Save.

The tariff is added to the utility in the Utilities and Tariffs panel.

Creating a Time-of-Use Tariff

When you use a time-of-use tariff, the rates for the commodity depend on the time of day that the commodity is used, and optionally on the season of the year.

1. In the **General** panel, enter the following information:

- Name: Enter a name for the tariff.
- Commodity: Select a commodity from the list.
- **Currency**: Enter up to three letters for tariff currency. By default, the tariff is in euros.
- Type: Select Time of use.
- 2. (Optional) In the **Configure Tariff** panel, click **+ Add season** and enter the following information:
 - Name: Enter a name for the season.
 - Start: Select a start date for the season. The end date is automatically set with the next period.

Repeat this step to define other seasons.

- 3. Add the following information for the time-of-use period:
 - Name: Enter a name for the period.
 - Start and End: Select a start and end time for the period.
 - Select the days of the week on which the period applies.

(Optional) Click + Add period and repeat the previous steps to define more periods.

(Optional) Select **Fill remaining period** and enter a name for the time that is not defined by a period.

- 4. In the **Tariff Price** panel, click **+ Add price** and enter the following information:
 - Select a date after which the tariff is valid.
 - (Optional) Fixed charge: Enter a fixed charge for each month.
 - (Optional) **Demand charge**: Enter a demand charge (in kW) and the threshold above which the demand charge applies.
 - Rates for defined seasons and periods: Enter the rate for each season and period you have defined. If a time period is not defined for a season, leave the field blank.
- 5. Click Tariff preview to view the time periods in each season.

6. Click Save.

Facility Expert			English - United Operation Reports Users	Scigleider
MY PROFILE SETUP WIZA	RD MY CUSTOMERS AND SIT	ES EVENTS ADVANCED SETTINGS UTILITY AND TARIFF SETTINGS	SCHEDULE SETTINGS	<
Utilities and Tariffs	Propertie	5		
EDF	Cenera Genera			
Tarif exemple Supplier2	0	Name:		
Tariff 2		Commodity: Electricity •		
		Consumption unit: kWh -		
		Currency: €		
		Type: Time of use -		
		re Tariff 🚺		
	4	Seasons:		
		1. Name: Start: 01/01 🗎 End: 12/31 🗴		
		+ Add season		
	3	Periods:		
		1. Name: Start: 00:00 O End: 00:00 O 🖉 💆	Wed Thu Fri Sat Sun Spc	
		2. Name: Start: 00:00 O End: 00:00 O 🖉 🖉	Wed Thu Fri Sat Sun Spc	
		+ Add period		
	F	ill remaining period 🗋		
	Tariff P	ice 🚺		
	4			
	Fixed	Valid from: 01/01/2021 - +		
	1000	Price Price Price		
		Tax %		
	Variab	e charge		
	Prim	er demand		
	FOW		kW	
	Con	sumption		
		Mon Tue Wed Thu Fri Sat Sun Spc		
		Mon Tue Wed Thu Fri Sat Sun Spc		
	Tax	demand and consumption)		
	•	Tax %		
	5 Tarif	preview		6
+ Create utility	+ Create tariff		Please enter a tariff	name Save Cancel

TARIFF PREVIEW screen:



Creating a Block Tariff

When you use a block tariff, the rate for the commodity decreases as the consumption increases.

- 1. In the General panel, enter the following information:
 - Name: Enter a name for the tariff.
 - Commodity: Select a commodity from the list.
 - Type: Select Block.
- 2. (Optional) In the **Configure Tariff** panel, click **+ Add season** and enter the following information:
 - Name: Enter a name for the season.
 - **Start**: Select a start date for the season. The end date is automatically set with the next period.


Repeat this step to define other seasons.

- 3. Add the following information for the block periods:
 - **Name**: Enter a name for the period and a threshold above which the rate changes to the next block.
 - Blocks: Select blocks per day or per month.

(Optional) Click + Add block to add and configure more blocks.

- 4. In the **Tariff Price** panel, click **+ Add price** and enter the following information:
 - Select a date after which the tariff is valid.
 - (Optional) Fixed charge: Enter a fixed charge for each month.
 - (Optional) **Demand charge**: Enter a demand charge and the threshold above which the demand charge applies.
 - Rates for defined seasons and periods: Enter the rate for each season and period you have defined. If a time period is not defined for a season, leave the field blank.

5. Click Save.

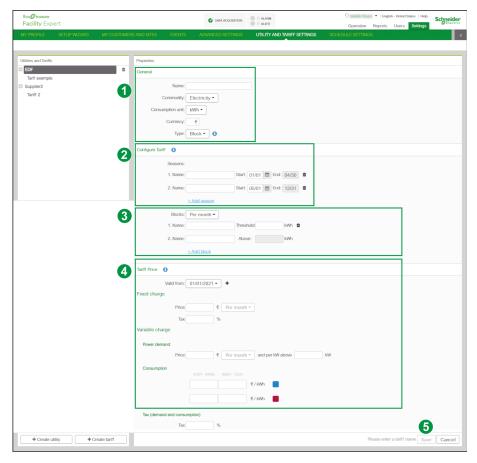

Duplicating and Updating a Tariff

Copying and Pasting a Tariff

Follow these steps to copy and paste an existing tariff:

- On EcoStruxure Facility Expert, select Settings > Utility and Tariff Settings > Utilities and Tariffs.
- 2. Select a tariff to copy and click the copy icon.

Result: The Copy Tariff window opens.

- 3. In the Copy Tariff window:
 - Enter a name for the new tariff.
 - Select a utility to which the tariff applies.
- 4. Click OK.

Result: The new tariff is added to the Utilities and Tariffs view.

Updating Prices

Follow these steps to change a tariff price:

- 1. On EcoStruxure Facility Expert, select Settings > Utility and Tariff Settings.
- 2. Select a tariff to update, and then in **Tariff Price** click + to create a new valid date.
- 3. Update the rates.
- 4. Click Save.

NOTE: To view rates for a previous period, select the period in the **Valid from** drop-down list.

Calendar and Schedules Entry

What's in This Chapter

Create a Calendar	61
Create and Visualize Weekly Schedules	61

Create a Calendar

- 1. In the SCHEDULE SETTINGS menu click on + Create calendar
- 2. Name the calendar.
- 3. If necessary, indicate special days such as bank holidays and define their name, date, and recurrence.


Eco@truxure Facility Expert		DATA ACQUISITION	O ALARM O ALERT	English - United States Help Operation Reports Users Settings	Schneider
				SCHEDULE SETTINGS	<
Calendar and schedule Calendar and schedule Calendar Schedule	a Cerral Special Days 3	Name:	01/01 ∰ g Recurrent € 05/01 ∰ g Recurrent €		
	ate a weekly hedule			Please enter a name Save	Cancel

Create and Visualize Weekly Schedules

- 1. In the SCHEDULE SETTINGS menu click on + Create a weekly schedule.
- 2. Enter a name.
- 3. Configure schedules by setting:
 - Seasons (dates)
 - Periods (Open/Closed)
 - Valid days per period
- 4. Define validity of periods per season.
- 5. Click the Schedule preview button to preview your schedules.



6. Click Save.

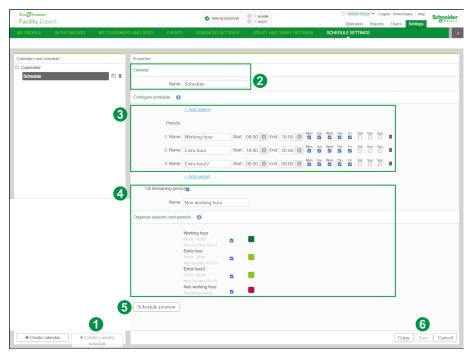

I OPERATE

What's in This Part

Introduction	64
A Portfolio of Sites	65
A Site	

Introduction

EcoStruxure Facility Expert provides a view on cost and building performance with a set of simple and relevant graphs and charts available on a web portal.

It enables you to track energy consumption or simply benchmark buildings with local performance scale (A to I graph) and standards (ISO50001, LEEDs, NABERS).

The multi-site comparison feature offers a complete view of building consumption.

Power demand and power factor monitoring and targets help to minimize utility penalty issues, while cost sheets and budget allocation can support your customers' energy purchase by enabling them to compare different tariff possibilities.

A Portfolio of Sites

What's in This Chapter

Benchmarking Energy Consumption of All Your Sites	66
Analyzing Aggregated Data	68

Depending on the number and configuration of your buildings, you can organize your portfolio by creating groups of sites or just by registering them under your customer name.


You can then select a customer in your list to review and benchmark the energy consumption and costs of the related portfolio of buildings.

To monitor energy consumption across multiple sites, watch the video.

Benchmarking Energy Consumption of All Your Sites

1. Select a customer in the list or using the map.

- 2. If the customer owns multi-site buildings it automatically opens the multi-site dashboard where you can choose between views of comparison or the aggregated consumption of all the sites.
- 3. Click **Visualize the site comparison** or on the horizontal diagram icon on the white bar.

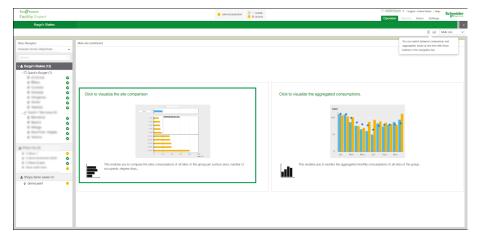

4. By default, you open 2 diagrams displaying the data of your 5 best and worst performer sites, and the total consumption data indicator.

On the left you can access the comparison of kWh/m² (yellow graph) with the possibility to benchmark any other site of your list by selecting it in the fields above the diagram.

You can leverage the red diagram on the left if you want to benchmark with another normalization factor, such as CDD or HDD.

This best/worst performer comparison view helps you identify quickly which site you should focus on first and indicates the average consumption of your portfolio of sites. By default, the performance settings are **Main meter** and **Last month**. You can change the criteria if needed.

Click the customer name (green bar) to go back to your customer list of sites.



 By selecting All sites, you can review the classified list of your building consumption and the consumption targets you set up previously for each site. This view helps you quickly identify if the building is in line with objectives or not.

NOTE: The number of sites displayed on screen is limited to 50.



6. You can review data of a specific period or usage by selecting information in the 2 menus and access all energy data (electricity, gas, thermal, and fluids) if meters have been installed to monitor all utilities.



Analyzing Aggregated Data


The aggregated view displays the monthly consumption of all your buildings and can help to track energy consumption, comparing and reviewing key point indicators and diagrams of energy consumed and produced over time periods.

- 1. Select the period of data you want to compare.
- 2. By clicking the legend, select the data that you want to be displayed on the graph:
 - Energy consumed (previous year)
 - · Energy consumed
 - Energy produced

Moving your pointer displays the data of each bar.



- 3. Switch to cost entry to review this KPI if you have set up cost sheets.
- 4. Click a site to access its consumption data.
- Click SUMMARY to access the summery tab of your aggregated consumption data. See Exporting data for the customer, page 76 to learn more.

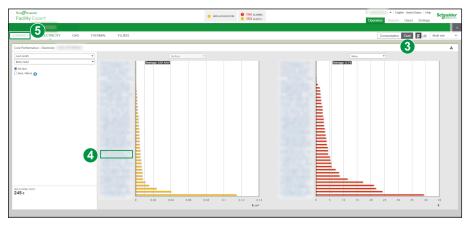

A Site

What's in This Chapter

Analyzing Site Energy Consumption	70
Reviewing Total Consumption	
Analyzing in Detail per Usage, per Zone, or per Meter	
Reviewing Consumption of Other Utilities (Gas, Thermal, or Fluids)	77

Discover how to use your energy dashboard to improve the performance of one site. Watch the video.

To analyze the consumption of one site:

• Start reviewing the total consumption of the site by selecting the site in your customer list or on the map.



- Select the ENERGY tab.
- The synthesis dashboard displays the following information:


Eco@trowww Facility Expert	DAVA ACQUISITION	 194 ALAMAS 163 ALAMAS 		• English - United States Help Operation Reports Users Settings	Schneider
10 Groupo scolairo ENERGY 1 ELECTRICAL DISTRIBUTION ASSETS					<
Last Acquisition: 43 minutes ago - 06/09/2021 12:00 PM SUMMARY ELECTRICITY • 1 GAS THERMAL			Consumption	on Cost Schedule Site level •	Single site 🗸 🗸
		NREVAOLIS TARDET 200 YEAR Min Actu Targe	MISSING WHICH		

- A. Standard comparison widget
- B. Energy consumption synthesis widget
- C. Target follow-up widget including CO₂ production level
- Select the energy to display the energy consumption dashboard and review the energy consumption of Electricity and other utilities if meters have been installed to monitor water, gas or thermal energy.

See examples in section Reviewing Consumption of Other Utilities, page 77.

Reviewing Total Consumption

To review total consumption based on electricity consumption review, select **Electricity** and access your Electrical consumption dashboard.

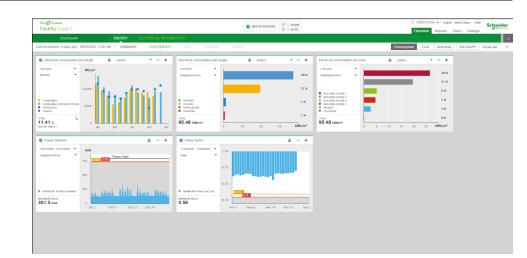


Comparing a Consumptions Period Over-years


1. Zoom in on your Electrical consumption and target by clicking +.

You can activate or deactivate a consumption parameter by clicking on the diagram legend (**Consumed/Consumed (previous year)/Produced/Target**).

2. Select the period you want to analyze.

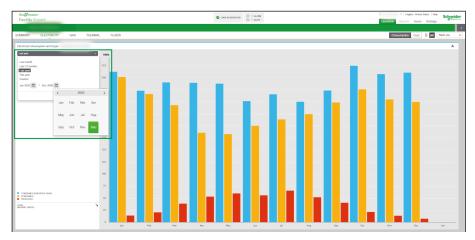

3. Select the data periodicity you need (**Monthly/Daily/Hourly/Logging interval** = 15 minutes).

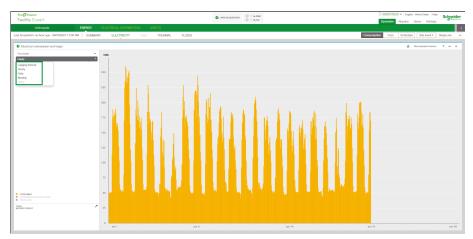


4. On the legend activate **CONSUMED** (**PREVIOUS YEAR**) to compare the previous year's consumption of the same period.



5. If you select **Monthly** consumption, you can access consumption detail of a month by clicking a bar, and then analyze even more precisely, for example, by using hourly consumption to identify electrical consumption that should not stay active at night.

Using Normalization Factors

To get even more accurate data you can modify the **Normalization Factors** selector, for example, if you want to understand the abnormal consumption of a specific day regarding season.

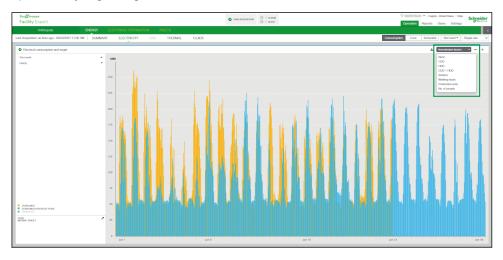

List of normalization factors by default:

- Surface area
- Heating and Cooling Degree Days
- Working hours
- Number of persons
- Number of beds
- Number of meals
- Production units

You can create custom normalization factors and custom activity sectors.

Using Cost Data

1. Select the **Cost** entry to review your energy consumption costs and benchmark utility suppliers for the cost sheet you have created.

acility Expert									0		a-unio oports User	d States Help s – Settings																					
	ENERGY																																
Acquisition: 7 minutes ago	06/23/2021 12:00 PM SUMM	ARY ELECTRICIT	Y GAS	D IERM	IAL FLUIDS			Consumptie	n Cost	Schedule	Groups	*	Single																				
e level - cost sheet		More details	Ste level - Tariff2			More details																											
v010020-01010021 ·	Total cost (C)	1,294,085.85	Lastycar		Total cost (C)	980.028.42																											
	Total Fixed Charge Cost (f)	14.30		Total Fixed Charge Cost (6)	12.54																												
	Total Demand Charge Cost (6)	2,743.30																								Total Domand Charge Cost (6)	417.76						
	Total Consumption Cost (C)	1,291,328.25			Total Consumption Cost (E)	979,596.12																											
	Consumption (KNh)	859,294.84			Consumption (dllh)	859,294.84																											
	Performance (€ / k0lih)	1.61			Performance (€ / kWh)	1.14																											
	Maximum Domand (KW)	390.22			Maximum Domand (KW)	390.22																											
	Maximum Domand Event	01(22)2020 8:50 AM			Maximum Domand Event	01/22/2020 8:50 AM																											
	Load Factor	28 %			Load Factor	28 %																											

The **Cost** dashboard displays a widget per cost sheet created.

2. To access more details and export data for further usage, click More details.



For more information, see how to create cost sheet, page 45.

1. Select the Schedule entry to analyze the energy consumption of a period

Using Schedules Data

- <complex-block>
- 2. To access more details to review whether the energy consumption is consistent with the building usage, check working/non-working hours consumption for instance, and export data, click **More details**.

For more information, see how to create calendar and schedules, page 60.


Analyzing in Detail per Usage, per Zone, or per Meter

To get more details, identify potential savings, or understand deviation, you can leverage the detailed consumption widget of your energy dashboard.


The second widget gives you an aggregated view of consumption per usage.

For a selected period, the diagram indicates the proportion of each usage compared to building total consumption on the same period.

You can display each usage amount by clicking on a bar and use **Normalization Factor** if needed.

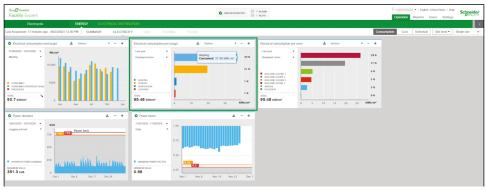

For more information, see how to configure usages, page 39.

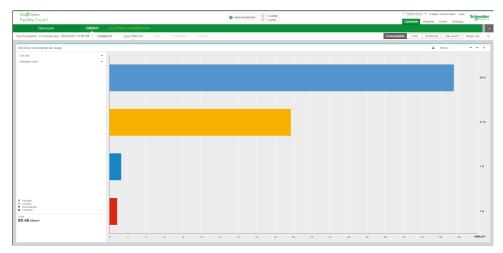

Zone Review


The third widget gives you an aggregated view on the electrical consumption per zone of your building, indicating the impact of each zone on the total consumption during the selecting period.



To track parameters that can impact energy bills you can leverage two more widgets to review your electrical consumption.

 The Power demand widget displays kVA values and subscription threshold defined in your pre-alert and alert settings. The **Power factor** widget indicates the level of reactive energy consumption of the site and threshold overrun.

NOTE: It is recommended to set up the average **Power factor** threshold above 0.8 to avoid electricity bills penalties in case of drifts.

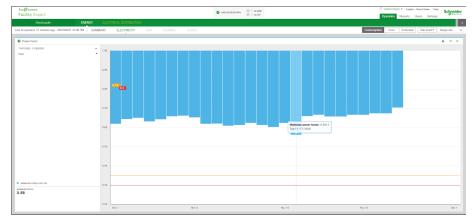


For more information, see how to establish targets, page 44 and set the alerts, page 51.

Using Meter Level

•

When selecting the **Meter level** entry on your dashboard menu, you can access data of all meters, either main or submeters, installed on the site to review **Active energy per meter** and **Maximum active energy per meter** on the selected period.

		0 ALARM	English - United States Help
	0	0 ALERT	Operation Reports Users Settings
			Consumption Cost Schedule Site level - Single site
			Site level
- 10	- +	Electrical consumption per zone 🔹 Surface	Meter level
		Last year -	Meters
	39 %		S All meters
	39%	Displayed series -	S AD 0.1
			☑ AD 0.2+1.2
	21 %		☑ AD 0.4 + 1.4
		BUILDING E/ZONE 1 BUILDING I/ZONE 2	☑ AD 1.1
	1%	BUILDING E/ZONE 5	CVC 0.1
	1.20	BUILDING I/ZONE 4	CVC 0.2+1.2
		UUTDOOR	☑ CVC 0.4 + 1.4
	1%	TOTAL	☑ CVC 1.1 ☑ LT 1
		95,48 kWh/m ²	₩ LT 3
20	kWh/m2	0 5 10 15 00	✓ Lighting Avenue 1 of 2
			S PAC 1
			I PAC 2
			PAC 5
			Park lighting
			☑ Roof top 1
			G TGBT 1
			☑ TGBT 2
			VRV 1
			VRV 2 VRV 2bis
			VRV 2DIS
			VRV 4 VRV 4bis
30	s,	0 5 10 15 20	25

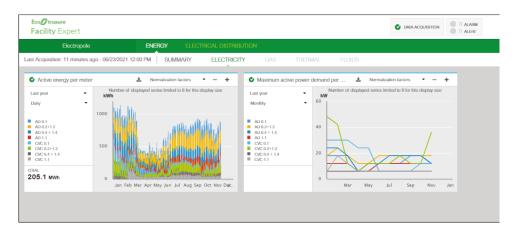

You can even access more insight by reviewing data and graphs in full-screen mode to visualize the consumption in MWh for each meter.




This functionality can help you locating an issue by identifying the associated meter.

Exporting Data for the Customer

Anytime during your review, you can export the data of your energy widgets by clicking the download symbol.

Eco g moure Facility Expert		Occupation Property Property Construct Construct
Electropole ENERGY ELECTRICAL DISTRIBL		
Last Acquisition: 11 minutes ago - 06/23/2021 12:00 PM SUMMARY ELECTRICIT	Y GAS THERMAL FLUIDS	Consumption Cost Schedule Meter level • Single site •
Abde energy or new	• Harrison and prove characteristics ■ Mandata Mandata ■ • Larget ■ Mandata ■ Mandata • Mandata ■ Mandata ■ Mandata	

- Select Export as image to share or insert an image file, for example, in your company reports or customer presentation.
- Select **Export as csv** to integrate the selected data to your own tools, for example, KPIs, reporting, or analysis.

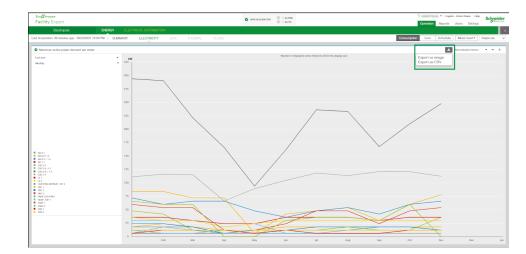

Reviewing Consumption of Other Utilities (Gas, Thermal, or Fluids)


If you are monitoring different utilities and fluids (electricity, gas, thermal, water) you can quickly find on your main dashboard a global table of all the energy consumption.


Biogram ENE	RGY ELECTRICAL DISTRI	BUTION ASSETS						
t Acquisition: 34 minutes ago - 06/23/2021 12:00 PM	SUMMARY ELECTRIC	TY GAS T	HERMAL FLUIDS	5			_	
nergy Efficiency	± - +	Performance				÷	CO ₂ Emissions	٤
riod: 06/2020 - 06/2021	Building	This month	- COMMODITY	CONSUMED	PREVIOUS	TARGET	2021 -	TOTAL MISSING TARGET
≤ 50 A 51-90 B			C ELECTRICITY	146.1 мић	0.61 %	-	March Actual : 553.1 Tons Target : - Tons	
91-150 C 151-230 231-330	•		🔮 GAS	32,320 m ³	-34 %	-		
231-330 331-450 451-590	F G		C THERMAL	16.32 мм	-58 %	-		
RRENT VALUE > 591-750 ,9889 kWhop/m²/yoar > 750	H 1999		ALIMENTATION BÂTIMENT EP	2,078 m ³	310 %	-		

Use the navigation menu to access more details on each type of energy.

Widgets and functions are mostly similar, with values adapted to the energy that is monitored.

Example: Thermal dashboard

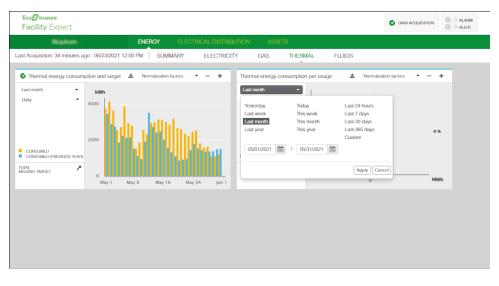

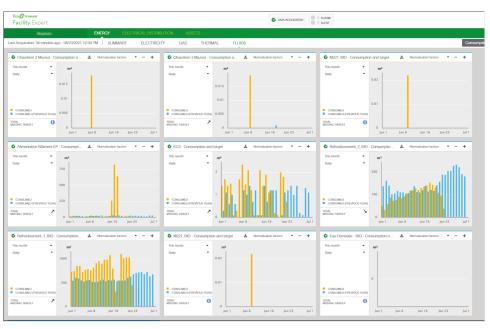

Example: Fluids dashboard displaying one widget per meter

Example: Gas dashboard consumption year to date comparison view



I HAVE A QUESTION

What's in This Part

Performance and Limitation	80
Cloud-based Software Cybersecurity Details	
Troubleshooting	
Data Output from Com'X	
Frequently Asked Questions	
Schneider Electric Contact	

Performance and Limitation

Com'X Limitation

Characteristics	Values
Maximum number of meters	64
Maximum number of variables	200
Features limitation	Monitoring only, no control if using Com'X, PrismaSeT Active or PowerTag Link C as a gateway to cloud.

EcoStruxure Facility Expert Limitation

Characteristics	Values
Maximum number of Com'X per site	5
Maximum number of main switchboards per site	5

Recommendations on Dashboard and Energy Widgets

Characteristics	Values
Active energy per meter visualization	 Widget diagram: up to 8 meters Full screen diagram: up to 20 meters Export feature is limited to visualized meters only.
Zone and usage visualization (2 separate widgets)	 Widget diagram: up to 8 zones or usages Full screen diagram: up to 20 zones or usages Export feature is limited to visualized zones or usages.
Multi-site comparison view	Schneider Electric recommends up to 50 sites per group to display the multi-site consumption data properly.

Cloud-based Software Cybersecurity Details

EcoStruxure Facility Expert is a Mobile and Web-based application. 100% of corresponding back-end services are hosted on Microsoft Azure cloud.

Secure Development Lifecycle

Schneider Electric is continuously monitoring the changing security landscape of cryptography and cybersecurity to ensure that we offer the best available protections to our customers and their sensitive data.

Our development practices follow a Secure Development Lifecycle which ensures a high level of code quality and usage of up-to-date libraries in order to ensure an optimal level of Cybersecurity.

EcoStruxure Facility Expert applications as well as all Schneider Electric cloud systems are regularly audited by an internal process which includes Penetration tests.

Certified Data Centers

Our cloud services are physically deployed across multiple Microsoft Azure data centers. Microsoft data centers are world-class facilities with more certifications than any other cloud provider.

The data centers used by EcoStruxure Facility Expert are located in multiple countries. Certifications and compliance achievements include ISO/IEC 22301, 27017, 27018, and ISO/IEC 27001 in addition to SOC 1, SOC 2, and SOC 3. To learn more about Microsoft Azure data centers, visit: https://azure.microsoft.com/en-us/support/trust-center/.

Data Security At Rest

Schneider Electric follows best practices to create a highly-secured solution and to limit the risk of data being compromised in any meaningful manner while protecting the privacy, control, and autonomy of each customer data independently from any other.

Our solution includes:

- Customer information (PIM: password, email, profile) is stored and encrypted in a corporate Identity Management System (IMS).
- System to system credentials and tokens are stored and encrypted in EcoStruxure Facility Expert databases located in the Microsoft Azure cloud.
- Customer functional data including time-series is segregated logically in the EcoStruxure Facility Expert SQL database located in Microsoft Azure cloud.
- · Customer data is encrypted at rest in EcoStruxure Facility Expert databases.

Data Security In Motion

Schneider Electric with EcoStruxure Facility Expert implement best practices as:

- All communications to and from EcoStruxure Facility Expert with internal Schneider Electric systems or external third-party systems, are encrypted using HTTPS (minimum level required is TLS 1.2).
- Certificate involved in these encrypted sessions is leveraging SHA 256 secure hash algorithm.

 This also applies to communications between our on-premises data loggers (Com'X, SE8000, Wireless Panel Server, EcoStruxure Panel Server) and Schneider Electric Cloud platform. Schneider Electric is continuously monitoring the changing security landscape of cryptography and cybersecurity to ensure that we offer the best available protections to our customers and their sensitive data.

Data Privacy

Schneider Electric focuses on securing data flows coming from connected products and solutions (whether they connect to non Schneider Electric hosts or platforms managed by Schneider Electric), and on aligning to the latest data integrity and privacy regulatory requirements such as the European General Data Protection Regulation (GDPR).

- Data policy is compliant with local regulations.
- Customer Data Use and Protection policy is to be electronically signed by the Responsible of the site (for example, Building owner, Tenant). No data will be exported without this agreement.

Data remains customer ownership.

Troubleshooting

Problem	Possible cause	Solution
The sites are not displayed on the web portal.	You did not accept the invitation to join the team.	Find the invitation email and accept the invitation.
The energy consumption of my site is not visible.	You did not validate the Data Agreement email. In that case, EcoStruxure Facility Expert does not process the energy data information.	A message indicates that the site can be operated only after the Company Data Agreement signature. Validate the Company Data Agreement email.
	You did not receive the company data agreement email from the building owner because there is a mistake in the email address you entered.	The email field of the Building owner is non editable after creating the site. Contact your Schneider Electric Customer Care Center.
	You may not have a valid EcoStruxure Facility Expert - Energy license.	A message indicates that your subscription has expired and you must renew it or assign another subscription.
		Contact your Service provider or your Schneider Electric sales representative to subscribe a new license.
There is no Total Energy Consumption value for my site.	At least one meter must be tagged as Main meter in the My Customers and Sites settings.	Check your settings and ensure that at least one meter is tagged as main.
The total energy consumption of my site is not equal to the sum of usages or zones.	If the submeters are not metering 100% of the load, the total energy consumption is lower than the sum of submeters.	Add submeters on the site.
	If there are sub-submeters in your electrical installation hierarchy, make sure you do not double count the load by assigning the same usage twice to several meters.	You should not define a usage at submeters level if you have paired sub-submeters. See Meters configuration: main meter, usages, and zone, page 39.
The Energy Efficiency widget is not displayed on my dashboard.	One year of data must be completed to display a meaningful Energy Efficiency widget or the NABERS (National Australian Built Environment Rating System) report of your site.	Check the activation date. If the system has been running data for more than a year, contact your Schneider Electric Customer Care Center.
No alerts notifications received in my mailbox.	Some Events settings may be inappropriate.	 Check through the Events entry that: The event alert is enabled. The notification check box is selected. Threshold values are properly set. The recipients are identified and selected, and their email addresses are correct. See Events and alerts settings, page 51.
No access to the site reports and no notifications received when a new report is available.	Some Reports settings may be inappropriate.	Check the monthly reports section of the My Customers and Sites entry to ensure that user access and notifications are properly defined. See Monthly reports and KPIs, page 48.

Data Output from Com'X

Setting Up and Configuring the Com'X for EcoStruxure Facility Expert

lf	Then
The Com'X cannot connect to the EcoStruxure Facility Expert server.	If connected on the Ethernet port, check that there is no proxy present to set. If it is the case, contact your network administrator.
	If connected on the Ethernet port, it is possible that your DNS server is not compatible with Schneider Electric server. Temporarily try the Google DNS address 8.8.8 and then contact Schneider Electric technical support.
	Proceed to a Com'X restart.
	Save your configuration if needed and proceed to a factory reset. Load the configuration file again and try reconnecting to the remote platform.
The Com'X is not connected to the EcoStruxure Facility Expert server.	Check that the Com'X has been properly registered in EcoStruxure Facility Expert.

Testing Publication / Data Import in EcoStruxure Facility Expert

If	Then		
Following a successful publication, the Com'X	Refresh the page (Ctrl+F5).		
name has not been upgraded and the devices do not appear in EcoStruxure Facility Expert tree view.	Sign out and sign back in your Facility Insights account.		
	Launch again a publication test.		
	Wait 15 minutes and refresh the page.		
	Contact Schneider Electric technical support.		
No usage is displayed in the widget Consumption per usage or no zone is displayed in the widget Consumption per zone .	Check that the fields Usage , Building , Floor , and Zone have been properly filled in the Facility Insights settings tab. The meter Main Meter is not displayed in those widgets.		
	Eight usages and eight zones can be displayed in default widget size and up to 20 usages and 20 zones in larger widget size.		
There is no value in the electrical distribution widget.	Check that the Switchboard Incomer check box has been selected for one of the devices in the Facility Insights settings tab.		
Some widgets are missing values.	Check the time range displayed.		
There is no value in the Baseload widget.	This widget displays values from the day before.		
The circuit breaker dashboard is incomplete.	Check that the circuit breaker has been properly instrumented with the complementary module (BSCM for Compact NSX and PowerPact circuit breakers).		
There is no circuit breaker in the list of Assets.	Check that the is active check box has been selected for the relevant circuit breakers in the Facility Insights Settings tab.		
A wrong device has been configured in the Com'X.	Use the function Replace the device in the Com'X, publish data. Data history is kept.		

Frequently Asked Questions

Digital Architecture

	Answer
Is it possible to commission several Com'X gateways for a single architecture?	Yes, all the gateways implemented can use the same network to send distinct data to the cloud, up to a limit of 5 Com'X gateways per site.
Is it possible to mix digital gateways on a same site?	Yes. As an example, you can receive data from Com'X and PowerTag Link C for the same site.
I already have Facility Expert Small Business (FESB) installed on a site, how can I export the energy consumption data to EcoStruxure Facility Expert too?	A business code associated with an account in EcoStruxure Facility Expert can be entered in eSetup commissioning app. Contact your Schneider Electric representative to get the business code.
Can I use any PowerTag Link with EcoStruxure Facility Expert and FESB?	Yes, but PowerTag Link C devices must be connected/paired to a Com'X gateway, and then the Com'X connects to EcoStruxure Facility Expert.
Panelboard incomer and some feeders have a rating higher than 63 amps. How can I monitor them?	You should use iEM3000 energy meters, connected to a Com'X gateway to export energy data to EcoStruxure Facility Expert.
	Note that data will not be displayed in FESB app.
Can I have several PowerTag Link concentrators on the same site?	Yes, several PowerTag Link concentrators can be connected on the same site.
	Be sure to enter the same site name in the Multi-site section in eSetup, otherwise the PowerTag Link concentrators will not be associated to the same site in EcoStruxure Facility Expert.
How to install PowerTag Ambient?	Consider the following two rules:
	Distance:
	 < 5 meters: direct connection between PowerTag Ambient and PowerTag Link C.
	 5 to 15 meters: additional repeater may be required.
	 > 15 meters: add another gateway closer to the PowerTag Ambient.
	Environment:
	Do not use PowerTag Ambient with PowerTag Link C installed in a metallic enclosure. If this is the case, use Kaedra plastic box or equivalent.
Is it possible to remotely control consumption when using PowerTag	No, PowerTag Link C will only send the data to the cloud.
Link C as a gateway?	EcoStruxure Facility Expert enables only monitoring, not control in that configuration.
	Only SE8000 room controllers connected to EcoStruxure Facility Expert can enable HVAC equipment remote control.
How many energy meters are included in the EcoStruxure Facility Expert - Enterprise subscription?	You can add as many energy meters as you need.
Is it possible to use EcoStruxure Facility Expert APIs to connect to customer server?	There are no standard EcoStruxure Facility Expert APIs that can be used, but custom requests can be addressed to your local Schneider Electric representative.
Is it possible to create a virtual meter?	Yes, it can be done by your local Schneider Electric representative.

Normalization Factor

Question	Answer
How is degree day (DD) normalization factor calculated?	EcoStruxure Facility Expert algorithm considers local weather data base to calculate DD, Heating DD and Cooling DD variables.
How is surface normalization factor calculated?	The ratio used is based on the consumption per surface unit that has been selected in the Normalization factors parameters.
Is it possible to create a custom normalization factor?	Yes. You can normalize consumption per production units or average number of customers, for instance. To do so, you should define monthly value manually in Advanced Settings .

Reports


Question	Answer
How many times a month and when is a report available?	Reports are automatically generated and available on EcoStruxure Facility Expert Web platform on the 5 th of each month.
	The report generator is for country support people only.
Is it possible to customize reports?	Partially.
	Partner logo can be implemented in the report template. It is possible to select which KPIs and tariffs options should be displayed in the monthly report.
Can I create my own reports?	Yes, by exporting raw data (.csv) from the platform for further analyses or by exporting directly the widget images (.jpeg) to build your company report.

Energy Dashboard and Widgets

Question	Answer
Is it possible to customize the Energy dashboard?	No, Energy dashboard is standard, but you can change the period and select the usage and zone you want to display.
Is it possible to select or customize the widgets to be displayed on the Energy dashboard?	No, widgets are standard in EcoStruxure Facility Expert.
Is it possible to compare usages of several sites?	Yes, if usages are named the same way for every site.

Schneider Electric Contact

For questions, comments or to stop receiving EcoStruxure Facility Expert news, contact your Schneider Electric representative or your local Customer Care Center.

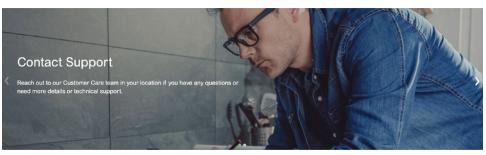

Schneider Electric 35 rue Joseph Monier 92500 Rueil Malmaison France

+ 33 (0) 1 41 29 70 00

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2022 Schneider Electric. All rights reserved.

ESXFEUG003EN-01