

Servicing level

	1	2	3	4	5
Operation	Installation		Failure diagnosis	Servicing of subassembly	Repair in production plant
	Parameter setting, Status, adjustments		Addition of MES module...		
	Replacement of complete device		Replacement of interface module		
	Setting up of spare configuration				
Tools required	SFT2841		SFT2841	According to type of servicing	
	SFT2826		SFT2826		
	Injection box		Injection box		
	Electrician's tools		Electrician's tools		
	Documentation :		Documentation :		
	Sepam series 20 installation and user's manual : 08552		Sepam series 20 installation and user's manual : 08552		
	Sepam series 40 installation and user's manual : 08556		Sepam series 40 installation and user's manual : 08556		
	Sepam series 80 metering, protection and control functions : 052383		Sepam series 80 metering, protection and control functions : 052383		
Sepam série 80 installation, use and commissioning : 052388		Sepam série 80 installation, use and commissioning : 052388			
Modbus communication : 052386		Modbus communication : 052386			
Training required	Sepam series 20 and series 40 bringing into operation (C3213 MDE)		After sales Sepam (C4231 MDE)	Selon instruction	
	Sepam série 40 logical equation editor (e-learning MDE)				
	Sepam series 80 bringing into operation (Psep80 MDE)				
	Sepam testing protection functions (C3217 MDE)				
	Sepam series 20 and series 40 operating (S4MG ISF)				