



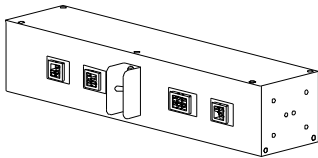
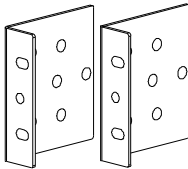

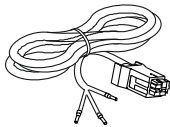


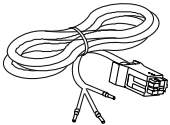
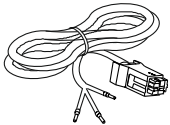
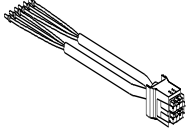
 

 
by Schneider Electric

# SecureUPS™ SBP XS30ALLXR2G Quick Installation Guide

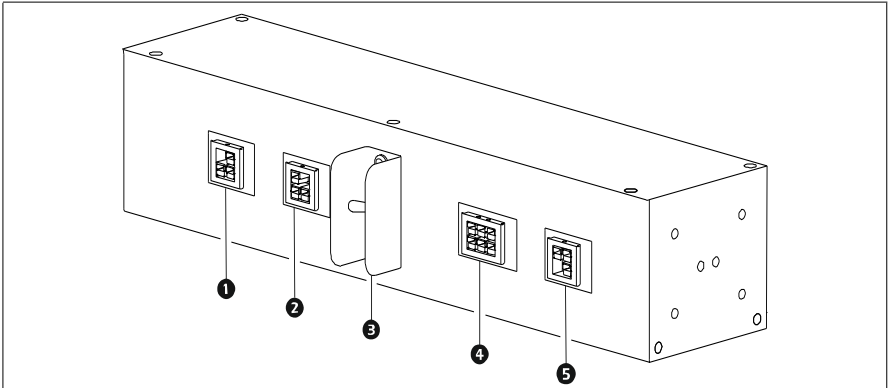
## Package Contents

Inspect the Service Bypass Panel (SBP) upon receipt. Notify the carrier and dealer if there is damage.

The package is recyclable; save it for reuse or dispose of it properly.

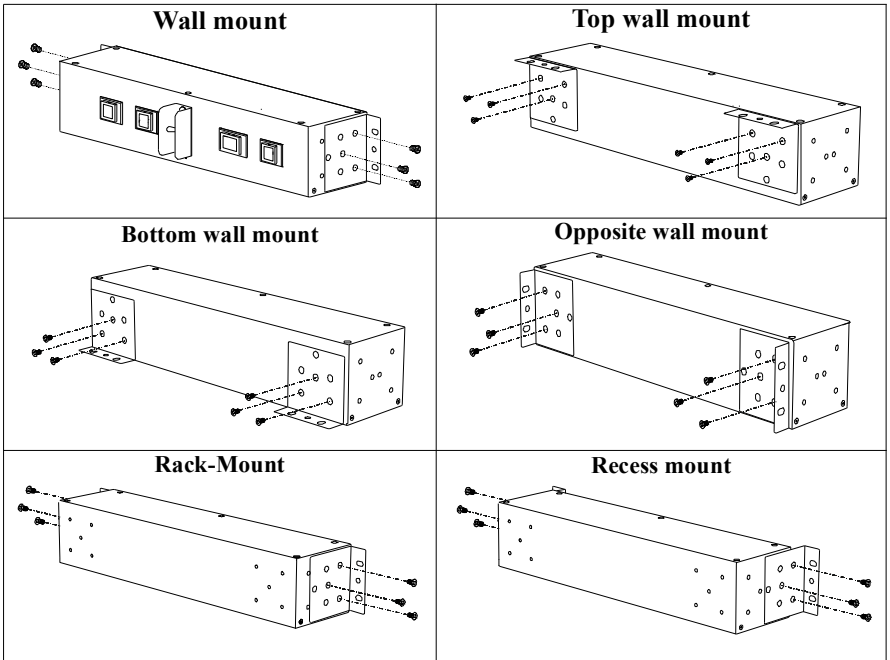
<p><b>SBP unit</b></p> 	<p><b>Rack-Mount bracket</b></p> 	<p><b>Ornamental screw x4</b></p> 
<p><b>Generator cable</b></p> 	<p><b>Flat head screw x6</b></p> 	<p><b>Cage nut x4</b></p> 
<p><b>Utility input cable</b></p> 	<p><b>Output cable</b></p> 	<p><b>UPS input and output two feet cable</b></p> 
<p><b>UPS input and output seven feet cable</b></p> 	<p><b>Cable tie x10</b></p> 	<p><b>Cable tie mount x10</b></p> 

# Front Panel Features

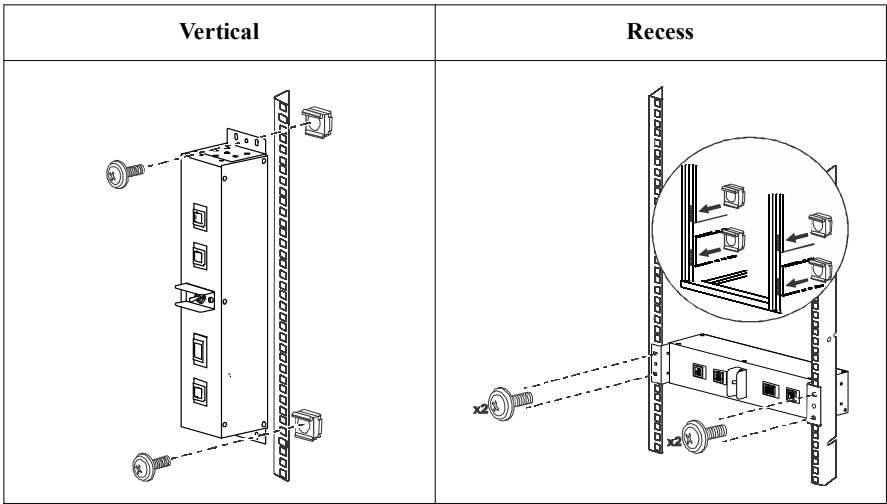


<b>1</b>	Utility input connector
<b>2</b>	Generator input connector
<b>3</b>	BYPASS/UPS switch
<b>4</b>	UPS input and output power connector
<b>5</b>	Output connector

# Mounting Options



# Rack-Mount Installation

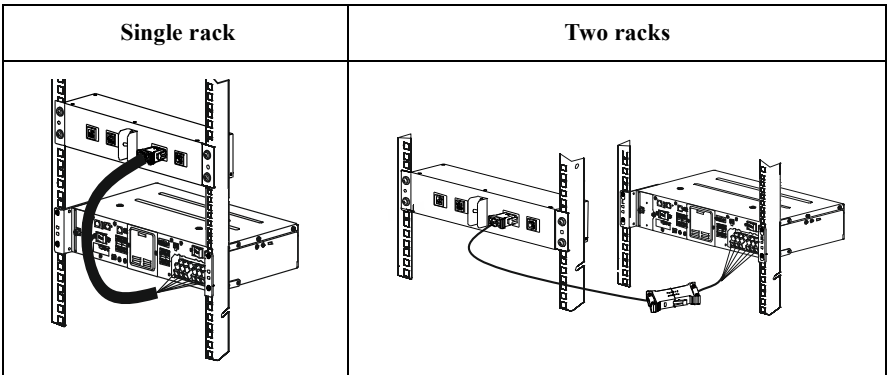


# UPS Input and Output Cable Connection

## SecureUPS and SBP mounting

Use UPS input and output two feet cable to connect the SBP with SecureUPS.

Connect the two feet cable with the seven feet cable, if extension is required. Use this to connect the SBP with the SecureUPS.



1. Keep the toggle switch in the **bypass** mode.
2. Connect one end of the utility input cable to utility and other end to SBP.
3. Connect one end of the output cable to load and other end to SBP.

4. Connect the UPS input and output two feet cable to SecureUPS. Ensure that line, neutral and ground cables of the input and output terminals are connected.
5. Connect the UPS input and output two feet cable to the SBP (if required use UPS input and output seven feet cable for extension).

## APC™ by Schneider Electric Worldwide Customer Support

Customer support for this or any other APC by Schneider Electric product is available at no charge in any of the following ways:

- Visit the APC by Schneider Electric Web site to access documents in the APC by Schneider Electric Knowledge Base and to submit customer support requests.
  - **www.apc.com** (Corporate Headquarters) Connect to localized APC by Schneider Electric Web site for specific countries, each of which provides customer support information.
  - **www.apc.com/support/**
  - Global support searching APC by Schneider Electric Knowledge Base and using e-support.
- Contact the APC by Schneider Electric Customer Support Center by telephone or e-mail.
  - Local, country specific centers: go to **www.apc.com/support/contact** for contact information.
  - For information on how to obtain local customer support, contact the APC by Schneider Electric representative or other distributor from whom you purchased your APC by Schneider Electric product.

## User Documentation Link

Refer the link to access the user documentation:

**<http://d.go2se.com/secbpu30a>**

