




SHO100/ SHO100-T

0FL-4201-001


Out door humidity (temperature) sensor
 Transmitter relativ fuktighet utomhus (med temperaturgivare)
 Außen-(Temperatur)-Feuchtemessumformer
 Sonde (de température) et hygrométrie extérieur
 Transmisor de humedad (y temperatura) externa
 Trasmettitori di umidità (e temperatura) per esterno

Instruction
 Montageanvisning
 Bedienungsanleitung
 Instructions d'installation
 Instrucciones de empleo
 Istruzioni per installazioni


1.

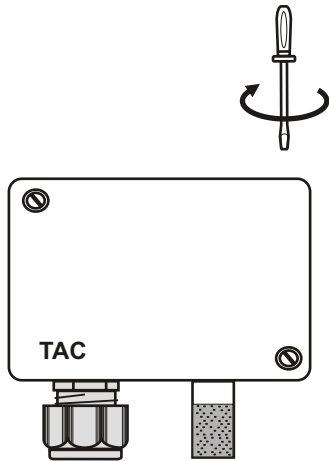

2.

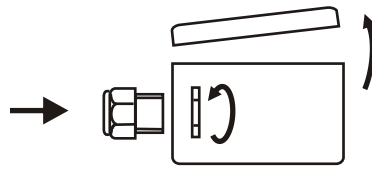


3.

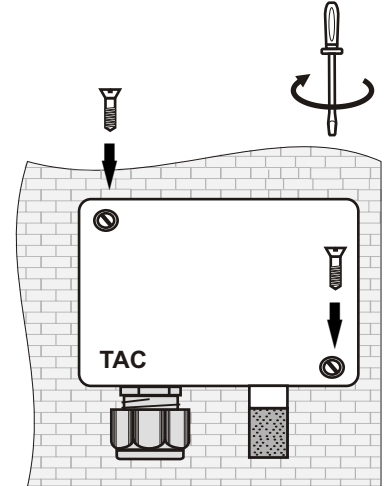


4.


4...20mA / 0...10V 0...100%r.H.

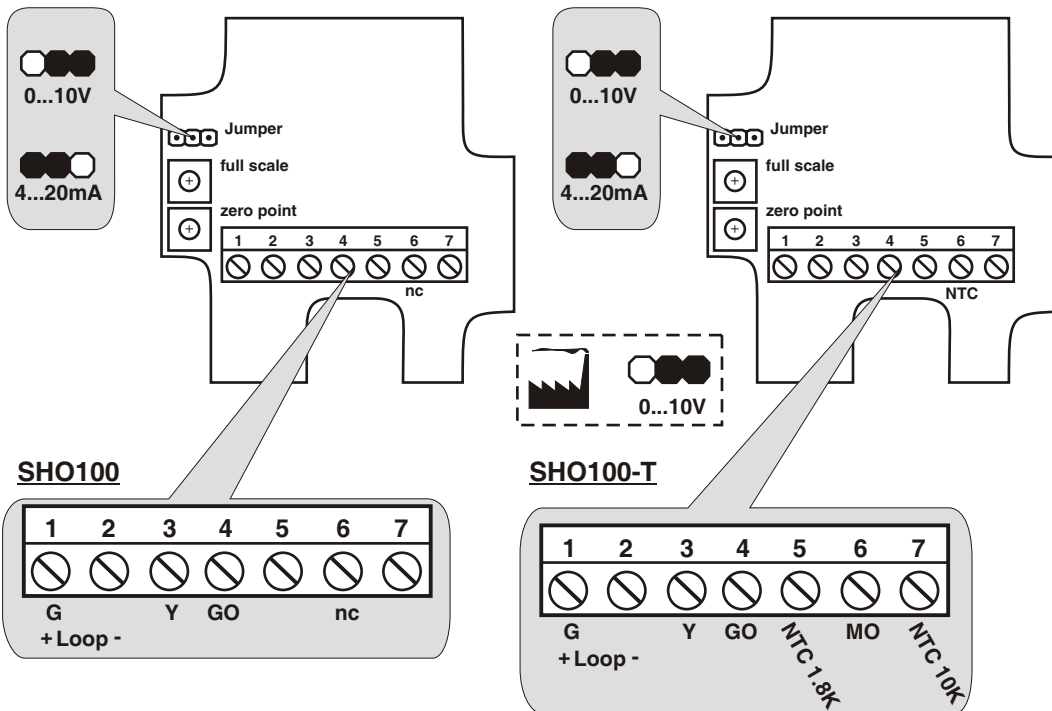

Signal 4...20mA

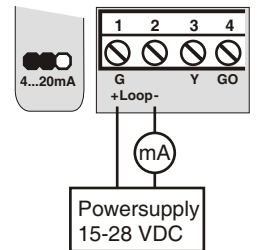

Signal 0...10V

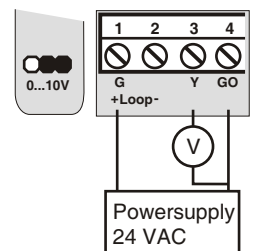

UG=15...36 VDC / 24 VAC ± 10%