




SLR300/ SLR310

Room light transmitter
Belysnings transmitter för rum
Raumhelligkeitsfühler
Sonde de lumière (ambiance)
Sensor de claridad interna
Sensore ambiente di luminosità

0FL-4184-000

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

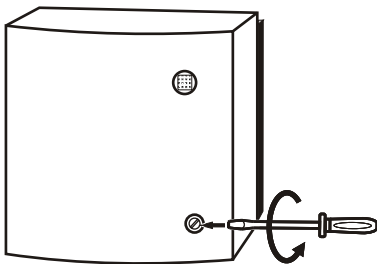


2.




3.

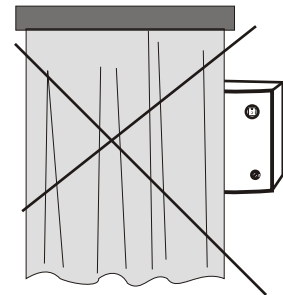

4.

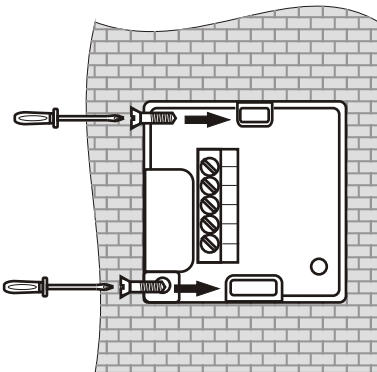


5.

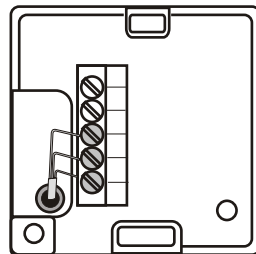


6.

4...20mA SLR 300

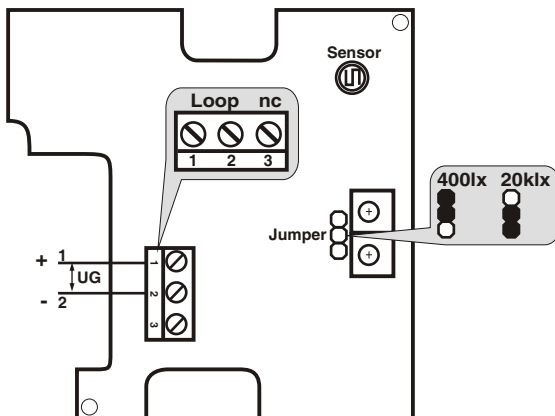

UG=15...36 VDC

0...10V SLR 310

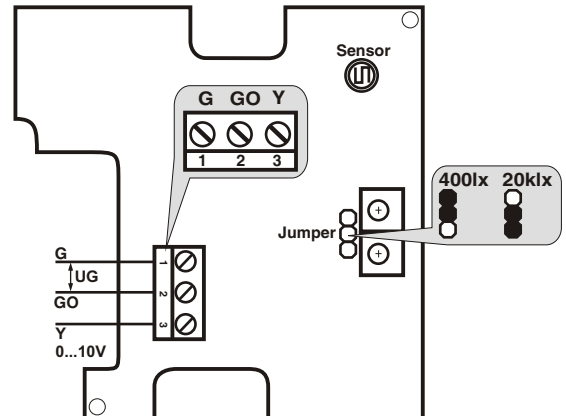

UG=15...36 VDC / 24 VAC