




STO100/ STO200 STO500

Outdoor temperature transmitter
Utomhus temperaturtransmitter
Außentemperaturmeßumformer
Convertisseur de sonde de température extérieur
Transmisor de la temperatura externa
Trasformatore sensore esterno


0FL-4395-001

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

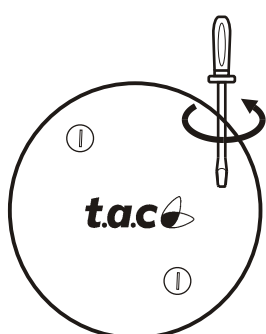


2.

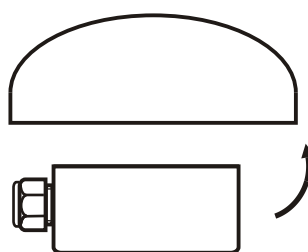

3.

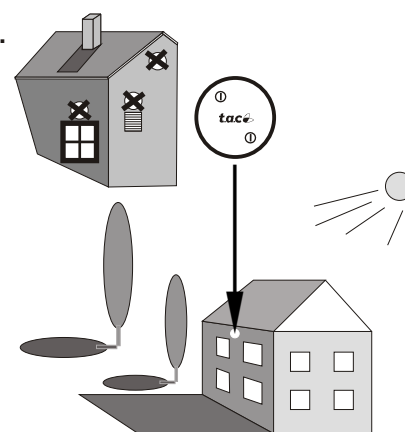

4.

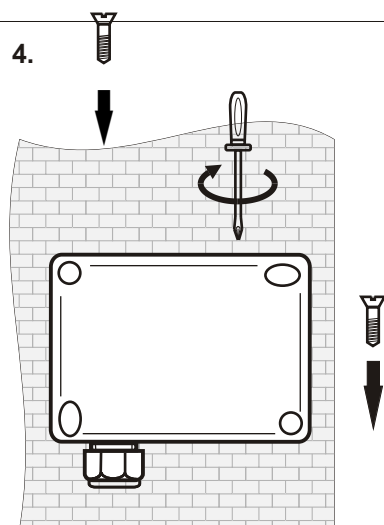

5.

