




STP100/ STP200

0FL-4193-001


Immersion pipe temperature sensor
Dykrörs temperaturgivare
Einschraubtemperatursensor
Sonde de plonge
Sensor de temperatura entornillado
Sensore temperatura testa DIN

Instruction
Montageanvisning
Bedienungsanleitung
Instructions d'installation
Instrucciones de empleo
Istruzioni per installazioni


1.

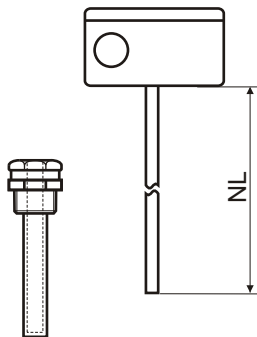


2.

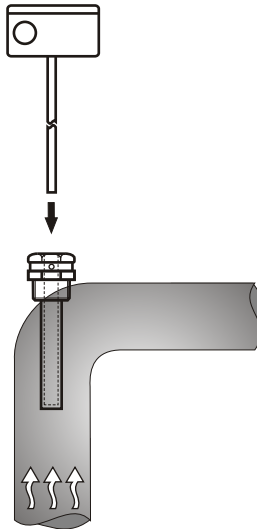


3.

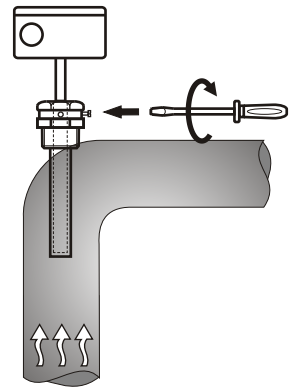

4.

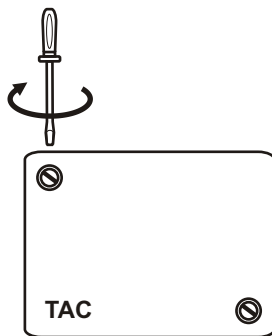

5.

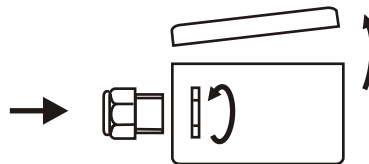

6.

