

D

C

B

A

SINGLE PHASE WIRING FOR **ASCO**® 7000 SERIES AUTOMATIC DELAYED TRANSITION TRANSFER SWITCHES TYPE H7ADTS RATED 600, 800, 1000 & 1200 AMPERES

FEATURES, SETTINGS, OPERATION, ACCESSORIES & NOTES

THE FOLLOWING FEATURES AND RELATED SETTINGS ARE PART OF THE GROUP 5 CONTROL PANEL'S USER CONFIGURABLE PARAMETERS. FOR DETAILED INFORMATION REGARDING THE CONFIGURATION OF THESE PARAMETERS AND OTHER FEATURES OF THE GROUP 5 CONTROL PANEL, REFER TO THE GROUP 5 CONTROL PANEL FOR **ASCO**® 7000 SERIES AUTOMATIC TRANSFER SWITCHES USER'S GUIDE (PART NO. 381333-126) PROVIDED WITH EVERY 7000 SERIES AUTOMATIC TRANSFER SWITCH.

THE NOMINAL OPERATING VOLTAGE & FREQUENCY IS PRE-PROGRAMMED AT THE FACTORY BASED ON THE NAMEPLATE DATA PRINTED ON THE TRANSFER SWITCH & CONTROL PANEL NAMEPLATES.

VOLTAGE & FREQUENCY SENSING

THE FOLLOWING SETTINGS ARE EXPRESSED AS A PERCENTAGE OF THE CONTROL PANEL'S NOMINAL VOLTAGE SETTING UNLESS STATED OTHERWISE. ALL SETTINGS ARE ADJUSTABLE IN INCREMENTS OF 1%.

PARAMETER	RANGE OF SETTINGS	DEFAULT SETTING
NORMAL VOLTAGE DROPOUT	70-98%	85%
NORMAL VOLTAGE PICKUP	85-100%	90%
NORMAL OVER VOLTAGE TRIP	102-115%	OFF
NORMAL VOLTAGE UNBALANCE	YES/NO	NO
NORMAL VOLTAGE UNBALANCE DROPOUT	5-20% OF AVG. NORMAL VOLTAGE	20% (if ON)
NORMAL VOLTAGE UNBALANCE PICKUP	3-18% OF AVG. NORMAL VOLTAGE	10% (if ON)
EMERGENCY VOLTAGE DROPOUT	70-98%	75%
EMERGENCY VOLTAGE PICKUP	85-100%	90%
EMERGENCY OVER VOLTAGE TRIP	102-115%	OFF
EMERGENCY VOLTAGE UNBALANCE	YES/NO	NO
EMERGENCY VOLTAGE UNBALANCE DROPOUT	5-20% OF AVG. EMERGENCY VOLTAGE	20% (if ON)
EMERGENCY VOLTAGE UNBALANCE PICKUP	3-18% OF AVG. EMERGENCY VOLTAGE	10% (if ON)

PARAMETER	RANGE OF SETTINGS	DEFAULT SETTING
NORMAL FREQUENCY DROPOUT	85-98%	90%
NORMAL FREQUENCY PICKUP	90-100%	95%
NORMAL OVER FREQUENCY TRIP	102-110%	OFF
EMERGENCY FREQUENCY DROPOUT	85-98%	90%
EMERGENCY FREQUENCY PICKUP	90-100%	95%
EMERGENCY OVER FREQUENCY TRIP	102-110%	OFF

TIME DELAYS

THE FOLLOWING TIME DELAY SETTINGS ALL HAVE AN ADJUSTABLE RANGE OF 0-60 min 59 sec UNLESS STATED OTHERWISE. ADJUSTABLE IN INCREMENTS OF 1 sec.

NOTE: SOME TIME DELAYS MAY BE EFFECTED BY CUSTOMER REQUESTED ACCESSORIES PROVIDED WITH THE UNIT. REFER TO THE DESCRIPTIONS PROVIDED UNDER THE "ACCESSORIES" NOTES ON THIS PAGE.

FEATURE	NAME	DEFAULT SETTING
1C	NORMAL SOURCE FAILURE TO ENGINE START	1 sec
2B	TRANSFER TO EMERGENCY ON AVAILABILITY OF EMERGENCY SOURCE	0 sec
1F	EMERGENCY SOURCE FAILURE RETRANSFER (NORMAL SOURCE AVAILABLE)	0 sec
2E	ENGINE COOLDOWN FOLLOWING RETRANSFER TO NORMAL	5 min
3A	RETRANSFER TO NORMAL (NORMAL FAILURE MODE)	30 min
3A	RETRANSFER TO NORMAL (TEST MODE)	30 sec
-	DELAYED TRANSFER (LOAD "OFF" TIME), [0-5 min 59 sec]	3 sec

- DESCRIPTIONS OF TIME DELAYS:
- FEAT. 1C - DELAY ON NORMAL SOURCE OUTAGE. STARTS ON FAILURE OF NORMAL SOURCE. RESETS IF NORMAL SOURCE IS ACCEPTED BEFORE EXPIRATION. INHIBITS ENGINE STARTING AND AUTOMATIC TRANSFER UNTIL EXPIRATION.
- FEAT. 2B - DELAY PRIOR TO TRANSFER TO THE EMERGENCY SOURCE. DELAY STARTS ON EXPIRATION OF FEAT. 1C AND WHEN THE EMERGENCY SOURCE HAS BEEN ACCEPTED. DELAY RESETS IF THE EMERGENCY SOURCE FAILS PRIOR TO EXPIRATION. ON EXPIRATION, TRANSFER TO EMERGENCY IS INITIATED UNLESS THE NORMAL SOURCE HAS RECOVERED AND THE "COMMIT TO TRANSFER" FEATURE IS SET TO "NO" COMMIT. PROVIDES A PERIOD FOR EMERGENCY SOURCE STABILIZATION OR STAGING OF MULTIPLE TRANSFER SWITCH CONTROLLED LOADS TO THE EMERGENCY SOURCE.
- FEAT. 1F - DELAY ON RETRANSFER TO NORMAL IN THE EVENT OF EMERGENCY SOURCE FAILURE. DELAY BEGINS ON FAILURE OF THE EMERGENCY SOURCE IF THE NORMAL SOURCE IS ACCEPTABLE. ON EXPIRATION, RETRANSFER TO NORMAL WILL BE INITIATED.
- FEAT. 2E - DELAY ON ENGINE SHUTDOWN (ENGINE COOL DOWN PERIOD). DELAY STARTS FOLLOWING RETRANSFER TO THE NORMAL SOURCE. PROVIDES A PERIOD FOR THE ENGINE-GENERATOR SET TO RUN UNLOADED PRIOR TO SHUTDOWN.
- FEAT. 3A - RETRANSFER TO NORMAL DELAY (NORMAL FAILURE MODE)
DELAY STARTS WHEN NORMAL SOURCE IS ACCEPTED (FOLLOWING IT'S FAILURE) AND WHILE THE LOAD IS CONNECTED TO EMERGENCY. RESETS IF NORMAL FAILS PRIOR TO EXPIRATION OR IF THE EMERGENCY SOURCE FAILS BEFORE EXPIRATION AND FEAT. 1F EXPIRES (AUTOMATIC BYPASS ON EMERGENCY SOURCE FAILURE). PROVIDES A PERIOD FOR THE NORMAL SOURCE TO STABILIZE PRIOR TO RETRANSFER.
- FEAT. 3A - RETRANSFER TO NORMAL DELAY (TEST MODE)
DELAY STARTS WHEN THE "TRANSFER TEST" SWITCH IS RESET TO "AUTO" (FOLLOWING A USER INITIATED TRANSFER TEST) AND WHILE THE LOAD IS CONNECTED TO EMERGENCY. RESETS IF NORMAL FAILS PRIOR TO EXPIRATION OR IF THE EMERGENCY SOURCE FAILS BEFORE EXPIRATION AND FEAT. 1F EXPIRES (AUTOMATIC BYPASS ON EMERGENCY SOURCE FAILURE).

DELAYED TRANSFER (LOAD "OFF" TIME) - PROVIDES A USER DEFINABLE PERIOD DURING WHICH THE LOAD IS DISCONNECTED FROM BOTH THE NORMAL AND EMERGENCY SOURCES DURING TRANSFER IN EITHER DIRECTION. THE DELAY ("OFF" PERIOD) BEGINS FOLLOWING THE OPENING OF THE SOURCE CONTACTOR, CN OR CE, CONNECTED TO THE SOURCE FROM WHICH TRANSFER IS BEING MADE. UPON EXPIRATION, CLOSURE OF THE OPPOSITE SOURCE CONTACTOR IS INITIATED.

- ENGINE EXERCISER
- THE ENGINE EXERCISER FEATURE PROVIDES A MEANS TO PERFORM AUTOMATIC EXERCISING OF THE ENGINE-GENERATOR SET EITHER WITH OR WITHOUT LOAD TRANSFER. THE USER CAN PROGRAM UP TO SEVEN DIFFERENT EXERCISE ROUTINES. EACH ROUTINE INCLUDES:
1. ENABLE OR DISABLE THE ROUTINE
 2. ENABLE OR DISABLE TRANSFER OF THE LOAD DURING THE ROUTINE
 3. SET START TIME OF ROUTINE -
 - TIME OF DAY
 - DAY OF WEEK
 - WEEK OF MONTH (1st, 2nd, 3rd, 4th, ALTERNATE OR ALL)
 4. SET THE DURATION OF THE ROUTINE

PARAMETER	RANGE OF SETTING	DEFAULT SETTING
MONTH (CLOCK SET)	JAN FEB MAR APR MAY JUN JUL AUG SEP OCT NOV DEC	CURRENT DATE
DAY	1-31	↓
YEAR	00-99	Eastern Standard Time
HOURL	0-23	
MINUTE	0-59	
ENABLE ROUTINE (ROUTINE 1-7)	YES/NO	NO
TRANSFER LOAD	YES/NO	NO
START HOUR	0-23	0
START MINUTE	0-59	0
RUN WEEK	ALL, ALTERNATE, 1st, 2nd, 3rd, 4th, 5th	ALL
RUN DAY	SUN MON TUE WED THU FRI SAT	SUN
DURATION HOURS	0-23	0
DURATION MINUTES	0-59	0

- SIGNALS & AUXILIARIES
- A. FEATURES 7 & 8- ENGINE START SIGNAL
SIGNAL INITIATED BY DROPOUT OF CONTROL PANEL RELAY (NR) FOLLOWING EXPIRATION OF THE FEATURE 1C TIME DELAY (DELAY TO OVERRIDE MOMENTARY NORMAL SOURCE OUTAGES). FEATURE 7 CLOSES TO SIGNAL ENGINE START. FEATURE 8 OPENS TO SIGNAL ENGINE START. ENGINE STARTING SIGNAL RESETS FOLLOWING RETRANSFER TO THE NORMAL SOURCE AND EXPIRATION OF THE FEATURE 2E (ENGINE COOL DOWN) TIME DELAY. FEATURES 7 & 8 ARE PROVIDED AS A SINGLE FORM C CONTACT CONNECTED TO THE FIELD CONNECTIONS TERMINAL BLOCK (TB). CONTACT RATED 10 AMPS AT 32 VDC/120 VAC RESISTIVE.
- B. FEATURES 14AG & 14BG - TRANSFER SWITCH AUXILIARY POSITION INDICATING CONTACTS. EIGHT (8) FORM A CONTACTS EACH TO INDICATE CONNECTION OF THE TRANSFER SWITCH TO NORMAL (14A) OR EMERGENCY (14B). CONTACTS CONNECTED TO THE FIELD CONNECTIONS TERMINAL BLOCK (TB). CONTACTS RATED 10 AMPS, 32 VDC, 250 VAC.
- C. FEATURE 17 - REMOTE TRANSFER TO EMERGENCY.
REQUIRES A CUSTOMER SUPPLIED NORMALLY OPEN CONTACT. CLOSING OF THE CONTACT CAUSES ENGINE START AND TRANSFER TO THE EMERGENCY SOURCE. OPENING OF THE CONTACT ACTIVATES THE FEATURE 3A (RETRANSFER TO NORMAL) DELAY PRIOR TO RETRANSFER. IN THE EVENT THE EMERGENCY SOURCE FAILS WHILE THE TRANSFER SWITCH IS CONNECTED TO EMERGENCY AND THE REMOTE CONTACT IS CLOSED, THE TRANSFER SWITCH WILL RETRANSFER TO THE NORMAL SOURCE. CONNECTED TO THE FIELD CONNECTIONS TERMINAL BLOCK (TB).


- OPERATION
- IF THE NORMAL SOURCE FAILS, THE TRANSFER SWITCH INITIATES STARTING OF THE ENGINE-GENERATOR SET. WHEN PROPER VOLTAGE AND FREQUENCY HAVE BEEN ATTAINED, THE LOAD WILL BE TRANSFERRED TO THE EMERGENCY SOURCE BY MEANS OF A DELAYED TRANSITION, (PROGRAMMED LOAD DISCONNECT PERIOD).
- DELAYED TRANSITION TRANSFER TO EMERGENCY WILL CAUSE THE NORMAL SOURCE CONTACTOR (CN) TO OPEN. AFTER THE LOAD DISCONNECT DELAY, AS SET VIA THE USER INTERFACE OF THE GROUP 5 CONTROL PANEL, THE EMERGENCY SOURCE CONTACTOR (CE) WILL CLOSE. DURING THE PERIOD THAT BOTH CONTACTORS ARE OPEN AND THE TIME DELAY IS ACTIVE, A "LOAD DISCONNECT ACTIVE" LED WILL BE LIT (AMBER LED).
- WHEN THE NORMAL SOURCE IS RESTORED FOR THE DURATION OF THE FEATURE 3A, RETRANSFER TO NORMAL TIME DELAY SETTING, THE LOAD WILL BE RETRANSFERRED TO THE NORMAL SOURCE IN A DELAYED TRANSITION MANNER.
- DELAYED TRANSITION RETRANSFER TO NORMAL WILL CAUSE THE EMERGENCY SOURCE CONTACTOR (CE) TO OPEN. AFTER THE LOAD DISCONNECT TIME DELAY EXPIRES, THE NORMAL SOURCE CONTACTOR (CN) WILL CLOSE.
- THE ENGINE WILL CONTINUE TO RUN FOR THE ENGINE COOL DOWN PERIOD, FEATURE 2E.
- DELAYED TRANSITION TRANSFER WILL ALSO OCCUR DURING TRANSFER TO EMERGENCY BY OPERATING THE TEST SWITCH. RETRANSFER TO NORMAL WILL OCCUR AS PREVIOUSLY DESCRIBED.

BASE CATALOG NUMBER					CATALOG NUMBER SUFFIXES			EXPLANATION OF CATALOG NUMBER CODES									
TS	CATALOG	NEUTRAL	PHASE	AMPS	VOLT	CONTROLLER	OPTIONAL	ENCLOSURE	NEUTRAL TYPE		VOLTAGE CODES		ENCLOSURE CODES				
FRAME	TYPE	TYPE	POLES		CODE		ACCESSORY	CODE			1 PHASE (2 OR 3 WIRE) 50 OR 60 HZ	NOMINAL VOLTAGE	CODE	TYPE	DESCRIPTION		
H	7ADTS	A	2	600 800 1000 1200	C D E F H J K L M N P Q R	5	X	C E F G H J K L M N P Q	BLANK A B	NONE SOLID SWITCHING	C D E F H J K L M N P Q R	208 220 230 240 380 400 415 440 460 480 550 575 600	C E F H J K L M N P Q	1 2 3R 4 4X 7 12	OPEN TYPE (NO ENCLOSURE) GENERAL PURPOSE, INDOOR INDOOR, WATER & DUST RESISTANT OUTDOOR, RAINPROOF, SLEET & ICE RESISTANT INDOOR/OUTDOOR, WATERTIGHT & DUST TIGHT TYPE 4 PLUS CORROSION RESISTANCE (STAINLESS STEEL) TYPE 4 PLUS CORROSION RESISTANCE (FIBERGLASS) EXPLOSION PROOF INDOOR, INDUSTRIAL ENVIRONMENTS, OIL TIGHT & DUST TIGHT		
															(SECURE ENCLOSURES) OUTDOOR, RAINPROOF, SLEET & ICE RESISTANT INDOOR/OUTDOOR, WATERTIGHT & DUSTTIGHT TYPE 4 PLUS CORROSION RESISTANCE (STAINLESS STEEL) INDOOR, INDUSTRIAL ENVIRONMENTS, OILTIGHT & DUSTTIGHT		




- USER CONTROLS AND INDICATIONS
- A. FEATURES 5 & 6B - TRANSFER TEST/RETRANSFER TIME DELAY BYPASS CONTROLS.
- TRANSFER TEST:
OPERATION CAUSES A NORMAL SOURCE FAILURE SEQUENCE. ACTIVATE AND HOLD FOR AT LEAST 15 SECONDS TO ALLOW TIME FOR THE ENGINE-GENERATOR TO START.
- RETRANSFER TIME DELAY BYPASS:
OPERATION WILL BYPASS THE FEATURE 3A (RETRANSFER TO NORMAL DELAY).
- B. FEATURES 9A & 9B - TRANSFER SWITCH POSITION INDICATORS.
FEATURE 9A: TRANSFER SWITCH CLOSED ON NORMAL (GREEN LED)
FEATURE 9B: TRANSFER SWITCH CLOSED ON EMERGENCY (RED LED)
- C. FEATURES 9C & 9D - SOURCE ACCEPTANCE INDICATORS.
FEATURE 9C: NORMAL SOURCE ACCEPTED (GREEN LED)
FEATURE 9D: EMERGENCY SOURCE ACCEPTED (RED LED)
- D. LOAD DISCONNECT ACTIVE - INDICATES THAT THE TRANSFER SWITCH IS IN THE LOAD DISCONNECTED POSITION (BOTH NORMAL (CN) AND EMERGENCY (CE) CONTACTORS OPEN) (AMBER LED).
- GENERAL NOTES
1. SWITCH SHOWN DE-ENERGIZED AND CONNECTED TO THE NORMAL SOURCE.
 2. DEVICE SYMBOLS AND DESIGNATIONS ARE IN ACCORDANCE WITH NEMA PUBLICATION ICS 1-1983, PART 1-101A.
 3. ALL WIRING IS #16 AWG, TINNED, STRANDED COPPER UNLESS OTHERWISE INDICATED.
 4. ○ ON TERMINAL BLOCKS INDICATES AVAILABLE FIELD CONNECTION POINT.
 5. ● ON TERMINAL BLOCKS INDICATES FACTORY CONNECTION POINT.
 6. CONTROL AND ACCESSORY WIRING IS ROUTED IN ACCORDANCE WITH ASCO ASSEMBLY PROCEDURE GS451261.
 7. AN OPERATOR'S MANUAL IS FURNISHED WITH EACH AUTOMATIC TRANSFER SWITCH. REFER TO THIS PUBLICATION PRIOR TO INSTALLATION AND OPERATION OF THE UNIT.

CATALOG NUMBER _____
ASCO® CERTIFIED TO
S.O. _____
BY: _____
DATE: _____
FORM REV F
PROJECT NAME: _____
WIRING _____
7000 SERIES (H7ADTS) 1PH 600-1200 AMPS
"H" FRAME, GROUP 5 CONTROLS
DRAWN BY: **DJB** DATE: 3/22/01
CHECKED: _____
PROJECT APPROVAL: _____
FINAL APPROVAL: **SDH** 3/22/01
MANUFACTURING TOLERANCES TO BE IN ACCORDANCE WITH ASCO PROCEDURE MP-1-003. FOR PLASTIC PARTS SEE MP-1-055
PROPERTY OF ASCO POWER TECHNOLOGIES. USE PERMITTED FOR OUR WORK ONLY. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.
ASCO® ASCO POWER TECHNOLOGIES, L.P.
FLORHAM PARK, NEW JERSEY 07932 U.S.A.
COMPUTER GENERATED DRAWING
SCALE: NONE SIZE: **DS**
DWG. NO. **713504**
DRAWING F REV. _____ ECN NO. 290886 SHEET 1 OF 6

F	290886	RVP	HSL	08/17/21
SEE ECN				
E	278704	TR	BK	05/09/19
SEE ECN				
D	203916	TR	BK	03/29/05
SEE ECN				
C	166900	SDH	SDH	04/26/04
SEE ECN				
B	160049	WK	WK	03/04/02
SEE ECN				
A	158293	BWM	WK	7/24/01
SEE ECN				
-	157090	SDH	SDH	3/22/01
ISSUE				
REV. TO SHEET	ECN NO.	BY	APP.	DATE

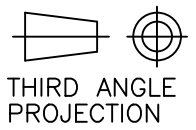

FIELD CONNECTIONS

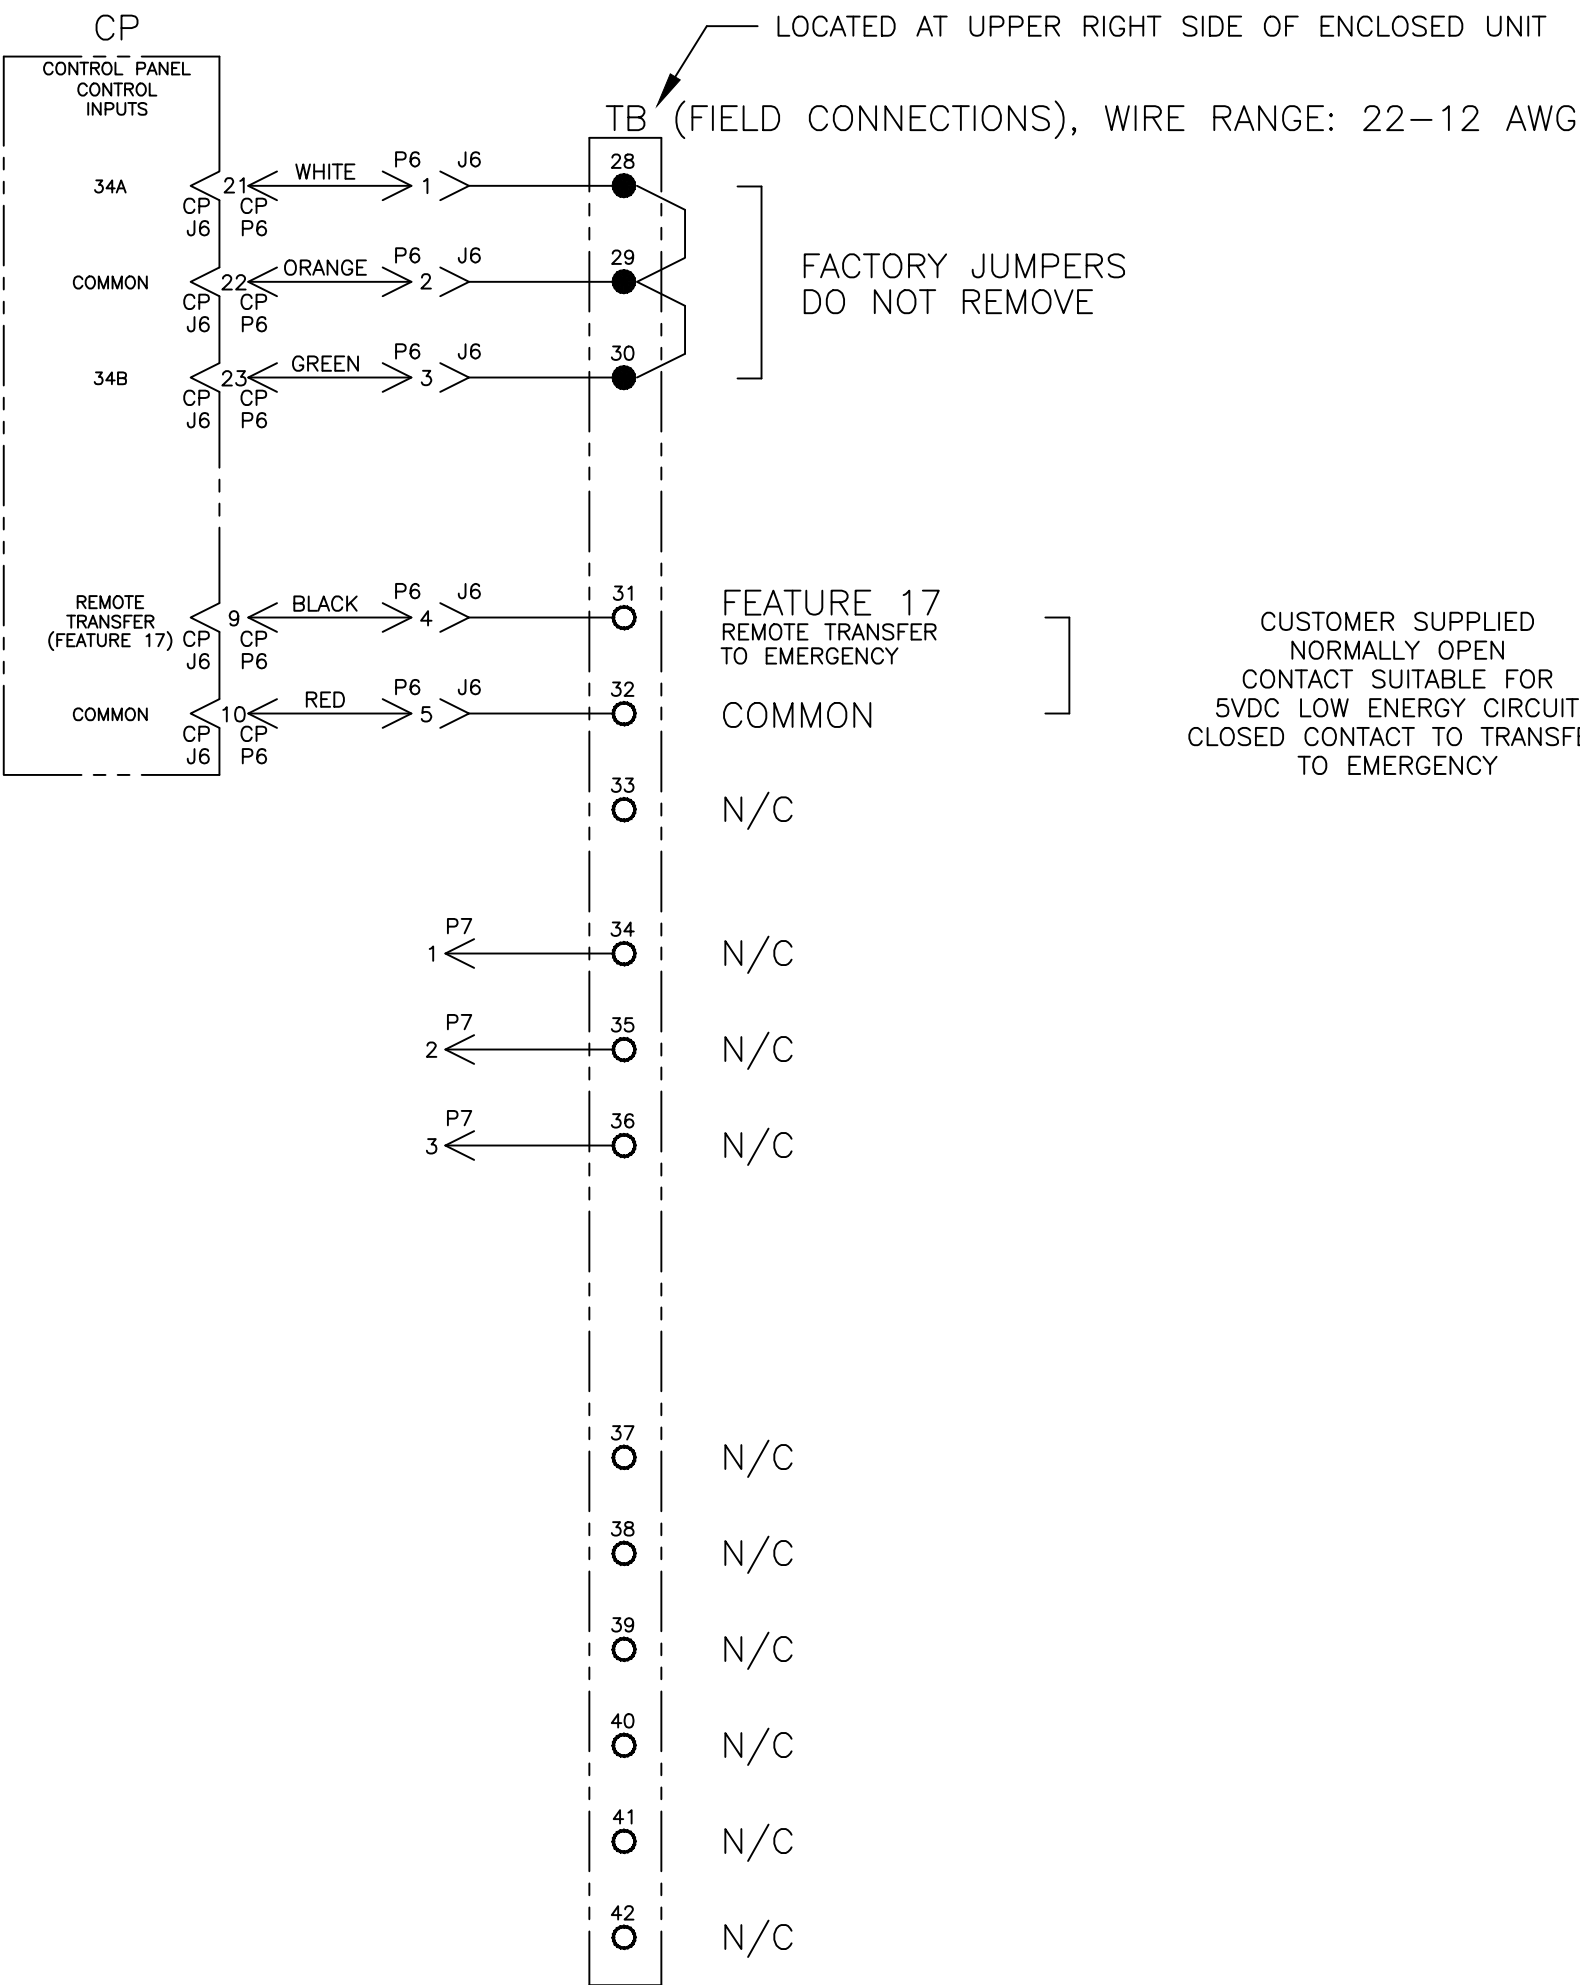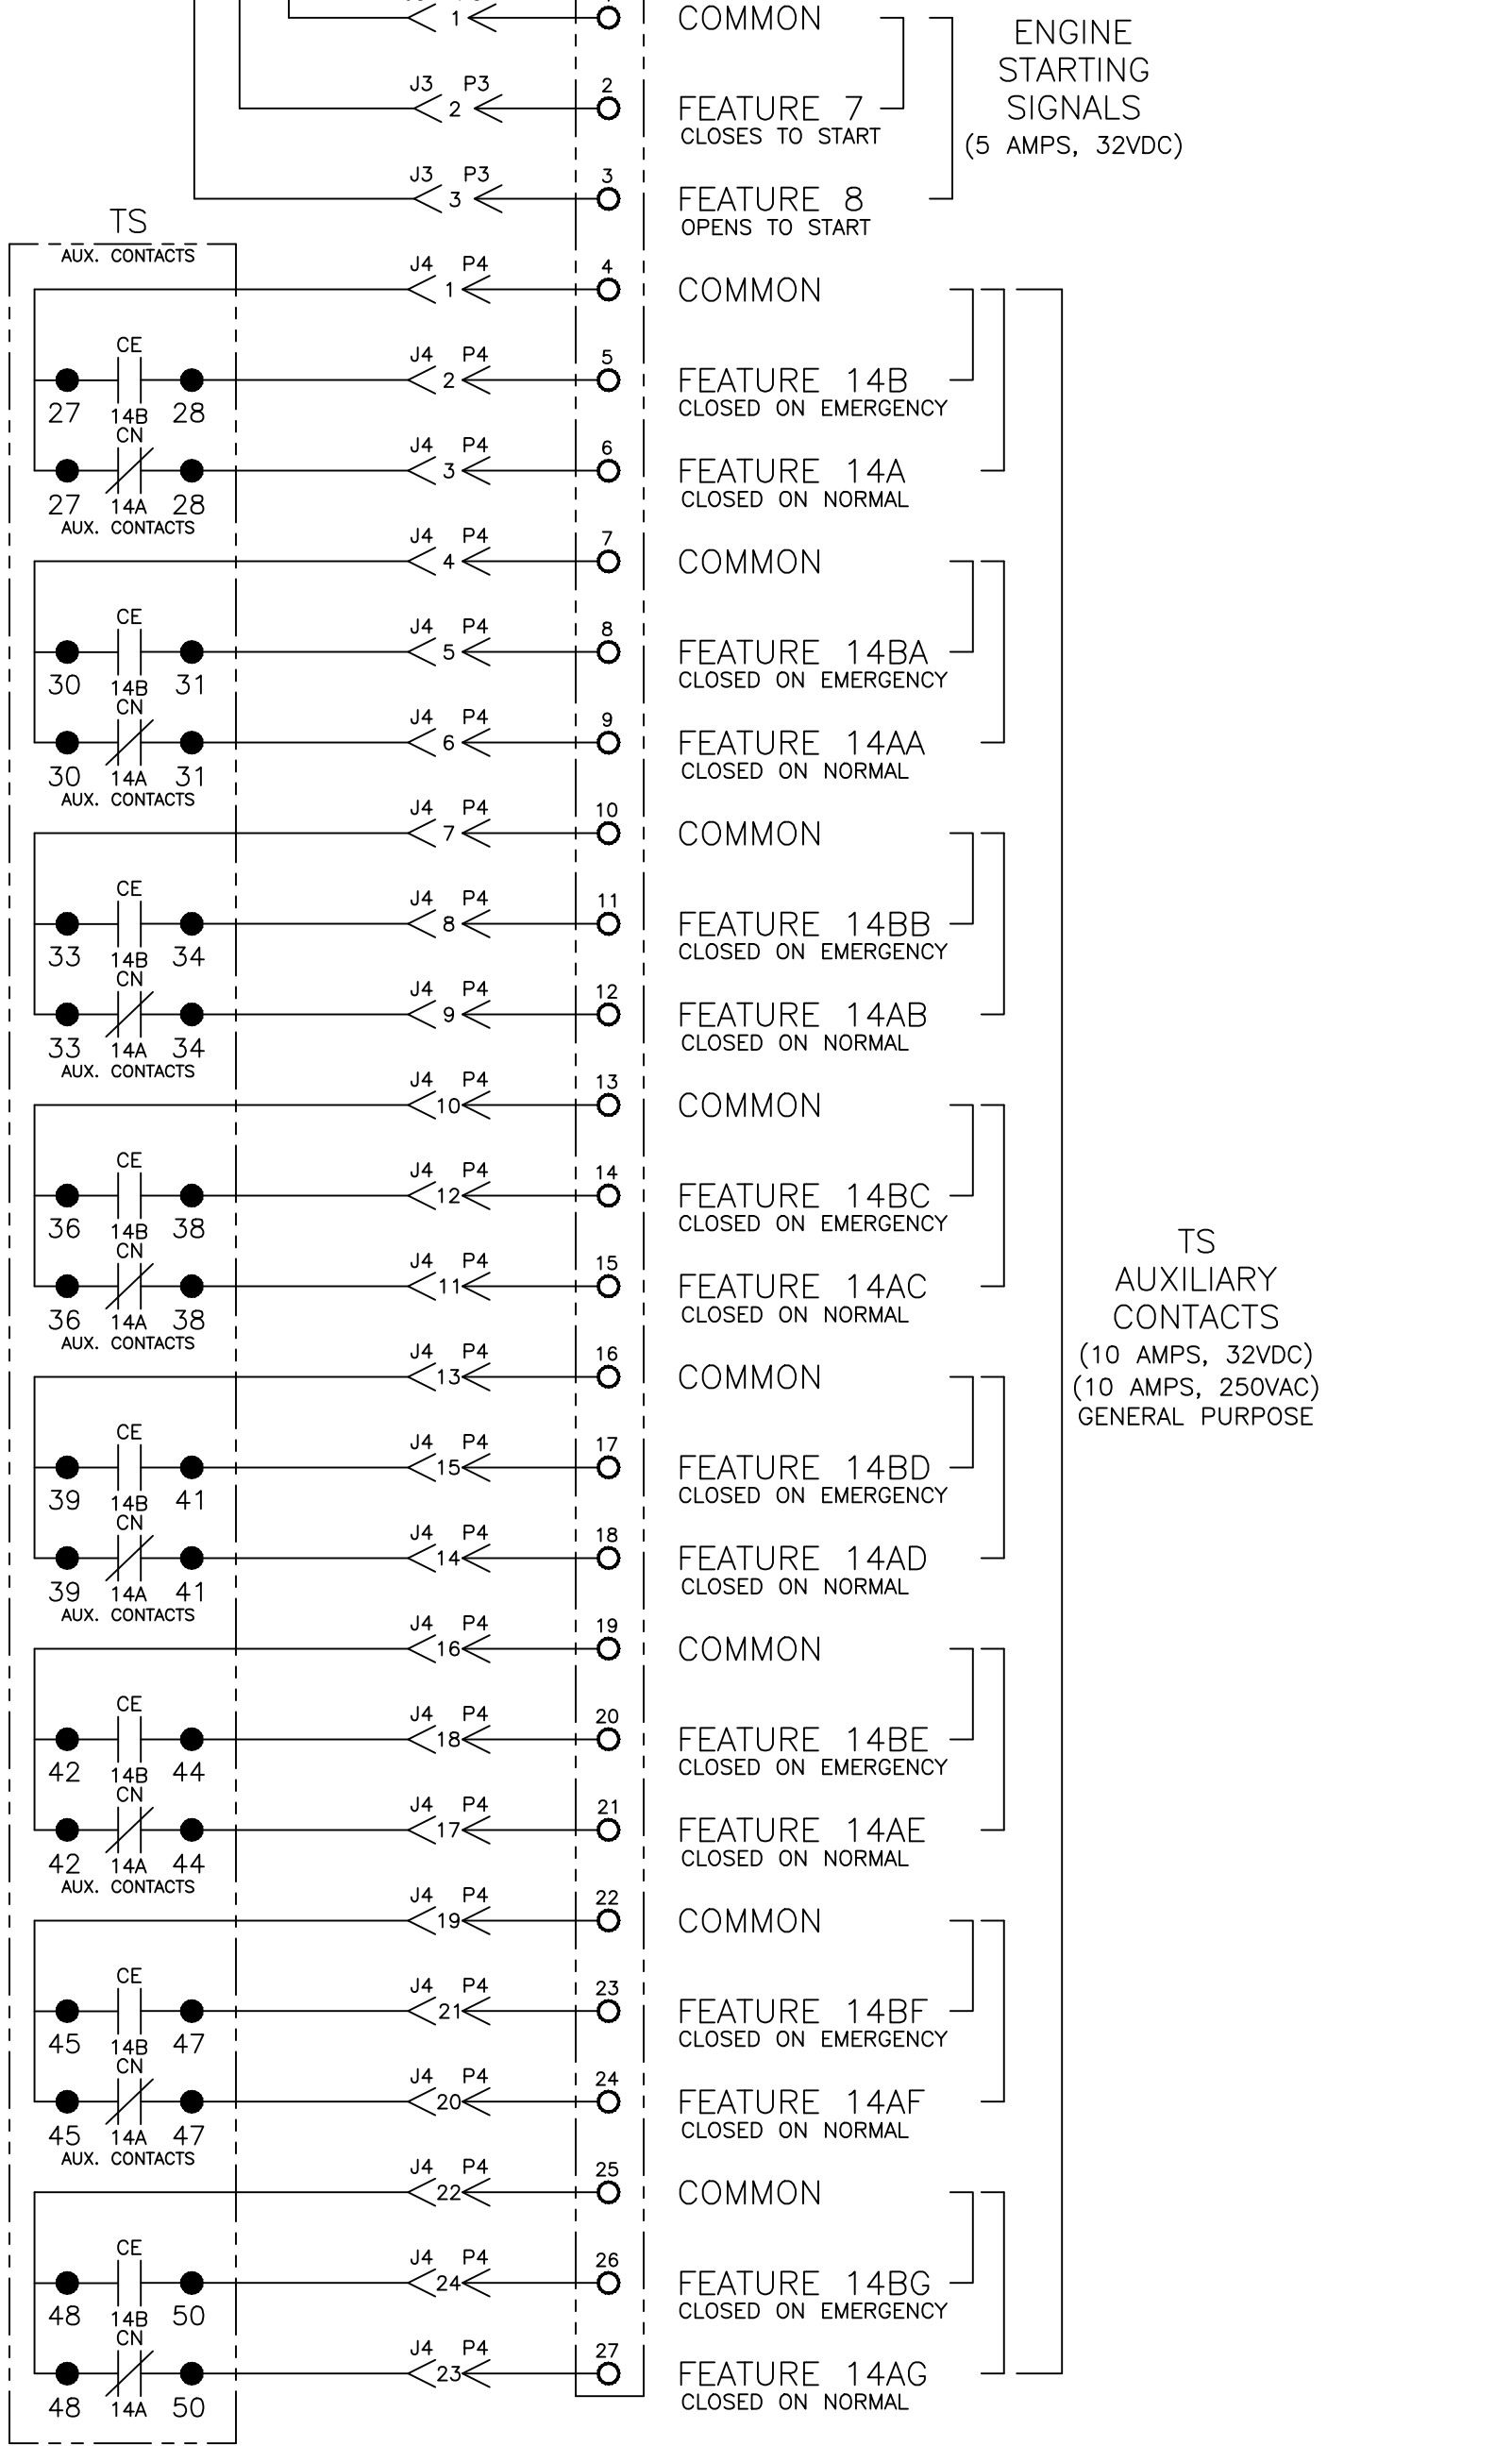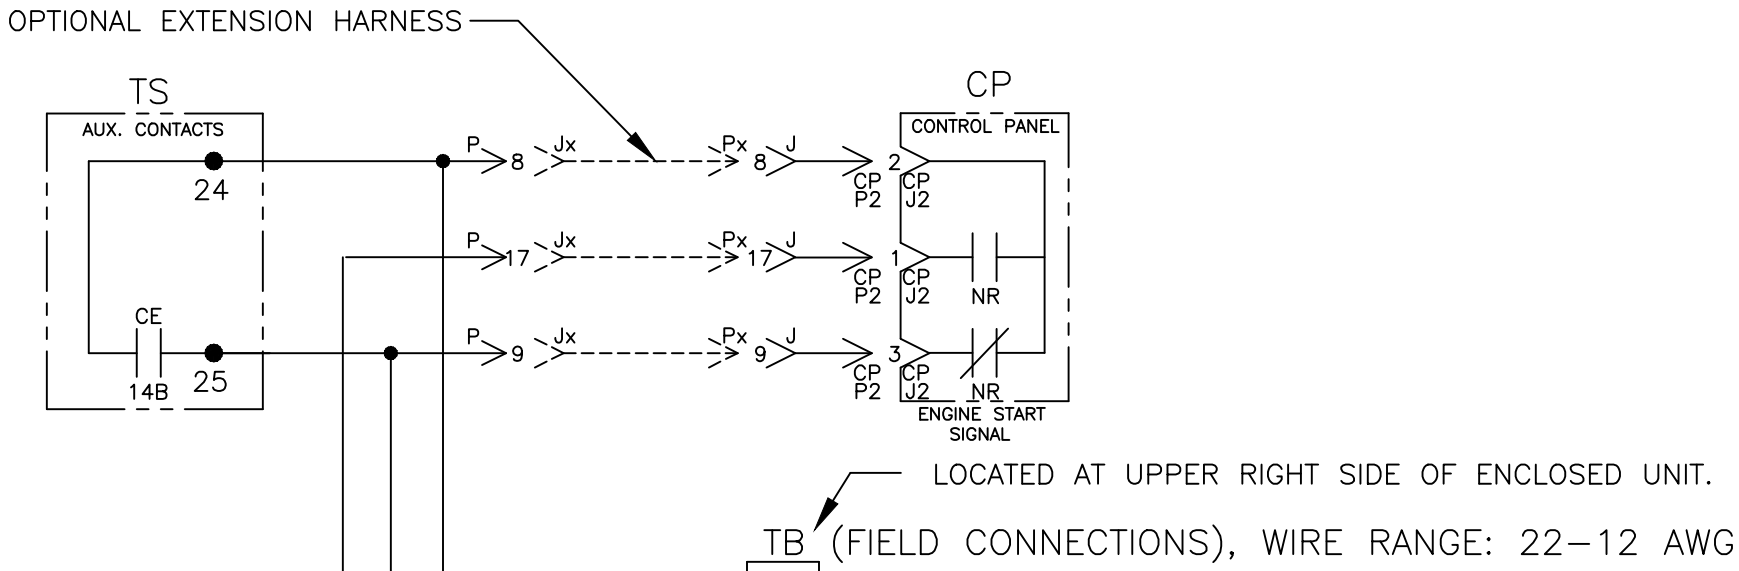

F	290886	RVP	HSL	08/17/21
	SEE ECN			
E	278704	TR	BK	05/09/19
	SEE ECN			
D	203916	TR	BK	03/29/05
	SEE ECN			
C	166900	SDH	SDH	04/26/04
	SEE ECN			
B	160049	WK	WK	03/04/02
	SEE ECN			
A	158293	BWM	WK	7/24/01
	SEE ECN			
—	157090	SDH	SDH	3/22/01
	ISSUE			
REV. TO SHEET	ECN NO.	BY	APP.	DATE
PROJECT NAME:				
WIRING				
7000 SERIES (H7ADTS) 1PH 600-1200 AMPS				
"H" FRAME, GROUP 5 CONTROLS				
DIAGRAM				
DRAWN BY	BY	DATE	MANUFACTURING TOLERANCES TO BE IN ACCORDANCE WITH ASCO PROCEDURE MP-1-003. FOR PLASTIC PARTS SEE MP-1-055	
CHECKED	DJB	3/22/01	ASSEM. REF. NO.	
PROJECT APPROVAL			PROPERTY OF ASCO POWER TECHNOLOGIES. USE PERMITTED FOR OUR WORK ONLY. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.	
FINAL APPROVAL	SDH	3/22/01	COMPUTER GENERATED DRAWING	
			SCALE	NONE
			SIZE	DS
			DWG. NO.	713504
			DRAWING F REV.	ECN NO. 290886
			SHEET 2 OF 6	



ASCO POWER TECHNOLOGIES, L.P.
FLORHAM PARK, NEW JERSEY 07932 U.S.A.

D

C

B

A

D

C

B


A

MAIN POWER POLES

TS OPERATOR CIRCUIT


EMERGENCY

NORMAL

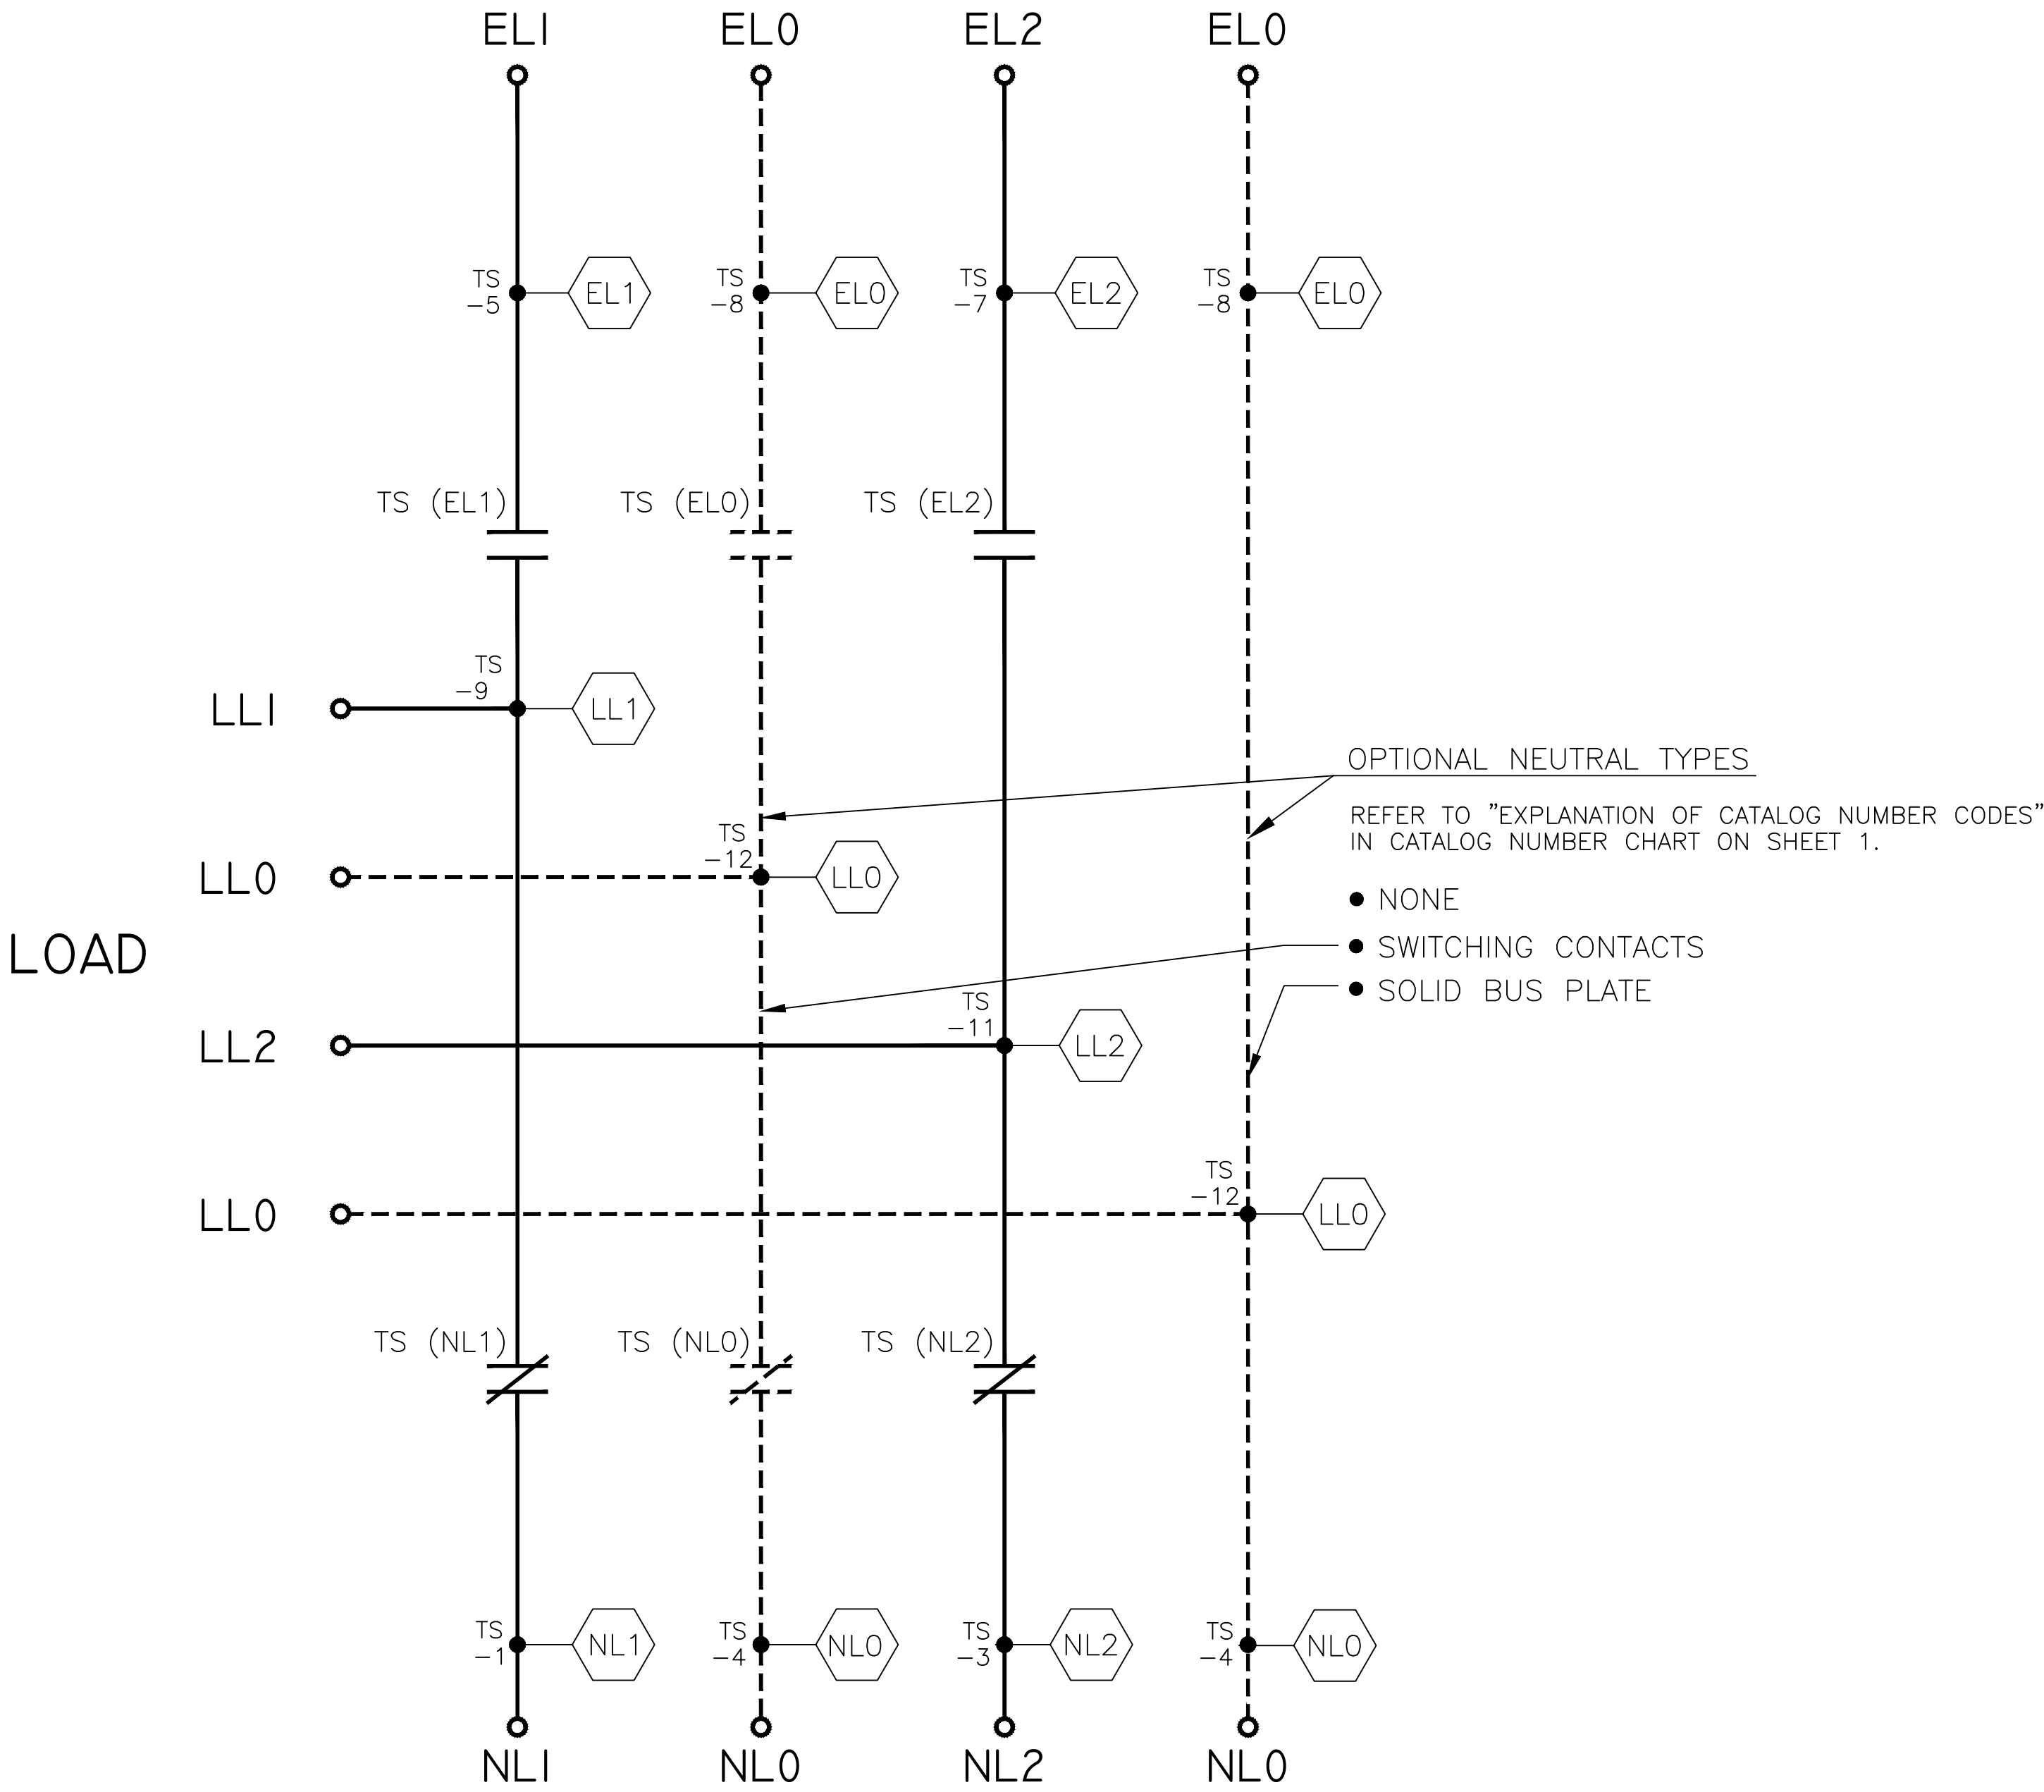

NORMAL

NOTE:
ATS SHOWN CLOSED ON NORMAL SOURCE.

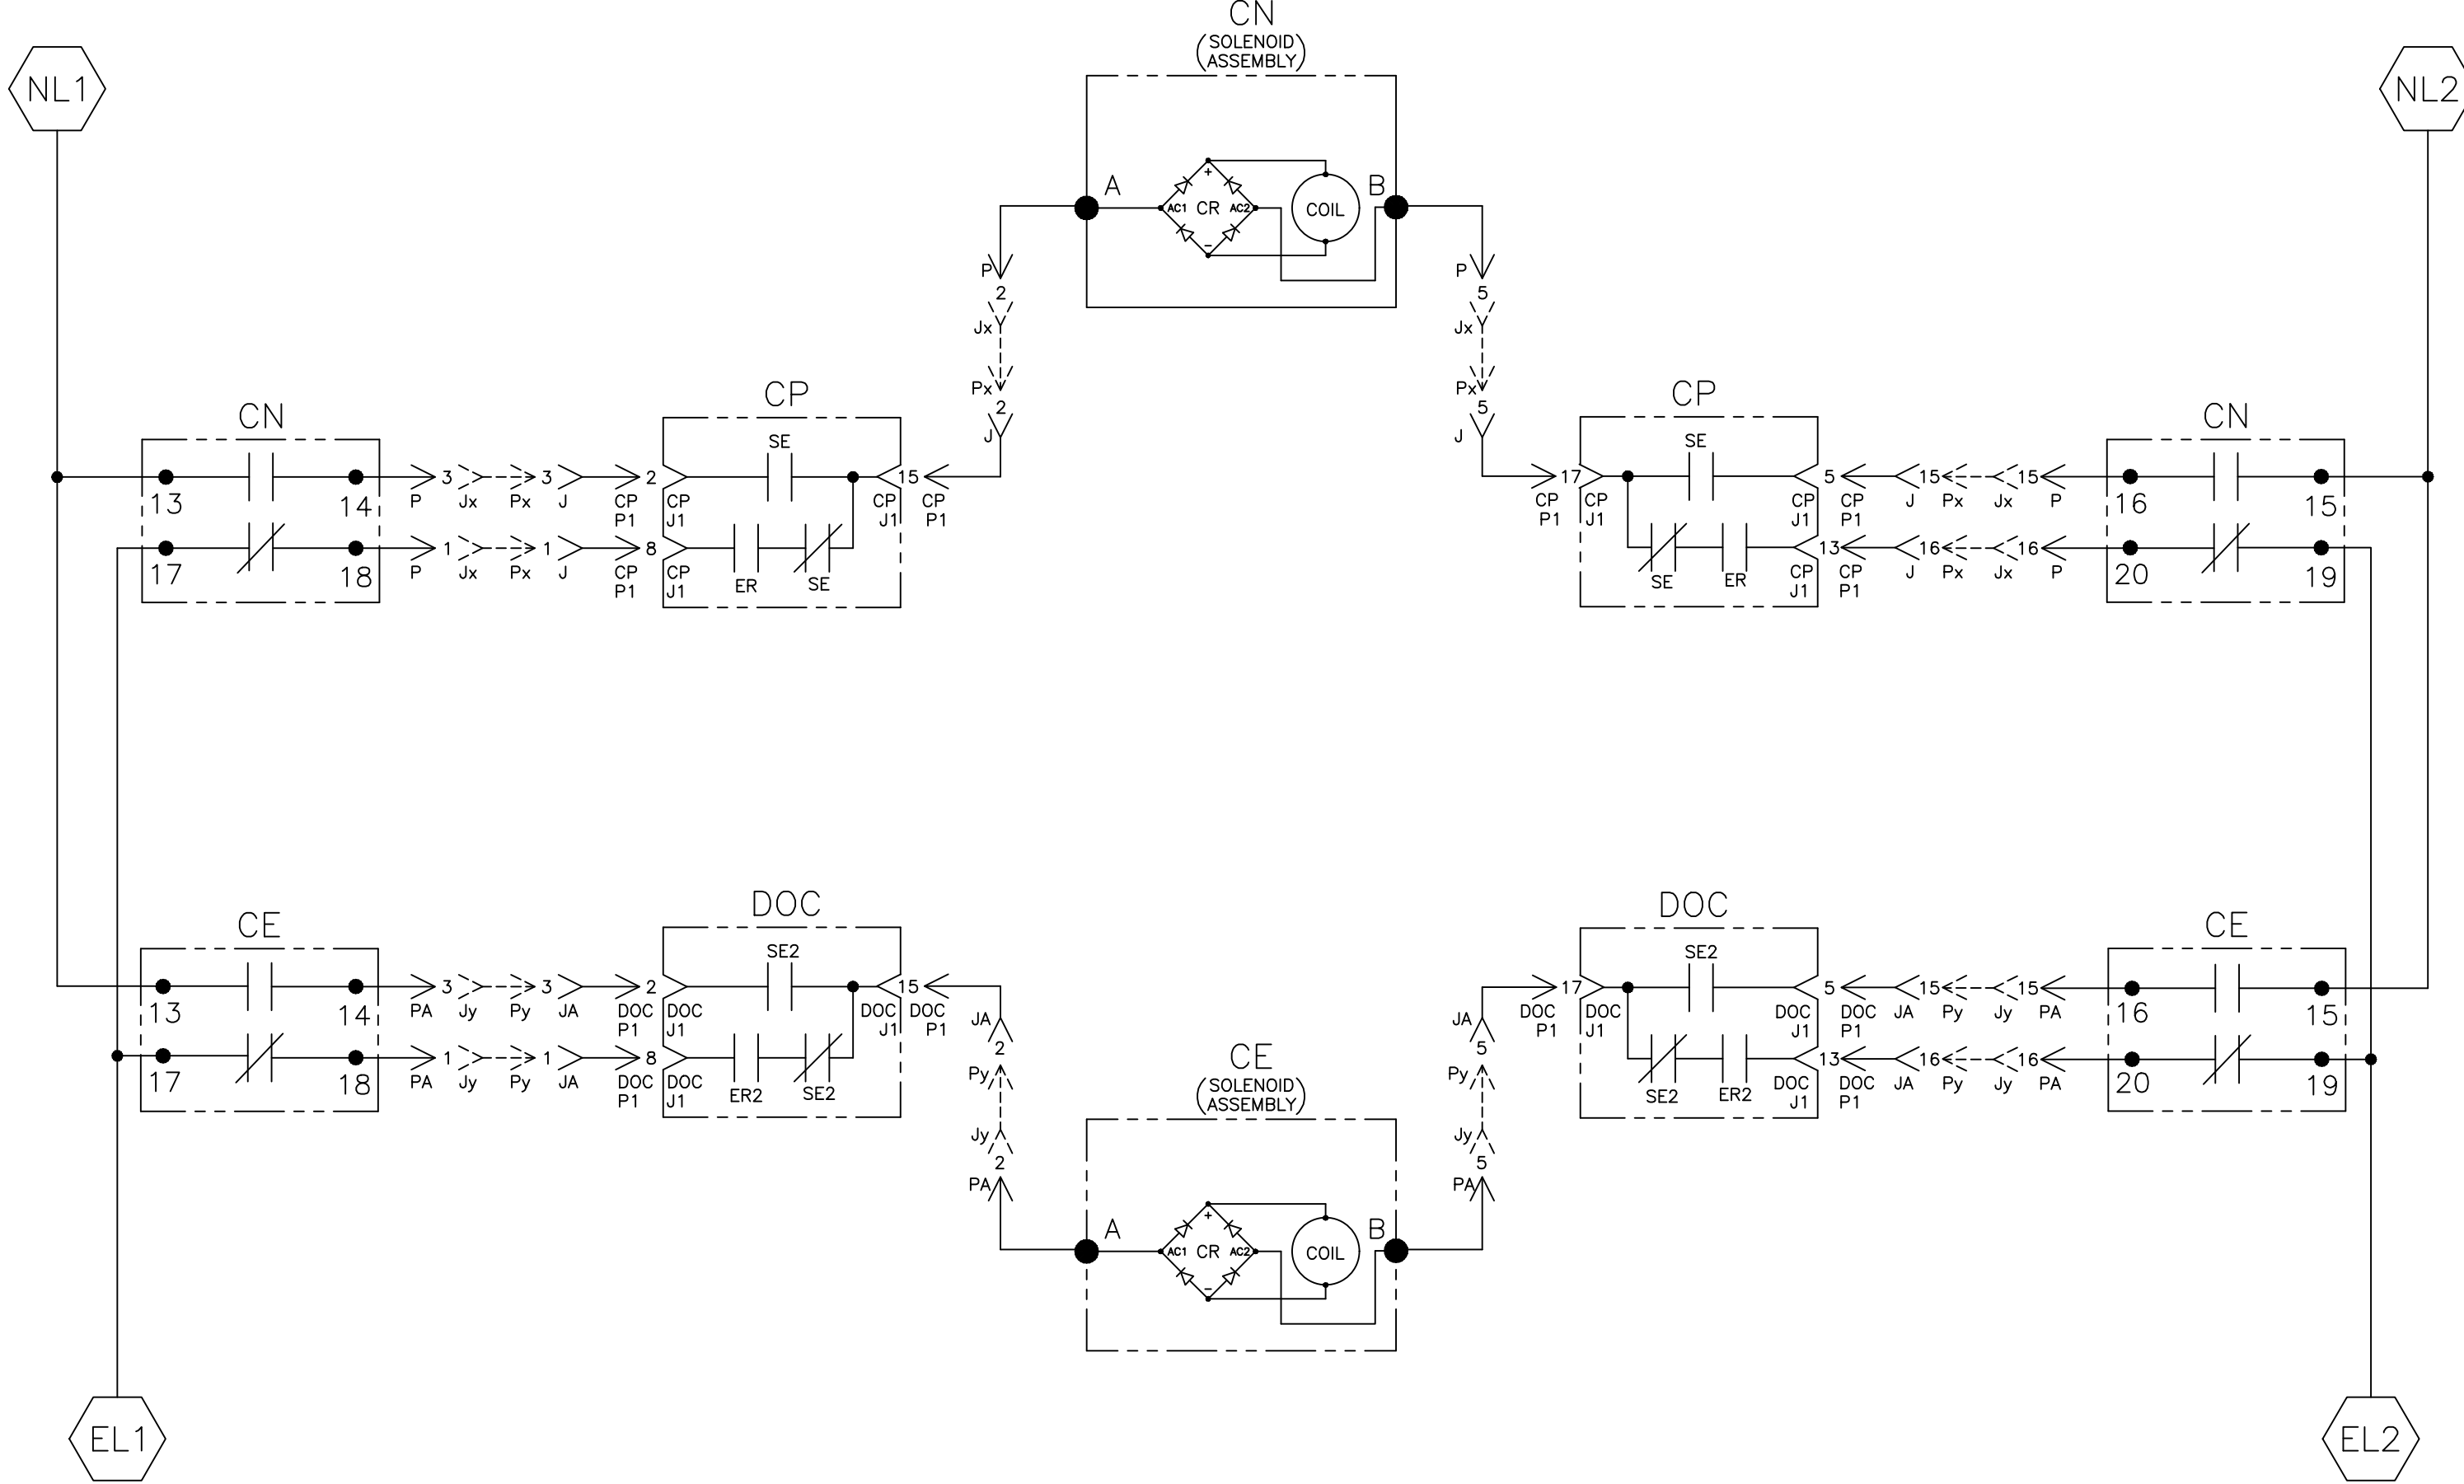

EMERGENCY

CN CONTROL CONTACTS		SOLENOID POSITION			
CN	CLOSED BEFORE	NORMAL TDC		BEFORE	OPEN
		>	<	TDC	
13-14					
15-16					
17-18					
19-20					

CE CONTROL CONTACTS		SOLENOID POSITION			
CE	BEFORE	TDC		BEFORE	CLOSED
	OPEN	>	<	TDC	EMERG.
13-14					
15-16					
17-18					
19-20					

TDC (TOP DEAD CENTER)
TRANSFER SWITCH TEST & ADJUSTMENT PROCEDURE
SPECIFIES CONTROL CUT-OFF (CONTACT OPENING)
SETTING.

PROJECT NAME:
WIRING
7000 SERIES (H7ADTS) 1PH 600-1200 AMPS
"H" FRAME, GROUP 5 CONTROLS

COMPUTER GENERATED DRAWING
SCALE: NONE SIZE: DS
DWG. NO.: 713504
DRAWING REV. F
ECN NO. 290886
SHEET 3 OF 6

REV. TO SHEET

ECN NO.

BY

APP.

DATE

ASCO

ASCO POWER TECHNOLOGIES, L.P.
FLORHAM PARK, NEW JERSEY 07932 U.S.A.

D

D

C

C

B

B


A

A

EMERGENCY SOURCE CIRCUITS

ADDITIONAL CIRCUITS

EMERGENCY

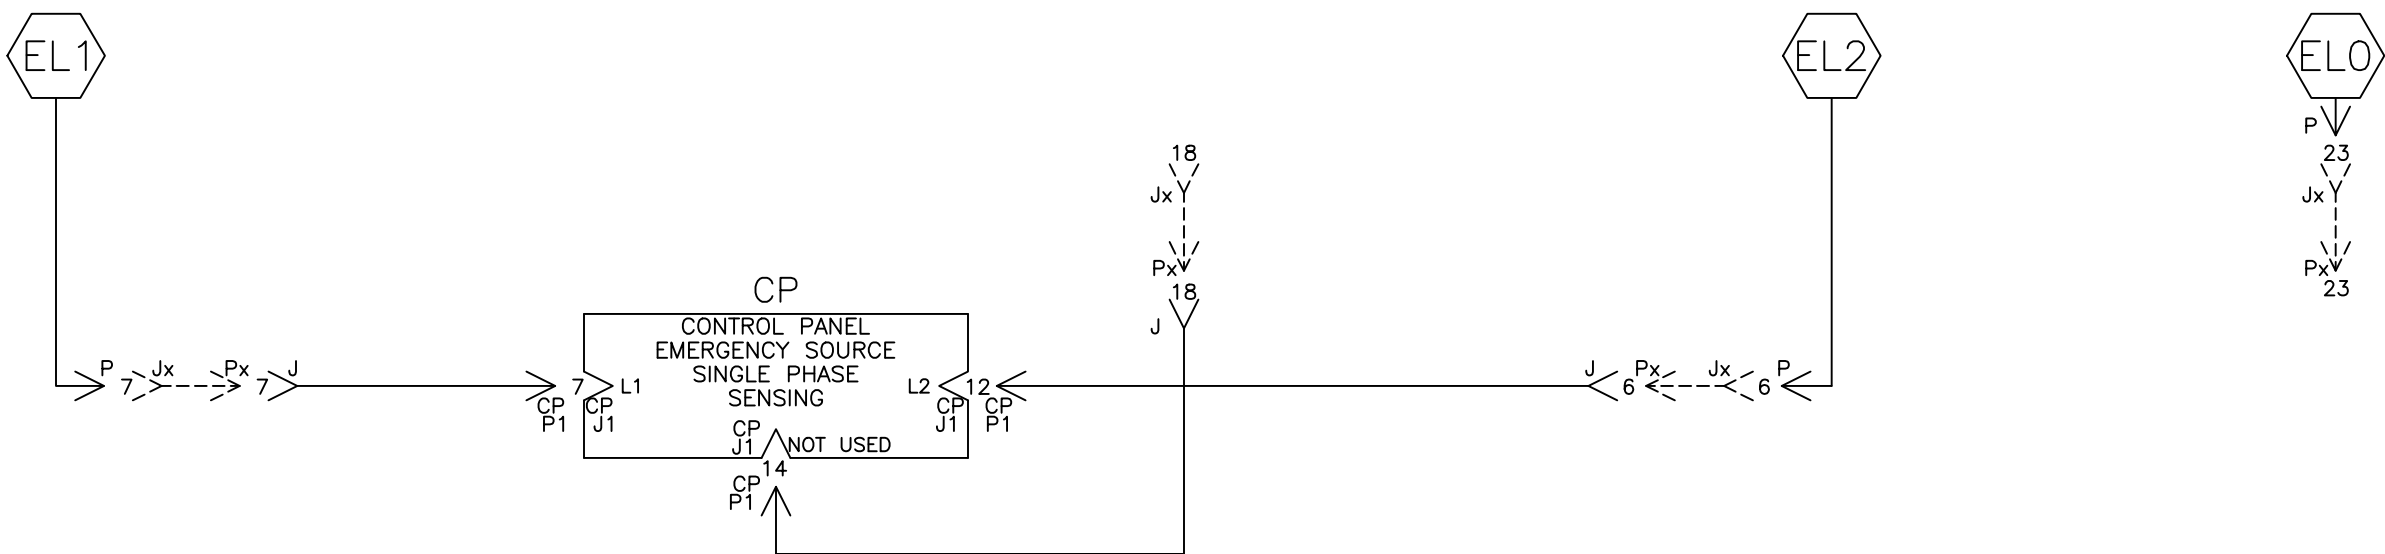


LOAD TERMINAL CIRCUITS

LOAD




NORMAL SOURCE CIRCUITS

NORMAL


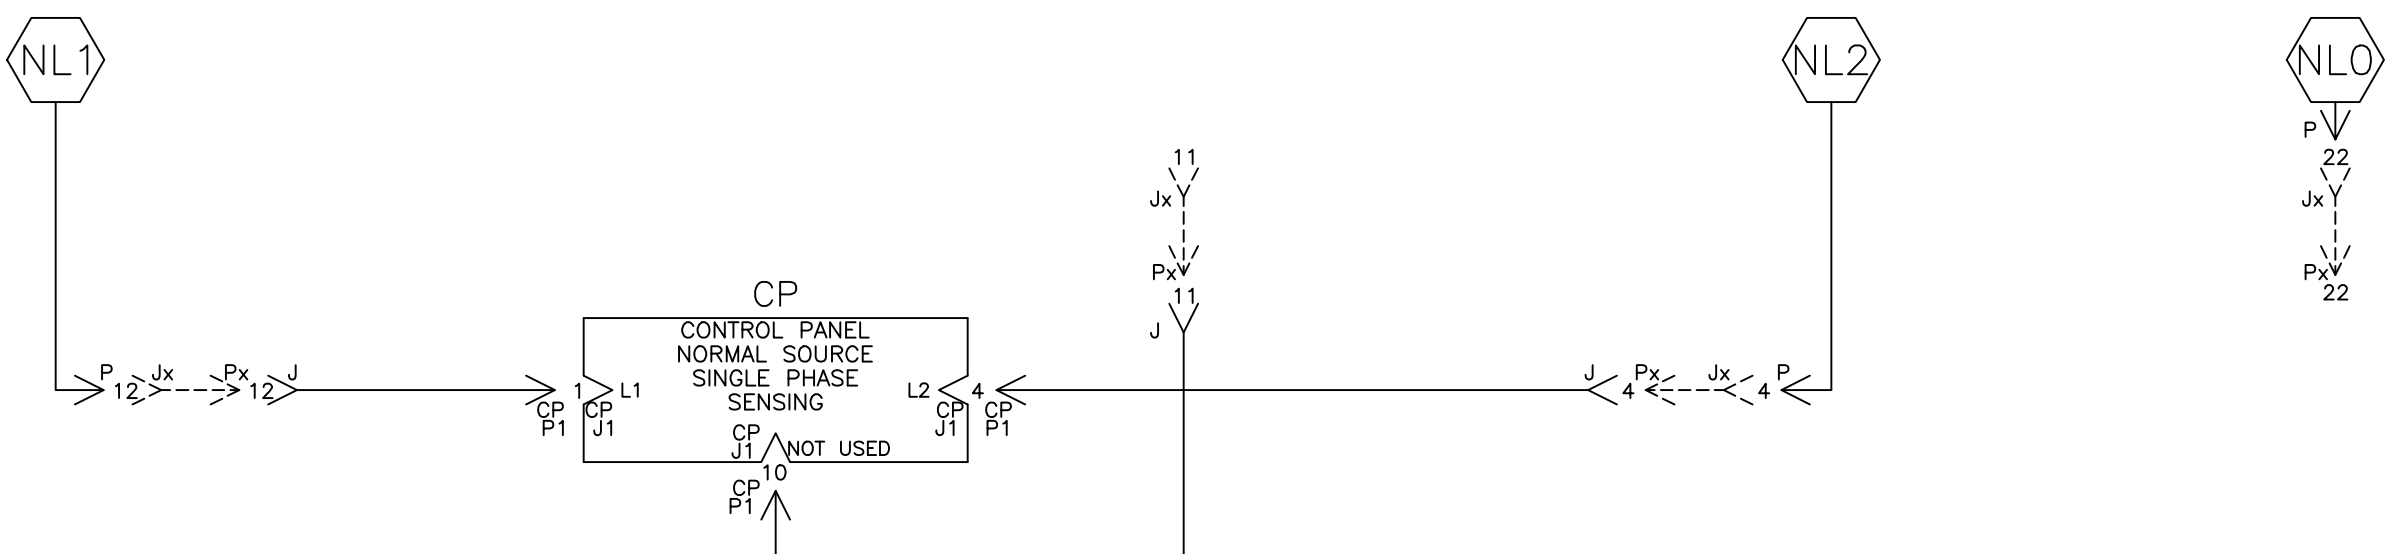


CONTROL CIRCUITS



SER2/ER2 CONTROL

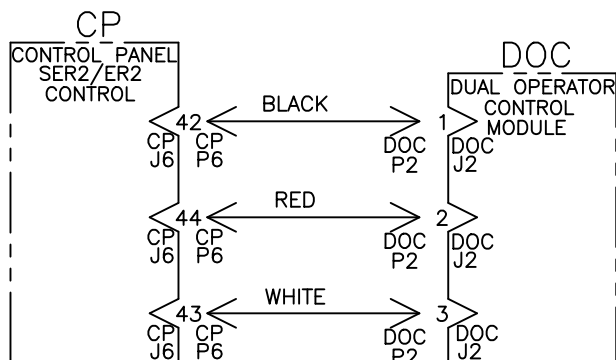



TS POSITION SENSING

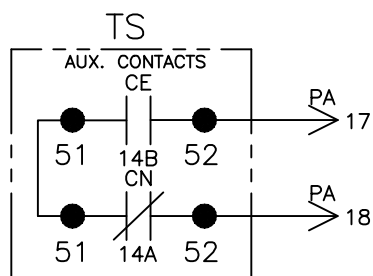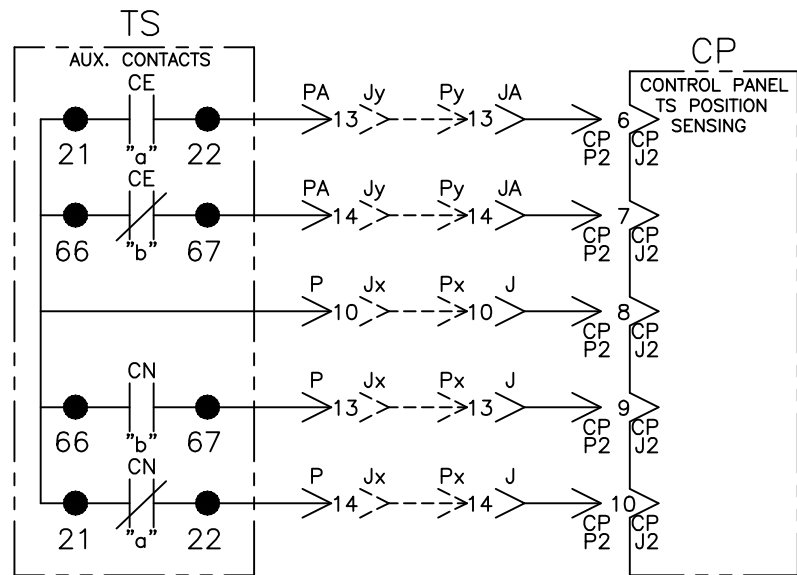

SPARE FOR FACTORY USE

  PROJECT NAME:				REV. TO SHEET	ECN NO.	BY	APP.	DATE
WIRING				DIAGRAM				
7000 SERIES (H7ADTS) 1PH 600-1200 AMPS								
"H" FRAME, GROUP 5 CONTROLS								
BY		DATE		MANUFACTURING TOLERANCES TO BE IN ACCORDANCE WITH ASCO PROCEDURE MP-I-003. FOR PLASTIC PARTS SEE MP-I-055		ASSEM. REF. NO.		COMPUTER GENERATED DRAWING
DRAWN BY		DJB		3/22/01				SCALE NONE SIZE DS
CHECKED				PROPERTY OF ASCO POWER TECHNOLOGIES. USE PERMITTED FOR OUR WORK ONLY. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.				DWG. NO. 713504
PROJECT APPROVAL								DRAWING REV. F
FINAL APPROVAL		SDH		3/22/01		ECN NO. 290886		SHEET 4 OF 6
				ASCO POWER TECHNOLOGIES, L.P. FLORHAM PARK, NEW JERSEY 07932 U.S.A.				

  

PROJECT NAME:				REV. TO SHEET	ECN NO.	BY	APP.	DATE
WIRING				DIAGRAM				 THIRD ANGLE PROJECTION
7000 SERIES (H7ADTS) 1PH 600-1200 AMPS								
"H" FRAME, GROUP 5 CONTROLS								
BY		DATE	MANUFACTURING TOLERANCES TO BE IN ACCORDANCE WITH ASCO PROCEDURE MP-1-003. FOR PLASTIC PARTS SEE MP-1-055		ASSEM. REF. NO.		COMPUTER GENERATED DRAWING	
DRAWN BY	DJB	3/22/01					SCALE NONE SIZE DS	
CHECKED			PROPERTY OF ASCO POWER TECHNOLOGIES. USE PERMITTED FOR OUR WORK ONLY. ALL RIGHTS OF DESIGN OR INVENTION ARE RESERVED.				DWG. NO.	
PROJECT APPROVAL							713504	
FINAL APPROVAL	SDH	3/22/01	 ASCO POWER TECHNOLOGIES, L.P. FLORHAM PARK, NEW JERSEY 07932 U.S.A.		DRAWING REV F		ECN NO. 290886	SHEET 5 OF 6

DC

1

11[illegible]A