Source changeover systems

Compact NSX100-630, Compact NS630b-1600, Compact INS/INV, Masterpact









Green Premium, stamping the most eco-friendly products of the industry



Green Premium is the only label allowing you to develop effectively an environmental policy and to promote it, while preserving your business efficiency.

It guarantees compliance with the most up-to-date environmental regulations, but it is more than this.

With Green Premium eco-mark, Schneider Electric helps you:

- Calculate the carbon footprint of the solutions you offer
- Ensure full regulation compliance about substances and chemical components
- Deliver all appropriate information to certify eco-design of your solutions
- Easily manage products end of life, while ensuring optimized recycling.

With Green Premium, Schneider Electric commits to be transparent disclosing extensive and reliable information on environmental impacts of its products:

RoHS

Schneider Electric applies RoHS requirements to all its products and worldwide, even for the numerous ones which are not in the scope of the regulation. Compliance certificates are available for all products involved.

REACh

Schneider Electric applies REACh regulation worldwide, and releases all information about presence of Substances of Very High-Concern (SVHC) in its products.

PEP: Product Environmental Profile

For all its products, Schneider Electric publishes the most complete set of environmental data, including carbon footprint and energy consumption for each of the life cycle phases, in compliance with ISO 14025 PEPecopassport program.

EoLI: End of Life Instructions

Available at a click, these documents provide:

- Recyclability rates of the products
- Information to mitigate personnel hazards during dismantling and before recycling operations
- Parts identification either for re-use, or for selective treatment to mitigate environmental hazards, or incompatibility with usual recycling process.



Discover what we mean by green and

Check a product!







A source-changeover system is indispensable for applications that need a continuous supply of electric power (hospitals, airports, banks, government facilities, etc.).

But a source-changeover system is also suitable for all LV electrical installations exposed to:

- > Nominal voltage loss or dip (when there is high demand for electric power)
- > Unpredictable power quality
- > Frequent power cuts.

These factors, and many others, can damage the continuity of service of your electrical installation.

For infrastructure managers, a sourcechangeover system gives direct economic benefits: it is possible to select your source based on power cost.

In this case, the replacement source is used as an alternative, more economical source.



Managing energy efficiently

Power Cost Safety



Where backup supply must be reliable: now that is everywhere.

Electricity is the fuel that feeds economic activity. Very few operations can withstand the financial impact of an electrical stoppage.

For occupant comfort, business continuity, and worker/visitor safety, dependability levels which used to apply to hospitals or airports are now becoming required in shopping malls and offices.

Additionally, utility companies make their contracts more sophisticated to deal with energy concerns: for example, by including time restrictions to total accessible power.


For these reasons, backup power sources expand across all types of buildings, and require high performance connection and management.

Enabling you to meet these challenges,

Schneider Electric source-changeover system comes as the natural continuation of the world leading low voltage distribution system developed by Schneider Electric.





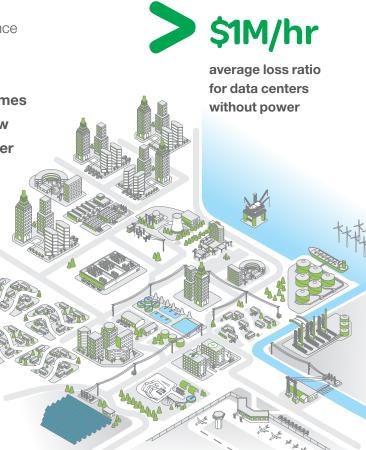

Efficient energy management and continuity of service with source-changeover system

To ensure continuity of service for critical applications, LV electrical installations need to be connected to at least two independent power sources:



And a replacement source (R

used to supply energy to the installation when the normal source unavailable, or, for instance, when its quality and/or availability is no longer guaranteed.

The source-changeover system switches the load (partly or fully) between these two sources.



A few basics on source-changeover systems

system can be automated to manage transfers according to external conditions.

> A source-changeover > Switching from a main power source to a replacement source can be performed either manually or automatically.

> A source-changeover system comprises circuit breakers, switch-disconnectors or contactors.

^{*} The replacement source (R) can be: a second power source (with possibly different characteristics from the normal source) or an electrical generator

to switch the load to meet your needs



Manual source-changeover system

(or MTSE: Manual Transfer Switching Equipment)

The simplest way to switch the load. It is controlled manually by an operator. The time required to switch from the 'N' source to 'R' source can vary.



System

2 or 3 mechanically interlocked manuallyoperated circuit breakers or 2 switchdisconnectors.

Applications

Buildings and infrastructure where the need for continuity of service is significant but not a priority: offices, small and medium-sized businesses.



Remote-operated source-changeover system

(or RTSE: Remote Transfer Switching Equipment)

The most commonly used system for devices with high ratings. No direct human intervention is required. Source-changeover is controlled electrically.



System

2 or 3 circuit breakers that may have different configurations, linked by an electrical interlocking system. In addition, a mechanical interlocking system protects against electrical malfunctions or incorrect manual operations.

Applications

Industry (assembly lines, engine rooms on ships, critical auxiliaries in thermal powerstations, etc.); **Infrastructure** (port and railway installations, runway lighting systems, control systems on military sites, etc.).



Automatic source-changeover system

(or ATSE: Automatic Transfer Switching Equipment)

An automatic controller may be added to a remote-operated source-changeover system. It is possible to automatically control source transfer according to programmed (dedicated controllers) or programmable (PLC) operating modes. These solutions ensure optimum energy management.



System

2 or 3 circuit breakers that may have different configurations, linked by an electrical interlocking system. A mechanical interlocking system protects against electrical malfunctions or incorrect manual operations, with an automatic control system (dedicated controllers or PLC).

Applications

Commercial and service sector (operating rooms in hospitals, safety systems for buildings, computer rooms for banks and insurance companies, lighting and emergency lighting systems in malls, etc.), industry and infrastructure.

Whatever the system, you benefit from our expertise!

> MTSE range



Compact INS From 40 A to 630 A

> RTSE range



Compact NSX From 100 A to 630 A

Masterpact NT / NW From 630 A to 6300 A

> ATSE range



UA Controller

Compact NSX From 100 A to 630 A



Our expertise and support come together with the source-changeover system you choose for your LV electrical installation.

With Compact INS, Compact NSX and Masterpact NT and NW, we offer a complete range of solutions, designed around key values:

Maximum continuity of service

- > Energy availability is ensured whatever the external requirements (e.g. high power demand).
- > Maintenance and replacement of the sources (N or R) can be done with no interruption of service.

You can maintain a continuous level of service and customer satisfaction.

Maximum safety

For LV electrical installations where safety and continuity of service are critical for people and/or equipment such as hospitals, airports, banks, malls, etc.

Optimized energy management

- > Transfer the load to a replacement source according to external requirements.
- > Manage power sources according to power quality and power costs.
- > Perform system regulation.
- > Switch to an emergency replacement source. You are no longer dependent on your power supply (and supplier)!

Simplicity and reliability

- > Simple installation on LV switchboard.
- > Optimized size of the switchboard.
- > System based on pre-tested components.
- > Compliance with IEC 60947-6-1.






Ecodial

Ecodial software is dedicated to LV electrical installation calculation in accordance with the IEC60364 international standard or national standards.

This 4th generation, "Ecodial Advance Calculation 4", offers a new ergonomic and new features:

- operating mode that allows easy calculation in case of installation with different type of sources (parallel transformers, back-up generators...)
- discrimination analysis associating curves checking and discrimination tables
- direct access to protection settings including residual current protections
- easy selection of alternate solutions or manual selection of a product.

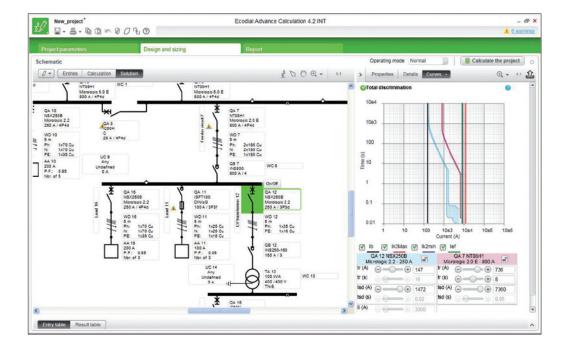




schneider-electric.com

This international site allows you to access all the Schneider Electric Solution and Product information via:

- comprehensive descriptions
- range data sheets
- a download area
- product selectors
- ..


You can also access the information dedicated to your business and get in touch with your Schneider Electric country support.

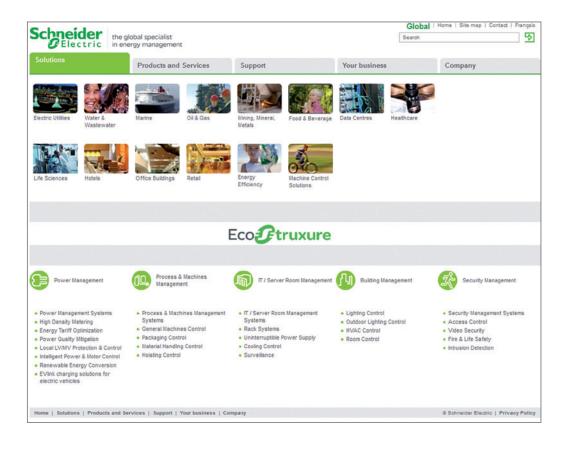


General content


Presentation	2
Functions and characteristics	A-1
Dimensions and connection	B-1
Electrical diagrams	C-1
Catalogue numbers and order form	D-1

For maximum continuity of service...

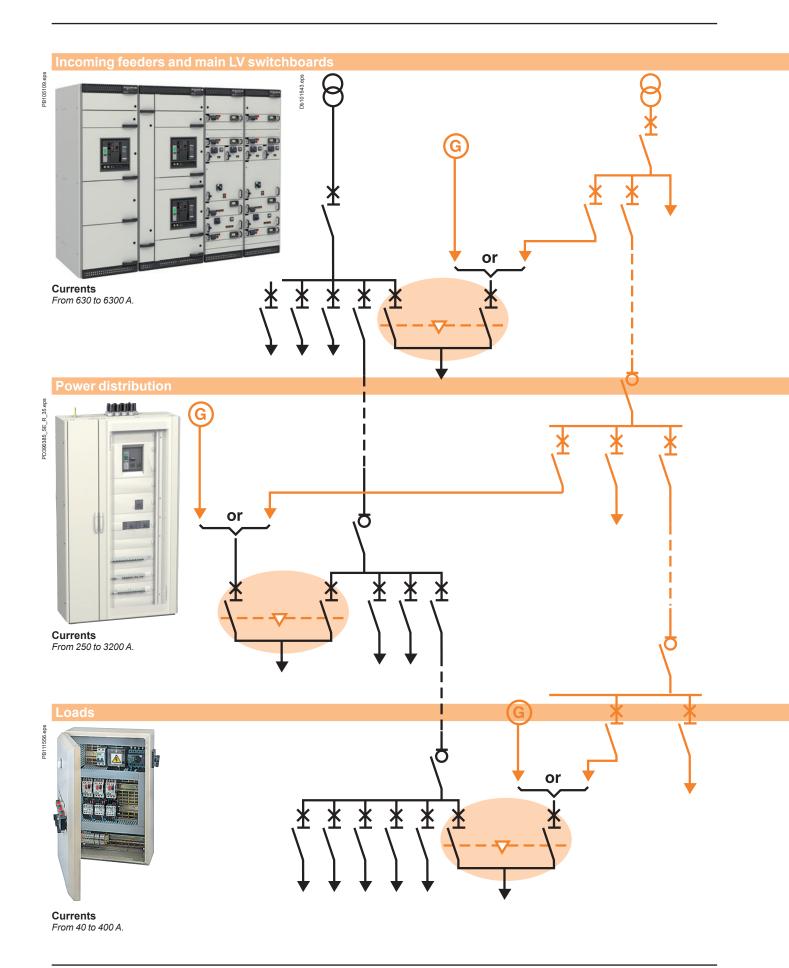


... in a wide range of applications

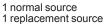

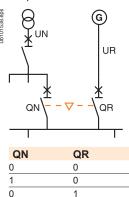


2 sources with coupler on busbars

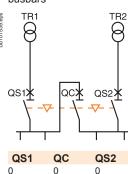

QS1	QC	QS2		
0	0	0		
1	0	1		
1	1	0		
0	1	1		
1	0	0 (1)		
0	0	1 (1)		


(1) possible by forcing operation.

2 normal sources 1 replacement source

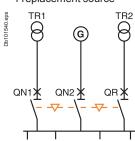

QN1	QN2	QR
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0


Generator or permanent source

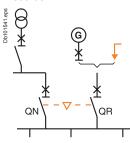

QN	QR	
0	0	
1	0	
0	1	

Typical applications:

- continuous production processes
- operating rooms
- computer rooms...

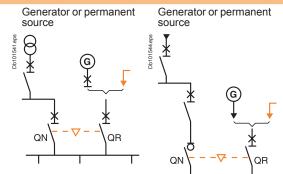

LOAD

QN	QR	
0	0	
1	0	
0	1	

Typical applications:

- large electrical installations (e.g. airports)
- refrigeration units
- special electricity tariffs
- pumping stations...




Ecodial

Ecodial software is dedicated to LV electrical installation calculation in accordance with the IEC60364 international standard or national standards.

This 4th generation, "Ecodial Advance Calculation 4", offers a new ergonomic and new features:

- operating mode that allows easy calculation in case of installation with different type of sources (parallel transformers, back-up generators...)
- discrimination analysis associating curves checking and discrimination tables
- direct access to protection settings including residual current protections
- easy selection of alternate solutions or manual selection of a product.

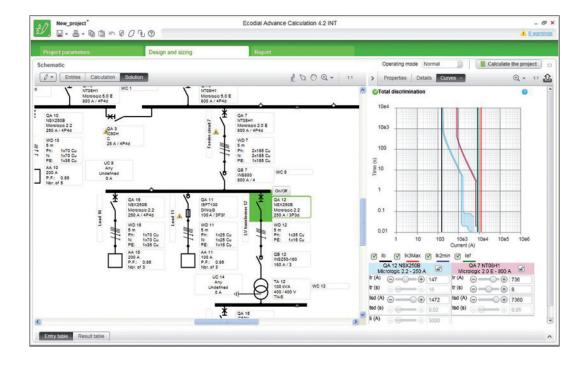



Source-changeover systems Compact NSX100-630, Compact NS630b-1600, Compact INS/INV, Masterpact

Functions and characteristics

Presentation	2
Manual and Automatic Transfer Switch	A-2
Switching devices	
Class PC	A-4
Class CB	A-6
Mechanical interlocking	A-10
Electrical interlocking	
IVE unit	A-14
Operating sequences	
IVE unit	A-15
Overview of source-changeover system	A-16
Associated controllers	
Controller selection	A-17
Controller installation	A-18
BA controller	A-19
BA controller, Operating sequences	A-20
UA controller	A-21
UA controller, Operating sequences, Forced operation mode	A-22
UA controller, Operating sequences, Special-tariff mode	A-23
UA controller, Operating sequences, Test mode and automatic operation	A-24
UA/BA controller	A-25
Dimensions	B-1
Electrical diagrams	C-1
Catalogue numbers and order forms	D-1

Manual and Automatic Transfer Switch

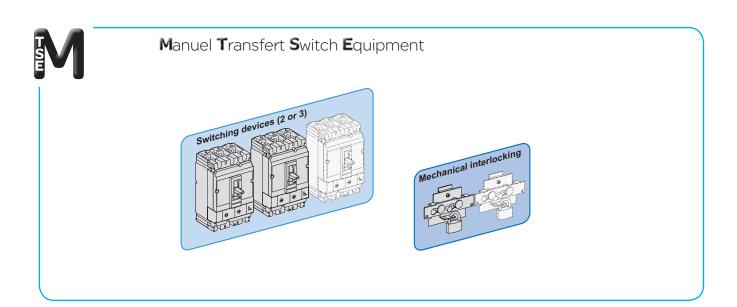

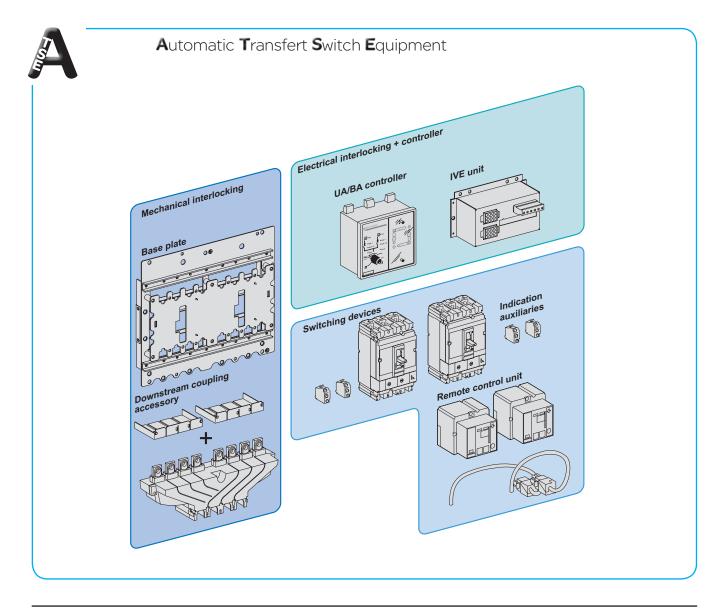

Manual and Automatic Transfer Switch

Switching devices





	Class PC	Class CB
Compact INS/INV	A-4	-
Compact NSX	A-5	A-6
Compact NS	A-5	A-7
Masterpact NT	A-5	A-7
Masterpact NW	A-5	A-7

Mechanical interlocking



Mechanical interlocks	A-10
Keylocks with captive keys	A-12
Cables or connecting rods	A-13

Electrical interlocking and Automatic controller



Electrical interlocking	
IVE unit + base plate	A-14
IVE unit, Operating sequences	A-15
With automatic controller	
Controller selection	A-17
Controller installation	A-18
BA controller	A-19
BA controller, Operating sequences	A-20
UA controller	A-21
UA controller, Operating sequences, Forced operation mode	A-22
UA controller, Operating sequences, Special-tariff mode	A-23
UA controller, Operating sequences, Test mode and automatic operation	A-24
UA/BA controller, Operating sequences	A-25

Informations

IEC60947-6-1 applies to transfer switching equipment (TSE) to be used in power systems for transferring a load supply between a normal and an alternate source (other power supply or generator).

TSE is classified according to

- the method of controlling the transfer
- □ manually transfer switching equipment (MTSE)
 □ automatic transfer switching equipment (ATSE)
- their short circuit capability
- $\hfill \square$ Class PC: TSE that is capable of making and with standing, but not intended for

breaking short-circuit currents.
Switch and switch-disconnectors are the most useful products used.

☐ Class CB: TSE that is capable of working, withstanding, it's intended for breaking short-circuit currents and is provided with over-current releases. Circuit breakers (air circuit breaker or moulded-case circuit breaker) are the most useful products used.

Switching devices Class PC



Range		Compact INS	Compact INS/INV
Types of devices		INS40 to INS80	INS250 to INS630
		INS100 to INS160	INV100 to INV630
Mixing possibilities		All devices, not possible with a complete assembly source-changeover	All devices, not possible with a complete assembly source-changeover
Electrical characteristics			
Current rating		40 to 160 A	100 to 630 A
Insulating voltage Ui (V AC)		750	800
Rated operational voltage			
Positive break indication		•	•
Number of poles		3, 4	3, 4
(N and R devices must have the same	number of poles)		
Operating temperature		-25 °C and +70 °C	-25 °C and +70 °C
Additional indication and contr	rol auxiliaries		
Indication contacts		OF	OF
Voltage releases MX	shunt		
MN	l undervoltage		
Voltage presence indicator			
Voltage transformer			
Ammeter module			
Insulation monitoring module			
Installation and connection			
Fixed front connected		•	•
Fixed rear connected		•	•
Withdrawable, plug-in or drawout			
Installation and connection acc	cessories		
Downstream coupling accessory			•
Bare-cable connectors			
Terminal extensions			
Terminal shields and inter-phase barrie	ers		
Front panel escutcheons			
Locking by	padlock		
by	keylock		

Switching devices Class PC



Range		Compact NSX		Compact NS	Masterpact	
Types of devices		NSX100 to NSX250	NSX400 to NSX630	NS630b to NS1600	NT06 to NT16	NW08 to NW63
Mixing possibilities		all devices	all devices	all devices	all mixing possibilities	
wixing possibilities		NSX100NA to NSX250NA	NSX100NA to NSX630NA	NS630bNA to NSX1600NA	(fixed, drawout or fixed + drawout) NA/HA/HF	(fixed, drawout or fixed + drawout) NA/HA/HF
		fixed/fixed or plug-in/plug-in	fixed/fixed or plug-in/plug-in	fixed/fixed or plug-in/plug-in		
Electrical charact	teristics					
Current rating		15 to 250 A	15 to 630 A	250 to 1600 A	600 to 1600 A	800 to 6300 A
Insulating voltage Ui (\		750	750	750	1000	1000
Rated operational volt						
Positive break indication		•	•		•	•
Number of poles (N and the same number of poles)	nd R devices must have ples)	3, 4	3, 4	3, 4	3, 4	3, 4
Operating temperature	e	-25 °C to +70 °C (50 °C for 440 V - 60 H	łz)	-25 °C to +70 °C (50 °C for 440 V - 60 Hz)	-25 °C to +70 °C (50 °C for 440 V - 60 H	łz)
Control character						
Control voltage	AC	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz	48 V - 50 Hz 110/130, 220/240, 380/440 V - 50/60 Hz		48 to 415 V - 50/60 Hz 440 V - 60 Hz	
	DC	24-250 V	24-250 V	24-250 V	24-250 V	24-250 V
Maximum consumptio	n AC	500 VA	500 VA	180 VA	180 VA	180 VA
•	DC	500 W	500 W	180 W	180 W	180 W
Minimum switching tim	ne	800 ms	800 ms	800 ms	800 ms	800 ms
Protection and me	easurement					
Earth-leakage	by Vigi module					
protection	by control unit			•		•
	by add-on Vigirex relay		•	•		•
Current measurement	S			•	•	•
Voltage, frequency, po	wer measurements, etc.					•
Additional indicat	tion and control auxi					
Indication contacts		OF + SD (+ SDV)	3 OF + SD (+ SDV)	2 OF + SD	2 OF + SD	2 OF + SD
Voltage releases	MX shunt		•	•		•
	MN undervoltage	•	•	•	•	•
Voltage presence indic	cator	•	•		•	•
Voltage transformer		•	•			•
Ammeter module		•	•		•	•
Insulation monitoring r		•				•
Installation and c	onnection	T.		1	1_	1_
Fixed front connected		- (long reer	- (long roos	■ (vertical or	• (vertical or	(vertical or
Fixed rear connected		■ (long rear connections)	(long rear connections)	horizontal)	■ (vertical or horizontal)	(vertical or horizontal)
Withdrawable, plug-in			■ (plug-in on base)	(drawout)	■ (drawout)	■ (drawout)
	onnection accessori		1_		I	
Downstream coupling Bare-cable connectors		-	_	_		
Terminal extensions	•		•	•	-	
Terminal shields and ir	nter-phase harriers	-	•	_		
Front panel escutcheo		•	•	•		•
Locking	by padlock		•	•	-	•
Looking	by keylock	-	•	•	-	•
	by Reylock	1-	_	[-	_	<u> </u>

Switching devicesClass CB

Range		Compact NSX	
Types of devices		NSX100 to NSX250	NSX400 to NSX630
Mixing possibilities		all devices	all devices
		NSX100 to NSX250	NSX100 to NSX630
		N/H/L	N/H/L
		fixed/fixed or plug-in/plug-in	fixed/fixed or plug-in/plug-in
Electrical characteristics		I meaning a bind making in	I meaning of bridg in bridg in
Current rating		15 to 250 A	15 to 630 A
Insulating voltage Ui (V AC)		750	750
Rated operational voltage		750	130
Positive break indication		•	•
Number of poles		3, 4	3,4
(N and R devices must have the	same number of poles)	3,4	0,4
Operating temperature		-25 °C to +70 °C (50 °C for 440 V - 60 Hz)	
Motor mechanism		23 010 170 0 (00 0101 440 0 00112)	
Control voltage	AC	48 V - 50 Hz	48 V - 50 Hz
Control voltage	AC	110/130, 220/240, 380/440 V - 50/60 Hz	110/130, 220/240, 380/440 V - 50/60 Hz
	DC	24-250 V	24-250 V
Maximum concumption			
Maximum consumption	AC	500 VA	500 VA
	DC	500 W	500 W
Minimum switching time		800 ms	800 ms
Protection and measurem			
Earth-leakage protection	by Vigi module	•	•
	by control unit		
	by add-on Vigirex relay		
Current measurements			
Voltage, frequency, power meas	urements, etc.		
Additional indication and	control auxiliaries		
Indication contacts		OF + SD (+ SDV)	3 OF + SD (+ SDV)
Voltage releases	MX shunt	1	
	MN undervoltage	•	
Voltage presence indicator	vaus.vs.ugs		- -
Voltage transformer		- 	
Ammeter module			
Insulation monitoring module			
Installation and connection			-
Fixed front connected	ON .		
		= (1	- (h)
Fixed rear connected		■ (long rear connections)	(long rear connections)
Withdrawable, plug-in or drawou		■ (plug-in on base)	■ (plug-in on base)
Installation and connection			
Downstream coupling accessory	<u> </u>	•	•
Bare-cable connectors		•	•
Terminal extensions			•
Terminal shields and inter-phase	barriers		
Front panel escutcheons			
Locking	by padlock		
9	by keylock		
Compact NSX			
Compact NOX		N8V460 650	NAVAGA NAVAGA
		NSX100-250	NSX400 to NSX630
Potod ourrent In (A)		100 to 350	400 to 630
Rated current In (A)		100 to 250	
Mechanical durability (O _N -C _R -O _R		20000 - 40000 - 50000	15000
Electrical durability at In (O _N -C _R -C for ≤ 440 V and 480 V NEMA ⁽²⁾	O _R -C _N cycles) ⁽¹⁾	10000 - 20000 - 30000	4000 - 6000
Electrical durability at In (O_N - C_R - O_R - C_N cycles) (1) for U = 500 V to 690 V (2)		5000 - 7500 - 10000	2000 - 3000

⁽¹⁾ Mechanical and electrical durability not applicable to Masterpact H3 and L versions. (2) Electrical durability tests carried out with a power factor of 0.8 as per IEC 947-2.

Note: $O_{N'}$ opening of N source $C_{R'}$ closing of R source $O_{R'}$ opening of R source $C_{N'}$ closing of N source

Switching devices Class CB



Compact NS	Masterpact NT	Masterpact NW						
NS630b to NS1600	NT06 to NT16	NW08 to NW63						
 all devices	all mixing possibilities		all mixing possibilities					
NS630b to 1600	(fixed, drawout or fixed	f + drawout)	(fixed, drawout or fixed + drawout)					
N/H/L	N1/H1/H2/H3/L1		N1/H1/H2/H3/					
fixed/fixed or plug-in/plug-in								
250 to 1600 A	600 to 1600 A		800 to 6300 A					
750	1000		1000					
3, 4	3, 4		3, 4					
	-25 °C to +70 °C (50 °C	C for 440 V - 60 Hz)						
	48 to 415 V - 50/60 Hz							
	440 V - 60 Hz							
24-250 V	24-250 V		24-250 V					
180 VA	180 VA		180 VA					
180 W	180 W		180 W					
800 ms	800 ms		800 ms					
·	·							
			1					
•			•					
 	•							
 - 	-		-					
_	-							
	_		-					
2 OF + SD	2 OF + SD		2 OF + SD					
2 OI + 3D	201 + 30	•						
 - 	-		- 					
 -	-	- -						
 +	-		•					
	-		-					
	-		- 					
1	-		-					
1	1-		1=					
 = (vertical or beginnet-1)	(vertical or berizont	al)	= (vertical er k	orizont-I\				
 (vertical or horizontal)	(vertical or horizontal	ai)	(vertical or horizontal)					
■ (drawout)	■ (drawout)		■ (drawout)					
1	I		T					
 1_								
•								
 •	-							
•	•		•					
 •	•							
=		Masterpact NT/NW						
Compact NS		/NW						
	Masterpact NT		NW08-	NW20	NW25-	NW50-		
Compact NS		/NW NT12-NT16	NW08- NW16	NW20	NW25- NW40	NW50- NW63		
Compact NS	Masterpact NT		NW08- NW16 800 to 1600	NW20 2000	NW25- NW40 2500 to 4000	NW63		
Compact NS NS630b to NS1600 630 to 1600	Masterpact NT NT06-NT10 630 to 1600	NT12-NT16 1250 to 1600	NW16 800 to 1600	2000	NW40 2500 to 4000	NW63 5000 to 6300		
Compact NS NS630b to NS1600 630 to 1600 8000	Masterpact NT NT06-NT10 630 to 1600 8000	NT12-NT16 1250 to 1600 8000	NW16 800 to 1600 10000	2000 10000	NW40 2500 to 4000 10000	NW63 5000 to 6300 5000		
Compact NS NS630b to NS1600 630 to 1600	Masterpact NT NT06-NT10 630 to 1600	NT12-NT16 1250 to 1600	NW16 800 to 1600	2000	NW40 2500 to 4000	NW63 5000 to 6300		
Compact NS NS630b to NS1600 630 to 1600 8000	Masterpact NT NT06-NT10 630 to 1600 8000	NT12-NT16 1250 to 1600 8000	NW16 800 to 1600 10000	2000 10000	NW40 2500 to 4000 10000	NW63 5000 to 6300 5000		
Compact NS NS630b to NS1600 630 to 1600 8000	Masterpact NT NT06-NT10 630 to 1600 8000	NT12-NT16 1250 to 1600 8000	NW16 800 to 1600 10000	2000 10000	NW40 2500 to 4000 10000	NW63 5000 to 6300 5000		

Switching devices



Compact INS			INS250	-100	INS250)-160	INS250)-200	INS25	0
Number of poles			3, 4		3, 4		3, 4		3, 4	
Conventional thermal current (A)	lth	at 60 °C	100		160		200		250	
Rated operational current (A)	le	Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
		440-480 V	100	100	160	160	200	200	250	250
		660-690 V	100	100	160	160	200	200	250	250
Durability (category A)		Mechanical	15000		15000		15000		15000	
$(O_N - C_R - O_R - C_N \text{ cycles})$		Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
		440-480 V	1500	1500	1500	1500	1500	1500	1500	1500
		660-690 V	1500	1500	1500	1500	1500	1500	1500	1500
Compact INS			INS320		INS400		INS500		INS63	0
Number of poles			3, 4		3, 4		3, 4		3, 4	
Conventional thermal current (A)	lth	at 60 °C	320		400		500		630	
Rated operational current (A)	le	Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
		440-480 V	320	320	400	400	500	500	630	630
		660-690 V	320	320	400	400	500	500	630	630
Durability (category A)		Mechanical	10000		10000		10000		10000	
$(O_N - C_R - O_R - C_N \text{ cycles})$		Electrical AC, 50/60 Hz	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A	AC22A	AC23A
		440-480 V	1500	1500	1500	1500	1500	1500	1500	1500
		660-690 V	1500	1500	1500	1500	1500	1500	1500	1500

Note:
On: opening of N source
CR: closing of R source
OR: opening of R source
CN: closing of N source

Switching devices





Compact NSX and Compact NS class PC and CB	NSX100 to 250		NSX400 t	o NSX630	NS630b to NS1600		
Number of poles	3, 4		3, 4		3, 4		
Rated current In (A)	100 to 250		400 to 630		630 to 1600		
Mechanical durability (O _N -C _R -O _R -C _N cycles)	20000 - 40000 - 50000		15000		8000		
Electrical durability at In $(O_N^-C_R^-O_R^-C_N$ cycles) for \leq 440 V and 480 V NEMA (2)	10000 - 20000 - 30000		4000 - 6000		2000		
Electrical durability at In (O_N - C_R - O_R - C_N cycles) for U = 500 V to 690 V (2)	5000 - 7500 - 10000		2000 - 3000		1500		
Masterpact class PC and CB	NT06- NT10	NT12- NT16	NW08- NW16	NW20	NW25- NW40	NW50- NW63	
Number of poles	3, 4	3, 4	3, 4	3, 4	3, 4	3, 4	
Rated current In (A)	630 to 1600	1250 to 1600	800 to 1600	2000	2500 to 4000	5000 to 6300	
Mechanical durability (1) (O _N -C _R -O _R -C _N cycles)	8000	8000	10000	10000	10000	5000	
Electrical durability at In $(O_N^-C_R^-O_R^-C_N$ cycles) ⁽¹⁾ for \leq 440 V and 480 V NEMA ⁽²⁾	6000	6000 NT16: 3000	10000	8000	5000	1500	
Electrical durability at In (O_N - C_R - O_R - C_N cycles) ⁽¹⁾ for U = 500 V to 690 V ⁽²⁾	3000	2000 NT16: 1000	10000	6000	2500	1500	

- (1) Mechanical and electrical durability not applicable to Masterpact H3 and L versions.
 (2) Electrical durability tests carried out with a power factor of 0.8 as per IEC 947-2.

Note:
On: opening of N source
CR: closing of R source
OR: opening of R source
CN: closing of N source

Range	Compact		Compact
Models	INS40 to INS80	INS250 to INS630	NSX100 to NSX250
	INS100 to INS160	INV250 to INV630	NSX400 to NSX630
Current rating (A) Type of device	40 to 160 PC type	100 to 630 PC type	100 to 630 PC and CB type
	r C type	r C type	r c and cb type
Interlocking by toggles			
			16-45. ap
			0.0140
			Si de
			01548b
			i i
			AL THEORY
Interlocking by rotary hand			40-
interlocking by rotary hand	uies		
	*		3
	Dp101546.	101547.8	Db101548.ep
ī . A	Dia d	y and	DPIG
		1 · Sa	
Interlocking by keylocks w	vith captive keys		
		São	Sa
		D8418047.eps	Sde 0/95/10/10/10/
Ţ.		and the state of t	ő
			, The state of the
Interlocking by a base plat	e I		
			5
			98
5			The state of the s
Source-changeover			
Ocareo-changeover		A POPLATE	
		**	
		404170.eg	
		884	
- -			
	I	I	

Range	Compact	Masterpact	
Models	NS630b to NS1600	NT06 to NT16	NW08 to NW63
Current rating (A)	630b to 1600	630 to 1600	800 to 6300
ype of device	PC and CB type	PC and CB type	PC and CB type
nterlocking by	extended rotary handles		
M	DD		
M	device keylocks by captive ke	DB417045 eps	Do to 1666 a pas
Mechanical into	erlocking using connecting rod	sdd 855101:00	sde egginia
Mechanical into	erlocking by cables		Sd S
MA	(1)	189 (D) 100	Db 1016627 eps
Mechanical into	erlocking by cables		
	DB416746 aps	DB416840 opps	DB416748 mps
MA			(3)

- (1) Implemented with NS630b to NS1600 electrically-operated devices only.
 (2) For source-changeover systems using cables, always respect the installation conditions specified on.
 (3) Not compatible with automatic controller for NW40b to NW63.

Note: for other cases, please consult us.



Interlocking of two or three toggle-controlled devices.



Interlocking of two devices by rotary handles.



Interlocking with keylocks.



Source-changeover.

Interlocking of two or three toggle-controlled devices

Interlocking system

Two devices can be interlocked using this system. Two identical interlocking systems can be used to interlock three devices installed side by side.

Authorised positions:

- one device closed (ON), the others open (OFF)
- all devices open (OFF).

The system is locked using one or two padlocks (shackle diameter 5 to 8 mm).

This system can be expanded to more than three devices.

There are two interlocking-system models:

- one for Compact INS/INV
- one for Compact NSX100 to NSX250
- one for Compact NSX400 to NSX630.

Combinations of Normal and Replacement devices

All toggle-controlled fixed or plug-in Compact NSX100 to NSX630 circuit breakers and switch-disconnectors of the same frame size can be interlocked. The devices must be either all fixed or all plug-in versions.

Interlocking of two devices by rotary handles

Interlocking system

Interlocking involves padlocking the rotary handles on two devices which may be either circuit breakers or switch-disconnectors.

Authorised positions:

- one device closed (ON), the other open (OFF)
- both devices open (OFF).

The system is locked using up to three padlocks (shackle diameter 5 to 8 mm). There are two interlocking-system models:

- one for Compact INS/INV
- one for Compact NSX100 to NSX250
- one for Compact NSX400 to NSX630.

Combinations of Normal and Replacement devices

All rotary-handle fixed or plug-in Compact NSX100 to NSX630 circuit breakers and switch-disconnectors of the same frame size can be interlocked. The devices must be either all fixed or all plug-in versions.

Interlocking of devices by keylocks (captive keys)

Interlocking using keylocks is very simple and makes it possible to interlock two or more devices that are physically distant or that have very different characteristics, for example medium-voltage and low-voltage devices or a Compact NSX100 to NSX630 switch-disconnector.

Interlocking system

Each device is equipped with an identical keylock and the key is captive on the closed (ON) device. A single key is available for all devices. It is necessary to first open (OFF position) the device with the key before the key can be withdrawwn and used to close another device.

A system of wall-mounted captive key boxes makes a large number of combinations possible between many devices.

Combinations of Normal and Replacement devices

All rotary-handle Compact NSX100 to NSX630 circuit breakers and switch-disconnectors can be interlocked between each other or with any other device equipped with the same type of keylock.

Source-changeover

These assemblies provide an easy way to implement source changeover functions with:

- a single 3-position rotary handle that controls the two switch-disconnectors (Normal source ON, OFF, Replacement source ON)
- a smaller size, taking up less room in the switchboard.

A complete source changeover assembly can be ordered with a single catalogue number.



Interlocking of two Masterpact NT or NW circuit breakers using connecting rods.

Interlocking of two devices using connecting rods

The two devices must be mounted one above the other (either 2 fixed or 2 withdrawable/drawout devices).

Combinations are possible between Compact NS630b to NS1600 devices, between Masterpact NT and between Masterpact NW devices.

With connecting rods, it is also possible to associate two different types of breakers or switch-disconnectors:

- compact NS with masterpact NT
- compact NS with masterpact NW
- Masterpact NT with Masterpact NW.

Installation

This function requires:

- an adaptation fixture on the right side of each switch-disconnector
- a set of connecting rods with no-slip adjustments
- the use of a mechanical operation counter is mandatory.

The adaptation fixtures, connecting rods, circuit breakers and switch-disconnectors are supplied separately, ready for assembly by the customer.

The maximum vertical distance between the fixing planes is 900 mm.



Interlocking of two Masterpact circuit breakers using cable.

Interlocking of two or three devices using cables

For cable interlocking, the circuit breakers may be mounted one above the other or side-by-side.

The interlocked devices may be fixed or drawout, three-pole or four-pole, and may have different ratings and sizes.

The following associations are possible:

- 2 compact NS630b to NS1600
- 2 Masterpact NT
- 2 Masterpact NW
- 3 Masterpact NW
- combinations Compact NS with Masterpact NT or Masterpact NW
- combinations Masterpact NT with NW.

Interlocking between two Masterpact NT or NW

This function requires:

- an adaptation fixture on the right side of each device
- a set of cables without slip adjustments
- the use of a mechanical operation counter CDM is mandatory.

The maximum distance between the fixing planes (vertical or horizontal) is 2000 mm.

Interlocking between three Masterpact NW

This function requires:

- a specific adaptation fixture installed on the right side of each device
- two sets of cables without slip adjustments
- \blacksquare the use of a mechanical operation counter CDM is mandatory.

The maximum distance between the fixing planes (vertical or horizontal) is 1000 mm.

Installation

The adaptation fixtures, sets of cables and circuit breakers or switch-disconnectors are supplied separately, ready for assembly by the customer.

Installation conditions for cable interlocking systems:

- cable length: 2.5 m
- radius of curvature: 100 mm
- maximum number of curves: 3.


Only Masterpact NW may be used for three-device combinations.

Interlocking between two devices (Compact NS630b to 1600 or Masterpact NT, NW

This function requires:

- an adaptation fixture on the right side of each device
- a set of cables with no-slip adjustments.

The maximum distance between the fixing planes (vertical or horizontal) is 2000 mm.

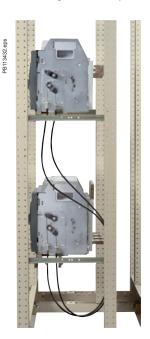

Interlocking of two Masterpact circuit breakers using cables.

Electrical interlocking

IVE unit

Electrical interlocking is used with a mechanical interlocking system.

Morover, the relays controlling the closing order to the "N" and "R" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.



IVE unit.

Electrical interlocking is carried out by an electrical control device.

For Compact NSX up to 630 A, electrical interlocking is implemented by the IVE unit integrating control circuits and an external terminal block in accordance with the page C-4 of the chapter "Electric diagrams" of this catalogue.

The integrated control circuits implement the time delays required for correct source transfer.

For Compact NS630b to NS1600 and Masterpact, this function can be implemented in one of two ways:

- using the IVE unit
- by an electrician based on the diagrams in accordance with the pages C-8 to C-13 of the chapter "Electric diagrams" of this catalogue.

Characteristics of the IVE unit

- External connection terminal block:
- □ inputs: circuit breaker control signals
- □ outputs: status of the SDE contacts on the "N" and "R" source circuit breakers.
- 2 connectors for the two "N" and "R" source circuit breakers:
- □ inputs:
- status of the OF contacts on each circuit breaker (ON or OFF)
- status of the SDE contacts on the "N" and "R" source circuit breakers
- □ outputs: power supply for operating mechanisms.
- Control voltage:
- □ 24 to 250 V DC
- □ 48 to 415 V 50/60 Hz 440 V 60 Hz.

The IVE unit control voltage must be same as that of the circuit breaker operating mechanisms.

Necessary equipment

For Compact NSX100 to NSX630, each circuit breaker must be equipped with:

- a motor mechanism
- an OF contact
- an SDE contact.


The components are supplied ready for assembly and the circuit breakers prewired. The prewiring must not be modified.


For Compact NS630b to NS1600, each circuit breaker must be equipped with:

- a motor mechanism
- an available OF contact
- a CE connected-position contact (carriage switch) on withdrawable circuit breakers
- an SDE contact.

For Masterpact NT and NW, each circuit breaker must be equipped with:

- a remote-operation system made up of:
- □ MCH gear motor
- ☐ MX or MN opening release
- □ XF closing release
- □ PF "ready to close" contact
- an available OF contact
- one to three CE connected-position contacts (carriage switches) on drawout circuit breakers (depending on the installation).

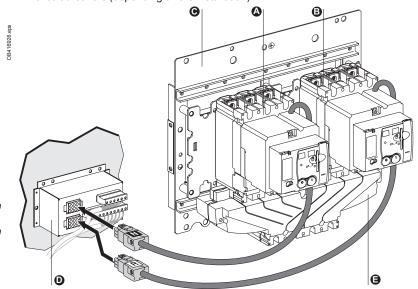

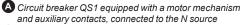

(B) Circuit breaker QS2 equipped with a motor mechanism and auxiliary contacts, connected to the R source


Base plate with mechanical interlocking

D Electrical interlocking unit IVE

■ Coupling accessory (downstream connection)

Operating sequences

IVE unit

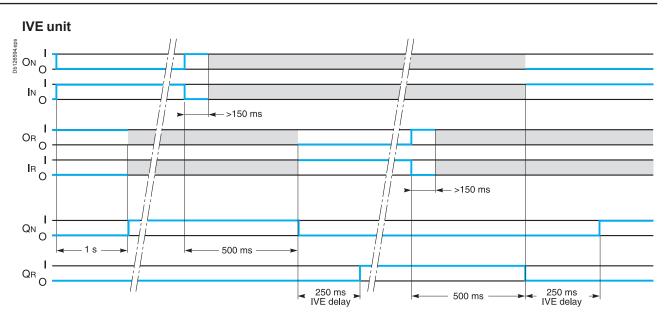


Symbols

QN: "Normal" Compact circuit breaker equipped for remote operation (motor mechanism)

QR: "Replacement" Compact circuit breaker equipped for remote operation (motor mechanism)

ON: Circuit breaker QN opening order
OR: Circuit breaker QR opening order
IN: Circuit breaker QN closing order
IR: Circuit breaker QN closing order
L1: Faulty "Normal" indication LED
L2: Faulty "Replacement" indication LED

Dimensions

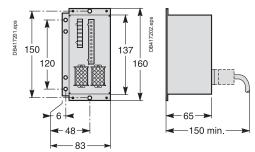


Overview of source-changeover system



Interlocking on a base plate.

PB113417.eps

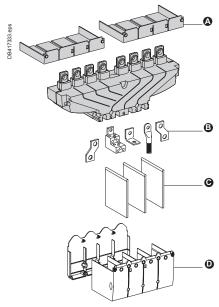

- A Short terminal shields
- **B** Terminals
- Interphase barriers
 - Long terminal shields

Interlocking of two devices by base plate

Interlocking system

A base plate designed for two Compact NSX devices can be installed horizontally or vertically on a mounting rail. Interlocking is carried out on the base plate by a mechanism located behind the devices. In this way, access to the device controls and trip units is not blocked.

Combinations of Normal and Replacement devices

All rotary-handle and toggle-controlled Compact NSX100 to NSX630 circuit breakers and switch-disconnectors can be interlocked. Devices must be either all fixed or all plug-in versions, with or without earth-leakage protection or measurement modules. An adaptation kit is required to interlock:

- two plug-in devices
- a Compact NSX100 to NSX250 with an NSX400 to NSX630.

Connection to the downstream installation can be made easier using a coupling accessory.

Downstream coupling accessory

This accessory simplifies connection to bars and cables with lugs.

It may be used to couple two switch-disconnectors of the same size.

Pitch between outgoing terminals:

- Compact INS250 and INV100 to 250: 35 mm
- Compact INS/INV320 to INS/INV630: 45 mm
- Compact NSX100 to NSX250: 35 mm
- Compact NSX400 to NSX630: 45 mm.

For Compact NSX circuit breakers, the downstream coupling accessory can be used only with **fixed versions**.

Connection and insulation accessories

The coupling accessory can be fitted with the same connection and insulation accessories as the circuit breakers and switch-disconnectors.

Possible uses	Downstream coupling					
	Possible mounting	Outgoing pitch (mm)				
Manual source-changeover systems						
INS250 (100 to 250 A) with rotary handle		35				
NSX100 to NSX250 with rotary handle	•	35				
NSX100 to NSX250 on base plate with toggle control		35				
INS400 to INS630 (320 to 630 A) with rotary handle		45				
NSX400 to NSX630 with rotary handle		45				
NSX400 to NSX630 on base plate with toggle control		45				
Complete source-changeover assembly						
INS250 (100 to 250 A)	•	35				
INS400 to INS630 (320 to 630 A)		45				

Associated controllers

Controller selection

By combining a remote-operated source-changeover system with an integrated BA or UA automatic controller, it is possible to automatically control source transfer according to user-selected sequences. These controllers can be used on source-changeover systems comprising 2 circuit breakers.
For source-changeover systems comprising 3 circuit

breakers, the automatic control diagram must be prepared by the installer as a complement to to diagrams provided in the "electrical diagrams" section of this catalogue.



BA controller.



UA controller.

Controller				BA		UA		
Compatible circuit breakers				All Compact NS, Compact NSX and Masterpact circuit breakers				
4-position switch								
Automatic operation				•		•		
Forced operation on "Normal" sourc	_			-		-		
Forced operation on "Replacement" Stop (both "Normal" and "Replacem		f)		-		-		
Automatic operation	ent sources or	')				•		
Monitoring of the "Normal" source ar	nd automatic tr	ansfer						
Generator set startup control								
Delayed shutdown (adjustable) of ge	enerator set					•		
Load shedding and reconnection of								
Transfer to the "Replacement" source of the "Normal" phase is absent	e if one of the p	ohases				•		
Test								
By opening the P25M circuit breaker			er	•				
By pressing the test button on the fro	ont of the contr	oller				•		
Indications								
Circuit breaker status indication on t on, off, fault trip	ne tront of the	controlle	er:	•				
Automatic mode indicating contact								
Other functions								
Selection of type of "Normal" source						•		
(single-phase or three-phase) (1)								
Voluntary transfer to "Replacement" (e.g. energy management command				•		•		
During peak-tariff periods (energy m		mmand	s)			•		
forced operation on "Normal" source not operational	eif "Replaceme	nt" sour	cé					
Additional contact (not part of control	oller).			•		•		
Transfer to "Replacement" source of		closed						
(e.g. used to test the frequency of Ul Setting of maximum startup time for		nt courc	.0			_		
Options	trie replaceme	iii sourc	C			•		
Communication option								
Power supply								
Control voltages (2)	110 V			•		•		
		20 to 240 V 50/60 Hz						
	380 to 415 V		łz					
Operating thresholds	and 440 V 60) NZ						
Undervoltage	0.35 Un ≤ vo	ltage ≤ (0 7 Un					
Phase failure	0.5 Un ≤ volt	0		_		-		
Voltage presence	voltage ≥ 0.8	•						
IP degree of protection (EN 6		degre	e of p	rotecti	on aga	ainst		
external mechanical impacts	,							
Front	IP40							
Side Connectors	IP30 IP20			-				
Front	IK07			•		-		
Characteristics of output cor		olt-fre	e conf					
Rated thermal current (A)	8							
Minimum load	10 mA at 12	V						
Output contacts:								
Position of the Auto/Stop switch				•				
Load shedding and reconnection or Generator set start order.	der					•		
Generator set start order.		AC				DC		
Utilisation category (IEC 947-5-1)		AC12	AC13	AC14	AC15	DC12	DC13	
Operational current (A)	24 V	8	7	5	5	8	2	
	48 V	8	7	5	5	2	-	
	110 V 220/240 V	8 8	6 6	4 4	4 3	0.6	-	
	250 V	-	-	-	-	0.4	-	
	380/415 V	5	-	-	-	-	-	
	440 V	4	-	-	-	-	-	
	660/690 V	-	-	-	-	-	-	

⁽¹⁾ For example, 220 V single-phase or 220 V three-phase.
(2) The controller is powered by the ACP control plate. The same voltage must be used for the ACP plate, the IVE unit and the circuit breaker operating mechanisms. If this voltage is the same as the source voltage, then the "Normal" and "Replacement" sources can be used directly for the power supply. If not, an isolation transformer must be used.

Associated controllers

Controller installation



ACP control plate.

ACP control plate

The control plate provides in a single unit:

- protection for the BA or UA controller with two highly limiting P25M circuit breakers (infinite breaking capacity) for power drawn from the AC source
- control of circuit-breaker ON and OFF functions via two relay contactors
- connection of the circuit breakers to the BA or UA controller via a built-in terminal block.

Control voltages

- 110 V 50/60 Hz.
- 220 to 240 V 50/60 Hz.
- 380 to 415 V 50/60 Hz and 440 V 60 Hz.

The same voltage must be used for the ACP control plate, the controller and the circuit breaker operating mechanisms.

Installation


Connection between the ACP control plate and the IVE unit may use:

- wiring done by the installer
- prefabricated wiring (optional).


Installation of the BA and UA controllers

The BA and UA controllers may be installed in one of two manners:

- directly mounted on the ACP control plate
- mounted on the front panel of the switchboard
- if the length of the connection between the controller and the control plate (ACP) is less than or equal to 1 m, the connecting cable **ref. 29368** can be ordered as an optional extra. Cables longer than 1 m, but not longer than 2 m will be the responsibility of the installer.

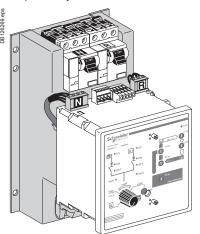

Mounting on the ACP control plate.

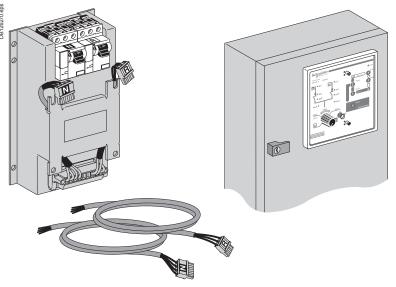


Mounting on the front panel of the switchboard.

BA controller

The BA controller is used to create simple sourcechangeover systems that switch from one source to another depending on the presence of voltage UN on the "Normal" source.

It is generally used to manage two permanent sources and can control Compact NS, Compact NSX and Masterpact NT/NW circuit breakers and switch-disconnectors.



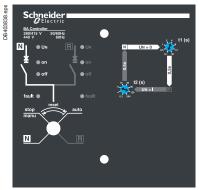

Front of the BA controller.

Operating modes

A four-position switch may be used to select:

- automatic operation
- forced operation on the "Normal" source
- forced operation on the "Replacement" source
- stop (both "Normal" and "Replacement" sources off).

Setting the time delays

Time delays are set on the front of the controller.

t1. delay between detection that the "Normal" source has failed and the transmission of the order to open the "Normal" source circuit breaker (adjustable from 0.1 to 30 seconds).

t2. delay between detection that the "Normal" source has returned and the transmission of the order to open the "Replacement" source circuit breaker (adjustable from 0.1 to 240 seconds).

Circuit breaker commands and status indications

The status of the circuit breakers is indicated on the front of the controller.

■ ON, OFF, fault.

A built-in terminal block may be used to connect the following input/output signals:

- inputs
- □ voluntary order to transfer to source R (e.g. for special tariffs, etc.)
 □ additional control contact (not part of the controller). Transfer to the "Replacement" source takes place only if the contact is closed (e.g. used to test the frequency of UR, etc.)
- outputs:

□ indication of operation in automatic or stop mode via changeover contacts.


Test

It is possible to test the operation of the BA controller by turning OFF (opening) the P25M circuit breaker for the "Normal" source and thus simulating a failure of voltage U_{N} .

Associated controllers


BA controller Operating sequences

Switch set to Auto (automatic operation and special-tariff mode)

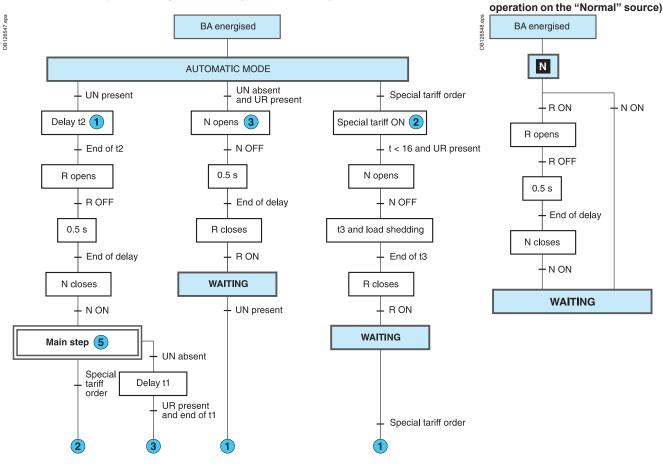


Switch set to the "R" position

(forced operation on the "Replacement" source)

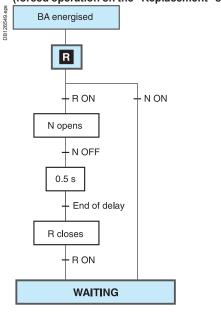

Switch set to the "Stop" position

Switch set to the "N" position (forced

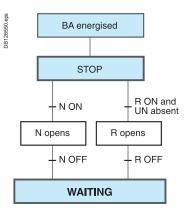

Key

UN: "Normal" source voltage
UR: "Replacement" source voltage
N: "Normal" source circuit breaker
R: "Replacement" source circuit breaker

The number sends to the indicated step when the condition is true.

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).


UA controller

The UA controller is used to create a sourcechangeover system integrating the following automatic functions:

- transfer from one source to another depending on the presence of voltage UN on the "Normal" source
- startup of an engine generator set
- shedding and reconnection of non-priority circuits
- transfer to the "Replacement" source if one of the phases on the "Normal" source fails.

The UA controller can control Compact NS, Compact NSX and Masterpact NT/NW devices.



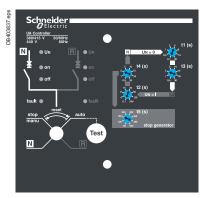

Front of the UA controller.

Operating modes

A four-position switch may be used to select:

- automatic operation
- forced operation on the "Normal" source
- forced operation on the "Replacement" source
- stop (both "Normal" and "Replacement" sources off, then manual operation).

Setting the time delays

Time delays are set on the front of the controller.

- t1. delay between detection that the "Normal" source has failed and the transmission of the order to open the "Normal" source circuit breaker (adjustable from 0.1 to 30 seconds).
- **t2.** delay between detection that the "Normal" source has returned and the transmission of the order to open the "Replacement" source circuit breaker (adjustable from 0.1 to 240 seconds).
- **t3.** delay following opening of QN with load shedding and before closing of QR (adjustable from 0.5 to 30 seconds).
- **t4.** delay following opening of QR with load reconnection and before closing of QN (adjustable from 0.5 to 30 seconds).
- **t5.** delay for confirmation that UN is present before shutting down the engine generator set (adjustable from 60 to 600 seconds).
- t6. delay before startup of the engine generator set (120 or 180 seconds).

Commands and indications

Circuit breaker status indications on the front of the controller:

ON, OFF, fault.

A built-in terminal block may be used to connect the following input/output signals:

- inputs:
- □ voluntary order to transfer to source R (e.g. for special tariffs, etc.)
- □ additional control contact (not part of the controller). Transfer to the "Replacement" source takes place only if the contact is closed (e.g. used to test the frequency of UR, etc.)
- outputs:
- □ control of an engine generator set (ON / OFF)
- □ shedding of non-priority circuits
- □ indication of operation in automatic mode via changeover contacts.

Distribution-system settings

Three switches are used to:

- select the type of "Normal" source, whether single-phase or three-phase (e.g. 240 V single-phase or 240 V three-phase)
- select whether to remain (or not) on the "Normal" source if the "Replacement" source is not operational during operation on special tariffs
- select the maximum permissible startup time for the engine generator set during operation on special tariffs (120 or 180 seconds).

Test

A pushbutton on the front of the controller may be used to test transfer from the "Normal" source to the "Replacement" source, then the return to the "Normal" source. The test lasts approximately three minutes.

COM communications option

Using the internal bus protocol, this option may be used to remote the following information:

- circuit breaker status (ON, OFF, fault trip)
- presence of the "Normal" and "Replacement" voltages
- presence of an order for forced operation (e.g. special tariffs)
- settings and configuration information
- status of non-priority circuits (loads shed or not)
- position of the switch (stop, auto, forced operation on the "Normal" source, forced operation on the "Replacement" source).

Associated controllers

UA controller Operating sequences Forced operation mode

Switch set to the "R" position (forced operation on the "Replacement" source)

UA energised R N ON R ON Genset startup Order issued and UR absent Order issued and UR present Delay t6 (switch C) End of t6 t < t6 and UR present Genset shutdown UR failure N opens N OFF t3 and load shedding end of t3 R closes R ON WAITING


WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return

When the UA controller is not energised, the output for generator set startup is activated).


Key

UN : "Normal" source voltage
UR : "Replacement" source voltage
N : "Normal" source circuit breaker
R : "Replacement" source circuit breaker

Switch set to the "N" position (forced operation on the "Normal" source)

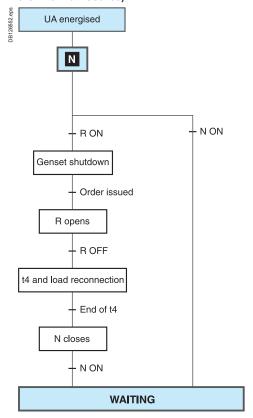


Switch set to the "Stop" position

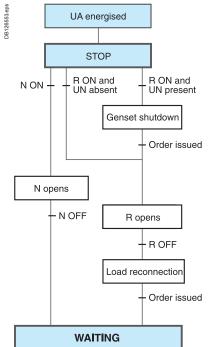

UA controller Operating sequences Special-tariff mode

Switch set to the "Auto" position (special-tariff mode)

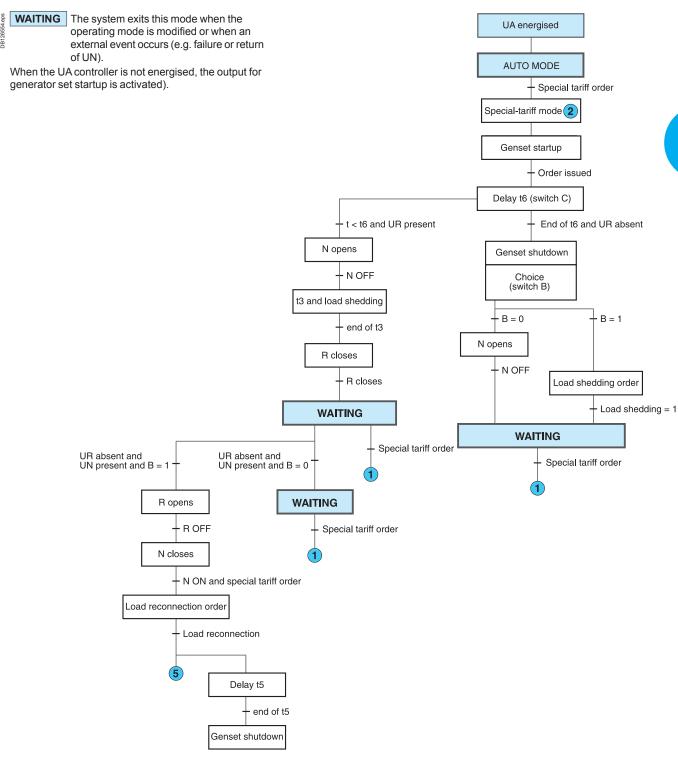

Key

UN : "Normal" source voltage
UR: "Replacement" source voltage
N: "Normal" source circuit breaker
R: "Replacement" source circuit breaker
B: Penalties accepted (N ON), i.e. B = 1


1 The number sends to the indicated step when the condition is true.

DB126555.eps

Associated controllers

UA controller Operating sequences Test mode and automatic operation

Switch set to the "Auto" position (automatic operation and test mode).

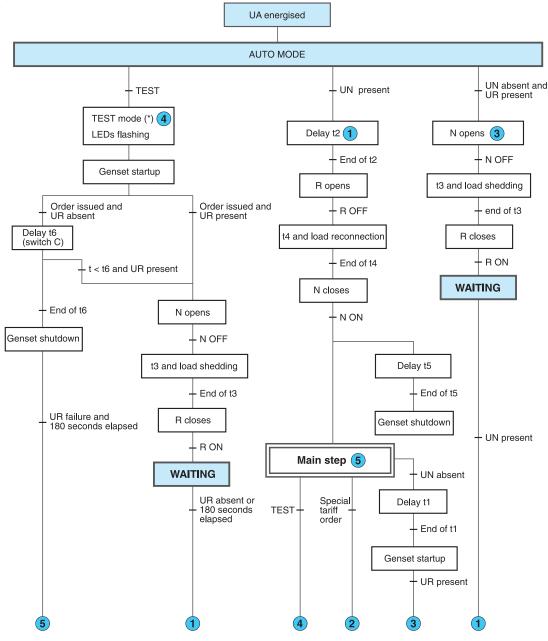

WAITING The system exits this mode when the operating mode is modified or when an external event occurs (e.g. failure or return of UN).


When the UA controller is not energised, the output for generator set startup is activated).

KeyUN: "Normal" source voltage UR: "Replacement" source voltage "Normal" source circuit breaker : "Replacement" source circuit breaker : Penalties accepted (N ON), i.e. B = 1 The test lasts 180 seconds.

The number sends to the indicated step when the condition is true.

UA/BA controller

BA controller

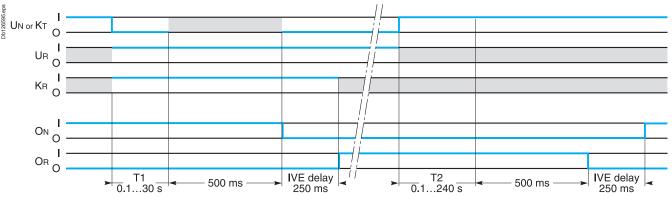


Inputs

UN: "Normal" source voltage
UR: "Replacement" source voltage
KT: order for forced-operation on R
KR: additional check before transfer

Outputs

QN: "Normal" source circuit breaker
QR: "Replacement" source circuit breaker

UA controller

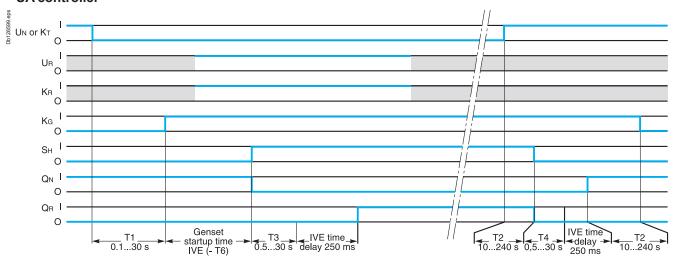

Inputs

UN: "Normal" source voltage
UR: "Replacement" source voltage
KT: order for forced-operation on R
KR: additional check before transfer

Outputs

KG : order to the genset **SH** : load-shedding order

QN : "Normal" source circuit breaker QR : "Replacement" source circuit breaker




schneider-electric.com

This international site allows you to access all the Schneider Electric Solution and Product information via:

- comprehensive descriptions
- range data sheets
- a download area
- product selectors
- ...

You can also access the information dedicated to your business and get in touch with your Schneider Electric country support.

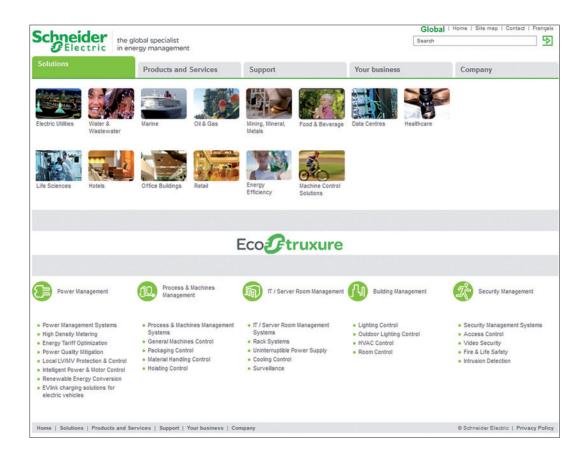

Source-changeover systems Compact NSX100-630, Compact NS630b-1600, Compact INS/INV, Masterpact

Dimensions

Presentation Functions and characteristics	2 A-1
Compact INS/INV source-changeover systems	B-2
Compact NSX source-changeover systems	B-4
Downstream coupling accessory for Compact INS/INV, Compact NSX source-changeover systems	B-6
Compact NS source-changeover systems	B-7
Masterpact NT/NW source-changeover systems Interlocking using connecting rods	B-8
Compact NSX source-changeover systems Interlocking on a base plate	B-9
Compact NS and Masterpact NT source-changeover syntherlocking using connecting rods	stems B-13
Masterpact NW source-changeover systems Interlocking using connecting rods	B-14
Compact NS and Masterpact NT/NW source-changeover systems Interlocking using cables	B-15
Compact NS and Masterpact NT source-changeover syntherlocking using cables	stems B-16
Masterpact NT/NW source-changeover systems Interlocking using cables	B-17
Masterpact NW source-changeover systems Interlocking using cables IVE unit, UA/BA automatic controllers	B-18 B-20
Electrical diagrams Catalogue numbers and order forms	C-1 D-1


Compact INS/INV source-changeover systems


Class PC

Interlocking of direct rotary handles

Compact INS/INV250 - 100 to 250 A / Compact INS/INV320/400/500/630

Dimensions Schegger of the Control of the Control

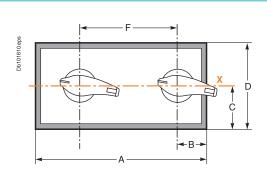

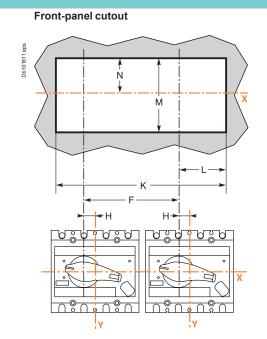

Dimensions (mm)


Туре	Α	В	С	D	F	G	Н	K	L	М	N	Р
INS/INV250 - 100 to 250 A	325	90	87.5	175	156	106	17.5	295	75.5	150	75	131
INS/INV320/400/500/630	416	115	100	200	210	130	22.5	386	100	175	74.5	160.4


Note: X and Y are the symmetry planes for a 3-pole device.

Interlocking of extended rotary handles


Compact INS40/63/80/100/125/160 / Compact INS/INV250 - 100 to 250 A / Compact INS/INV320/400/500/630

Dimensions

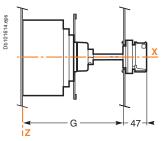

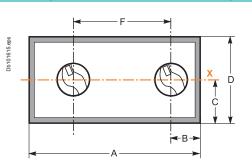

Front-panel cutout

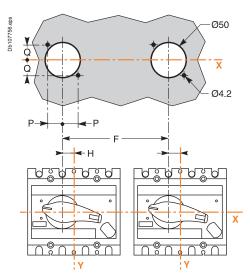

Dimensions (mm)


Туре	Α	В	С	D	F	G min	G max	Н	Р	Q	
INS40/63/80	325	90	87.5	175	156	155	396	0	25.5	25.5	
INS100/125/160	325	90	87.5	175	156	200	441	0	25.5	25.5	
INS/INV250 - 100 to 250 A	325	90	87.5	175	156	185	600	17.5	25.5	25.5	
INS320/400/500/630	416	115	100	200	210	204	600	22.5	30.8	30.8	


Compact INS/INV source-changeover systems

Class PC




Assembly for INS250 - 100 to 250 A / Assembly for INS320/400/500/630

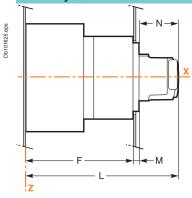

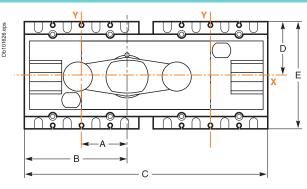

Front-panel cutout

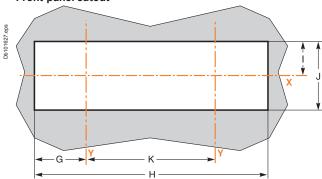



Dimensions (mm)


Туре	Α	В	С	D	E	F	G	Н	-1	J	K	L	M	N
INS250 - 100 to 250 A	60.4	130.4	296	68	136	131	61.8	279.3	42	84	156	186.5	5.5	50
INS320/400/500/630	82.5	175	395	102.5	205	155	87	383.7	64	128	210	213	8	50

Dimensions of the complete source-changeover assembly with an extended handle

eps.

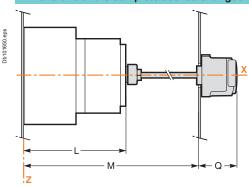

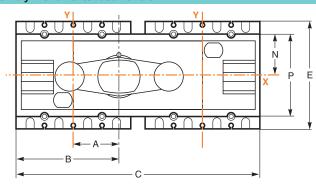

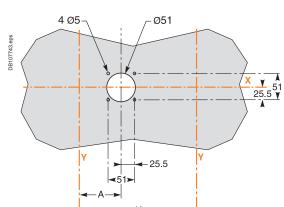

Dimensions (mm)

Type	Α	В	C	E	K	L	M	N	
INS250 - 100 to 250 A	60.4	130.4	295	136	156	138.5	631	50	
INS320/400/500/630	82.5	175	395	205	210	162.5	658	75	

Dimensions (mm)

Туре	Р	Mmax	Mmin	Q	
INS250 - 100 to 250 A	100	567.5	195	64	
INS320/400/500/630	150	593	220.5	64	

Note: lines **X** and **Y** indicate the axes of symmetry of the switch-disconnector. Reference plane **Z** corresponds to the back of the switch-disconnector.

Compact NSX source-changeover systems

Class PC


Interlocking of direct rotary handles Compact NSX100 NA to NSX630 NA Dimensions Front-panel cutout

Dimensions (mm)


	Α	В	С	D	F	G	Н	J	K	L	M	N	Р
NSX100/160/250 NA	325	90	87.5	175	156	133	9.25	9	295	75.5	150	75	155
NSX400/630 NA	416	115	100	200	210	157	5	24.6	386	100	175	74.5	179

Interlocking of extended rotary handles

Compact NSX100 NA to NSX630 NA

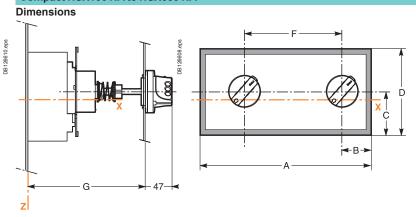

Front-panel cutout

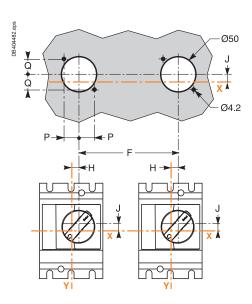


$\textbf{Dimensions} \ (\text{mm})$

Туре	Α	В	С	D	F	G min	G max	Н	J	Р	Q
NSX100/160/250 NA	325	90	87.5	175	156	171	600	9.25	9	25.5	25.5
NSX400/630 NA	416	115	100	200	210	195	600	5	24.6	30.8	30.8

Compact NSX source-changeover systems

Class PC

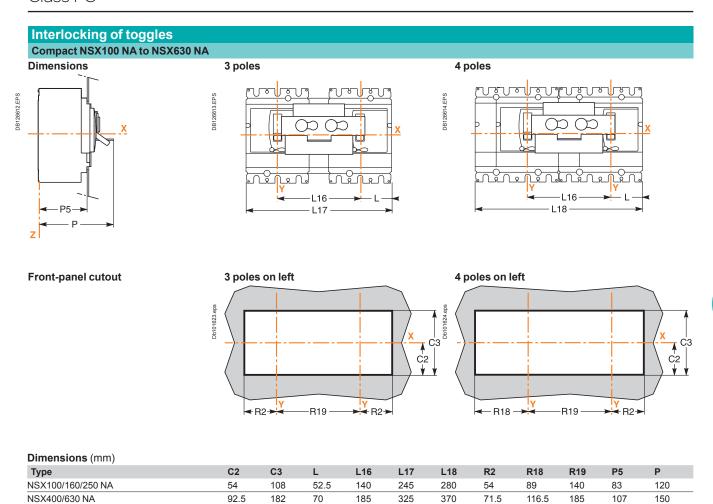


Downstream coupling accessory for Compact INS/INV, Compact NSX source-changeover systems

Class PC


Downstream coupling accessory

Compact NSX100 NA to NSX630 NA (only for Compact NSX fixed devices)


Dimensions for Compact NSX

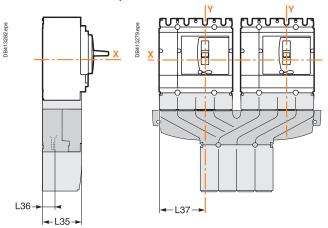


Dimensions for Compact INS/INV

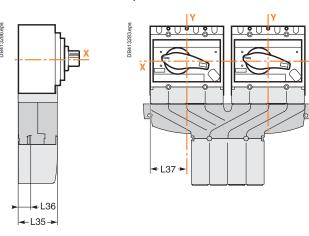

Dimensions

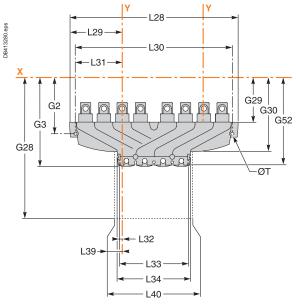

Connection

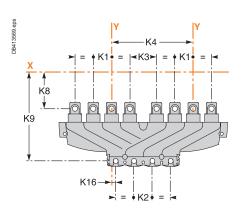

Dimensions (mm)

Difficultions (min)													
Туре	G2	G3	G28	G29	G30	G52	K1	K2	K3	K4	K8	K9	K16
NSX100/160/250 NA	118	181.5	244.5	96	152.5	178	35	35	51	156	70	170	8
NSX400/630 NA	165.9	264.7	337.5	143.5	220.5	264.7	45	45	75	210	113.5	250.7	15
INS250 - 100 to 250 A	105.5	169	232	83.5	140	165.5	35	35	51	156	57.5	157.5	25.5
INS320/400/500/630	141	240.7	313	119	195.6	240	45	45	75	210	88.5	225.7	37.5

Dimensions (mm)

Туре	L28	L29	L30	L31	L32	L33	L34	L35	L36	L37	L39	L40	ØT
NSX100/160/250 NA	320	99.5	300	89.5	4.73	130.5	139.5	74.5	19.5	87.5	9.5	140	6
NSX400/630 NA	425	130	400	117.5	5.15	175.3	184.7	98.5	26	115	9.85	184.7	6
INS250 - 100 to 250 A	320	83	300	72	12.8	130.5	139.5	74.5	21.5	70	8.5	140	6
INS320/400/500/630	425	107.5	400	95	17.35	175.3	184.7	98.5	26	92.5	12.65	184.7	6


Compact NS source-changeover systems


Class PC

Interlocking of extended rotary handles


Compact NS630b NA to NS1600 NA

Dimensions

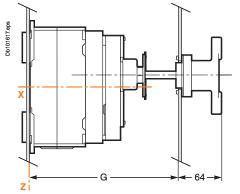

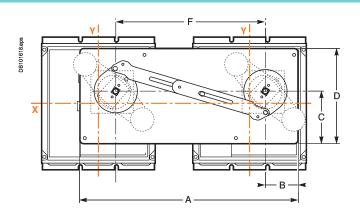

Front-panel cutout

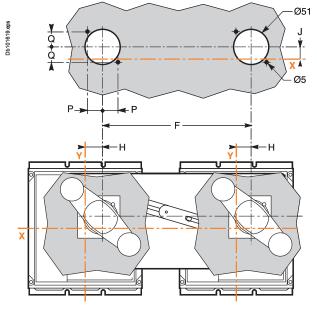


Dimensions (mm)

Туре	Α	В	С	D	F	G min	G max	Н	J	Р	Q	R
NS630b/800/1000/1200/1600 NA	411	63.5	98	175	280	218	605	25	24	25.5	25.5	64


Masterpact NT/NW source-changeover systems Interlocking using connecting rods


Class PC

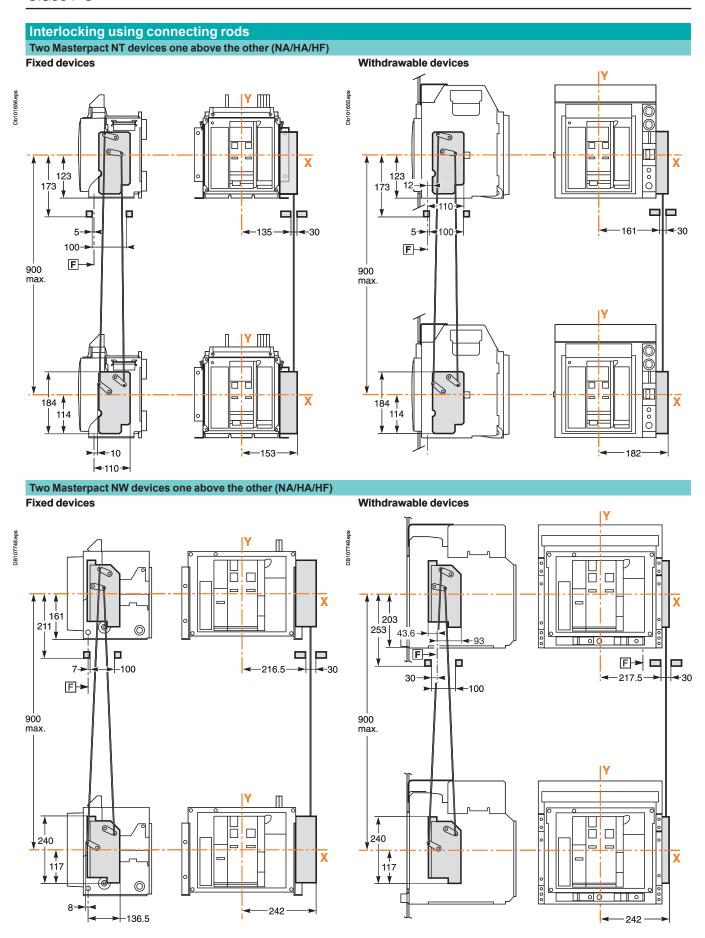


Compact NSX source-changeover systems Interlocking on a base plate

Class PC and CB

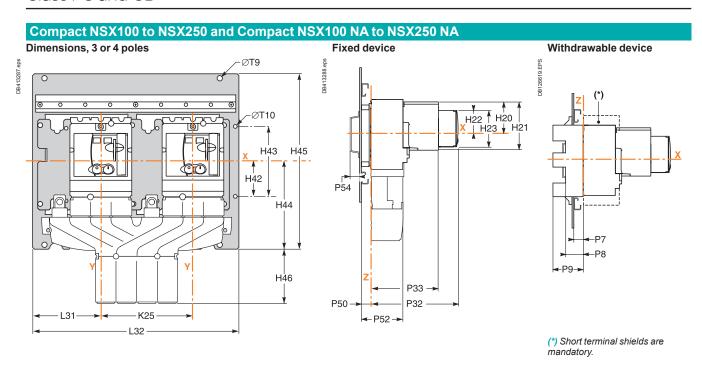

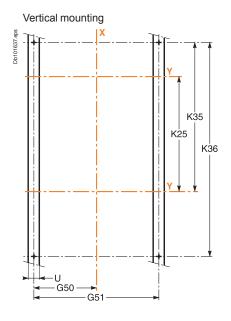

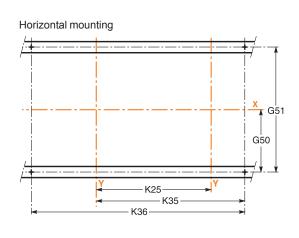

Dimensions (mm)

Туре	G50	G51	H20	H21	H22	H23	H42	H43	H44	H45	H46	K25	K35	K36
NSX100/160/250	137.5	285	62.5	97	45.5	73	60	120	144.5	300	37	156	210.5	300
NSX400/630	180	360	100	152	83	123	60	120	189	378	77	210	282.5	400

Dimensions (mm)

Туре	L31	L32	P7	P8	P9	P32	P33	P50	P52	P54	ØT9	ØT10	U
NSX100/160/250	110.5	354	25	45	75	182	143	25	99.5	21	9	6	≤ 32
NSX400/630	150.5	466	25	45	100	256	215	25	123	21	9	6	≤32

Compact NSX source-changeover systems

Interlocking on a base plate

Class PC and CB

Compact NSX400 to NSX630 and Compact NSX400 NA to NSX630 NA Dimensions, 3 or 4 poles Fixed device DB413289.ep ØT10 ØT10 0 H43 ₹ 1 H43 H45 H42 H42 H44 P54 H46 L31 K25 P33 L32 - P52 -Withdrawable device -P8-Note: coupling accessory: only for changeover systems using fixed versions of Compact NSX circuit breakers. (*) Short terminal shields are mandatory. **Dimensions** Vertical mounting Horizontal mounting G51 K35 G50 K25

Note: dimensions see page B-9.


K36


G50

G51


Compact NSX source-changeover systems Interlocking on a base plate


"Normal" and "Replacement" source devices: NSX100 to NSX250

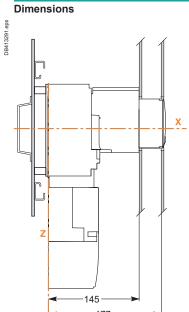

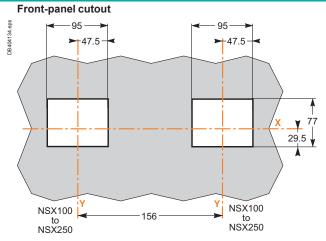

"Normal" and "Replacement" source devices: NSX400 to NSX630

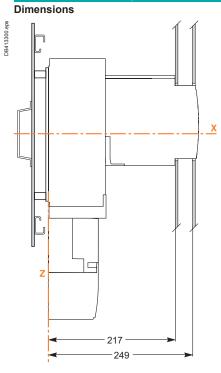

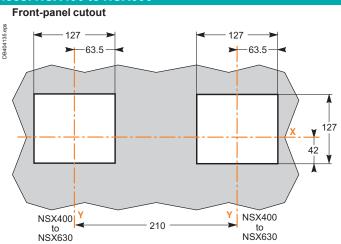



Compact NSX source-changeover systems

Interlocking on a base plate

Class PC and CB

NSX400 to NSX630 as the "Normal" device, NSX100 to NSX250 as the "Replacement" device

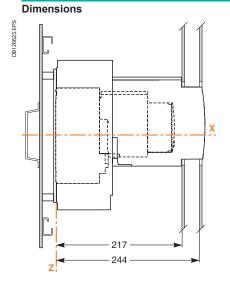


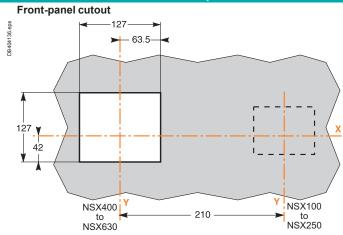


Compact NS and Masterpact NT source-changeover systems

Interlocking using connecting rods

Class CB

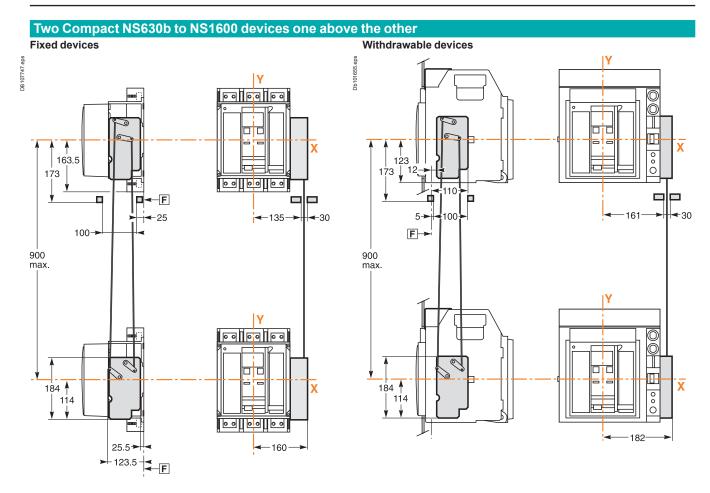


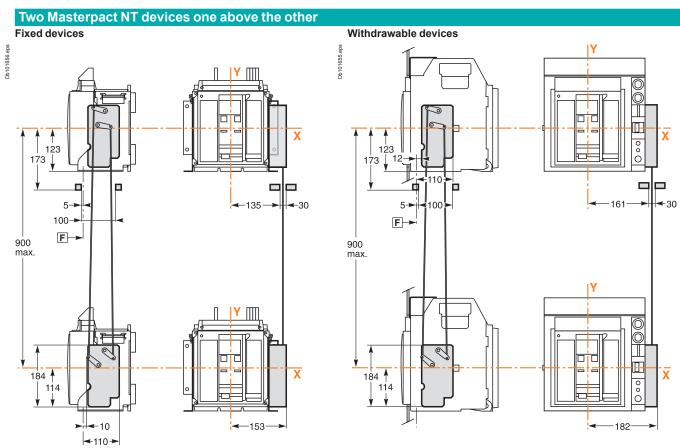

Masterpact NW source-changeover systems

Interlocking using connecting rods

Class CB

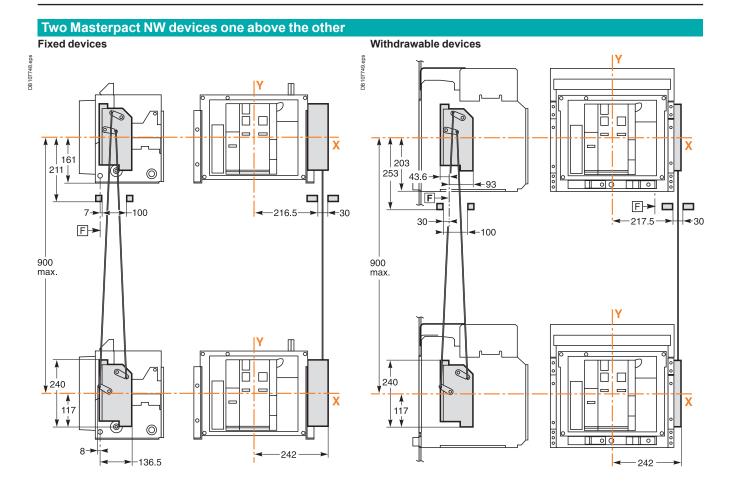



Compact NS and Masterpact NT/NW source-changeover systems

Class CB

Interlocking using cables

Two Compact NS630b to NS1600 devices side-by-side Fixed devices Withdrawable devices ### August 100 min. 2000 max.

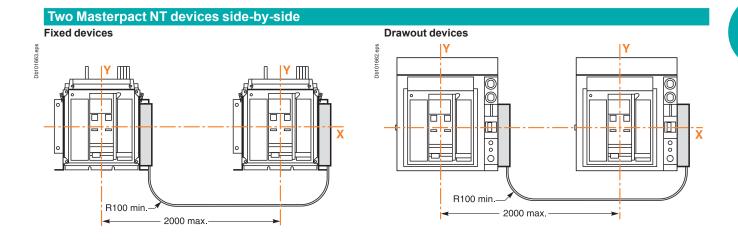


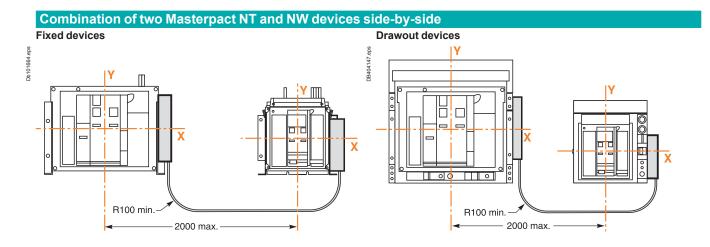


Compact NS and Masterpact NT source-changeover systems

Interlocking using cables

Class CB

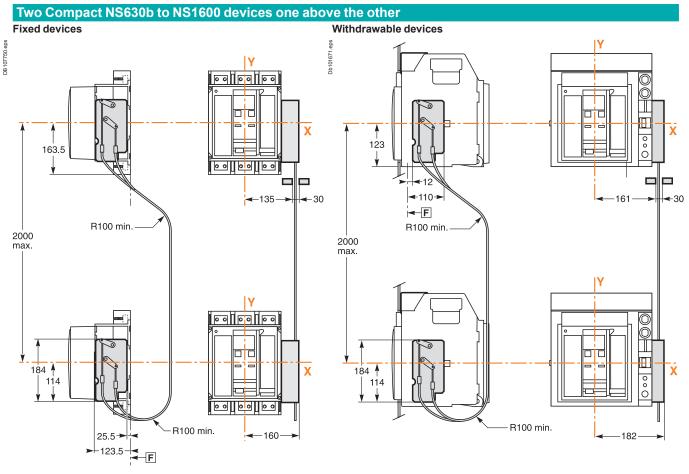


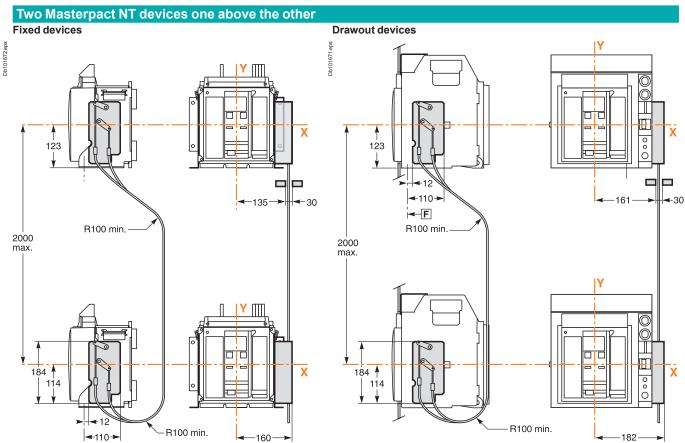


Masterpact NT/NW source-changeover systems

Interlocking using cables

Class CB

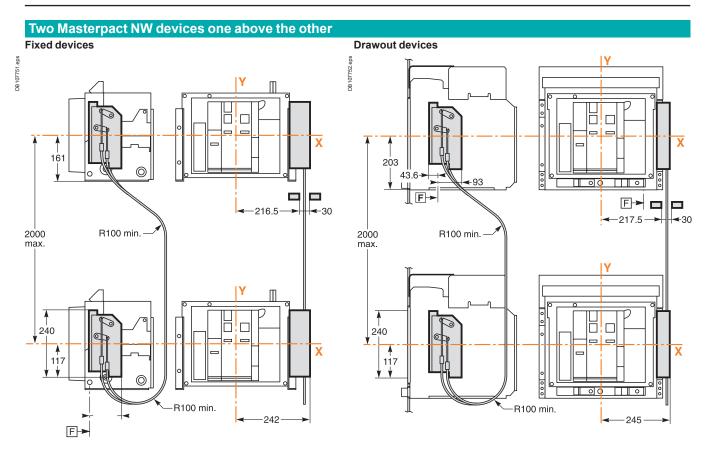


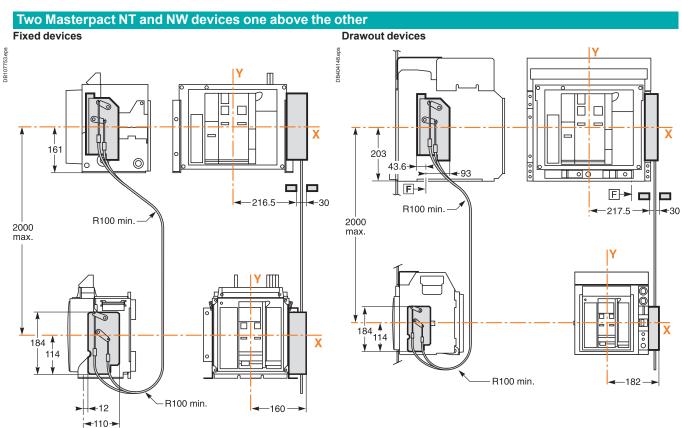


Masterpact NW source-changeover systems


Interlocking using cables

Class CB

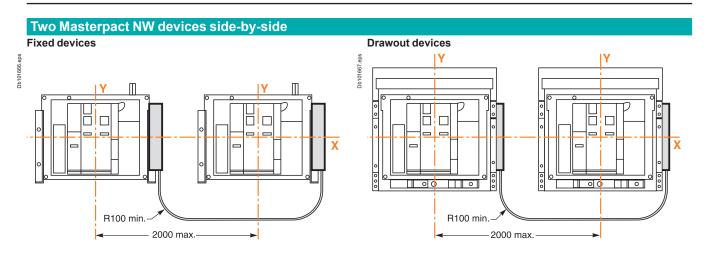

Three Masterpact NW devices side-by-side

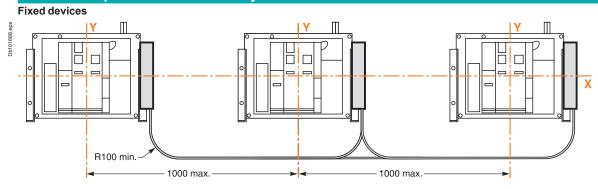


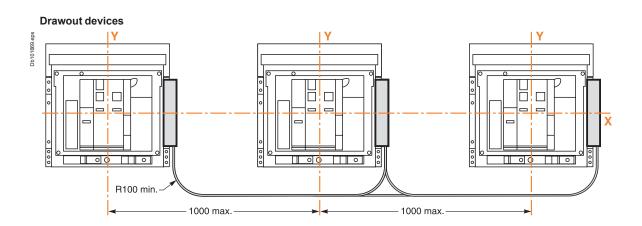

Masterpact NW source-changeover systems


Interlocking using cables

Class CB

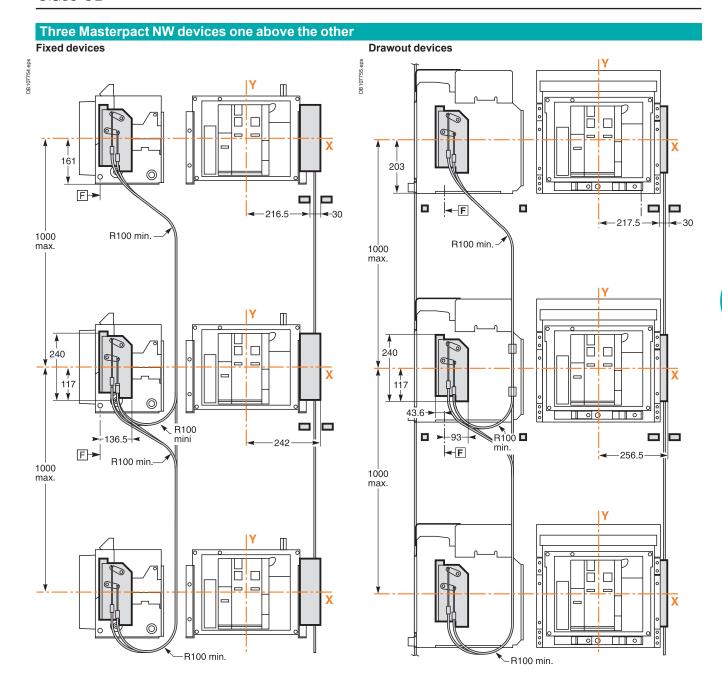



Source-changeover systems IVE unit, UA/BA automatic controllers

IVE unit **UA/BA** automatic controllers 137 160 **←** 48 → 150 min.

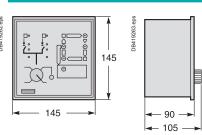


ACP control plate and UA/BA controllers

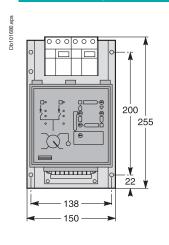

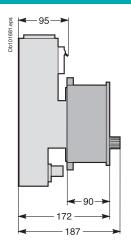

Door cutout for UA/BA controllers

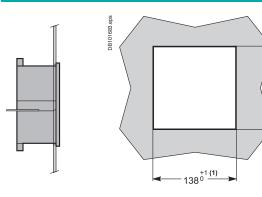

(1) Cutout according DIN 43700 standard.

1380 +1 (1)

Source-changeover systems Compact NSX100-630, Compact NS630b-1600, Compact INS/INV, Masterpact

Electrical diagrams

Presentation Functions and characteristics Dimensions	2 A-1 B-1
Standard configurations	C-2
Remote-operated source-changeover systems	
2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices	C-4
2 Compact NSX100/630 devices	C-5
2 Compact NS630b/1600 devices	C-8
2 Masterpact NT or NW devices	C-11
Source-changeover systems with automatic controllers	UA
2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices	C-16
Controller settings	C-17
Source-changeover systems with automatic controllers	ВА
2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices	C-18
Remote-operated source-changeover systems	
3 Masterpact NW devices	C-19
Catalogue numbers and order forms	D-1

Standard configurations


Compact NS, Masterpact NT and NW					
Types of mechanical interlocking	Possil	ble combinations	Typical electrical diagrams	Diagram no.	Page
2 devices					
å Y	QN	QR	Compact NSX100 to 630:		
X QN X QR	0	0	■ electrical interlocking without emergency		
₹ / √/	1	0	power off (EPO) auxiliaries:	51201177	C-5
	0	1	□ with EPO by MN	51201178	C-6
			□ with EPO by MX	51201179	C-7
•			Compact NS630b to 1600:		
			■ electrical interlocking with lockout after fault:		
			□ permanent replacement source (with IVE)	51201183	C-8
			□ with EPO by MX (with IVE)	51201184	C-9
			□ with EPO by MN (with IVE)	51201185	C-10
			Masterpact NT and NW:		
			■ electrical interlocking with lockout after fault:		
			□ permanent replacement source (with IVE)	51201142	C-11
			□ with EPO by MX (with IVE)	51201143	C-12
			□ with EPO by MN (with IVE)	51201144	C-13
			■ automatic control with lockout after fault:		
			□ permanent replacement source (with IVE)	51156904	C-14
			□ engine generator set (with IVE)	51156905	C-15

Standard configurations

	Masterpact NW only							
	Types of mechanical interlocking	Possil	ole com	bination	s	Typical electrical diagrams	Diagram no.	Page
	3 devices: 2 "Normal" sources and 1 "Replacement" s							
Db101575.eps	¥QN1	QN1 0 1 0	QN2 0 1 0	QR 0 0 1		electrical interlocking:without lockout after faultwith lockout after fault	51156906 51156907	C-19 C-20
	♦ 3 devices: 2 "Normal" sources and 1 "Replacement" s				on			
Db101576.eps	X _{QN1} X _{QN2} X _{QR} X _{QR}	QN1 0 1 0 1 0	0 0 0 1 1	0 0 1 0 0	- 1	 automatic control with engine generator set: without lockout after fault (with MN) with lockout after fault (with MN) 	51156908 51156909	C-21 C-22
	3 devices: 3 sources, only one device				ľ			
Db101577.eps	¥QS1 VV ¥QS2 ¥QS3	QS1 0 1 0 0	QS2 0 0 1 0	QS3 0 0 0 1		electrical interlocking:without lockout after faultwith lockout after fault	51156910 51156911	C-23 C-24
	3 devices: 2 sources + 1 coupling				ľ			
Db101578.eps	*\delta_0s_1	QS1 0 1 1 0 1 0 (1) possoperation	QC 0 0 1 1 0 0 sible by fo	1 ((1) (1)	 electrical interlocking: without lockout after fault with lockout after fault automatic control with lockout after fault 	51156912 51156913 51156914	C-25 C-26 C-27

[&]quot;Lockout after fault" option. This option makes it necessary to manually reset the device following fault tripping.

2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices

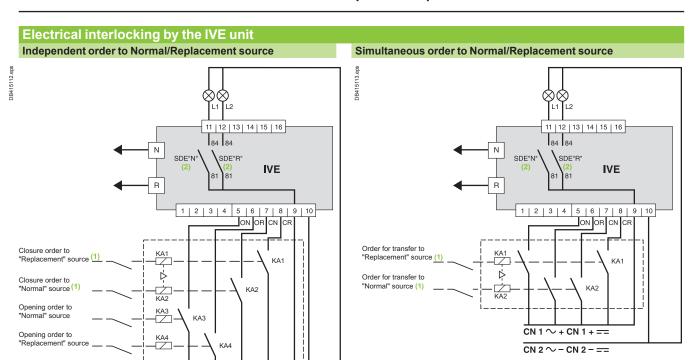

Controlling each circuit breaker independently.

Control of two circuit breakers by "common" transfer order.

- (1) See section "IMPORTANT" here after.
- (2) Operating diagram: the SDE "fault-trip" signals are transmitted to the IVE unit. The SDE auxiliary contacts are mounted in the circuit breakers.

CN 1 ~ + CN 1 + == CN 2 ~ − CN 2 − ==

IMPORTANT

The relays controlling the closing order to the "Normal" and "Replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

It is recommended to use Tesys K relays from Schneider Electric reference LC2-K06010 • •. These relays are mechanically and electrically interlocked.

Legends

ON "Normal" source opening order "Replacement" source opening order OR

"Normal" source closing order

"Replacement" source closing order

KA1 auxiliary relay

KA2 auxiliary relay


KA3 auxiliary relay KA4 auxiliary relay

L1

"Normal" source "fault-trip" signal "Replacement" source "fault-trip" signal Ν "Normal" source auxiliary wiring connector

R "Replacement" source auxiliary wiring connector Note: diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

2 Compact NSX100/630 devices Diagram no. 51201177

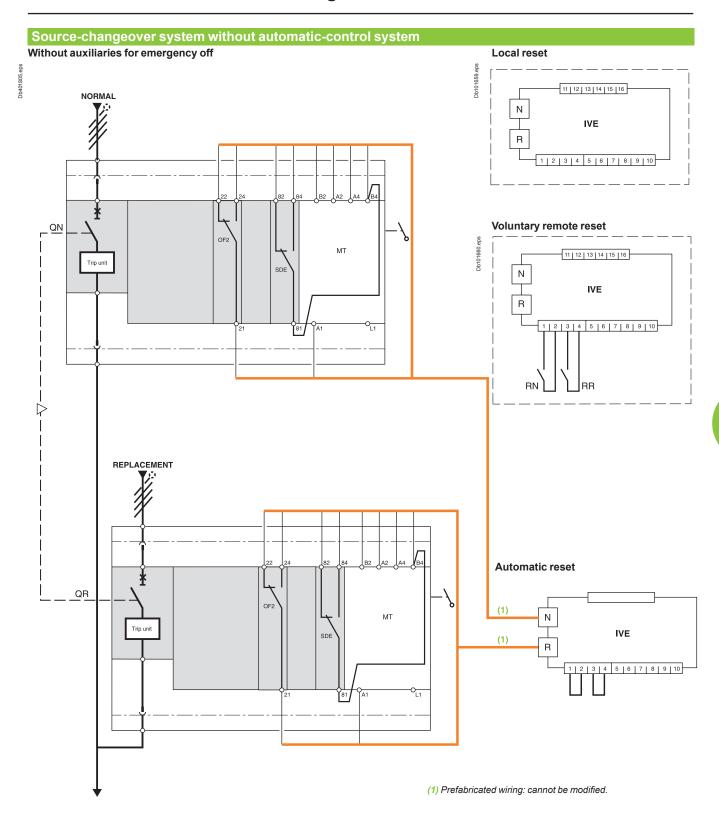

Legends QN "No "Normal" source Compact NSX equipped with motor mechanism "Replacement" source Compact NSX equipped with motor

mechanism

SDE "fault-trip" indication contact

IVE electrical interlocking and terminal block unit

motor mechanism

OF2 breaker ON/OFF indication contact RN reset order for breaker QN reset order for breaker QR


States permitted by mechanical interlocking system

Normal	Replacement	
0	0	
1	0	
0	1	

Note: diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

2 Compact NSX100/630 devices Diagram no. 51201178

Source-changeover system without automatic-control system

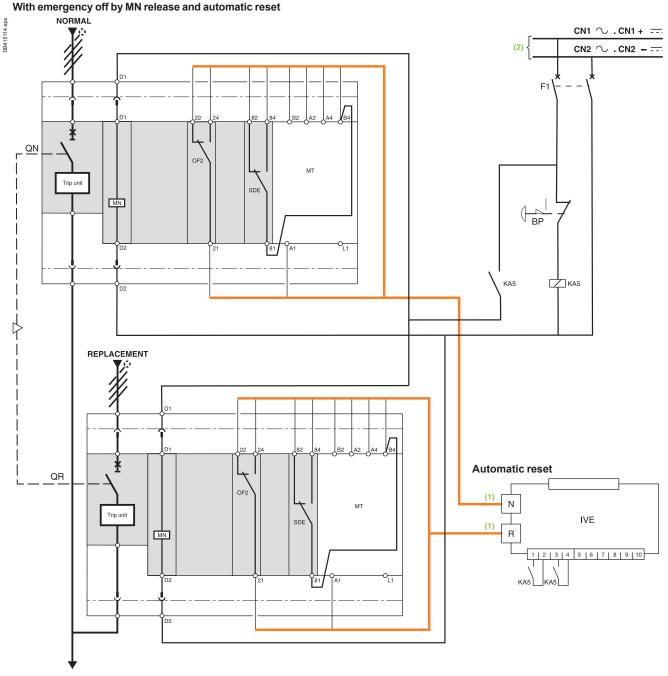

- (1) Prefabricated wiring supplied.
- (2) Independent auxiliary source.

"Normal" source Compact NSX equipped with motormechanism

"Replacement" source Compact NSX equipped with motor mechanism

MN undervoltage release

OF2 breaker ON/OFF indication contact

SDE "fault-trip" indication contact

MT motor mechanism

IVE electrical interlocking and terminal block unit

emergency off button with latching

KA5 auxiliary relay

auxiliary power supply circuit breaker


States permitted by mechanical interlocking system

Normal	Replacement	
0	0	
1	0	
0	1	

Note: after a fault trip, the breaker must be reset manually by pressing its reset button.
Diagram shown with circuits de-energised, circuit breakers open

and relays in normal position.

2 Compact NSX100/630 devices Diagram no. 51201179

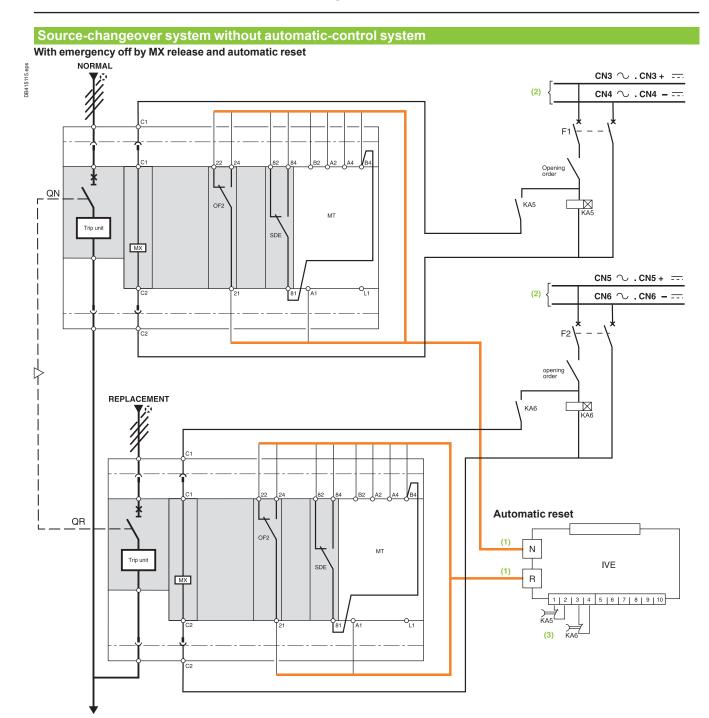

- (1) Prefabricated wiring supplied
- (2) This source can be:
 - the source present in the case of voltage monitoring
 - an independent source.
- In this case, the MX release must be protected. (3) The reset orders must be delayed by 0.3 seconds.

QN "Normal" source Compact NSX equipped with motor mechanism

QR "Replacement" source Compact NSX equipped with motor . mechanism

SDE "fault-trip" indication contact

OF2 breaker ON/OFF indication contact

MX shunt release

ΜT motor mechanism

IVE electrical interlocking and terminal block unit KA5 time-delayed auxiliary relays

KA6 time-delayed auxiliary relays auxiliary power supply circuit breaker auxiliary power supply circuit breaker

States permitted by mechanical interlocking system


Normai	Replacement	
0	0	
1	0	
0	1	

Note: after a fault trip, the breaker must be reset manually by pressing its reset button.

Diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

2 Compact NS630b/1600 devices Diagram no. 51201183

Electrical interlocking by IVE unit

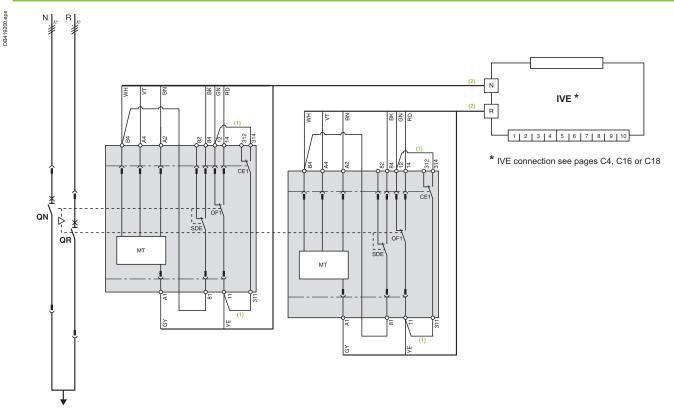

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired on fixed version.
- (2) Prefabricated wiring supplied.

Leaends

SDE

QN "Normal" source Compact NS630b to 1600 "Replacement" source Compact NS630b to 1600 breaker ON/OFF indication contact OF..

"fault-trip" indication contact CE1 F1

"connected-position" indication contact (carriage switch) auxiliary power supply circuit breaker electrical interlocking and terminal block unit "Normal" source opening order IVE

ON OR "Replacement" source opening order

CN "Normal" source closing order (0.25 second delay)

"Replacement" source closing order (0.25 second delay)

CR MT Motor Mechanism

Wiring colour codes									
RD	GN	BK	VT	YE	GY	WH	BN		
red	green	black	violet	yellow	grey	white	brown		

States permitted by mechanical interlocking system						
Normal	Replacement					
0	0					
1	0					
0	1					

Note: after a fault trip, the breaker must be reset manually by pressing its reset button.


Diagram shown with circuit breakers in connected position, open,

charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation,

2 Compact NS630b/1600 devices Diagram no. 51201184

Electrical interlocking by IVE unit with emergency off by shunt release

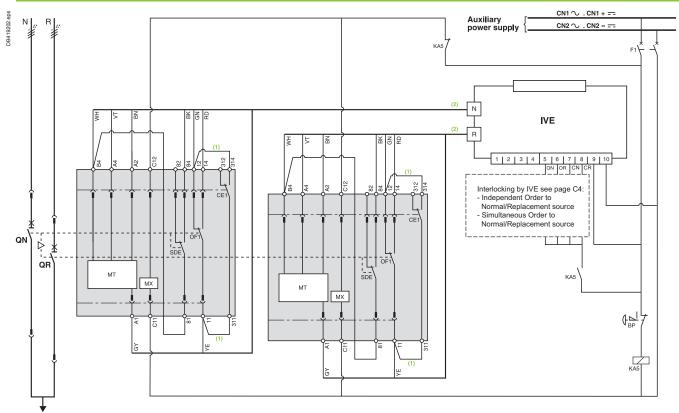

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired on fixed version.
- (2) Prefabricated wiring supplied.

Legends QN "N

"Normal" source Compact NS630b to 1600 QR "Replacement" source Compact NS630b to 1600

OF.. breaker ON/OFF indication contact

SDE "fault-trip" indication contact

CE1 "connected-position" indication contact (carriage switch)

auxiliary power supply circuit breaker electrical interlocking and terminal block unit

IVE

MX shunt release

ВР emergency off button with latching

KA5 auxiliary relay ON

"Normal" source opening order OR "Replacement" source opening order

CN "Normal" source closing order (0.25 second delay)

CR "Replacement" source closing order (0.25 second delay)

Motor Mechanism

Wiring colour codes									
RD	GN	вк	VT	YE	GY	WH	BN		
red	green	black	violet	yellow	grey	white	brown		

States permitted by mechanical interlocking system							
Normal	Replacement						
0	0						
4							


Note: after a fault trip, the breaker must be reset manually by pressing its reset button.

Diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MX,

2 Compact NS630b/1600 devices Diagram no. 51201185

Electrical interlocking by IVE unit with emergency off by undervoltage release

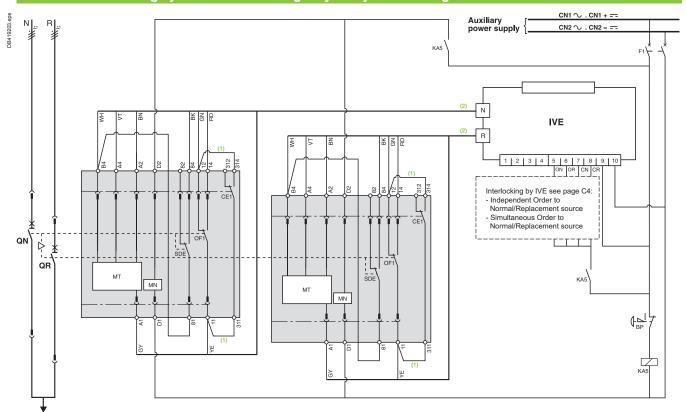

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired on fixed version.
- (2) Prefabricated wiring supplied.

Legends

QN "Normal" source Compact NS630b to 1600 QR

"Replacement" source Compact NS630b to 1600

OF... breaker ON/OFF indication contact

SDE "fault-trip" indication contact

CE1 "connected-position" indication contact (carriage switch)

auxiliary power supply circuit breaker

F1 IVE electrical interlocking and terminal block unit undervoltage release emergency off button with latching

MN

BP

KA5 auxiliary relay

"Normal" source opening order

OR "Replacement" source opening order

CN "Normal" source closing order (0.25 second delay)

CR "Replacement" source closing order (0.25 second delay) Motor Mechanism

Wiri	Wiring colour codes										
RD	GN	BK	VT	YE	GY	WH	BN				
red	green	black	violet	yellow	grey	white	brown				

States permitted by mechanical interlocking system

Normai	Replacement	
0	0	
1	0	
0	1	


Note: after a fault trip, the breaker must be reset manually by pressing its reset button.

Diagram shown with circuit breakers in connected position, open, charged, and ready to close

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MN,

2 Masterpact NT or NW devices Diagram no. 51201142

Electrical interlocking by IVE unit with lockout after a fault

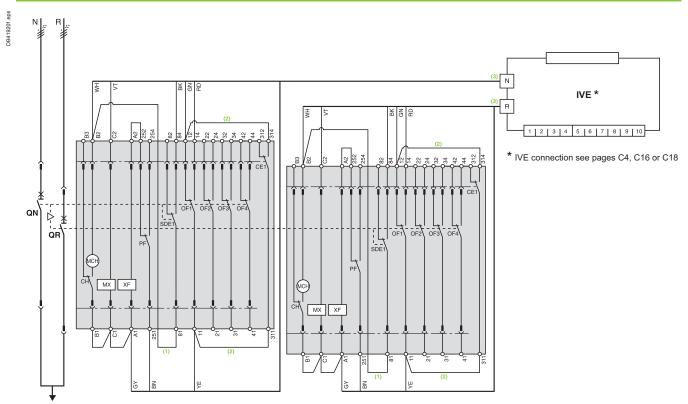

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution. (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.

Legends QN "N

"Normal" source Masterpact NT or NW QR "Replacement" source Masterpact NT or NW

МСН spring-charging motor

standard opening voltage release standard closing voltage release breaker ON/OFF indication contact XF OF. SDE1 "fault-trip" indication contact "ready-to-close" contact PF

CE1 "connected-position" indication contact (carriage switch)

СН "springs charged" indication contact electrical interlocking and terminal block unit F1 auxiliary power supply circuit breaker

ON "Normal" source opening order OR

"Replacement" source opening order "Normal" source closing order (0.25 second delay) "Replacement" source closing order (0.25 second delay) CN

Wiring colour codes WH RD GN BK VT YE GY BN green black red violet yellow grey white brown

States permitted by mechanical interlocking system

Normal	Replacement	
0	0	
1	0	
0	1	


Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...)

= supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

2 Masterpact NT or NW devices Diagram no. 51201143

Electrical interlocking by IVE unit with lockout after a fault and emergency off by shunt release

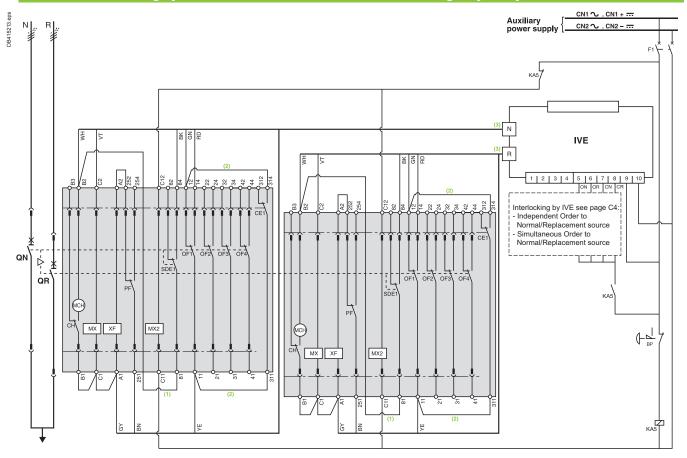

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution.
- (2) Not to be wired on fixed version. (3) Prefabricated wiring supplied.

Leaends

"Normal" source Masterpact NT or NW "Replacement" source Masterpact NT or NW

MCH spring-charging motor

MX standard opening voltage release XF standard closing voltage release breaker ON/OFF indication contact OF. SDE1 "fault-trip" indication contact "ready-to-close" contact

CE1 "connected-position" indication contact (carriage switch)

СН "springs charged" indication contact

IVE electrical interlocking and terminal block unit

KA5 F1

auxiliary relay auxiliary power supply circuit breaker emergency off button with latching ВP "Normal" source opening order OR "Replacement" source opening order

CN "Normal" source closing order (0.25 second delay)

"Replacement" source closing order (0.25 second delay)

Wiring colour codes								
RD	GN	BK	VT	YE	GY	WH	BN	
red	green	black	violet	yellow	grey	white	brown	

States permitted by mechanical interlocking system


NUITIAI	Replacement	
0	0	_
1	0	
0	1	

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

2 Masterpact NT or NW devices Diagram no. 51201144

Electrical interlocking by IVE unit with lockout after a fault and emergency off by undervoltage release

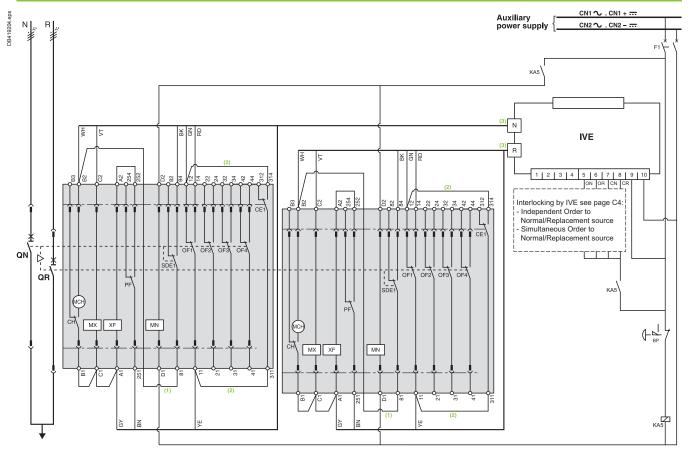

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

- (1) Not to be wired for the "without lockout after a fault" solution. (2) Not to be wired on fixed version.
- (3) Prefabricated wiring supplied.

Legends QN "N

"Normal" source Masterpact NT or NW QR "Replacement" source Masterpact NT or NW МСН

spring-charging motor ΜX

standard opening voltage release ΧF standard closing voltage release MN

undervoltage release OF... breaker ON/OFF indication contact

SDE1 "fault-trip" indication contact "ready-to-close" contact

CE1 "connected-position" indication contact (carriage switch)

СН "springs charged" indication contact

electrical interlocking and terminal block unit IVE

KA5 auxiliary relay

auxiliary power supply circuit breaker emergency off button with latching F1 ВP "Normal" source opening order OR "Replacement" source opening order

"Normal" source closing order (0.25 second delay)

CN "Replacement" source closing order (0.25 second delay)

Wiring colour codes

RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system


Normal	Replacement	
0	0	
1	0	
0	1	

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, MN, XF...).

2 Masterpact NT or NW devices Diagram no. 51156904

Automatic-control system for permanent replacement source with lockout after a fault (with MN)

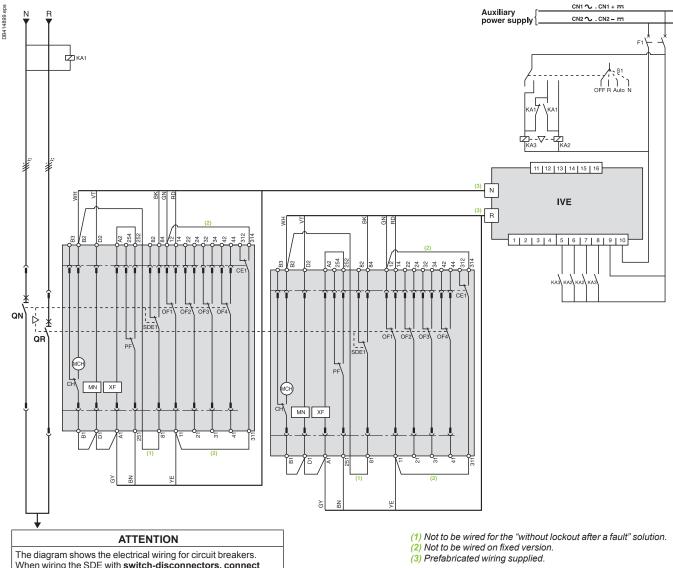

When wiring the SDE with switch-disconnectors, connect wire BK to terminal 82.

The relays controlling the closing order to the "Normal" and "Replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

It is recommended to use Tesys K relays from Schneider Electric reference LC2-K06010 • •. These relays are mechanically and electrically interlocked.

Legends

QN "Normal" source Masterpact NT or NW ОR

"Replacement" source Masterpact NT or NW spring-charging motor МСН

ΧF standard closing voltage release

MN undervoltage release OF. breaker ON/OFF indication contact

SDE1 "fault-trip" indication contact

PF

"ready-to-close" contact
"connected-position" indication contact (carriage switch) CE1

СН "springs charged" indication contact electrical interlocking and terminal block unit F1 auxiliary power supply circuit breaker circuit breaker (high breaking capacity)

F2 S1 KA1 control switches auxiliary relays auxiliary relays KA2

KA3 auxiliary relays

Wiri	Wiring colour codes							
RD	GN	BK	VT	YE	GY	WH	BN	
red	green	black	violet	yellow	grey	white	brown	

States permitted by mechanical interlocking system


Normal	Replacement	
0	0	
1	0	
0	1	

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

2 Masterpact NT or NW devices Diagram no. 51156905

Automatic-control system for replacement source generator set with lockout after a fault (with MN)

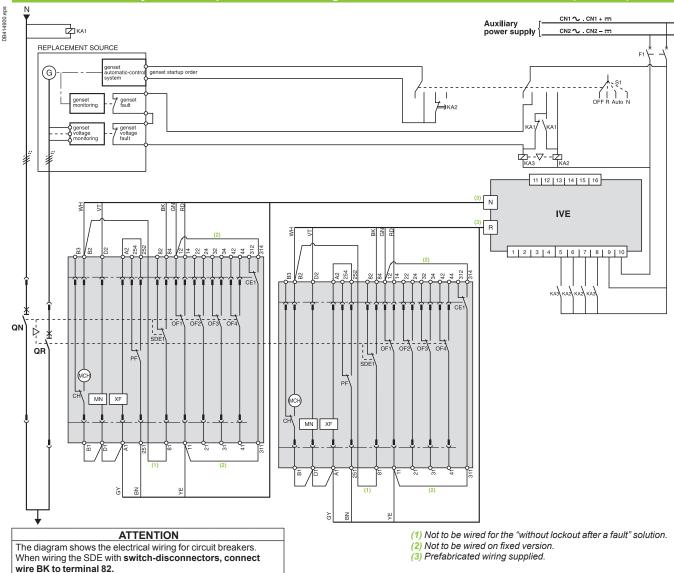

IMPORTANT

The relays controlling the closing order to the "Normal" and "Replacement" circuit breakers must be mechanically and/or electrically interlocked to prevent them from giving simultaneous closing commands.

It is recommended to use Tesys K relays from Schneider Electric reference LC2-K06010 • •. These relays are mechanically and electrically interlocked

"Normal" source Masterpact NT or NW QN QR "Replacement" source Masterpact NT or NW

мсн

spring-charging motor standard closing voltage release ΧF

MN undervoltage release

OF. breaker ON/OFF indication contact SDE1

"fault-trip" indication contact PF "ready-to-close" contact

CE1 "connected-position" indication contact (carriage switch)

СН "springs charged" indication contact electrical interlocking and terminal block unit IVE

auxiliary power supply circuit breaker

F2 circuit breaker (high breaking capacity)

S1 KA1 control switches

auxiliary relay

time delay for genset startup order to avoid starting KA2

the genset for transient UN disturbances

auxiliary relay

Wirin	Wiring colour codes						
RD	GN	BK	VT	YE	GY	WH	BN
red	green	black	violet	yellow	grey	white	brown

States permitted by mechanical interlocking system

Normai	Replacement	
0	0	
1	0	
0	1	


Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).


Source-changeover systems with automatic controllers UA

2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices


Source-changeover system with UA controller

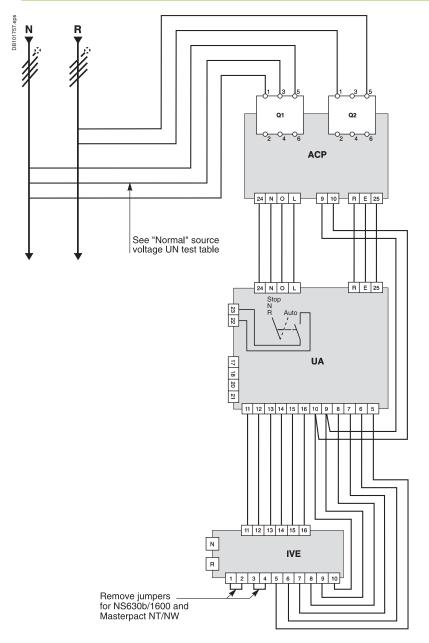

Load shedding and genset management

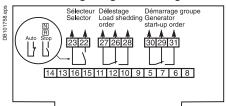

Transfer conditions

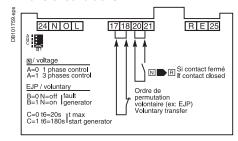

Terminals 20 and 21:

additional control contact (not part of controller).

Tests on "Normal" and "Replacement" source voltages

"Normal" source voltage UN test

JB101761.eps	Ref. UA UA150	29472 29474	29472 29474	29473 29475
DB1	Supply voltage Switch position	N / φ 220/240VAC 50/60Hz	φ / φ 220/240VAC 50/60Hz	φ/ φ 380/415VAC 50/60Hz 440V - 60Hz
	A = 0	N 0	φ φ 1 _{L1} 3 _{L2} 5 _{L3} Q1	φ φ 1 _{L1} 3 _{L2} 5 _{L3}
	A = 1		φ φ φ 1 _{L1} 3 _{L2} 5 _{L3} Q1	φ φ φ 1 _{L1} 3 _{L2} 5 _{L3} Q1

"Replacement" source voltage UR test

The single-phase check for UR is implemented across terminals 1 and 5 of circuit breaker Q2.

Legends

Q1 circuit breaker supplying and protecting the automaticcontrol circuits for the "Normal" source

Q2 circuit breaker supplying and protecting the automaticcontrol circuits for the "Replacement" source

ACP control plate
UA automatic controller

IVE electrical interlocking and terminal block unit


Note: diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

Source-changeover systems with automatic controllers

Controller settings

Source changeover system with UA controller

Controller settings

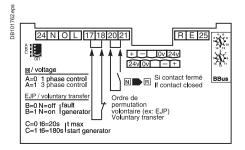

Tests on "Normal" source voltage

A = 0 single-phase test,

A = 1 three-phase test.

Voluntary transfert (e.g. for energy management)

action in the event of genset failure

B = 0 circuit breaker N opens,

B = 1 circuit breaker N remains closed.


■ maximum permissible genset startup time (T6)

C = 0 T = 120 s,

C = 1 T = 180 s.

After this time has elapsed, the genset is considered to have failed.

Using communication functions

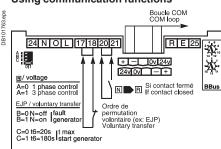


The address of the UA 150 controller is set using the two BBus dials.


Source-changeover systems with automatic controllers BA

2 Compact NSX100/630, NS630b/1600 or Masterpact NT/NW devices


Source-changeover system with BA controller

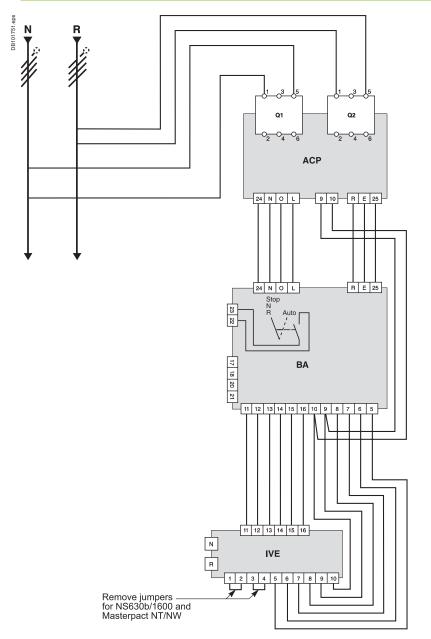

Coupling

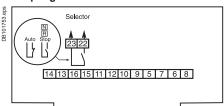

Transfer conditions

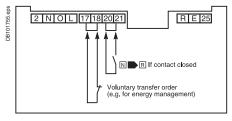

Terminals 20 and 21:

additional control contact (not part of controller).

Tests on "Normal" and "Replacement" source voltages

The single-phase check for UN and UR is implemented across terminals 1 and 5 of circuit breakers Q1 and Q2.

Legends

Q1 circuit breaker supplying and protecting the automaticcontrol circuits for the "Normal" source

Q2 circuit breaker supplying and protecting the automaticcontrol circuits for the "Replacement" source


ACP control plate
BA automatic controller

VE electrical interlocking and terminal block unit

Note: diagram shown with circuits de-energised, circuit breakers open and relays in normal position.

3 Masterpact NW devices Diagram no. 51156906

2 normal sources and 1 replacement source: electrical interlocking without lockout after a fault

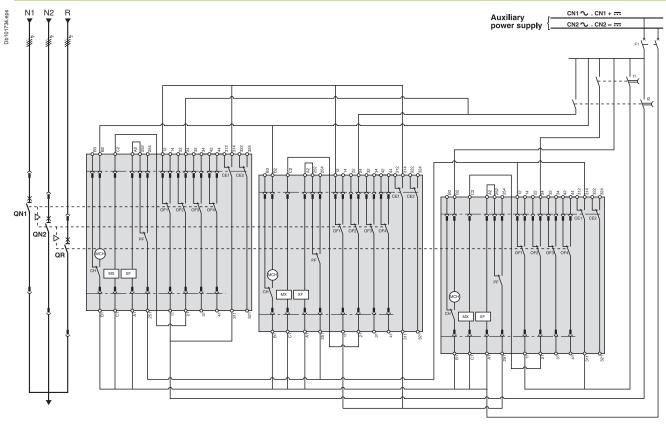

Legends

"Normal" source Masterpact NW QR "Replacement" source Masterpact NW MCH spring-charging motor

standard opening voltage release standard closing voltage release breaker ON/OFF indication contact MX XF OF... "ready-to-close" contact

CE "connected-position" indication contact (carriage switch)

CH F1 "springs charged" indication contact t1

auxiliary power supply circuit breaker order for transfer from "R" to "N1 + N2" (QN1 and QN2 closing time delay = 0.25 sec. minimum) order for transfer from "N1 + N2" to "R" (QR closing time delay = 0.25 sec. minimum)

States pe	rmitted by m	nechanical interlocking system
Normal 1	Normal 2	Replacement

Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0


Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...)

= supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices Diagram no. 51156907

2 normal sources and 1 replacement source: electrical interlocking with lockout after a fault

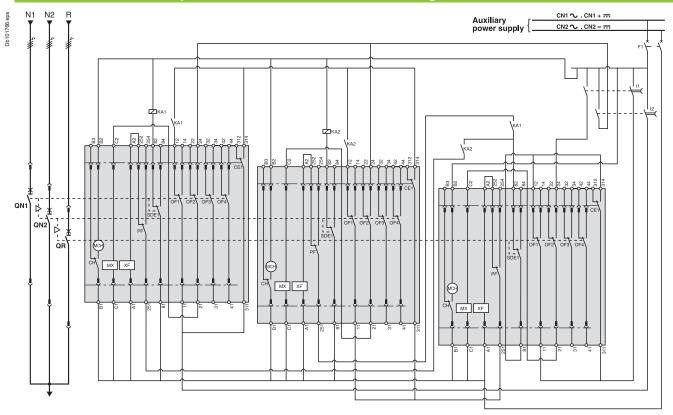

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

QÑ... "Normal" source Masterpact NW QR "Replacement" source Masterpact NW

МСН spring-charging motor

ΜX standard opening voltage release XF OF.. standard closing voltage release breaker ON/OFF indication contact "fault-trip" indication contact SDE1 "ready-to-close" contact

CE1 "connected-position" indication contact (carriage switch)

"springs charged" indication contact auxiliary power supply circuit breaker

CH F1 S1 S2 KA1 control switches

source selection switches

auxiliary relay

KA2 auxiliary relays with 10 to 180 sec. time delay order for transfer from "R" to "N1 + N2"

(QN1 and QN2 closing time delay = 0.25 sec. minimum)

order for transfer from "N1 + N2" to "R" (QR closing time delay = 0.25 sec. minimumm) t2

States permitted by mechanical interlocking system				
Normal 2	Replacement			
0	0			
1	0			
0	1			
0	0			
1	0			


Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...)

= supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices Diagram no. 51156908

2 normal sources and 1 replacement source: automatic-control system for generator set without lockout after a fault (with MN)

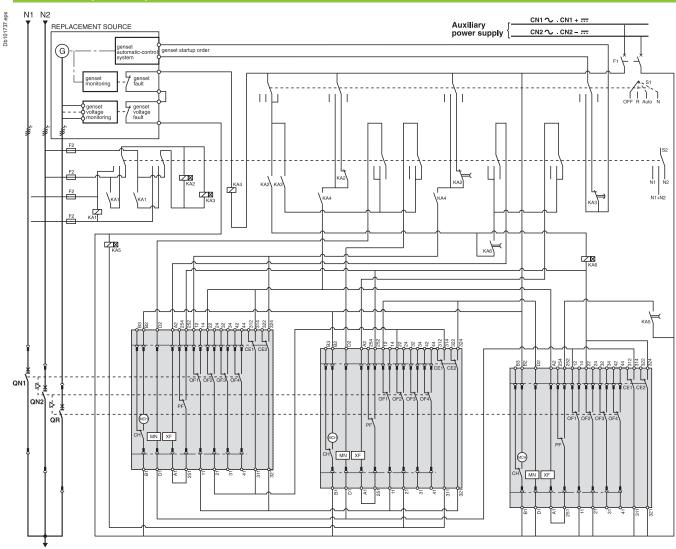

Legends

"Normal" source Masterpact NW QN... QR "Replacement" source Masterpact NW

МСН spring-charging motor standard closing voltage release MN undervoltage release

OF...

breaker ON/OFF indication contact "ready-to-close" contact "connected-position" indication contact (carriage switch) PF CE...

СН "springs charged" indication contact auxiliary power supply circuit breaker

F2/F3 circuit breaker (high breaking capacity) S1 control switches source selection switches S2

KA1 KA2 auxiliary relay

auxiliary relays with 10 to 180 sec. time delay

KA3 auxiliary relays with 0.1 to 30 sec. time delay

auxiliary relay

KA5 auxiliary relays with 0.25 sec. time delay KA6 auxiliary relays with 0.25 sec. time delay

States permitted by mechanical interlocking system and with associated automatism


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

3 Masterpact NW devices Diagram no. 51156909

2 normal sources and 1 replacement source: automatic-control system for generator set with lockout after a fault (with MN)

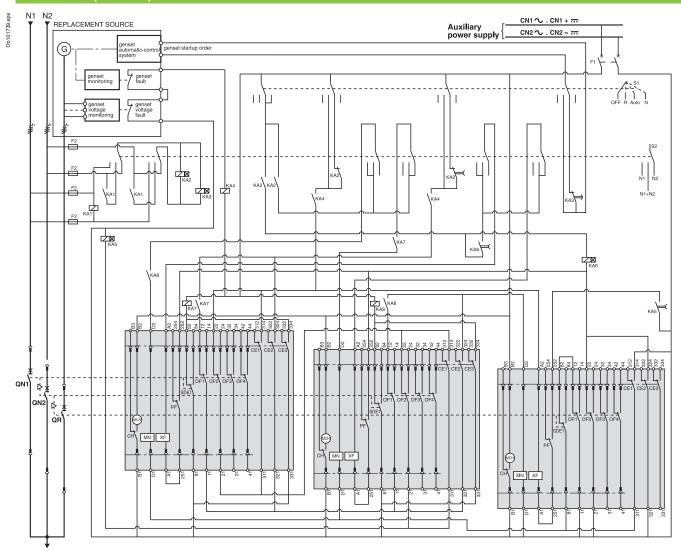

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

QÑ... "Normal" source Masterpact NW "Replacement" source Masterpact NW MCH spring-charging motor ΧF standard closing voltage release MN undervoltage release breaker ON/OFF indication contact

OF.. SDE1 "fault-trip" indication contact "ready-to-close" contact

CE... "connected-position" indication contact (carriage switch)

CH F1 "springs charged" indication contact auxiliary power supply circuit breaker circuit breaker (high breaking capacity) F2/F3

S1 S2 control switches source selection switches

KA1 auxiliary relay auxiliary relays with 10 to 180 sec. time delay auxiliary relays with 0.1 to 30 sec. time delay KA2 KA3

KA4 auxiliary relay

auxiliary relays with 0.25 sec. time delay auxiliary relays with 0.25 sec. time delay KA5 KA6 KA7 auxiliary relay

KA8 auxiliary relay

States permitted by mechanical interlocking system and with associated automatism


Normal 1	Normal 2	Replacement
0	0	0
1	1	0
0	0	1
1	0	0
0	1	0

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MN, XF...).

3 Masterpact NW devices Diagram no. 51156910

3 sources with only 1 device closed: electrical interlocking without lockout after a fault

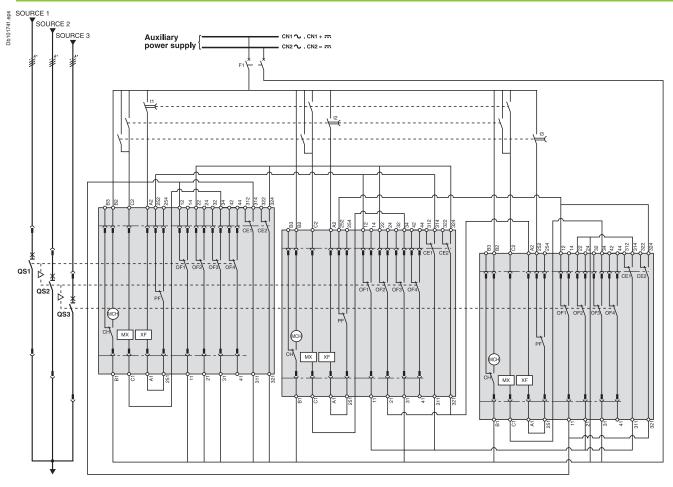

Legends

t2

QŠ... MCH "Source" Masterpact NW spring-charging motor MX XF standard opening voltage release standard closing voltage release breaker ON/OFF indication contact OF... "ready-to-close" contact

CE. "connected-position" indication contact (carriage switch)

СН "springs charged" indication contact F1 t1

auxiliary power supply circuit breaker order for transfer to "Source 1" (QS1 closing time delay = 0.25 sec. minimum) order for transfer to "Source 2" (QS2 closing time delay = 0.25 sec. minimum)

t3 order for transfer to "Source 3"

(QS3 closing time delay = 0.25 sec. minimum)

States permitted by mechanical interlocking system				
Source 1	Source 2	Source 3		
0	Λ	0		


0	0	0	
1	0	0	
0	1	0	
0	0	1	

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices Diagram no. 51156911

3 sources with only 1 device closed: electrical interlocking with lockout after a fault

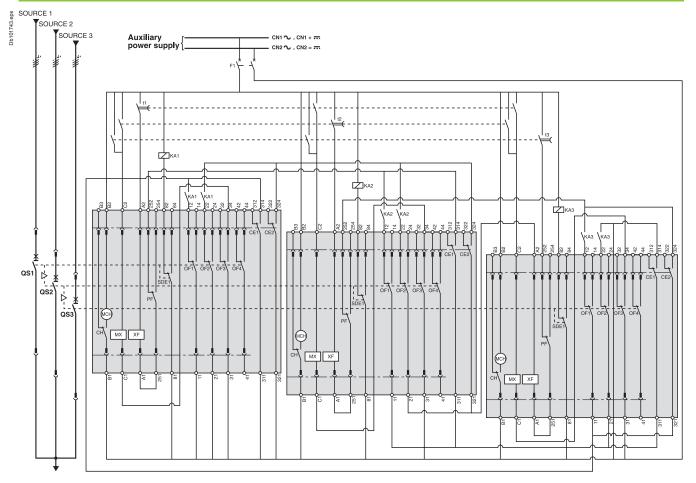

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

QS... "Source" Masterpact NW
MCH spring-charging motor
MX standard opening voltage release
XF standard closing voltage release
DF... breaker ON/OFF indication contact
SDE1 "fault-trip" indication contact
PF "ready-to-close" contact

CE... "connected-position" indication contact (carriage switch)

CH "springs charged" indication contact
F1 auxiliary power supply circuit breaker
t1 order for transfer to "Source 1"
(QS1 closing time delay = 0.25 sec. minimum)
t2 order for transfer to "Source 2"
(QS2 closing time delay = 0.25 sec. minimum)

t3 order for transfer to "Source 3"

(QS3 closing time delay = 0.25 sec. minimum) **KA1** auxiliary relays

KA2 auxiliary relays
KA3 auxiliary relays

States pe	rmitted by n	nechanical interlocking syste	₽m
Source 1	Source 2	Source 3	


Source i	Source 2	Source 3
0	0	0
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices Diagram no. 51156912

2 sources and 1 coupling: electrical interlocking without lockout after a fault

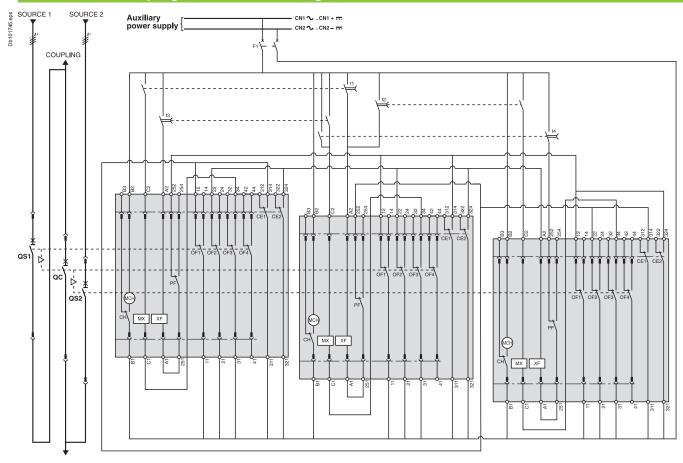

Legends

QS... QC MCH "Source" Masterpact NW "Coupling" Masterpact NW spring-charging motor standard opening voltage release standard closing voltage release breaker ON/OFF indication contact MX ΧF OF... "ready-to-close" contact

CE. "connected-position" indication contact (carriage switch)

"springs charged" indication contact CH auxiliary power supply circuit breaker coupling order for "Source 1 failure" F1 t1 (QC closing time delay = 0.25 sec. minimum) t2 coupling order for "Source 2 failure" (QC closing time delay = 0.25 sec. minimum)

t3 coupling order for "Source 1 restored" (QS1 closing time delay = 0.25 sec. minimum) coupling order for "Source 2 restored"

t4 (QS2 closing time delay = 0.25 sec. minimum)


States permitted by mechanical interlocking system					
Source 1 Source 2 Coupling					
0	0				
1	0				
0	1				
1	1				
0	0				
1	0				
0	1				

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices Diagram no. 51156913

2 sources and 1 coupling: electrical interlocking with lockout after a fault

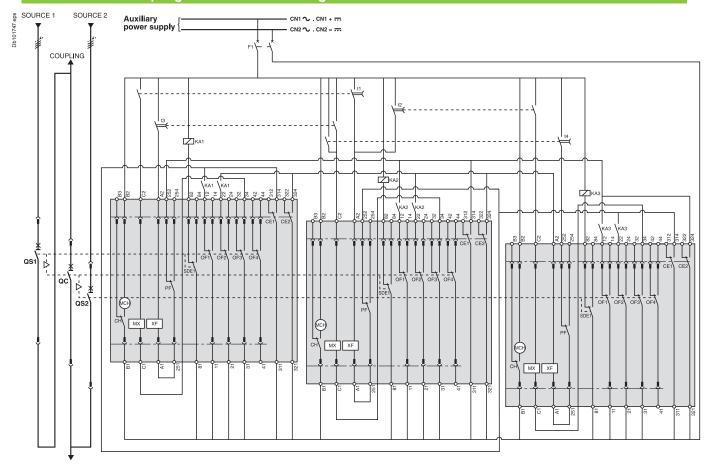

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

"Source" Masterpact NW QC "Coupling" Masterpact NW МСН spring-charging motor MX standard opening voltage release standard closing voltage release breaker ON/OFF indication contact XF OF.. SDE1 "fault-trip" indication contact PF "ready-to-close" contact

CE. "connected-position" indication contact (carriage switch) "springs charged" indication contact СН auxiliary power supply circuit breaker coupling order for "Source 1 failure" F1 t1 (QC closing time delay = 0.25 sec. minimum) t2 coupling order for "Source 2 failure" (QC closing time delay = 0.25 sec. minimum) t3 coupling order for "Source 1 restored" (QS1 closing time delay = 0.25 sec. minimum) coupling order for "Source 2 restored" (QS2 closing time delay = 0.25 sec. minimum) t4

	(QOZ GOSING IIII
KA1	auxiliary relays
KA2	auxiliary relays
IZ A O	auvilian, ralava


States permitted by mechanical interlocking system				
Source 1	Source 2	Coupling		
0	0	0		
1	1	0		
1	0	1		
0	1	1		
1	0	0		
0	1	0		
0	0	1		

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).

3 Masterpact NW devices Diagram no. 51156914

2 sources and 1 coupling: automatic-control system with lockout after a fault

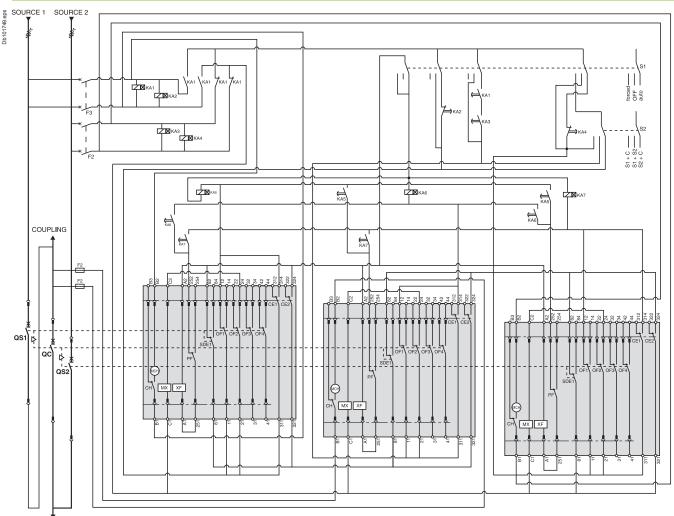

ATTENTION

The diagram shows the electrical wiring for circuit breakers. When wiring the SDE with switch-disconnectors, connect the SDE to terminals 81 and 84.

Legends

QS... "Source" Masterpact NW
QC "Coupling" Masterpact NW
MCH spring-charging motor
MX standard opening voltage release
XF standard closing voltage release
OF... breaker ON/OFF indication contact
SDE1 "fault trip" indication contact
PF "ready-to-close" contact

CE... "connected-position" indication contact (carriage switch)

CH "springs charged" indication contact
F1 auxiliary power supply circuit breaker
F2/F3 circuit breaker (high breaking capacity)

\$1 control switches

S2 source selection switches

Source selection switches

Auxiliary relays with 10 to 180 sec. time delay

auxiliary relays with 0.1 to 30 sec. time delay

auxiliary relays with 10 to 180 sec. time delay

auxiliary relays with 0.1 to 30 sec. time delay

auxiliary relays with 0.1 to 30 sec. time delay

auxiliary relays with 0.25 sec. time delay

auxiliary relays with 0.25 sec. time delay

auxiliary relays with 0.25 sec. time delay

States permitted by mechanical interlocking system and with associated automatism

Source 1	Source 2	Coupling
0	0	0
1	1	0
1	0	1
0	1	1
1	0	0
0	1	0
0	0	1

Note: diagram shown with circuit breakers in connected position, open, charged, and ready to close.

Auxiliary power supply = supply voltage of auxiliary relays (KA...) = supply voltage of electrical auxiliaries (electrical operation, MCH, MX, XF...).




Ecodial

Ecodial software is dedicated to LV electrical installation calculation in accordance with the IEC60364 international standard or national standards.

This 4th generation, "Ecodial Advance Calculation 4", offers a new ergonomic and new features:

- operating mode that allows easy calculation in case of installation with different type of sources (parallel transformers, back-up generators...)
- discrimination analysis associating curves checking and discrimination tables
- direct access to protection settings including residual current protections
- easy selection of alternate solutions or manual selection of a product.

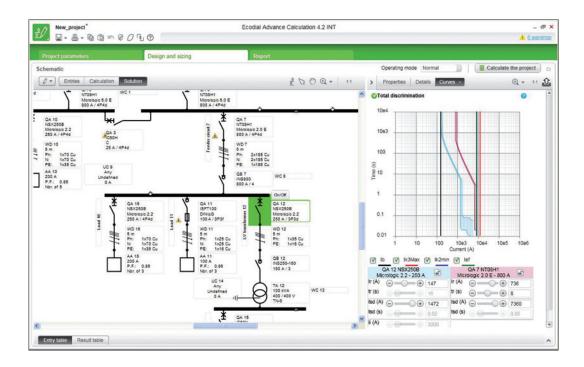

Source-changeover systems Compact NSX100-630, Compact NS630b-1600, Compact INS/INV, Masterpact

Catalogue numbers and order forms

Presentation Functions and characteristics Dimensions Electrical diagrams	A- B- C-
Catalogue numbers	
Source-changeover systems for 2 devices	
Compact INS40 to INS2500 and INV100 to INV2500	D-2
Compact NSX100 to NSX630	D-3
Compact NS630b to NS1600 circuit breakers and switch-disconnectors	D-
Masterpact NT circuit breakers and switch-disconnectors	D-
Source-changeover systems for 2 or 3 devices Masterpact NW circuit breakers and switch-disconnectors	D-8
Order forms	
Source-changeover systems for 2 devices	
Compact INS40 to INS630 switch-disconnectors	D-10
Compact NSX100 to NSX630 / Circuit breakers and switch-disconnectors	D-12
Compact NS630b to NS1600 / Circuit breakers and switch-disconnectors	D-14
Masterpact NT or NW / Circuit breakers and switch-disconnectors	D-16
Source-changeover systems for 3 devices	
Masterpact NW / Circuit breakers and switch-disconnectors	D-18

Compact INS40 to INS2500 and INV100 to INV2500

	hangeover systems Co	mpact INS40 to INS63	0 and INV100 to INV63	30	
Interlocking for rotary	y nanule			lovan.	
DB107710 app	Mechanical device for INS40 to I equipped with an extended rotary			3/4P 28953	
DB404077 eps	Mechanical device for INS250-100 to INS250/INV100 to INV250 equipped with a direct or extended rotary handle			31073	
DPRO		Mechanical device for INS/INV320 to INS/INV630 equipped with a direct or extended rotary handle			
Complete assem	bly source-changeover	systems Compact IN	S250 to INS630		
	iory courses criamiges for		3P	4P	
8	With Compact INS250-100A		31140	31141	
DB404170.eps	With Compact INS250-160A		31144	31145	
ă N	With Compact INS250-200A		31142	31143	
	With Compact INS250		31146	31147	
	With Compact INS320		31148	31149	
Mala	With Compact INS400		31150	31151	
	With Compact INS500		31152	31153	
	With Compact INS630		31154	31155	
S CONTRACTOR OF THE PARTY OF TH	Locking for INS complete sou	rce changeover assembly	1 - 1 - 1 - 1		
11.	Handle locking by 1 to 3 padlocks	•		Built in	
ă D	By keylock	Keylocking device		31097	
	2, 10,1001	+ Ronis 1351B.500 keylock		41940	
		or + Profalux KS5 B24 D4Z key	lock	42888	
		OF Froidiux 100 B24 B42 Rey	IOCK	42000	
D8404079 epp	Rotary handle Extended front control for comple	31055			
Manual source-c Interlocking	hangeover systems Co	mpact INS250 to INS2	500 and INV250 to INV		
s and a second				3/4P	
DD101548.eps	Locking device for Ronis/Profalu on INS250-100 to INS250/INV10			2x 31087	
	on INS/INV320 to INS/INV630	Locking device for Ronis/Profalux keylocks 2x on INS/INV320 to INS/INV630			
S. C.	Locking device for Ronis/Profalu	y keylocks		2x 31291	
0B404080.eps	on INS/INV630b to INS/INV2500				
	\				
	+ Ronis 1351B.500 keylock (2 keylocks / 1 key)			41950	
Color	or + Profalux KS5 B24 D4Z keylo	ock (2 keylocks / 1 key)		42878	
Connection acce	ssories				
Downstream coupling					
	_	+ "normal" source/"replacem	ent" source		
Sã.	chert terminal emelas (1 pair)	Oodioor Topidoelli	••••••	3/4P	
DB-1010622-eps		INS250/INS250		LV429359	
e e e e e e e e e e e e e e e e e e e		INS320 to INS630/INS320 to IN	IS630	LV432620	
+				27-702020	
Det 13292. eps					
Alter-	Long terminal shields (1 piece	2)			
sda Sda	Long terminal sineras (1 piece	INS250 long terminal shield		LV429518	
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		INS320 to INS630		LV423310	
DP40392.			niono)	1.7/42.250.4	
-	Long terminal shield, 45 mm (1 piece)			LV432594	
		Long terminal shield for spread	ers, 52.5 mm (1 piece)	LV432596	
Terminal extension	ons				
S. ebs	Spreaders	52.5 mm	4	P LV432491	
1126				-	

Compact NSX100 to NSX630

Manual source	changeover			
Mechanical interloc	king			
D8404083 eps	For toggle controlled circuit breakers	NSX100250 NSX400630	LV429354 LV432614	
RES CONTROL OF THE PROPERTY OF	For rotary handled circuit breakers	NSX100250 NSX400630	LV429369 LV432621	
Key lock interlocking	ıg		· ·	
2	For rotary handled or remote controlled circ	For rotary handled or remote controlled circuit breakers		
	2 locks, 1 key	Ronis 1351B.500	41950	
DB40404085 ep	>	Profalux KS5 B24 D4Z	42878	

	>	Profalux KS5 B24 D4Z 42878				
Remote control	led source changeover					
Plate + IVE unit						
	Source "normal"/source "re	Source "normal"/source "replacement" (identical voltages)		48 to 415 V AC 50/60 Hz 440 V 60 Hz		
00000000	NSX100250/NSX100250		· ·	·		
	Plate + IVE unit (1)	Plate + IVE unit (1)		29350		
000000000000000000000000000000000000000	Plate		29349	29349		
	IVE unit		29356	29352		
	Auxiliary switches 2 OF + 2 SD	E 4	x 29450	4 x 29450		
	Spare wiring system (device/IV	'E unit)	29365	29365		
	Back sockets option add:	Only long RC	(2)	(2)		
	Plug in base option add:	Plug in kit	(2)	(2)		
	NSX400630/NSX100630					
	Plate + IVE unit (1)		32611	32610		
	Plate		32609	32609		
	IVE unit		29356	29352		
	Auxiliary switches 2 OF + 2 SD	E 4	x 29450	4 x 29450		
	Spare wiring system (device/IV	E unit)	29365	29365		
	Back sockets option add:	Only long RC	(2)	(2)		
	Plug in base option add:	Plug in kit	(2)	(2)		
		Adaptator kit for NSX100250 1	x 32618	1 x 32618		
Control unit option						
P.O.		110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz		
	ACP + controller BA (1)		29470	29471		
	Plate ACP		29363	29364		
	Controller BA		29376	29377		
	ACP + controller UA (1)	29448	29472	29473		
1.0	Plate ACP	29447	29363	29364		
	Controller UA		29378	29380		
	ACP + controller UA150 (1) (cor	nmunication option)	29474	29475		
	Plate ACP		29363	29364		
	Controller UA	150	29379	29381		
Wiring cable betwe	en UA/BA and ACP/IVE					
	Wiring cable (1.5 meter)		29368	29368		

⁽¹⁾ The supply voltages UA/BA controller, ACP plate, IVE unit and the remote control must be identical whatever the source changeover type. (2) See products pages.

Compact NSX100 to NSX630 (cont.)




Terminal extensions



 Spreaders
 52.5 mm
 4P
 LV432491

Typical composition of remote controlled source changeover


Remote controlled source changeover

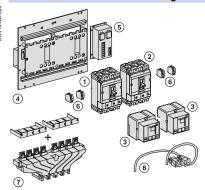

- 1 normal device N (1)
- + 1 replacement device R (2)
- + 2 remote controls (3)
- + 1 plate with interlocking (4) with IVE (5) and its wiring (8)
- + 2 plug-in kits (if plug-in version)
- + 1 adaptor kit for NSX100...250 plug-in (if NSX400...630 with NSX100...250)
- + auxilary switches (6)
- $2\,x$ (1 OF + 1 SDE) for Compact NSX100...630
- + 1 downstream coupling accessory (7) for Compact NSX100...630 (option)
- + long RC (if back connection)

IVE voltages and remote controls are identical.

Associated control unit

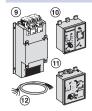

- 1 source changeover without associated control unit
- + 1 ACP (9) with BA control unit (10)
- Or + 1 ACP (9) with UA control unit (11)
- Or + 1 ACP (9) with UA150 control unit (11)
- + extension (12) for remote UA/BA connection on front of switchboard

IVE voltages + remote control + ACP + BA or UA are identical

Compact NS630b to NS1600 circuit breakers and switch-disconnectors

Interlocking for source-changeover systems

Mechanical interlocking



For 2 devices with extended rotary handles


33890

Interlocking using connecting rods for Compact electrically-operated devices



Complete assembly with 2 adaptation fixtures + rods
2 Compact fixed devices
33910
2 Compact withdrawable devices
33913

Interlocking using cables for Compact electrically-operated devices

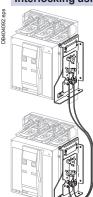

Complete assembly with 2 adaptation fixtures + cables	
2 Compact fixed devices	33911
2 Compact withdrawable devices	33914
1 Compact fixed + 1 Compact withdrawable device	33915

Compact NS630b to NS1600 circuit breakers and switch-disconnectors (cont.)

Associated controller

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

	IVE electrical-interlocki	ng unit		48/415 V AC 50/60 Hz 440 V 60 Hz
so es		For 2 devices	29356	29352
94093		Wiring kit for connection of 2 fixed/withdrawable devices to the IVE unit		54655
DB40	umm king ki			

Control	unit option			110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	380/415 V AC 50/60 Hz 440 V 60 Hz
2		ACP + controller BA (1)			29470	29471
			Plate ACP		29363	29364
			Controller BA		29376	29377
		ACP + controller UA	\ (1)	29448	29472	29473
			Plate ACP	29447	29363	29364
			Controller UA	29446	29378	29380
		ACP + controller UA	150 (1) (commur	nication option)	29474	29475
			Plate ACP		29363	29364
			Controller UA15	50	29379	29381


⁽¹⁾ The supply voltages of the UA/BA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.

Masterpact NT circuit breakers and switch-disconnectors

Interlocking for source-changeover systems

Interlocking using connecting rods



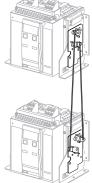

mecung rous	
Complete assembly with 2 adaptation fixtures + rods	
2 Masterpact NT fixed devices	33912
2 Masterpact NT drawout devices	33913

Interlocking using cables (*)

Choose 2 adaptation fixtures (1 for each breaker + 1 set of cables)	
1 adaptation fixture for Masterpact NT fixed devices	33200
1 adaptation fixture for Masterpact NT drawout devices	33201
1 set of 2 cables	33209

(*) Can be used with any combination of NT or NW, fixed or drawout devices.


Associated controller

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

IVE electrical-interloc	cking unit	24 to 250 V DC	48/415 V AC 50/60 Hz 440 V 60 Hz
	For 2 devices	29356	29352
	Wiring kit for connection of 2 fixed/drawout devices to the IVE unit		54655
anna anna			

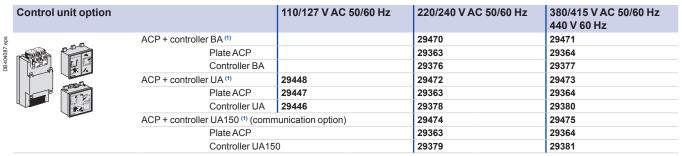


(1) The supply voltages of the UA/BA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.

Masterpact NW circuit breakers and switch-disconnectors

Interlocking for source-changeover systems for 2 devices

Interlocking of 2 devices using connecting rods

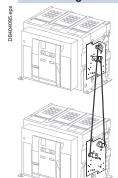

Complete assembly with 2 adaptation fixtures + rods

2 Masterpact NW fixed devices 48612
2 Masterpact NW drawout devices 48612

Can be used with 1 NW fixed + 1 NW drawout.

Interlocking of 2 devices using cables (*)

Choose 2 adaptation fixtures (1 for each breaker + 1 set of cables)

1 adaptation fixture for Masterpact NW fixed devices

1 adaptation fixture for Masterpact NW drawout devices

1 set of 2 cables

33209

(*) Can be used with any combination of NT or NW, fixed or drawout devices.

Associated controller for 2 devices

The automatic-control option includes:

- an IVE electrical-interlocking unit
- an ACP control plate
- a BA or UA controller, depending on the required functions
- a UA/BA adapter kit.

Note: the circuit breaker auxiliaries (MCH, MX, XF) and the automatic-control components (IVE, ACP, UA or BA) must have the same voltages.

IVE electrical-inte	rlocking unit	24 to 250 V DC	48/415 V AC 50/60 Hz 440 V 60 Hz
	For 2 devices	29356	29352
	Wiring kit for connection of 2 fixed/drawout devices to the IVE unit		54655
		* * * * *	



	110/127 V AC 50/60 Hz	220/240 V AC 50/60 Hz	440 V 60 Hz
ACP + controller BA (1)		29470	29471
Plate ACP		29363	29364
Controller BA		29376	29377
ACP + controller UA (1)	29448	29472	29473
Plate ACP	29447	29363	29364
Controller UA	29446	29378	29380
ACP + controller UA150 (1) (com	nmunication option)	29474	29475
Plate ACP		29363	29364
Controller UA1	50	29379	29381

(1) The supply voltages of the UA/BA controller, ACP plate, IVE unit and circuit breaker operating mechanism must be identical whatever the type of source-changeover system.

Source-changeover systems for 2 or 3 devices

Masterpact NW circuit breakers and switch-disconnectors

Interlocking for source-changeover systems for 3 devices			
Interlocking of 3 devices using cables			
Choose 3 adaptation fixtures (1 complete set with 3 adaptation fixtures + cables)			
3 sources, only 1 device closed, fixed or drawout devices	48610		
2 sources, 1 coupling, fixed or drawout devices 48609			
2 normal, 1 replacement source, fixed or drawout devices	48608		

Source-changeover systems for 2 devices

Compact INS40 to INS630 Switch-disconnectors

To indicate your choice appropriate information			e square boxes and enter the	
Mechanical interloc	king of two INS40	to II	NS630 devices	
Devices with front rotar	y handles, mounted	side	by side	
	Two devices with	direct	rotary handles	
	INS250		INS320/400/500/630	
	Two devices with	exten	ded rotary handles	
	INS40/63/80		INS100/125/160	
	INS250		INS320/400/500/630	Ī
Downstream coupling	INS250		INS320/400/500/630	
accessory			_	
Long terminal shields	INS250		INS320/400/500/630	
Complete source-ch	angeover assem	bly		
	INS250-100 A		INS250-160 A	Ī
	INS250-200 A		INS250-250 A	
	INS320		INS400	_
	INS500		INS630	_

Source-changeover systems for 2 devices

Compact INS40 to INS630 Switch-disconnectors

To indicate your	choices check	the applies	blo equaro	Indication and n	moseuro	monte		
	nter the approp					For INS250	Rating	100 A
rectangles		nate inform		4F ammeter module	-	1 01 1143230	Rating	150 A
(one sheet per dev	ice, make copies i	if necessary)						250 A
Device identifica						Adaptation kit requir	ed for direct handle	
Q1-NORMAL			Г			For INS320/630	Rating	400 A
		_				FOI 11NS320/030	Raung	_
Q 2 - REPLACE		E		4D average to the rest of a rec		F INICOFO	Datina	600 A
Switch-discon		10/00/00		4P current-transform module	ner	For INS250	Rating	100 A
Compact type		10/63/80		_				150 A
	INS1	100/125/160				For INS320/630	Doting	250 A
			620			FOI 11N5320/630	Rating	400 A 600 A
Rating	A	320/400/500/	630	Auxiliary contact		For INS40/160	10F/CAF/CA	
Number of poles	3 or	A		Auxiliary contact		1 01 114340/100	TOT/CAT/CAC	Low level
Connections	301	4				For INS250/630	1 OF/CAM	Standard
Front connection	Standard					1 01 1140230/030	1 OI /OAW	Low level
Rear connection	2 short	7 2	long	Rotary handles				Low level
				_		INCAO to INCACO	Diagle	Dad on vallous front
INS40/80 connectors	Distribution 3x1	6º rigia/10º ti	exible	Extended front hand		INS40 to INS160 INS250		Red on yellow front
	Chan and OF					INS320 to INS630	<u> </u>	Red on yellow front
INS100/160 connectors	Snap-on ≤ 95°	En riaid/16n fl	oviblo			For complete change		Red on yellow front INS250
INS250	Distribution 4x2					For complete chang	•	NS320/630
connectors	Snap-on 10 ⁻ to	`	,	Looking of votor	m, bandl		l de la companya de	INS320/030
Comicoloro			-	Locking of rotar	-		VCC:ti\	
	Voltage tap coni	nector for 18	5	Padlocking		1 to 3 padlocks (in O		
		toro C	ot of 10	Keylocking		Keylock adapter (ke Keylocks Ronis 135	·	<u> </u>
	Clips for connect Distribution 6x1.		et of 10	Installation acce		,	IB.500	Profalux KS5 B24 D4Z
	with interphase	•	u _				atara	
INS320/630				Front-panel escutch		on For switch-disconnectors For ammeter module, IP40		
connectors	1 cable 35 ^o to 30 2 cables 35 ^o to 2		-			For animeter module	e, IP40	
Comicoloro	Voltage tap con		<u>-</u>					
	connector	HECIOI IOI TO	5-					
Distribution	Linergy DX			_				
blocks	4P 125 A	160 A						
	1P	160 A						
	Linergy BS	160 A	250 A					
	(multi stage)							
	Linergy DP		250 A					
Rt-angle extension	Set of 3 or 4	250 A	630 A					
Straight extension	INS250							
Edgewise ext.	INS630							
Spreader	INS250 (45 mm)						
	Front alignment		, L					
		52.5 mm	70 mm					
	<u>.</u>	INS250	INS630					
Cu cable lugs	INS100/160	For 95						
supplied with 2 or 3 inter-phase	INS250		0º cable					
barriers			0º cable					
			5º cable					
	INS320/630		0º cable					
			0º cable					
Al cable lugs	INS250		0º cable					
supplied with 2 or 3 inter-phase			5º cable					
barriers	INS320/630 For 240° cable		<u> </u>					
			0º cable	_				
Terminal shrouds	INS40/63/80		0/125/160					
Terminal shields	INS40/63/80	INS100)/125/160					
	INS250		Long					
	INS320/630		Long					
Internit	Long for 52.5 mi							
Interphase barriers	INS100/160		et of 6					
-	INS250		et of 6					
	INS320/630	5	et of 6					

Compact NSX100 to NSX630 / Circuit breakers and switch-disconnectors

To indicate your choic appropriate information			quare boxes [and enter the	
Diagram for two Co	mnact NS	Y davicas	l		
Without automatic contro	•		iarios	(no. 51201177)	
	,	0 ,	laries	,	H
Without automatic contro				(no. 51201178)	
Without automatic contro			OV000 desile	(no. 51201179)	
Mechanical interloc	•	o NSX100 to N	SX630 device	es	
(fixed, plug-in or withdr	•				
Manually operated devi	,	•			
		ices with toggles			Ш
	Two dev	ices with rotary ha	andles		
Mechanical and ele	ctrical inte	rlocking of tw	o NSX100 to I	NSX630 devices	
(fixed or plug-in)					
Electrically operated de	vices, mou	nted side by side	e:		
Select 1 base plate + IVE	unit, the 4 a	uxiliary contacts a	and the options /	accessories	
Base plate + IVE unit	Identical	voltages:	48 to 415 V AC 50/60 Hz		
	24 to 25	0 V DC	440/480 V AC	60 Hz	
	"Normal	" NSX100/250	"Replacemen	t" NSX100/250	
	"Normal	" NSX400/630	"Replacemen	t" NSX400/630	
	"Normal	" NSX400/630	"Replacemen	t" NSX100/250	
	Adapter	kit for NSX400/63	30 with NSX100/	250 (plug-in)	
Auxiliary contacts	2 OF + 2	SDE (mandatory	′)	Quantity	4
Options	Long rea	ar connections	Plug-in base		
Downstream coupling ac	cessory	3P	NSX100/250		
		4P	NSX400/630		
Prefabricated wiring	Betweer	n device and IVE		Quantity	
Automatic-control of	ption				
Power supply 220/240 V	- 50/60 Hz:		ACP + BA con	troller	
			ACP + UA cor	ntroller	
			ACP + UA150	controller	
Power supply 380/415 V	- 50/60 Hz a	nd 440 V - 60 Hz:	ACP + BA con	troller	
			ACP + UA cor	ntroller	
			ACP + UA150	controller	

Source-changeover systems for 2 devices

Compact NSX100 to NSX630 / Circuit breakers and switch-disconnectors

(One sheet per d	evice, make copies if neo	cessary)		Indication and measu	rement				
Name of custom		,,		Ammeter module Standard 3P 4P					
Address for deli	very:			I max 3P					
				Current-transformer module 3P 4 Current-transformer module + TCU 3P 4					
Requested deliv Customer order	-			Insulation-monitoring mo		3P 3P	4F 4F	_	
Customer order				Voltage-presence indica		- 31	71		
,	choices, check the applic			Auxiliary contact	OF SD SDE	SDV	Standard		
and enter the app	propriate information in the	ne rectangles		SDE adapter (TM, MA or	OF SD SDE	SDV	Low leve	А	
Q1-NORMALS	OURCE			SDZ adapter (TW, WA of	Micrologic 2 trip utilits)			+	
Q 2 - REPLACE!			П	Remote operation					
Circuit breaker	or switch disconnecto	<u>r_</u>		Electrical operation	Motor mechanism AC	DC	V		
Compact type	NSX100/160/250	NSX400/630		Voltage releases	Instantaneous MX AC	DC	v		
Rating	A				Instantaneous MN AC	DC			
Circuit breaker Switch-discon.	B, F, N, H, S, L NA				Fixed time delay MN AC Adjust. time delay MN AC	DC DC			
No. of poles	2, 3 or 4			Rotary handles	Adjust: time delay will				
No. of poles	2d, 3d or 4d			Direct	Black	Red and y	rellow front		
protected						_			
Fixed device		ont connections	$-\!\!\!\!-\!\!\!\!\!\!+\!$	Estanded.	MCC conversion access.		conversion access.	_	
Plug-in/withdr. Earth-leakage	Plug-in Wi	ithdrawable	-	Extended	Black Telescopic handle for withdrawab		rellow front		
protection	L, 1911 1, 1910								
Vigi module	Voltage	V	\Box	Indication auxiliary	1 early-break switch	2 early-ma	ake switches		
Trip unit	4P option on 3P NSX			Locking Toggle (1 to 3 padlocks)	Removable		Fixed		
Thermal-mag.	TMD rating (16 250 A	4)		Rotary handle	Keylock adapter (keylock not incl		i ixeu	+	
oaag.	TMG rating (16 63 A)			r total y rialitato	Keylocks Ronis 1351B.500		Profalux KS5 B24 D42	z 🗀	
	MA rating (2.5 220 A			Motor mechanism	Keylock adapter + keylock Ronis (special)	NSX100/250)	
Electronic	Micrologic 2.2	Micrologic 2.3			Keylock adapter (keylock not incl	,	NSX400/630		
	Micrologic 2.2 G	Micrologic 2.3			Keylocks Ronis 1351B.500		Profalux KS5 B24 D42	<u> </u>	
	Micrologic 2.2 AB	Micrologic 5.3		Interlocking	To and a constant		Datamallandla		
	Micrologic 5.2 A	Micrologic 5.3 I		Mechanical	Toggle operated		Rotary Handle		
	Micrologic 5.2 E Micrologic 5.2 A-Z	Micrologic 5.3 A		By key (2 keylocks, 1 key) for rotary handle	Locking kit without locks Keylocks Ronis 1351B.500		Profalux KS5 B24 D42	7	
	Micrologic 6.2 A	Micrologic 6.3 I		.,, ,	Treylooke Frome Too 12.500		T TOTALAX TOO BE TEN		
	Micrologic 6.2 E	Micrologic 1.3 I		Installation accessori	es				
	Micrologic 2.2 M	Micrologic 2.3 I	1 🔲	IP30 escutcheon for all t	ypes (toggle/rotary handle/motor m	echanism)			
	Micrologic 6.2 E-M	Micrologic 6.3 I	-M		ccess to toggle + trip unit)				
	SDTAM module			IP30 escutcheon for Vigi				+	
External neutral (-	IP40 escutcheon for all t IP40 escutcheon for Vigi	ypes (toggle/rotary handle/motor m	echanism)		+	
24 V DC power s	sory for NS630b NW/NT		-	IP40 escutcheon for Vigi				+	
External power	24-30 V DC	48-60 V DC	-	Toggle cover	or armiteter medale			+	
supply module	100-125 V AC	110-130 V AC		Sealing accessories				\top	
24 V DC	200-240 V AC	380-415 V AC		DIN rail adapter					
Battery module			$-\Box$	3P 60 mm busbar adapt				L	
Connection Rear-connection	Short	Long			configuration accessories	with O wires (for h	200)		
kit	Mixed	Long	H	Auxiliary connections 1 automatic connector fixed part with 9 wires (for base) 1 automatic connector moving part with 9 wires (for circuit breaker)					
NSX100/250	Snap-on 1.5° to 95° (< 1	160 A)	-		1 sup. for 3 auto. conn. moving part with a wife (for circuit breaker)				
connectors	Snap-on 25° to 95° (< 2			9-wire manual auxiliary connector (fixed + moving)					
	Snap-on 120° to 185° (<	< 250 A)		Plug-in base					
	Distribution 6 x 1.5° to 3		Ш	accessories	2 IP4 shutters for base				
NOV 400 (000	Aluminium 2 cables 50°	to 120 ⁻		Chassis accessories	Escutcheon collar	Toggle	Vig	^{ji}	
NSX400/630 connectors	1 cable 35° to 300° 2 cables 35° to 240°		Н		Locking kit (keylock not included) 2 carriage switches (conn./discor	nected position in	adication)	-	
Right-angle term			+	Parts or plug-in	Plug-in base FC/RC 2		4F	_	
Straight extensio		0/250	$\dashv \vdash$	Withdrawable kits	Set of two power connections	Standard	Vig	_	
Edgewise extens			ext.		Safety trip for advanced opening				
Spreader	NSX100/250 (one piece	· — ·	· —		For 3P/4P chassis		Moving par		
0	NSX400/630 (52.5 mm)			Admits 6	- Manhamata I I I I I I I I I I I I I I I I I I	to a made a constant of	Fixed par	t	
Cu cable lugs	NSX100/250 120 ⁻¹ NSX400/630		5º	Adaptater for plug-in bas Communication	se (for terminal shield or interphase	barriers)			
Al cable lugs	NSX100/250		5º	Communication	NSX Cord L = 0.35 m		NSX Cord L = 1.3 n	n	
Al cable lugs	NSX400/630		0		NSX Cord U > 480 V AC L = 0.35 r	n	NSX Cord L = 3 n	_	
V mesrt Input for	For lugs NSX100/250 ≤		$\dashv \vdash$	BSCM (NSX400/630)				+	
connector	For lugs NSX400/630			Communicating motor m	nechanism 220-240 V				
Terminal shields		Lor		Switchboard front displa	-			\bot	
	NSX400/630	Lor	g	FDM mounting accessor	ĵy			+	
Interphase 5 === 1	Long for 52.5 mm sprea			Modbus interface				+	
Interphase barrie 2 insulating scrn.		Set of X400/630 70 pitc	$\overline{}$	Stacking accessory ULP line termination				+	
Test tool	NOV 1001200 NO	A-00/030 / 0 pitc	<u> </u>	RJ45 connectors	Wire length RJ45 L = 0.3 m	Wire	length RJ45 L = 0.6 m	+	
Pocket battery fo	r Micrologic			female/female	Wire length RJ45 L = 1 m		e length RJ45 L = 2 m	-	
Maintenance cas					Wire length RJ45 L = 3 m		length RJ45 L = 5 m		
USB maintenand			$\perp \!\!\! \perp \!\!\! \perp$						
Power supply 110 Spare Micrologic			+						
Chare MICHORORIC	coru		1 1						

Compact NS630b to NS1600 / Circuit breakers and switch-disconnectors

appropriate information	on in the rectangles	quare boxes and enter the					
Diagram for two Co	mpact NS devices						
Electrical interlocking	with lockout after fault:						
Permanent replacement	source (with IVE unit)	(no. 51201183)					
With emergency off by MX (with IVE unit) (no. 51201184)							
With emergency off by M	IN (with IVE unit)	(no. 51201185)					
Interlocking using	connecting rods between	two NS630b to NS1600 device	es				
Manually operated dev	ices installed side-by-side:						
	For two fixed NS devices w	vith extended rotary handles					
Electrically operated d	evices installed one above th	e other:					
Select a complete set inc	cluding two adaptation fixtures a	and the connecting rods					
Complete set for:	2 fixed NS devices						
	2 withdrawable NS devices	3					
Interlocking using	cables between two NS63	0b to NS1600 devices					
Electrically operated d	evices installed one above th	e other or side-by-side:					
Select a complete set inc	cluding two adaptation fixtures a	and the cables					
Complete set for:	2 fixed NS devices						
	2 withdrawable NS devices	3					
	1 fixed NS device + 1 without	frawable NS device					
Electrical interlock	ing between two NS630b	to NS1600 devices					
1 IVE unit 48/415 V - 50/	60 Hz and 440 V - 60 Hz						
1 wiring kit for connection	n between 2 fixed / withdrawabl	e devices to the IVE unit					
Automatic-control	option						
Power supply 110 V - 50	/60 Hz:	ACP + BA controller					
		ACP + UA controller					
		ACP + UA150 controller					
Power supply 220/240 V	- 50/60 Hz:	ACP + BA controller					
		ACP + UA controller					
		ACP + UA150 controller					
Power supply 380/415 V	- 50/60 Hz and 440 V - 60 Hz:	ACP + BA controller					
		ACP + UA controller					
		ACP + UA150 controller					

Source-changeover systems for 2 devices

Compact NS630b to NS1600 / Circuit breakers and switch-disconnectors

(One sheet per device, make copies if necessary)						Indication contacts							
Name of customer:	_					SD trip indication (maximum	1)			,			
Address for delivery:	_					6 A-240 V AC Low level							
						SDE fault-trip indication (max	ximum 1) (SDE into	egrated in	ele	ctrically ope	rate	d devices)	
Requested delivery date:	: _						6 A-240 V AC			Low level			
Customer order no.:						OF ON/OFF indication conta	icts (maximum 3)			_			
							6 A-240 V AC	qty		Low level		qty	
To indicate your choices, check the applicable square boxes						Carriage switches (possible	combinations: 3 C	E, 2 CD, 1	СТ)			
and enter the appropriate i	nformation	in the r	ectan	gles		CE - "connected" position	6 A-240 V AC	qty		Low level		qty	
Device identification:						CD - "disconnected" position	6 A-240 V AC	qty		Low level		qty	
Q1-NORMAL SOURCE						CT - "test" position	6 A-240 V AC	qty		Low level		qty	
Q 2 - REPLACEMENT SO	URCE					Auxiliary terminals for chassi	is alone			Jumpers (s	set o	of 10)	
Circuit breaker or swit	ch discon	necto	r			,	3-wire terminal	(30 parts)		6-wire tern	nina	I (10 parts)	_
Compact type	NS630b t	o NS16	500			Remote operation				J		` ' '	
Rating	Α					Electrical operation	Standard					Communicating	
Circuit breaker	N, H, L					·	Power supply	AC		DC		v ,	_
Switch-disconnector	NA					Voltage releases	MX	AC		DC		V	_
Number of poles	3 or 4					· ·	MN	AC		DC		V	_
Device	Fixed						MN delay unit			Adjustable		Non-adjustable	_
	Withdr. wi	th chas	sis			Rotary handles for fixed a	nd withdrawable	device		rajustable		14011 adjustable	
	Withdr. wi	thout cl	hassis	3		Direct		Black		1	Re	d on yellow front	
	(moving p	art only	/)							CNOMO) co	nversion access.	_
Chassis alone without con	nections					Extended		Black			Re	d on yellow front	
Micrologic control uni	t					Telescopic handle for withdrawable device				,	_		
Basic protection	2.0	5.0		6.0		Indication auxiliary	6 A-240 V AC	6 A-240 V AC		2 early-make switches			_
A - ammeter	2.0	5.0		6.0	7.0	,	071210 7710			2 early-break switches			_
E - energy meter	2.0	5.0		6.0		Locking							
P - power meter		5.0		6.0	7.0	Toggle (1 to 3 padlocks)	Removable sys	tem		Fixed syste	em		_
AD - external power-supply	y module				V	Rotary handle using	OFF position			ON and OI		ositions	_
TCE - external sensor (CT)		protec	tion			a keylock	a keylock Ronis 1351B.500 Profe		Profalux K	<u> </u>		_	
Rectangular sensor	280 x 115	mm					Keylock kit (without keylock)					_	
TCW - external sensor for 3						For electrically operated VBP - ON/OFF pushbutton locking						_	
LR - long-time rating plug	Standard	0.4 to 1	l Ir			devices	OFF position locking:					_	
0 01 0	Low settin			r			VCPO - by padlocks					_	
	High settir						VSPO - by keyl					L	_
	LT OFF							Keylock kit (w/o keylock)		Profalux		Ronis	_
Communication							1 keylock Profalux		Ronis				
Eco COM module Modbus	s Devic	e	П	Ch	nassis		2 identical keylo	ocks. 1 kev	,	Profalux		Ronis	_
Front Display Module (FDM	1121)	M	lountii	ng acce	ssory	Chassis locking in "disconnected" position:						_	
Breaker ULP cord	L = 0.	35 m				VSPD - by keylocks	Keylock kit (w/c	keylock)		Profalux		Ronis	_
	L = 1.3	3 m	П							Kirk		Castell	
	L=31	m	П				1 keylock			Profalux		Ronis	_
Connections							2 identical keylo	ocks, 1 key	,	Profalux		Ronis	
Horizontal rear connection	ons Top		1	В	ottom		2 keylocks, diffe	erent keys		Profalux		Ronis	_
Vertical rear connections			1	В	ottom		Optional conne	cted/disco	nne	ected/test po	sitio	on locking	_
Front connections	Тор		1	В	ottom	VPEC - door interlock						side of chassis	_
4x240° bare cable connectors NS - FC fixed									On left-har	nd s	de of chassis	_	
+ shields						VPOC - racking interlock							_
Long connection shields	NS -	FC fixe	ed			VDC - mismatch protection							_
Vertical-connection adapte	ers NS -	FC fixe	ed, wit	hdr.		Accessories							
					CDM - mechanical operation	counter							
Arc chute screen		FC fixe			H	CDP - escutcheon							_
Interphase barriers		FC fixe		hdr.		CP - transparent cover for es	scutcheon						_
Spreaders		FC fixe				OP - blanking plate for escut						-	_
VO - safety shutters on cha						Mounting brackets for fixed N			F	or mounting	ู ดูก	horizontal plane	_
				-		Test kits		i test kit				Portable test kit	_

Masterpact NT or NW / Circuit breakers and switch-disconnectors

To indicate your choices appropriate information	i, check the applicable squar in the rectangles	re boxes and enter the							
Diagram for 2 Masterp	act NT/NW devices								
Electrical interlocking wit	h lockout after fault:								
Permanent replacement source (with IVE unit) (no. 51201142)									
With emergency off by MX (with IVE unit) (no. 51201143)									
With emergency off by MN (with IVE unit) (no. 51201144)									
Automatic control with lo	ckout after fault:								
Permanent replacement so	urce (with IVE unit)	(no. 51156904)							
Engine generator set (with I	VE unit)	(no. 51156905)							
Interlocking using cor	nnecting rods (NT/NW dev	ices one above the other)							
Select a complete set include	ling two adaptation fixtures and	the connecting rods							
Complete set for:	2 drawout NT devices	2 fixed NT devices							
	2 drawout NW devices	2 fixed NW devices							
	1 fixed NT device + 1 fixed NW	device							
	1 drawout NT device + 1 drawo	out NW device							
Interlocking using cab	les (NT/NW devices one ab	ove the other or side-by-s	ide)						
Select two adaptation fixture	es (one for each device) and a se	et of two cables							
Adaptation fixture for:	1 fixed NT device	qty							
(NT/NW fixed and drawout devices may be mixed)	1 drawout NT device	qty							
devices may be mixed)	1 fixed NW device	qty							
	1 drawout NW device	qty							
	1 set of 2 cables (for two device	es)							
Electrical interlocking	2 Masterpact NT/NW devi	ces							
1 IVE unit 48/415 V - 50/60 I	Hz and 440 V - 60 Hz								
1 wiring kit for connection be	etween 2 fixed / withdrawable de	vices to the IVE unit							
Automatic-control op	tion								
Power supply 220/240 V - 5	0/60 Hz:	ACP + BA controller							
		ACP + UA controller							
		ACP + UA150 controller							
Power supply 380/415 V - 5	0/60 Hz and 440 V - 60 Hz:	ACP + BA controller							
		ACP + UA controller							
		ACP + UA150 controller							

Source-changeover systems for 2 devices

Masterpact NT or NW / Circuit breakers and switch-disconnectors

(One sheet per device, ma	ıka aaniaa if n					Indication contacts					
Name of customer:	ike copies ii ii	ecess	aiy)			OF - ON/OFF indication cont	acto				
	_	-				Standard	4 OF 6 A-240 V AC (10 A-240 V A	C and law la	svol 4	or NIM/)	
Address for delivery:	_						,		veri	· ·	_
Doguanted delivery date						Additional EF - combined "connected/c	1 block of 4 OF for NW	max. 2		qty	
Requested delivery date Customer order no.:	-					Er - combined connected/c		may 0		at.	
Customer order no.:	_	-					1 EF 6 A-240 V AC for NW 1 EF low-level for NW	max. 8 max. 8		qty	
								IIIdx. o		qty	
To indicate your choices, o					es	SDE - "fault-trip" indication					
and enter the appropriate	information in	the re	ectar	ngles		Standard	1 SDE 6 A-240 V AC	7			
Device identification:						Additional	1 SDE 6 A-240 V AC			SDE Low level	
Q 1 - NORMAL SOURCE						Programmable contacts	2 M2C contacts		6	M6C contacts	
Q 2 - REPLACEMENT SC						Carriage switches	6 A-240 V AC			Low level	
Circuit breaker or switc	n aisconnec				ADA/	CE - "connected" position	max. 3 for NW / NT			qty	
Masterpact type		NT			NW	CD - "disconnected" position	max. 3 for NW, 2 for NT			qty	
Rating	A A					CT - "test" position	max. 3 for NW, 1 for NT CD - 0 CT additional carriage switcl			qty	
Sensor rating Circuit breaker	N1, H1, H2,	⊔ 2 I .	1			Remote operation	5D - 0 C F additional carriage switch	162		qty	
Switch-disconnector	NA, HA, HF,			n (NIW)		Remote ON/OFF	MCH - gear motor				
Number of poles	3 or 4	L3, I	17.1	J (1444)		Remote ON/OTT	XF - closing voltage release			V	
Option: neutral on right sid		_					MX - opening voltage release			V	
Device	Fixed						PF - "ready to close" contact	Low level		v	Т
Device	Withdr. with	chass	ie		\vdash		Tr - ready to close contact	6 A-240 V	ΔC		Н
	Withdr. with			s	H		BPFE - electrical closing pushbu		.0		H
	(moving part			O			Res - electrical reset option			v	
Chassis alone without co		,					RAR - automatic reset option			•	П
Micrologic control unit	J00t01.10					Remote tripping	MN - undervoltage release			.,	
A - ammeter	2.0	5.0		6.0	7.0		R - delay unit (non-adjustable)			V	П
E - energy meter	2.0	5.0		6.0	1		Rr - adjustable delay unit				
P - power meter		5.0		6.0	7.0		2 nd MX - shunt release			.,	
H - harmonic meter		5.0		6.0	7.0	Locking					
AD - external power-suppl	y module				v	VBP - ON/OFF pushbutton loc	king (by transparent cover + padlo	cks)			
TCE - external sensor (CT) for neutral p	rotect	ion			OFF position locking:					
Rectangular sensor for	NT (280 x 11	5 mm	1)			VCPO - by padlocks					
earth-leakage protection	NW (470 x 1	60 mr	n)			VSPO - by keylocks	Keylock kit (w/o keylock)	Profalux		Ronis	
LR - long-time rating plug	Standard 0.4	4 to 1	lr					Kirk		Castell	
	Low setting	0.4 to	0.81	lr			1 keylock	Profalux		Ronis	
	High setting	0.8 to	1 Ir				2 identical keylocks, 1 key	Profalux		Ronis	
	LTOFF						2 keylocks, different keys (NW)	Profalux		Ronis	
PTE - external voltage me	asurement in	put (re	equir	ed for re	verse	Chassis locking in "disconn	•		_	1	
supply)						VSPD - by keylocks	Keylock kit (w/o keylock)	Profalux	_	Ronis	
BAT - battery module								Kirk	_	Castell	
Communication					. \square		1 keylock	Profalux		Ronis	
Eco COM module Modbu					nassis		2 identical keylocks, 1 key	Profalux		Ronis	
Front Display Module (FDI			ount	ing acce	essory		2 keylocks, different keys	Profalux		Ronis	
Breaker ULP cord	L = 0.35		\vdash			VPEC - door interlock	Optional connected/disconnecte			side of chassis	\vdash
	L = 1.3 n	T1				VPEC - door interlock		•		de of chassis	
Connections	L=3 m					VPOC - racking interlock		On leit-nai	iu si	ue oi chassis	
Horizontal	Top	7			Sottom	IPA - cable-type door interlock			_		\vdash
Vertical	Top	-			Sottom		en crank and OFF pushbutton for N	Ι\Λ/			
Front	Top	-			Bottom		rge before breaker removal for NW				
Vertical-connection adapte		C fixed	l. dra		- Juoiii	VDC - mismatch protection de					\vdash
Cable-lug adapters	NT - FC				-+	Accessories					
Arc chute screen	NT - FC				H	CDM - mechanical operation c	ounter				
Interphase barriers	NT - N\			aw.		CB - auxiliary terminal shield for					
Spreaders	NT fixe				$\overline{}$	CDP - escutcheon					
Disconnectable front	NW fixe					CP - transparent cover for escu	utcheon				
connection adapter		-				OP - blanking plate for escutch					
Lugs for 240° or 300° cable	es NW fixe	ed, dra	awoı	ut		Brackets for mounting NW fixe				On backplates	
VO - safety shutters on cha					х	Test kits	Mini test kit			Portable test kit	
VIVC - shutter position	NW				$\neg \vdash \vdash$		-				1
indication and locking											

Source-changeover systems for 3 devices

Masterpact NW / Circuit breakers and switch-disconnectors

To indicate your choices, check the applicable square boxes and enter the appropriate information in the rectangles.								
Diagram for 3 Maste	rpact NW devices							
2 "Normal" sources + 1	"Replacement" source:							
Electrical interlocking without lockout after fault (no. 51156906)								
Electrical interlocking with	lockout after fault	(no. 51156907)						
2 "Normal" sources + 1	"Replacement" source with source sele	ection:						
Automatic control w/ engi	Automatic control w/ engine generator set w/o lockout after fault (no. 51156908)							
Automatic control w/ engine generator set w/ lockout after fault (no. 51156909)								
3 sources, only 1 device ON:								
Electrical interlocking with	nout lockout after fault	(no. 51156910)						
Electrical interlocking with	lockout after fault	(no. 51156911)						
2 "Normal" sources + 1	coupling:							
Electrical interlocking with	nout lockout after fault	(no. 51156912)						
Electrical interlocking with	n lockout after fault	(no. 51156913)						
Automatic control with loc	kout after fault:	(no. 51156914)						
Interlocking using cables (NW devices one above the other or side-by-side)								
Select a complete set in	cluding three adaptation fixtures and th	e cables						
1 complete set for:	3 sources / 1 device ON, fixed or drawo	ut						
	2 sources + 1 coupling, fixed or drawou	t						
	2 sources + 1 replacement source, fixed	d or drawout						

Source-changeover systems for 3 devices

Masterpact NW / Circuit breakers and switch-disconnectors

To indicate your choices, o	check the	e applic	able sq	uare	Indication contacts					
boxes and enter the ar	propriat	te inforr	nation i	n the	OF - ON/OFF indication co	ntacts				
rectangles .					Standard	4 OF 6 A-240 V AC (10 A-240 V	AC and low	/-level)		
(one sheet per device, make of	copies if n	ecessar	y)		Additional	1 block of 4 OF	max. 2	,	qty	
Device identification:			,		EF - combined "connected		max. 2		99	
Q1-NORMAL SOURCE						1 EF 6 A-240 V AC	max. 8		qty	
Q 2 - REPLACEMENT SC	MIDCE					1 EF low-level	max. 8		qty	
					ODE ((for all Anima)) in alice Alice		IIIax. 0		Чіў	
Circuit breaker or switch-d	isconnec	ctor		. —	SDE - "fault-trip" indication					
Masterpact type			NV	V	Standard	1 SDE 6 A-240 V AC	1			
Rating	Α				Additional	1 SDE 6 A-240 V AC		1 SDE Lo		\perp
Sensor rating	Α				Programmable contacts	2 M2C contacts		6 M6C co	ontacts	
Circuit breaker	N1, H1,	H2, H3,	L1		Carriage switches	6 A-240 V AC		Lo	w level	
Switch-disconnector	NA, HA	, HF			CE - "connected" position	Max. 3			qty	
Number of poles	3 or 4				CD - "disconnected" position	Max. 3			qty	
Option: neutral on right side					CT - "test" position	Max. 3			qty	
Device	Fixed				AC - NW actuator for 6 CE	- 3 CD - 0 CT additional carriage	switches		qty	
	Drawou	t with ch	assis		Remote operation				17	
	Drawou				Remote ON/OFF	MCH - gear motor			V	
	(moving				Remote Olivor	XF - closing voltage release			v –	
Observice alone with a standard		, pa. (o	· · · · · · · · · · · · · · · · · · ·			• •			v –	
Chassis alone without connect	tions					MX - opening voltage release			v _	_
Micrologic control unit	, –					PF - "ready to close" contact	Low level			
A - ammeter 2.0	5.0	6.0		7.0			6 A-240 V	AC		
E - energy meter 2.0	5.0	6.0	1			BPFE - electrical closing pushb	utton		_	
P - power meter	5.0	6.0	'	7.0		Res - electrical reset option			V	
H - harmonic meter	5.0	6.0		7.0		RAR - automatic reset option				
AD - external power-supply m	odule		V		Remote tripping	MN - undervoltage release			V	
TCE - external sensor (CT) for	r neutral p	rotectio	n			R - delay unit (non-adjustable)				П
Rectangular sensor	470 x 16	30 mm				Rr - adjustable delay unit				
for earth-leakage protection						2eme MX - shunt release			v	
TCW - external sensor for SG	P protecti	ion			Locking					
	Standard		le .		_	acking (by transparent cover + pe	dlooko)			
LR - long-time rating plug						ocking (by transparent cover + pa	iuiocks)			
	Low setti				OFF position locking:					
	High sett	ing 0.8 t	0 1 Ir		VCPO - by padlocks					
	LT OFF				VSPO - by keylocks	Keylock kit (w/o keylock)	Profalux	<u> </u>	Ronis	
PTE - external voltage measu	rement in	put (req	uired for				Kirk		Castell	
reverse supply)						1 keylock	Profalux		Ronis	
BAT - battery module						2 identical keylocks, 1 key	Profalux		Ronis	
Communication						2 keylocks, different keys (NW)	Profalux		Ronis	
Eco COM module Modbus	Device		Chass	is	Chassis locking in "discor	nnected" position:				
Front Display Module (FDM12	21)	Mountin	g access	sorv	VSPD - by keylocks	Keylock kit (w/o keylock)	Profalux		Ronis	
Breaker ULP cord L = 0.35			J	-1	<i>y</i> - <i>y</i>	,	Kirk		Castell	Н
L = 1.3 m						1 keylock	Profalux	$\overline{}$	Ronis	
L=3m	. Н					2 identical keylocks, 1 key				\vdash
						-	Profalux		Ronis	\vdash
Connections	Tarr		D-41			2 keylocks, different keys	Profalux		Ronis	\vdash
Horizontal	Тор	_	Botton			Optional connected/disconnect				
Vertical	Тор		Botton		VPEC - door interlock		On right-h			
Front	Тор		Botton	1			On left-ha	nd side of	fchassis	
Interphase barriers	Fixed, d	rawout			VPOC - racking interlock					
Disconnectable front	Fixed				IPA - cable-type door interloc	ck				
connection adapter					IBPO - racking interlock betv	veen crank and OFF pushbutton	for NW			
VO - safety shutters on chassi	is			X	DAE - automatic spring disch	harge before breaker removal for	NW			
VIVC - shutter position indicat	ion and lo	ckina			VDC - mismatch protection					
P					Accessories					
					CDM - mechanical operation	counter				
					·					
					CB - auxiliary terminal shield	TIOT CHASSIS				\vdash
					CDP - escutcheon					
					CP - transparent cover for es					
					OP - blanking plate for escut	cheon				
					Brackets for mounting NW fix	xed		On b	backplates	3
					Test kits	Mini test kit		Porta	able test kit	t

Notes

Notes

Notes

Schneider Electric Industries SAS

35, rue Joseph Monier CS 30323 92506 Rueil Malmaison Cedex France

RCS Nanterre 954 503 439 Capital social 896 313 776 € www.schneider-electric.com As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.

Publication: Schneider Electric Industries SAS