

# Altivar Machine ATV340

Variable Speed Drives for Asynchronous and Synchronous Motors

## Ethernet Embedded Manual

12/2018



---

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2018 Schneider Electric. All rights reserved.

# Table of Contents



	<b>Safety Information</b> .....	7
	<b>About the Book</b> .....	11
<b>Chapter 1</b>	<b>Presentation</b> .....	15
	Hardware Overview .....	16
	Software Overview .....	17
<b>Chapter 2</b>	<b>Basics</b> .....	19
2.1	Introduction .....	20
	Introduction .....	21
	Network Layer Supported Functions/Protocols .....	22
	TCP and UDP Protocol .....	23
2.2	Modbus TCP Features .....	25
	Modbus TCP Frames .....	26
	Modbus TCP Servers .....	26
	Supported Modbus TCP Functions .....	27
	Application Profile with Modbus TCP .....	28
2.3	Ethernet IP Features .....	29
	EtherNet/IP .....	30
	Cyclical Exchanges (Implicit Exchanges) .....	31
	Messaging (Explicit Exchanges) .....	34
	Timeout Monitoring .....	34
2.4	CIP Object .....	35
	Supported Object Classes .....	36
	Identity Object (01 hex) .....	37
	Message Router Object (02 hex) .....	40
	TCP/IP Interface Object (F5 hex) .....	41
	Ethernet Link Object (F6 hex) .....	44
	Assembly Object (04 hex) .....	46
	Connection Manager Object (06 hex) .....	48
	Motor Data Object (28 hex) .....	50
	Control Supervisor Object (29 hex) .....	51
	AC/DC Drive Object (2A hex) .....	53
	Application Object (70 hex to C7 hex) / Explicit Messaging .....	56
	Base Energy Object (4E hex) .....	57
	Electrical Energy Object (4F hex) .....	59
<b>Chapter 3</b>	<b>Hardware Setup</b> .....	61
	Hardware Presentation .....	62
	Firmware Version .....	62
	Electrical Installation .....	63
	Cable Routing Practice .....	64
<b>Chapter 4</b>	<b>Software Setup</b> .....	67
4.1	Basic Settings .....	68
	IP Parameter Settings .....	69
	[Device Name] <i>P R n</i> .....	70
	[IP mode Ether. Embd ] <i>, n 0 0</i> .....	70
	[IP address] <i>, C 0 1 , C 0 2 , C 0 3 , C 0 4</i> .....	71
	[Mask] <i>, n 0 1 , n 0 2 , n 0 3 , n 0 4</i> .....	71
	[Gateway] <i>, G 0 1 , G 0 2 , G 0 3 , G 0 4</i> .....	72
	[Enable FDR] <i>F d v 0</i> .....	72
	[FDR Action] <i>F d r 0</i> .....	73
	[FDR Operating State] <i>F d 5 0</i> .....	73
	[FDR Error Status] <i>F d r 0</i> .....	74

	[MAC @] <i>MAC @</i> .....	74
	[ETH emb Rx frames] <i>ERXE</i> .....	75
	[ETH emb Tx frames] <i>ETXE</i> .....	75
	[ETH emb error frames] <i>EERE</i> .....	75
	[Ethernet Rate Data] <i>ERDE</i> .....	75
	[Enable Webserver] <i>EWEE</i> .....	76
	[Reset EmbWeb] <i>RWPE</i> .....	76
	[Ethernet Embd cmd.] <i>CPDS</i> .....	76
	[Ethernet Embd Ref Freq] <i>LFRS</i> .....	77
	[Ethernet Timeout] <i>ETOB</i> .....	77
4.2	Additional Settings .....	78
	FDR Settings .....	79
	RSTP Settings .....	80
	Configuring I/O Scanning .....	82
	DNS Settings .....	83
	SNTP Settings .....	84
	SNMP Settings .....	85
4.3	Fast Device Replacement .....	87
	Presentation .....	88
	Startup Detailed Behavior .....	89
	FDR Operation Behavior .....	90
	Local Configuration .....	91
	Downloaded Configuration .....	92
4.4	Profile .....	94
	Definition of a Profile .....	95
	Functional Profiles Supported by the Drive .....	96
	Functional Description .....	97
	CIA402 Operating State Diagram .....	98
	Description of Operating States .....	99
	Summary .....	100
	Cmd Register <i>CPD</i> .....	101
	Stop Commands .....	102
	Assigning Control Word Bits .....	103
	[CIA402 State Reg] <i>EER</i> .....	104
	Starting Sequence .....	105
	Starting Sequence for a Drive Powered by the Power Stage Supply .....	106
	Starting Sequence for a Drive with Separate Control Stage .....	107
	Starting Sequence for a Drive with Mains Contactor Control .....	109
4.5	Embedded Webserver .....	110
	Overview .....	111
	Connection to the Webserver .....	112
	My Dashboard .....	113
	Display - Drive .....	114
	Setup - My Preference .....	115
4.6	Software Setup with SoMachine (M251) .....	116
	Introduction .....	117
	Drive Configuration .....	118
	Ethernet Master Configuration .....	119
4.7	Software Setup with Allen-Bradley PLC .....	124
	Introduction .....	125
	Drive Configuration .....	126
	PLC Configuration .....	129
<b>Chapter 5</b>	<b>Operations</b> .....	<b>135</b>
5.1	Operating States .....	136
	Configuring Communication Error Response .....	136

---

5.2	Operating Modes . . . . .	138
	Configuring the Control Channel . . . . .	139
	Configuration of the Drive for Operation in I/O Profile . . . . .	139
	Configuration of the Drive for Operation with CiA 402 Profile in Combined Mode . . . . .	140
	Configuration of the Drive for Operation with CiA 402 Profile in Separate Mode . . . . .	141
<b>Chapter 6</b>	<b>Diagnostic and Troubleshooting . . . . .</b>	<b>143</b>
	Fieldbus Status LEDs . . . . .	144
	Connection for Fieldbus Mode . . . . .	146
	Fieldbus Functions Test . . . . .	147
	Control-Signal Diagnostics . . . . .	149
<b>Glossary</b>	. . . . .	<b>151</b>

---



## Important Information

### NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

### PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

### Qualification Of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product. In addition, these persons must have received safety training to recognize and avoid hazards involved. These persons must have sufficient technical training, knowledge and experience and be able to foresee and detect potential hazards that may be caused by using the product, by changing the settings and by the mechanical, electrical and electronic equipment of the entire system in which the product is used. All persons working on and with the product must be fully familiar with all applicable standards, directives, and accident prevention regulations when performing such work.

## Intended Use

This product is a drive for three-phase synchronous, reluctance and asynchronous motors and intended for industrial use according to this manual. The product may only be used in compliance with all applicable safety standard and local regulations and directives, the specified requirements and the technical data. The product must be installed outside the hazardous ATEX zone. Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety measures must be implemented. Since the product is used as a component in an entire system, you must ensure the safety of persons by means of the design of this entire system (for example, machine design). Any use other than the use explicitly permitted is prohibited and can result in hazards.

## Product Related Information

Read and understand these instructions before performing any procedure with this drive.

### DANGER

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation and who have received safety training to recognize and avoid hazards involved are authorized to work on and with this drive system. Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- The system integrator is responsible for compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Many components of the product, including the printed circuit boards, operate with mains voltage.
- Only use properly rated, electrically insulated tools and measuring equipment.
- Do not touch unshielded components or terminals with voltage present.
- Motors can generate voltage when the shaft is rotated. Prior to performing any type of work on the drive system, block the motor shaft to prevent rotation.
- AC voltage can couple voltage to unused conductors in the motor cable. Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.
- Before performing work on the drive system:
  - Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not de-energize all circuits.
  - Place a **Do Not Turn On** label on all power switches related to the drive system.
  - Lock all power switches in the open position.
  - Wait 15 minutes to allow the DC bus capacitors to discharge.
  - Follow the instructions given in the chapter "Verifying the Absence of Voltage" in the installation manual of the product.
- Before applying voltage to the drive system:
  - Verify that the work has been completed and that the entire installation cannot cause hazards.
  - If the mains input terminals and the motor output terminals have been grounded and short-circuited, remove the ground and the short circuits on the mains input terminals and the motor output terminals.
  - Verify proper grounding of all equipment.
  - Verify that all protective equipment such as covers, doors, grids is installed and/or closed.

**Failure to follow these instructions will result in death or serious injury.**

Drive systems may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

### WARNING

#### UNANTICIPATED EQUIPMENT OPERATION

- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

## DANGER

### ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION

Do not use damaged products or accessories.

**Failure to follow these instructions will result in death or serious injury.**

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

## WARNING

### LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop, overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines (1).
- Each implementation of the product must be individually and thoroughly tested for proper operation before being placed into service.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

(1) For USA: Additional information, refer to NEMA ICS 1.1 (latest edition), Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control and to NEMA ICS 7.1 (latest edition), Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems.

## NOTICE

### DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE

Before switching on and configuring the product, verify that it is approved for the mains voltage.

**Failure to follow these instructions can result in equipment damage.**

The temperature of the products described in this manual may exceed 80 °C (176 °F) during operation.

## WARNING

### HOT SURFACES

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

## DANGER

### POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

**Failure to follow these instructions will result in death or serious injury.**

---

** WARNING**

**LOSS OF CONTROL**

Perform a comprehensive commissioning test to verify that communication monitoring properly detects communication interruptions

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

Machines, controllers, and related equipment are usually integrated into networks. Unauthorized persons and malware may gain access to the machine as well as to other devices on the network/fieldbus of the machine and connected networks via insufficiently secure access to software and networks.

** WARNING**

**UNAUTHORIZED ACCESS TO THE MACHINE VIA SOFTWARE AND NETWORKS**

- In your hazard and risk analysis, consider all hazards that result from access to and operation on the network/fieldbus and develop an appropriate cyber security concept.
- Verify that the hardware infrastructure and the software infrastructure into which the machine is integrated as well as all organizational measures and rules covering access to this infrastructure consider the results of the hazard and risk analysis and are implemented according to best practices and standards covering IT security and cyber security (such as: ISO/IEC 27000 series, Common Criteria for Information Technology Security Evaluation, ISO/ IEC 15408, IEC 62351, ISA/IEC 62443, NIST Cybersecurity Framework, Information Security Forum - Standard of Good Practice for Information Security).
- Verify the effectiveness of your IT security and cyber security systems using appropriate, proven methods.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

** WARNING**

**LOSS OF CONTROL**

Perform a comprehensive commissioning test to verify that communication monitoring properly detects communication interruptions

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**



---

## At a Glance

### Document Scope

The purpose of this document is to:

- Show you how to install the Ethernet fieldbus on your drive.
- Show you how to configure drive to use Ethernet for display, monitoring, and control.
- Provide examples of setup using SoMachine

**NOTE:** Read and understand this document and all related documents (see below) before installing, operating, or maintaining your drive.

### Validity Note

Original instructions and information given in this manual is written in English (before optional translation).

This documentation is valid for the Altivar Machine 340 drives.

The technical characteristics of the devices described in the present document also appear online. To access the information online:

Step	Action
1	Go to the Schneider Electric home page <a href="http://www.schneider-electric.com">www.schneider-electric.com</a> .
2	In the <b>Search</b> box type the reference of a product or the name of a product range. <ul style="list-style-type: none"><li>• Do not include blank spaces in the reference or product range.</li><li>• To get information on grouping similar modules, use asterisks (*).</li></ul>
3	If you entered a reference, go to the <b>Product Datasheets</b> search results and click on the reference that interests you. If you entered the name of a product range, go to the <b>Product Ranges</b> search results and click on the product range that interests you.
4	If more than one reference appears in the <b>Products</b> search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the data sheet.
6	To save or print a data sheet as a .pdf file, click <b>Download XXX product datasheet</b> .

The characteristics that are presented in the present document should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the document and online information, use the online information as your reference.

## Related Documents

Use your tablet or your PC to quickly access detailed and comprehensive information on all our products on [www.schneider-electric.com](http://www.schneider-electric.com).

The internet site provides the information you need for products and solutions:

- The whole catalog for detailed characteristics and selection guides,
- The CAD files to help design your installation, available in over 20 different file formats,
- All software and firmware to maintain your installation up to date,
- A large quantity of White Papers, Environment documents, Application solutions, Specifications... to gain a better understanding of our electrical systems and equipment or automation,
- And finally all the User Guides related to your drive, listed below:

You can download these technical publications and other technical information from our website at [www.schneider-electric.com/en/download](http://www.schneider-electric.com/en/download)

(Other option manuals and Instruction sheets are available on [www.schneider-electric.com](http://www.schneider-electric.com))

Title of Documentation	Catalog Number
ATV340 Catalog	<a href="#">DIA2ED2160701EN</a> (English), <a href="#">DIA2ED2160701FR</a> (French)
ATV340 Getting Started	<a href="#">NVE37643</a> (English), <a href="#">NVE37642</a> (French), <a href="#">NVE37644</a> (German), <a href="#">NVE37646</a> (Spanish), <a href="#">NVE37647</a> (Italian), <a href="#">NVE37648</a> (Chinese), <a href="#">NVE37643PT</a> (Portuguese), <a href="#">NVE37643TR</a> (Turkish)
ATV340 Getting Started Annex (SCCR)	<a href="#">NVE37641</a> (English)
Wiring Diagrams for Frame Sizes S1, S2, S3	<a href="#">NVE97896</a> (English)
ATV340 Installation Manual	<a href="#">NVE61069</a> (English), <a href="#">NVE61071</a> (French), <a href="#">NVE61074</a> (German), <a href="#">NVE61075</a> (Spanish), <a href="#">NVE61078</a> (Italian), <a href="#">NVE61079</a> (Chinese), <a href="#">NVE61069PT</a> (Portuguese), <a href="#">NVE61069TR</a> (Turkish)
ATV340 Programming Manual	<a href="#">NVE61643</a> (English), <a href="#">NVE61644</a> (French), <a href="#">NVE61645</a> (German), <a href="#">NVE61647</a> (Spanish), <a href="#">NVE61648</a> (Italian), <a href="#">NVE61649</a> (Chinese), <a href="#">NVE61643PT</a> (Portuguese), <a href="#">NVE61643TR</a> (Turkish)
ATV340 Modbus manual (Embedded)	<a href="#">NVE61654</a> (English)
ATV340 Ethernet manual (Embedded)	<a href="#">NVE61653</a> (English)
ATV340 PROFIBUS DP manual (VW3A3607)	<a href="#">NVE61656</a> (English)
ATV340 DeviceNet manual (VW3A3609)	<a href="#">NVE61683</a> (English)
ATV340 PROFINET manual (VW3A3627)	<a href="#">NVE61678</a> (English)
ATV340 CANopen manual (VW3A3608, 618, 628)	<a href="#">NVE61655</a> (English)
ATV340 POWERLINK manual - (VW3A3619)	<a href="#">NVE61681</a> (English)
ATV340 EtherCAT manual - (VW3A3601)	<a href="#">NVE61686</a> (English)
ATV340 Sercos III manual (embedded)	<a href="#">PHA33735</a> (English), <a href="#">PHA33737</a> (French), <a href="#">PHA33738</a> (German), <a href="#">PHA33739</a> (Spanish), <a href="#">PHA33740</a> (Italian), <a href="#">PHA33741</a> (Chinese)
ATV340 Communication Parameters	<a href="#">NVE61728</a> (English)
ATV340 ATEX manual	<a href="#">NVE61651</a> (English)
ATV340 Embedded Safety Function Manual	<a href="#">NVE64143</a> (English)
<b>SoMove FDT</b>	<a href="#">SoMove FDI</a> (English, French, German, Spanish, Italian, Chinese)
<b>Altivar 340: DTM</b>	<a href="#">ATV340 DTM Library EN</a> (English), <a href="#">ATV340 DTM Lang FR</a> (French), <a href="#">ATV340 DTM Lang DE</a> (German), <a href="#">ATV340 DTM Lang SP</a> (Spanish), <a href="#">ATV340 DTM Lang IT</a> (Italian), <a href="#">ATV340 DTM Lang CN</a> (Chinese)

---

## Terminology

The technical terms, terminology, and the corresponding descriptions in this manual normally use the terms or definitions in the relevant standards.

In the area of drive systems this includes, but is not limited to, terms such as **error, error message, failure, fault, fault reset, protection, safe state, safety function, warning, warning message**, and so on.

Among others, these standards include:

- IEC 61800 series: Adjustable speed electrical power drive systems
- IEC 61508 Ed.2 series: Functional safety of electrical/electronic/programmable electronic safety-related
- EN 954-1 Safety of machinery - Safety related parts of control systems
- ISO 13849-1 & 2 Safety of machinery - Safety related parts of control systems
- IEC 61158 series: Industrial communication networks - Fieldbus specifications
- IEC 61784 series: Industrial communication networks - Profiles
- IEC 60204-1: Safety of machinery - Electrical equipment of machines – Part 1: General requirements

In addition, the term **zone of operation** is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.

Also see the glossary at the end of this manual.

## Contact Us

Select your country on

[www.schneider-electric.com/contact](http://www.schneider-electric.com/contact)

Schneider Electric Industries SAS

Head Office

35, rue Joseph Monier

92500 Rueil-Malmaison

France



---

# Chapter 1

## Presentation

---

### What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Hardware Overview	16
Software Overview	17

## Hardware Overview


### General

The drive embeds an Ethernet dual port adapter that can be used in the following two industrial communication protocols:

- Modbus TCP
- EtherNet/IP

In addition of the communication services provided by each protocol, the adapter provides a set of services at the Ethernet and TCP/IP level. The embedded adapter offers an embedded Web server (in 6 languages) which offers comfortable displaying and commissioning functions directly from a standard web browser.

The figure shows the location of the Ethernet dual port adapter.

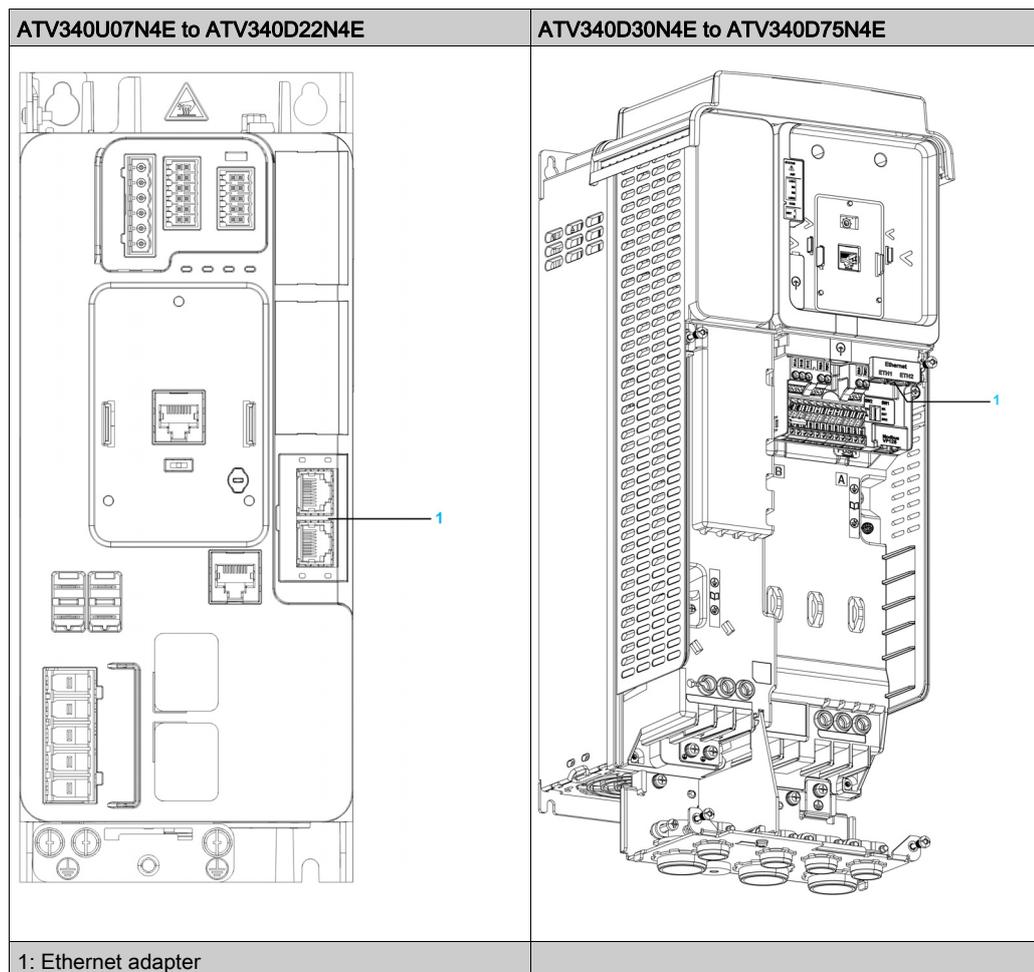


## Software Overview

### Simplified TCP/IP Model

The table provides the basic overview to the simplified TCP/IP model

Application	Modbus TCP-EtherNet/IP
Transport	TCP / UDP
Network	IP
Link	Ethernet

### Modbus TCP-EtherNet/IP Features Overview

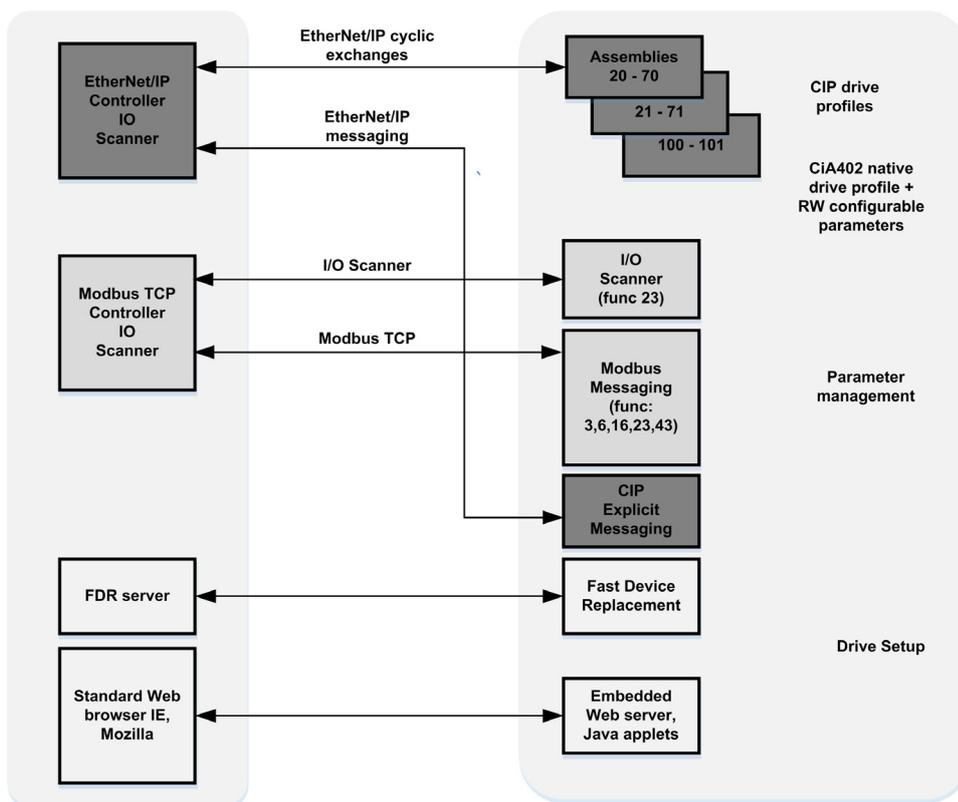

**NOTE:** When using ModbusTCP, it is advisable to use function codes 16 or 23 to control the drive.



---

# Chapter 2

## Basics

---

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
2.1	Introduction	20
2.2	Modbus TCP Features	25
2.3	Ethernet IP Features	29
2.4	CIP Object	35

## Section 2.1

### Introduction

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Introduction	21
Network Layer Supported Functions/Protocols	22
TCP and UDP Protocol	23

## Introduction

### Modbus TCP

The Modbus application layer is standard. Many of the manufacturers are already implementing this protocol. Many have already developed a Modbus TCP/IP connection and numerous products are currently available. With the simplicity of its protocol and the fast Ethernet throughput data rate of 100 Mbit/s, Modbus TCP/IP achieves excellent performance.

### EtherNet/IP

EtherNet/IP is a fieldbus based on TCP and UDP. EtherNet/IP extends Ethernet by an advanced industrial protocol (CIP, Common Industrial Protocol) as an application layer for automation applications in this way, Ethernet suites for industrial control. Products from different manufacturers can be networked without the need for special interface adaptation.

### TCP/IP and Ethernet Features

The product supports the following functions via:

- Manual IP address assignment
- Automatic IP address assignment via BOOTP or DHCP
- Automatic configuration data via FDR
- Commissioning via DTM-based commissioning software
- Diagnostics and configuration via integrated Web server
- Support of LLDP (Link Layer Discovery Protocol)
- Support of RSTP (Rapid Spanning Tree Protocol)
- Support of SNTP (Simple Network Time Protocol)
- Support of DNS (Domain Name System)
- Support of IPV6 for DPWS (Devices Profile for Web Services)
- Handling of QoS (Quality of Service)

### Web Server

The standard webserver (in six languages) provides access to pages such as:

- My dashboard
- Display
- Diagnostics
- Drive
- Setup

## Network Layer Supported Functions/Protocols

### ARP Protocol

The ARP (Address resolution protocol) is a protocol used to map network addresses (IP) to hardware addresses (MAC).

The protocol operates below the network layer as a part of the OSI link layer, and is used when IP is used over Ethernet. A host, wishing to obtain a physical address, broadcasts an ARP request onto the TCP/IP network. A unique IP address is assigned to the host, and is sent to its hardware address.

### ICMP Protocol

The embedded manages the ICMP protocol.

- ICMP client: not supported
- ICMP server: the managed requests are the following:

Type	Description
0	Echo reply (ping)
3	Destination unreachable
4	Sources quench
5	Redirect
6	Alternate host address
8	Echo request (ping)
9	Router advertisement
10	Router solicitation
11	Time exceeded
12	Parameter problem
13	Time stamp request
14	Time stamp reply
15	Information request
16	Information reply
17	Address mask request
18	Address mask reply

### IP Protocol

The Ethernet adapter implements the IPV4 and IPV6 (for DPWS) protocols.

### SNMP Services

The Ethernet adapter accepts the community name “private” for writing and the community name “public” for Reading.

### MIB

Objects	Description	Access	Default Value
SysDescr	Text description of the product	Read only	Schneider Electric Altivar Ethernet TCP/IP
SysObjectID	Points in the private MIB on the product part number	Read only	1.3.6.1.4.1.3833.1.100.4.1
SysUpTime	Time elapsed since the last power-up	Read only	Managed by the option
SysContact	Information allowing to contact the node manager	Read/write	'' ''
SysName	Node administrative name	Read/write	"" or FDR device name if configured
SysLocation	Physical location of the product	Read/write	'' ''
SysService	Indicates the service type offered by the product.	Read only	72

## TCP and UDP Protocol

### Connections

The Ethernet adapter supports up to 32 concurrent TCP/IP and/or TCP/UDP connection.

### BOOTP and DHCP Protocol

The Ethernet adapter can use BOOTP and DHCP protocols.

The BOOTP frame is the same: only the OP field is different.

The following table describes the DHCP frame format:

OP (1 byte)	HTYPE (1 byte)	HLEN (1 byte)	HOPS (1 byte)
XID (4 bytes)			
SECS (2 bytes)		FLAGS (2 bytes)	
CIADDR (4 bytes)			
YIADDR (4 bytes)			
SIADDR (4 bytes)			
GIADDR (4 bytes)			
CHADDR (16 bytes)			
SNAME (64 bytes)			
FILE (128 bytes)			
OPTIONS (312 bytes)			

DHCP frame fields are described as follows:

Field	Description
op	Message type DHCP request / DHCP reply
htype	Address hardware type
hlen	Hardware address length
hops	Used by relay agent
xid	Transaction identifier, random number chosen by the client allowing to associate the request and the response
secs	Time in seconds since the beginning of the transaction
flags	First bit used for the broadcast reply flag
ciaddr	Client IP address, only used if the client can respond to ARP request
yiaddr	Client IP address, "your" IP address proposed by the server
siaddr	IP address of the server
giaddr	Gateway IP address, used when a relay agent needs to be crossed
sname	Server name
file	Location of boot file
options	Optional parameters with DHCP extensions

### DHCP Message

The DHCP protocol uses 8 different types of message during the IP assigning process.

The following table describes the 8 messages:

Message	Description
DISCOVER	The client tries to discover the DHCP server using a broadcast
OFFER	The server proposes a configuration
REQUEST	The client chooses a DHCP server and declines other offers
ACK	The chosen server assigns the IP configuration
NAK	The server rejects the client request
DECLINE	The client declines the assigned IP configuration
RELEASE	The client releases its IP address before the end of the lease
INFORM	The client asks for network information (it already has an IP address)

## Operating Modes

The choice between DHCP, BOOTP, and fixed configuration is made through one parameter:

- Fixed: the Ethernet adapter uses the address stored in parameter.
- BOOTP: the Ethernet adapter receives the addresses from BOOTP server.
- DHCP: if the device name [XXX] is valid, the Ethernet adapter receives the addresses from the DHCP server.

---

## Section 2.2

### Modbus TCP Features

---

#### What Is in This Section?


This section contains the following topics:

Topic	Page
Modbus TCP Frames	26
Modbus TCP Servers	26
Supported Modbus TCP Functions	27
Application Profile with Modbus TCP	28

## Modbus TCP Frames

### TCP Telegrams

Modbus TCP telegrams are not only Modbus standard requests and responses encapsulated in TCP frames.

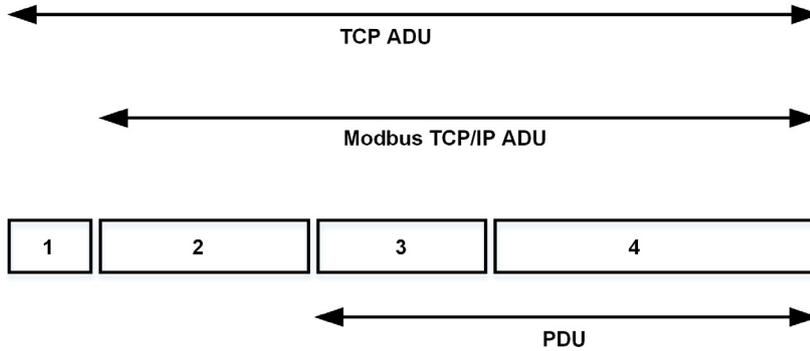

- 1 TCP header
- 2 MBPA: Modbus application protocol header
- 3 ADU: Application data unit
- 4 PDU: Protocol data unit (The Modbus message itself)

### MBAP Header Structure

Fields	Length	Description	Client	Server
Transaction identifier	2 bytes	Identification of a Modbus request / response transaction	Initialized by the client	Recopied by the server from the received request
Protocol identifier	2 bytes	0= Modbus protocol	Initialized by the client	Recopied by the server from the received request
Length	2 bytes	Number of following bytes	Initialized by the client (request)	Initialized by the server (response)
Unit identifier	1 byte	Identification of a remote slave connected on a serial line or on other buses	Initialized by the client	Recopied by the server from the received request

## Modbus TCP Servers

### Overview

Unit ID	Modbus TCP server	Accessible parameters
0/248	Variable speed drive	See the file related to drive communication parameters.
255	Drive I/O scanner	See I/O scanner setting ( <i>see page 27</i> )

## Supported Modbus TCP Functions

### Modbus TCP Services

The Modbus TCP option supports the following services:

Function Name	Code		Description	Remarks
	Dec	Hex		
Read holding registers	03	03 hex	Read N output words	Max PDU length: 63 words
Write 1 output word (Unit ID 0-248 only)	06	06 hex	Write 1 output word	
Write multiple registers	16	10 hex	Write N output word	Max PDU length: 63 words
Read/write multiple registers (Unit ID 0-248 and 255)	23	17 hex	Read/write multiple registers	Max PDU length: 32 words (W), 32 words (R)
(Subfunction) Read device identification	43/14	2B hex 0E hex	Encapsulated interface transport / read device identification	See the table below

### Identification

Id	Value	Comment
00 hex	Schneider Electric	Device manufacturer
01 hex	ATVXXX	Drive commercial part number
02 hex	0101	Drive version
04 hex	-	-
05 hex	-	-
06 hex	Customized Name	Device name

### I/O Scanning Service

The I/O scanning service is used to exchange periodic I/O data between:

- A controller or PLC (I/O scanner).
- Devices (I/O scanning servers).

This exchange is performed by implicit requests, thus avoiding the need to program the controller (PLC).

The I/O scanner periodically generates the read/write multiple registers (23 = 17 hex) request. The I/O scanning service operates if it has been enabled in the PLC and in the drive. The drive parameters assigned to I/O scanning have been selected by default. This assignment can be modified by configuration.

When the I/O scanning service has been enabled in the drive:

- A TCP connection is assigned to it.
- The parameters assigned in the periodic variables are exchanged cyclically between the Ethernet adapter and the drive.
- The parameters assigned to the periodic output variables are reserved for I/O scanning. They cannot be written by other Modbus services, even if the I/O scanner is not sending its periodic output variables.

### I/O Scanner Setting

The communication scanner is managed through the DTM-based PC software.

Channel	Factory Setting
Output 1	<i>C N d</i>
Output 2	<i>L F r d</i>
Output 3	0
Up to output 32	0
Input 1	<i>E t R</i>
Input 2	<i>r F r d</i>
Input 3	0
Up to Input 32	0

## Application Profile with Modbus TCP

### Description

The profiles managed with the drive when it is controlled through Modbus TCP are:

- Native profile (CiA402 - IEC 61800-7),
- I/O profile.

For details, refer to CiA402 - IEC61800-7 functional profile

---

## Section 2.3

### Ethernet IP Features

---


#### What Is in This Section?

This section contains the following topics:

Topic	Page
EtherNet/IP	30
Cyclical Exchanges (Implicit Exchanges)	31
Messaging (Explicit Exchanges)	34
Timeout Monitoring	34

## EtherNet/IP

### EtherNet/IP Fieldbus Adapter Features Overview

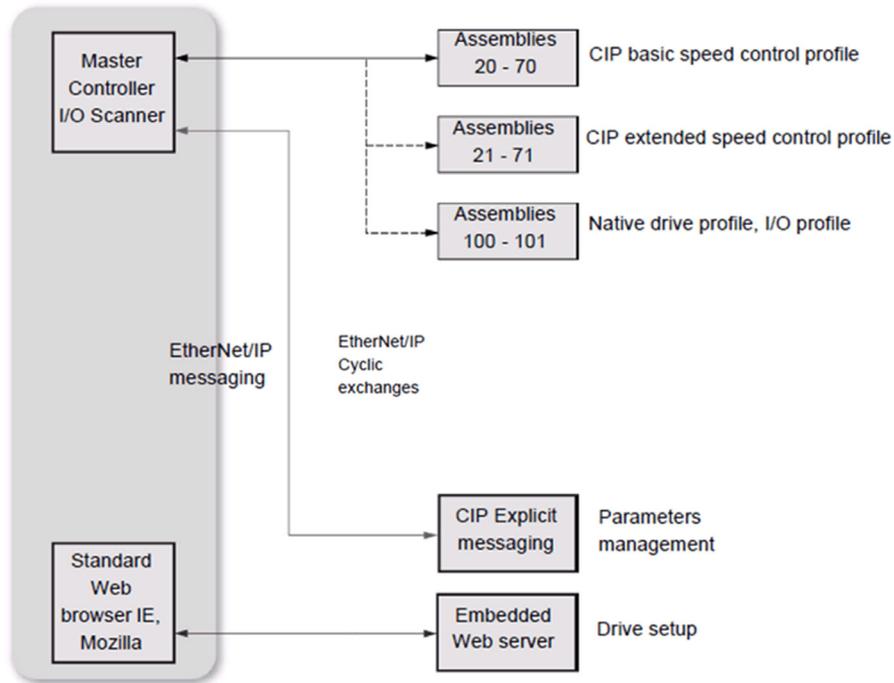

The Ethernet adapter, is compliant with the ODVA drive profile. It supports the following profiles:

- CIP basic speed control
- CIP extended speed control
- Drive native profile (IEC 61800-7 CiA402) and I/O profile only for assembly 100 and 101. In addition to these cyclic exchanges, the adapter also supports explicit messaging.
- CIP energy objects

## Cyclical Exchanges (Implicit Exchanges)

### Overview

This part gives a description of the assembly sets and how to configure them.

### Principle of Control Configuration

By the configuration of the control, it is possible to decide from which channel the drive receives its commands and reference frequency, either permanently or depending on a switching command. Numerous configurations are possible. For more information, refer to the programming manual and communication parameters manual. The following configurations are some of the available possibilities. The selection of the assembly set is made with the Ethernet adapter.

### Control with Communication Scanner

If the default assemblies selected are 100 and 101, the drive is controlled according to its native profile CiA402.-IEC-61800-7.

By configuring the communication scanner, it is possible to assign any relevant parameter of the drive to the 32 input and 32 output variables of the assemblies. This is available through the DTM interface.

### Control According to ODVA AC Drive Profile

The ODVA AC drive profile is activated when one of the following assemblies is selected:

- 20: Basic speed control output, size 2 words / 4 bytes
- 21: Extended speed control output, size 2 words / 4 bytes
- 70: Basic speed control input, size 2 words / 4 bytes
- 71: Extended speed control input, size 2 words / 4 bytes

The Ethernet adapter translates the commands, behavior, and display information from of ODVA profile (on the network) to the CiA402 profile (in the drive).

### CIP Basic Speed Control (Assemblies 20 and 70)

- Assembly 20: CIP basic speed control output

The following table describes the assembly mapping:

Word Number	Definition
0	CIP basic command word
1	Speed reference (rpm)

The following table describes the CIP basic command word:

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not used	Not used	Not used	Not used	Not used	Fault reset <sup>(1)</sup> 0: No command 1: Fault reset	Not used	Run forward <sup>(2)</sup> 0: Stop 1: Run
<sup>(1)</sup> Active on rising edge							
<sup>(2)</sup> Active on level							

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Not used							

- Assembly 70: CIP basic speed control input

The following table describes the assembly mapping:

Word Number	Definition
0	CIP basic status word
1	Actual speed (rpm)

The following table describes the CIP basic command word:

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not used	Running 0: Stopped 1: Running	Not used	Operating state fault 0: Inactive 1: Active				

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Not used							

**CIP Extended Speed Control (Assemblies 21 and 71)**

**NOTE:** `NetRef` and `NetCtrl` objects must be set by explicit messaging to control the drive by network.

- Assembly 21: CIP extended speed control output

The following table describes the assembly mapping:

Word Number	Definition
0	CIP extended command word
1	Speed reference (rpm)

The following table describes the CIP extended command word:

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Not used	Network setpoint 0: Setpoint by terminal 1: Setpoint by network	Network command 0: Setpoint by terminal 1: Setpoint by network	Not used	Not used	Fault reset <sup>(1)</sup> 0: No command 1: Fault reset	Run forward / reverse 00: Quick stop 01: Run forward 10: Run reverse 11: No action	
<sup>(1)</sup> Active on rising edge							

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Not used							

**Network Setpoint and Network Address Management**

The assembly 21 uses the command and reference frequency switching functions of the drive. The Ethernet adapter, when configured with the assembly 21, links the bit 5 and the bit 6 to C512 and C513 respectively.

To operate correctly, command settings of the drive must be as follows or an **[External Error] E P F I** is triggered.

Menu	Parameter	Settings
<b>[Complete settings]</b> C S L -/[Command and Reference] C r P -	<b>[Control Mode]</b> C H C F <b>[Ref Freq 1 Config]</b> F r 1 <b>[Ref Freq 2 Config]</b> F r 2 <b>[Cmd Channel 1]</b> C d 1 <b>[Cmd Channel 2]</b> C d 2 <b>[Command Switching]</b> C C 5 <b>[Ref Freq 2 switching]</b> r F C	<b>[Separate]</b> S E P <b>[Embedded Ethernet]</b> E L H <b>[AI1]</b> A , 1 or <b>[AI2]</b> A , 2 <b>[Ethernet]</b> E L H <b>[Terminals]</b> L E r <b>[C512]</b> C 5 1 2 <b>[C513]</b> C 5 1 3

- Assembly 71: CIP extended speed control input

The following table describes the assembly mapping:

Word Number	Definition
0	CIP extended status word
1	Actual speed (rpm)

The following table describes the CIP extended status word:

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
At reference 0: Reference not reached 1: Reference reached	Setpoint from network 0: Setpoint from terminal 1: Setpoint from network	Command from network 0: Setpoint from terminal 1: Setpoint from network	Ready 0: Not ready 1: Ready	Run forward / reverse 00: Stopped 01: Running forward 10: Running reverse 11: Not used	Warning 0: No 1: Warning	Operating state fault 0: Inactive 1: Active	

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Not used	Bit 8 to 10 are used for the drive state 000: Not used 001: Startup 010: Not ready 011: Ready 100: Enabled 101: Stopping 110: Fault stop 111: Operating state fault						

## Messaging (Explicit Exchanges)

### Introduction

Parameters of the drive can be accessed by R/W as CIP objects.

### Altivar Parameters Path

The drive parameters are grouped in classes:

- Each application class has only one instance.
- Each instance groups 200 parameter.
- Each attribute in an instance relates to a parameter.

The first parameter registered in the first application class (class code: 70 hex = 112) has the logical address 3000.

#### Example

The following table describes the examples of logical addresses:

Logical Address	Hexadecimal	Decimal
3000	70 hex / 01 hex / 01 hex	112/1/1
3100	70 hex / 01 hex / 65 hex	112/1/101
3200	71 hex / 01 hex / 01 hex	113/1/1
64318	A2 hex / 01 hex / 77 hex	418/1/119

For details, refer to the communication parameters manual.

## Timeout Monitoring

### Description

An EtherNet/IP time-out is triggered if the adapter does not receive any cyclic messages within a predefined time period. This period is managed by the EtherNet/IP controller (not by the drive) and is configured in its module properties box. The duration of the time-out is defined by the **[Ethernet Timeout]** `l t o b`.

---

## Section 2.4

### CIP Object

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Supported Object Classes	36
Identity Object (01 hex)	37
Message Router Object (02 hex)	40
TCP/IP Interface Object (F5 hex)	41
Ethernet Link Object (F6 hex)	44
Assembly Object (04 hex)	46
Connection Manager Object (06 hex)	48
Motor Data Object (28 hex)	50
Control Supervisor Object (29 hex)	51
AC/DC Drive Object (2A hex)	53
Application Object (70 hex to C7 hex) / Explicit Messaging	56
Base Energy Object (4E hex)	57
Electrical Energy Object (4F hex)	59

## Supported Object Classes

### Introduction

Three categories of object classes can be defined:

- CIP device on EtherNet/IP
- AC/DC drive
- VSD specific

These objects are detailed in the following table:

Object class	Class ID	Cat.	No. of instances	Effect on behavior interface
Identity	01 hex	1	1	Supports the reset service.
Message router	02 hex	1	1	Explicit message connection.
Ethernet link	F6 hex	1	1	Counter and status information.
TCP/IP interface	F5 hex	1	1	TCP/IP configuration.
Connection manager	06 hex	1	1	–
Motor data	28 hex	2	1	Defines data for the motor connected to the device.
Control supervisor	29 hex	2	1	Manages drive functions, operational states, and control.
AC/DC drive	2A hex	2	1	Provides drive configuration.
Assembly	04 hex	2	12	Defines I/O data format.
Application	70 hex to C7 hex	3	1	Vendor-specific object - drive parameters.
Base Energy Object.	4E hex	2	1	Provides energy value.
Electrical Energy Object	4F hex	2	1	Energy reporting in association with Base Energy Object (4E hex

## Identity Object (01 hex)

### Overview

The identity object provides identification and status information about the drive.

### Class Code

Hexadecimal	Decimal
01 hex	1

### Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UNIT	X	Revision index of the class
2	Get	Max instances	UNIT	1	1 defined instance
3	Get	Number of instances	UNIT	1	–
4	Get	Optional attribute list	UNIT	1	–
6	Get	Max ID of class attributes	UNIT	7	–
7	Get	Max ID of instance attribute	UNIT	7	–

### Instance Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Vendor ID	UNIT	243	–
2	Get	Device type	UNIT	00h 02h	AC/DC drive profile (02h)
3	Get	Product code	UNIT	6176	1820A hex
4	Get	Revision	Struct of: USINT USINT	x	Major = high byte of (C 15 u) Minor = low byte of (C 15 u)
5	Get	Status	WORD	–	See definition in the following table
6	Get	Serial number	UDINT	–	First byte: 18 hex Second...Fourth byte: last 3 bytes of MAC-ID
7	Get	Product name	Struct of: USINT STRING	–	ATVxxx

### Attribute 5–Status

Bit	Definition	How
0	Owned by master (predefined master/slave connection)	No interface
2	Configured	If any of the product (option + drive) NVS attributes has changed from their default (out of box values).
4 - 7	Extended device status: See below	–
8	Minor recoverable Fault	No minor recoverable fault.
9	Minor unrecoverable Fault	No minor unrecoverable fault.
10	Major recoverable Fault	[Embd Eth Com Interrupt] E L H F detected error or CIP connection timeout or Ethernet network overload.
11	Major unrecoverable Fault	, L F detected error, EEPROM failed, OB hardware detected error.
Others	Reserved 0	–

**Bit 4-7 Definition**

Bit 4-7	Definition	How
0 0 0 0	Self-testing or unknown	Not used
0 0 0 1	Firmware update in progress	Not used
0 0 1 0	At least on faulted I/O connection	–
0 0 1 1	No I/O connections established	–
0 1 0 0	Non-volatile configuration bad	Non-volatile memory detected error in OB
0 1 0 1	Major fault - either bit 10 or 11 is true	Bit 10 or 11 is true
0 1 1 0	At least one I/O connection in run mode	–
0 1 1 1	At least one I/O connection established, all in idle mode	–
1 0 0 0 1 0 0 1	Reserved, shall be 0	–
1 0 1 0 to 1 1 1 1	Vendor specific	–


**Supported Class Services**

Service code	Service name	Description
01 hex	Get_Attribute_All	Read all attributes
0E hex	Get_Attribute_Single	Read one attribute

**Supported Instance Services**

Service code	Service name	Description
01 hex	Get_Attribute_All	Read all attributes
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute
05 hex	Reset	Perform the reset of the drive

State Diagram for the Identity Object

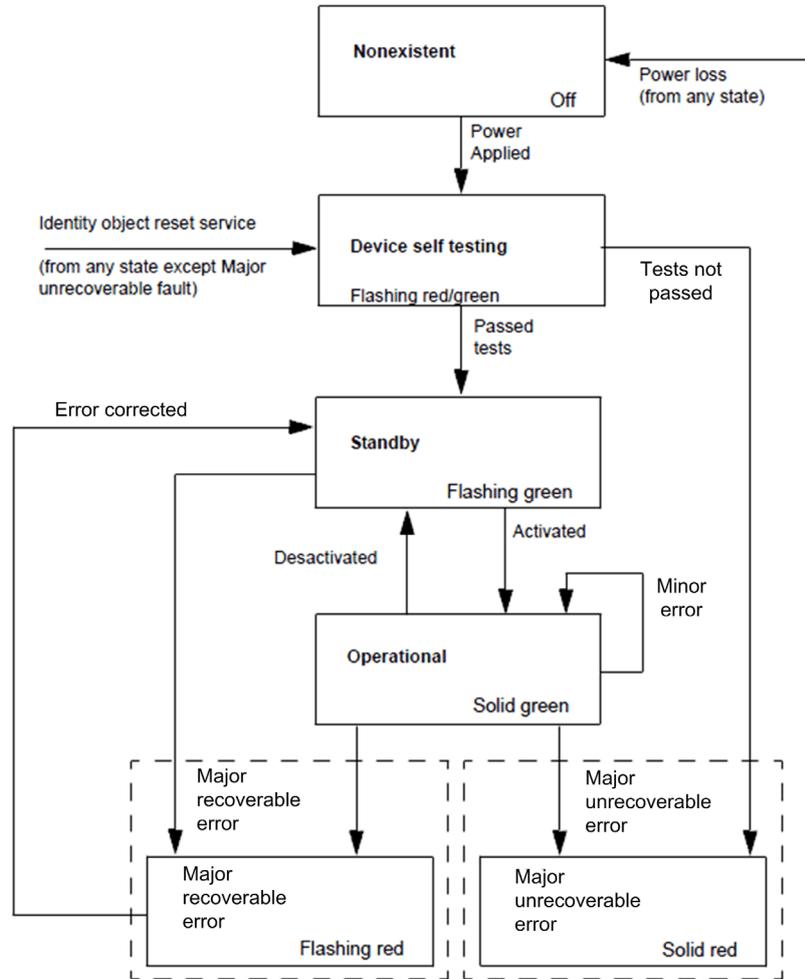

## Message Router Object (02 hex)

### Overview

The message router object is the element through which all the `Explicit` messages objects pass in order to be directed towards the truly destined objects.

### Class Code

Hexadecimal	Decimal
02 hex	2

### Class Attributes

Attribute ID	Access	Name	Need	Data type	Value	Details
1	Get	Revision	Opt.	UINT	X	Revision index of the class
2	Get	Max instances	Opt.	UINT	1	1 defined instance

## TCP/IP Interface Object (F5 hex)

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Detail
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max instances	UINT	1	1 defined instance
3	Get	Number of instances	UINT	1	-
4	Get	Optional attribute list	UINT	1	-
5	Get	Optional service list	UINT	1	-
6	Get	Max ID of class attributes	UINT	7	-
7	Get	Max ID of instance attribute	UINT	6	-

## Supported Instance Attributes

Attribute ID	Access	Name	Data type	Detail
1	Get	Status	DWORD	0 = The interface configuration attribute has not been configured 1 = The interface configuration attribute contains valid configuration
2	Get	Configuration capability	DWORD	Bit 0 = 1 (TRUE) shall indicate that the device is capable of obtaining its network configuration via BOOTP Bit 1 = 1 (TRUE) shall indicate that the device is capable of resolving host names by querying a DNS server Bit 2 = 1 (TRUE) shall indicate that the device is capable of obtaining its network configuration via DHCP Bit 3 = 1 (TRUE) shall indicate that the device is capable of sending its host name in the DHCP request Bit 4 = 1 (TRUE) shall indicate that the Interface Configuration attribute is settable. Bit 5-31: reserved
3	Get/Set	Configuration control	DWORD	Bits 0-3 start-up configuration 0 = The device shall use the interface configuration values previously stored 1 = The device shall obtain its interface configuration values via BOOTP 2 = The device shall obtain its interface configuration values via DHCP upon start-up (1) 3-15 = Reserved for future use Bit 4 = 1 (TRUE), the device shall resolve host names by querying a DNS server Bit 5-31: reserved
4	Get	Physical link object	STRUCT of UINT EPATH	Path size Path: Logical segments identifying the physical link object Example [20][F6][24][01]: [20] = 8-bit class segment type; [F6] = Ethernet link object class; [24] = 8-bit instance segment type; [01] = instance 1
5	Get/Set	Interface configuration	STRUCT of UDINT UDINT UDINT UDINT UDINT String	IP address (0: no address configured) Network mask (0: no network mask configured) Gateway address (0: no address configured) Name server address (0: no address configured) Name server address 2 (0: no address configured) Domain name
6	Get/Set	Host name	String	Read/write name of the drive
8	Get/Set	TTL value	USINT	TTL value for EtherNet/IP multicast packets
9	Get/Set	Mcast config	Struct Of.	IP multicast address configuration
		Alloc control	USINT	0 - Use default allocation algorithm to generate multicast addresses 1 - Multicast addresses shall be allocated according to the values in Num Mcast and Mcast Start Addr
		Reserved	USINT	Shall be 0
		Num Mcast	UINT	Number of multicast addresses to allocate for EtherNet/IP
		Mcast Start Addr	UDINT	Starting multicast address from which to begin allocation
<p>(1) If set option board parameter OBP:FDRU=0 is also set to implicitly disable the FDR mechanism on the DHCP protocol. This to be compatible with CIP tools that has configured the device to operate in a non-FDR specific environment. You have to manually enable the feature if you wish to use it.</p>				


Supported Class Services

Service code	Service name	Description
01 hex	Get_Attribute_All	Read all attributes
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute

Supported Instance Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute
01 hex	Get_Attribute_All	-

TCP/IP Interface Behavior

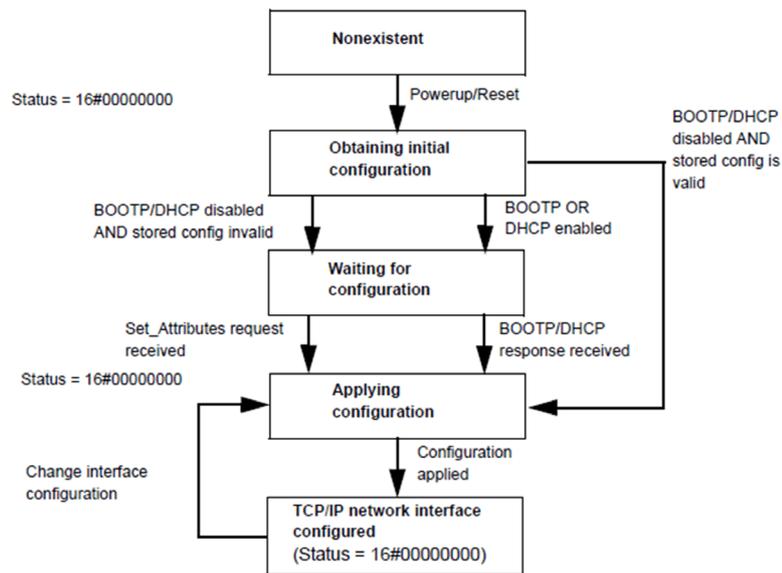

## Ethernet Link Object (F6 hex)

### Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max instances	UINT	1	One defined instance
3	Get	Number of instances	UINT	1	–
6	Get	Max ID of class attributes	UINT	7	–
7	Get	Max ID of instance attribute	UINT	6	–

### Supported Instance Attributes

Attribute ID	Access	Name	Data type	Detail
1	Get	Interface speed	UDINT	Interface speed currently in use
2	Get	Interface flags	DWORD	<p>Bit 0: Link status indicates whether the Ethernet 802.3 communications interface is connected to an active network. 0 indicates an inactive link; 1 indicates an active link</p> <p>Bit 1: Half/Full duplex indicates the duplex mode currently in use. 0 indicates that the interface is running half duplex; 1 indicates full duplex</p> <p>Bit 2-4: Negotiation status</p> <ul style="list-style-type: none"> <li>● 0: Auto-negotiation in progress</li> <li>● 1: Auto-negotiation and speed detection not successful</li> <li>● 2: Auto negotiation not successful but detected speedduplex was defaulted</li> <li>● 3: Successfully negotiated speed and duplex</li> <li>● 4: Auto-negotiation not attempted. Forced speedand duplex</li> </ul> <p>Bit 5: Manual setting require reset</p> <ul style="list-style-type: none"> <li>● 0: Indicates that the interface can activate changes to link parameters (autonegotiate, duplex mode, interface speed) automatically</li> <li>● 1: Indicates that the device requires a reset service be issued to its identity object in order for the changes to take effect.</li> </ul> <p>Bit 6: Local hardware error</p> <ul style="list-style-type: none"> <li>● 0: Indicates that the interface detects no local hardware error</li> <li>● 1: Indicates that a local hardware error is detected. The meaning of this is product-specific</li> </ul> <p>Bit 7-31: Reserved shall be set to zero</p>
3	Get	Physical address	USINT [6]	MAC layer address
4	Get	Interface counters	–	–
5	Get	Media counters	–	–
6	Get/Set	Interface control	–	Force auto negotiate, half full and speed
7	Get	Interface type	USINT	2
10	Get	Interface label	SHORT_STRING	Instance 1: "Top" Instance 2: "Bottom" Service code

**Supported Class Services**

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
01 hex	Get_Attribute_All	-

**Supported Instance Services**

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute
01 hex	Get_Attribute_All	-
4C hex	Get_And_Clear	Same than Get_Attribute_Single

## Assembly Object (04 hex)

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Detail
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max instances	UINT	1	One defined instance
3	Get	Number of instances	UINT	1	-
6	Get	Max ID of class attributes	UINT	7	-
7	Get	Max ID of instance attribute	UINT	3	-

### Supported Instances

Attribute ID	Access	Name	Data type	Value	Details
3	Get/Set	Data	ARRAY OF BYTE		
4	Get	Size	UINT		

### Supported Instances for Altivar Process

Instance	Type	Name
20	AC drive output	CIP Basic Speed Control Output
21	AC drive output	CIP Extended Speed Control Output
70	AC drive input	CIP Basic Speed Control Input
71	AC drive input	CIP Extended Speed Control Input
100	AC drive output	Native Drive Output
101	AC drive input	Native Drive Input

### Supported Class Services

Service code	Service Name	Description
0E hex	Get_Attribute_Single	Read one attribute

### Supported Instance Services

Service Code	Service Name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute

## Output Instance Data Description

Instance	Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
20	0	X	X	X	X	X	Fault Reset 0 = No command 1 = Fault Reset	X	Run Forward 0 = Stop 1 = Run
	1	X	X	X	X	X	X	X	X
	2-3	Speed Actual (rpm)							
21	0	X	Net Reference 0 = Local, by terminal 1 = Network	NetCommand 0 = Local 1 = Network	X	X	Fault Reset 0 = No command 1 = Fault Reset	Run Fwd / Reverse: 00: Quick stop 01: Run forward 10: Run reverse 11: No action	
	1	X	X	X	X	X	X	X	X
	2-3	Speed Actual (rpm)							
100	0-1	I/O Scanning word 1							
	2-3	I/O Scanning word 2							
	4-5	I/O Scanning word 3							
	6-7	I/O Scanning word 4							
	8-9	I/O Scanning word 5							
	10-11	I/O Scanning word 6							
70	0	X	X	X	X	X	0 = Stopped 1 = Running	X	0 = No error 1 = Error
	1	X	X	X	X	X	X	X	X
	2-3	Speed Actual (rpm)							
71	0	At reference 0 = Not reached 1 = Reached	Ref From Net 0 = From terminal 1 = From network	Cmd From Net 0 = From terminal 1 = From network	Ready 0 = Not ready 1 = Ready	Running Fwd / reverse 00: Stopped 01: Running Forward 10: Running reverse 11: Not used		Warning 0 = No warning 1 = Warning	Not used
	1	X	X	X	X	X	000: Not used 001: Startup 010: Not ready 011: Ready 100: Enabled 101: Stopping 110: Fault stop 111: Operating state fault		
	2-3	Speed Actual (rpm)							
101	0-1	Scanner Read word 1							
	2-3	Scanner Read word 2							
	4-5	Scanner Read word 3							
	6-7	Scanner Read word 4							
	8-9	Scanner Read word 5							
	10-11	Scanner Read word 6							

## Connection Manager Object (06 hex)

### Class Code

Hexadecimal	Decimal
06 hex	6

### Class Attributes

Attribute ID	Access	Name	Need	Data type	Value	Details
1	Get	Revision	Opt.	UINT	X	Revision index of the class
2	Get	Max instances	Opt.	UINT	4	3 defined instance

### Attributes of Instance 1 - Explicit Message Instance

Attribute	Access	Name	Need	Data type	Value	Details
1	Get	State	Req.	USINT	–	0: Non-existent 3: Established 5: Deferred Delete
2	Get	Instance_type	Req.	USINT	0	Explicit Message
3	Get	TransportClass_trigger	Req.	BYTE	83 hex	Class 3 server
4	Get	Produced_connection_id	Req.	UINT	10xxxxxx01	xxxxxx = Node address
5	Get	Consumed_connection_id	Req.	UINT	10xxxxxx10	xxxxxx = Node address
6	Get	Initial_comm_characteristics	Req.	BYTE	21 hex	Explicit messaging via Group 2
7	Get	Produced_connection_size	Req.	UINT	36	Produced data maximum size (in bytes)
8	Get	Consumed_connection_size	Req.	UINT	36	Consumed data maximum size (in bytes)
9	Get/Set	Expected_packet_rate	Req.	UINT	2500	2.5 sec. (TimeOut)
12	Get/Set	Watchdog_timeout_action	Req.	USINT	1 or 3	1: Auto-Delete 3: Deferred Delete (Default)
13	Get	Produced connection path length	Req.	UINT	0	Length of attribute 14 data
14	Get	Produced connection path	Req.	Array of UINT	Null	Not used
15	Get	Consumed connection path length	Req.	UINT	0	Length of attribute 16 data
16	Get	Consumed connection path	Req.	Array of UINT	Null	Not used

For details, refer to Ethernet/ specification for more information.

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max Instances	UINT	1	1 defined instance
3	Get	Number of Instances	UINT	1	–
4	Get	Optional attribute list	STRUCT of	–	List of optional attribute numbers
6	Get	Max ID of class attributes	UINT	7	–
7	Get	Max ID of instance attributes	UINT	–	Attribute ID number of last class attribute

### Supported Instance1 (Explicit) Attributes

Attribute ID	Access	Name	Data type	Details
1	Get	Open Requests	UINT	Number of forward open service requests received.
2	Get	Open Format Rejects	UINT	Number of forward open service requests which were rejected due to bad format.
3	Get	Open Resources Rejects	UINT	Number of forward open service requests which were rejected due to lack of resources.
4	Get	Open Other Rejects	UINT	Number of forward open service requests which were rejected for reasons other than bad format or lack of resources.
5	Get	Close Requests	UINT	Number of forward close service requests received.
6	Get	Close Format Requests	UINT	Number of forward close service requests which were rejected due to bad format.
7	Get	Close Other Requests	UINT	Number of forward close service requests which were rejected for reasons other than bad format.
8	Get	Connection Timeouts	UINT	Total number of connection timeouts that have occurred in connections controlled by this connection manager.

### Supported Class Services

Service code	Service name	Description
01 hex	Get_Attribute_All	Read all attributes
0E hex	Get_Attribute_Single	Read one attribute

### Supported Instance Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute
4E hex	Forward_Close	Closes a connection
54 hex	Forward_Open	Opens a connection, maximum data size is 511 bytes

## Motor Data Object (28 hex)

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max Instances	UINT	1	One defined instance
3	Get	Number of Instances	UINT	1	-
6	Get	Max ID of class attributes	UINT	7	-
7	Get	Max ID of instance attribute	UINT	15	-

### Supported Instance Attributes

Attribute ID	Access	Name	Need	Data type	ATV	Details
1	Get	NumAttr	Opt.	USINT	No	-
2	Get	Attributes List	Opt.	USINT (ARRAY)	No	-
3	Get	MotorType	Req.	USINT	Yes	7
6	Get/Set	RatedCurrent	Req.	UINT	Yes	Motor nominal current Linked to NCR drive parameter. NCR unit is 0,1 A as attribute 6
7	Get/Set	RatedVoltage	Req.	UINT	Yes	Motor nominal voltage Linked to UNS drive parameter UNS unit is 1V as attribute 7
8	Get/Set	RatedPower	Opt.	UINT	No	-
9	Get/Set	RatedFreq	Opt.	UINT	Yes	Motor nominal frequency linked to FRS drive parameter FRS unit is 0,1 Hz. The parameter value has to be divided by 10 to be in the unit of attribute 9
12	Get/Set	PoleCount	Opt.	UINT	No	-
15	Get/Set	BaseSpeed	Opt.	UINT	Yes	Motor nominal speed Linked to NSP drive parameter NSP unit is 1 rpm as attribute 15

### Supported Class Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute

### Supported Instance Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute

## Control Supervisor Object (29 hex)

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max Instances	UINT	1	One defined instance
3	Get	Number of Instances	UINT	1	–
6	Get	Max ID of class attributes	UINT	7	–
7	Get	Max ID of instance attribute	UINT	17	–

### Supported Instance Attributes for Schneider Electric

Attribute ID	Access	Name	Data type	Details
3	Get/Set	Run Fwd	BOOL	On edge (0 --> 1)
4	Get/Set	Run Rev	BOOL	On edge (0 --> 1)
5	Get/Set	Net Ctrl	BOOL	0: Local control 1: Network control (default)
6	Get	State	USINT	See machine status: 0: 1: Startup 2: Not_Ready 3: Ready 4: Enabled 5: Stopping 6: Fault_stop 7: Operating state fault
7	Get	Running Fwd	BOOL	ETA.15 = 0
8	Get	Running Rev	BOOL	ETA.15 = 1
9	Get	Ready	BOOL	ETA.1 = 1
10	Get	Error detected	BOOL	ETA.3 = 1
12	Get/Set	Fault Reset	BOOL	CMD.7 = 1.
13	Get	Error Code	USINT	Parameter <i>E r r d</i>
15	Get	Ctrl From Net	BOOL	0: Local Control 1: Network Control
16	Get/Set	DN Error Mode	USINT	Action on loss of CIP network. 0: Stop + [Embd Eth Com Interrupt] <i>E L H F</i> detected error 1: Ignored
17	Get/Set	Force error	BOOL	Force [Embd Eth Com Interrupt] <i>E L H F</i> detected error (On edge)


### Supported Class Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute

### Supported Instance Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute
05 hex	Reset	Reset drive

Control Supervisor States

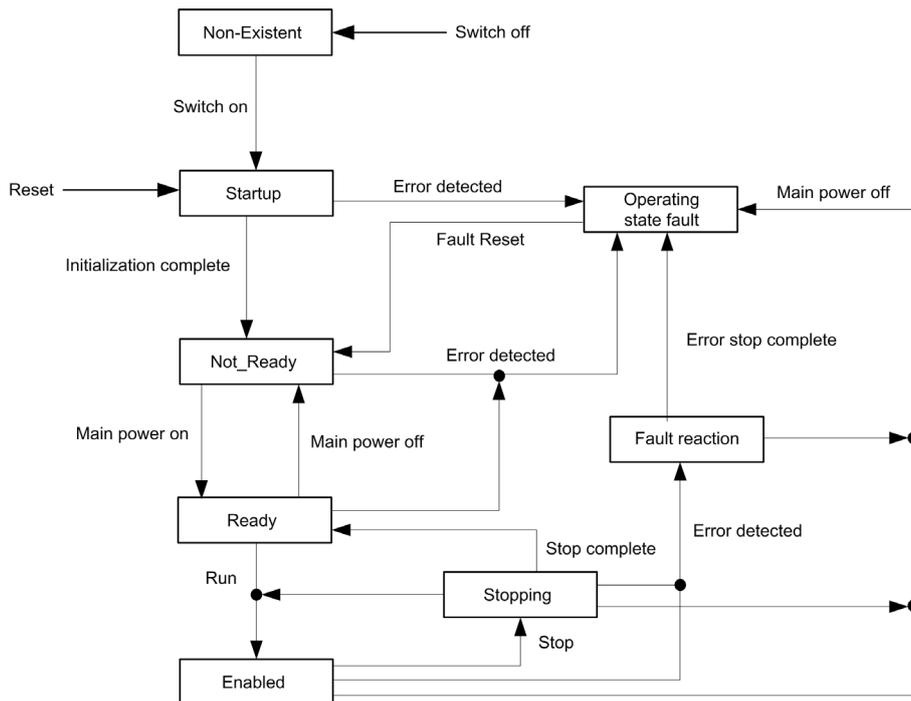

## AC/DC Drive Object (2A hex)

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max Instances	UINT	1	1 defined instance
3	Get	Number of Instances	UINT	1	-
6	Get	Max ID of class attributes	UINT	7	-
7	Get	Max ID of instance attribute	UINT	21	-

Supported Instance

Attribute ID	Access	Name	Need	Data type	ATV	Comments
1	Get	NumAttr	Opt.	USINT	No	-
2	Get	Attributes List	Opt.	USINT (ARRAY)	No	-
3	Get	At Reference	Opt.	BOOL	Yes	Use the result of the "reference reached" function of the device. No more, no less specific adjustment than what is in the drive function.
4	Get/Set	NetRef	Req.	BOOL	Yes	Image of the NetRef signal received from the network. 'Get' order returns the value written by 'Set' order. Used to manage the reference channel.
6	Get	Drive mode	Req.	USINT	Yes	Used to get the drive mode. In the standard, the attribute can also be used to set the drive mode, but it is not possible on our products. Value is fixed at 1. <b>NOTE:</b> On other drives this value main depends on the Motor control law set in the device.
7	Get	Speed Actual	Req.	INT	Yes	Used to get the value of the motor Speed. Unit: rpm
8	Get/Set	SpeedRef	Req.	INT	Yes	Image of the speed reference signal received from the network. Unit: rpm 'Get' order returns the value written by 'Set' order Used to set the speed reference in the drive.
9	Get	Current Actual	Opt.	INT	Yes	Used to get the value of the current in the motor. Unit: 0.1 Amps
10	Get/Set	Current Limit	Opt.	INT	Yes	Used to set or get the current value used for the motor thermal protection. Unit: 0,1 Amps.
11	Get	Torque Actual	Opt.	INT	Yes	Used to get the value of the motor torque. Unit: 1 N.m
15	Get	Power Actual	Opt.	INT	No	Used to get the value of the output power. Unit 1 <--> 1/2PowerScale.
18	Get/Set	AccelTime	Opt.	UINT	Yes	Used to get and set the acceleration time <sup>(1)(2)</sup>
19	Get/Set	DecelTime	Opt.	UINT	Yes	Used to get and set the deceleration time <sup>(1)(2)</sup>
20	Get/Set	LowSpdLimit	Opt.	UINT	Yes	Used to get and set the low speed limit. Units: rpm
21	Get/Set	HighSpdLimit	Opt.	UINT	Yes	Used to get and set the high speed limit. Units: rpm
26	Get/Set	PowerScale	Opt.	SINT	No	-
28	Get/Set	TimeScale	Opt.	SINT	No	Default value = 0
29	Get	RefFromNet	Opt.	BOOL	No	Used to know if the drive is processing the reference sent by the network that asks the attribute 29 value
46	Get	Cumulative Run Time	Brand	UINT	No	Cumulative run time

(1) For the standard, the acceleration, and deceleration time are given to go from 0 to [HighSpdLimit] (attribute 21 of AC/DC drive object). For the drive, the acceleration and deceleration time are given to go from 0 to the motor nominal frequency ( $F_r 5$  parameter).

(2) In the drive, the unit of acceleration and deceleration time depends on INR parameter.

INR = 0: acceleration and deceleration time are in 0,01 s

INR = 1 (factory setting): acceleration and deceleration time are in 0,1 s

INR = 2: acceleration and deceleration time are in 1 s

Attribute ID	Details
3	Attribute value = value of bit 10 of ETA drive parameter
7	Motor speed. Linked to <i>r F r d</i> drive parameter. <i>r F r d</i> is in 1 rpm as attribute 7
8	Speed reference. Linked to <i>L F r d</i> drive parameter. <i>L F r d</i> is in 1 rpm as attribute 8
9	Actual current in the motor. Linked to <i>L C r</i> drive parameter. <i>L C r</i> is in 0,1 A as attribute 9
10	Current value used for the motor thermal protection. Linked to <i>i t H</i> drive parameter. <i>i t H</i> is in 0,1 A as attribute 10
11	Actual torque in the motor. Linked to <i>o t r n</i> drive parameter. <i>o t r n</i> is in 0,1 N.m. The value has to be multiplied by 10 to be in the unit of attribute 11
18	Acceleration time. Linked to <i>A C C</i> drive parameter. See note (2) of the specification above
19	Deceleration time. Linked to <i>d E C</i> drive parameter. See note (2) of the specification above
20	Low speed. Linked to <i>S n , L</i> drive parameter. <i>S n , L</i> is in 1 rpm as attribute 20
21	High speed. Linked to <i>S n H L</i> drive parameter. <i>S n H L</i> is in 1 rpm as attribute 21

### Supported Class Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute

### Supported Instance Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute

## Application Object (70 hex to C7 hex) / Explicit Messaging

### Application Object Behavior

$$\text{Class} = ((\text{AdL} - 3000) / 200) + 70 \text{ hex}$$

$$\text{Instance} = 1$$

$$\text{Attribute} = (\text{AdL} \% 200) + 1$$

$$\text{AdL} = (\text{class} - 70\text{h}) * 200 + \text{attribute} - 1 + 3000$$

This rule allows the access to address under 20599. The other addresses are not accessible.

The drive parameters are grouped into classes.

- Each application class has only one instance.
- Each instance groups 200 parameters.
- Each attribute in an instance relates to a parameter.

### Supported Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max Instances	UINT	1	One defined instance
3	Get	Number of Instances	UINT	1	-
6	Get	Max ID of class attributes	UINT	7	-
7	Get	Max ID of instance attribute	UINT	X	-

### Supported Instance Attributes

Attribute ID	Access	Name	Data type	Details
1	Get/Set	1st parameter of the block	UINT	Value returned by the drive at address xx
-	-	-	-	Value returned by the drive at address xx
X	Get/Set	Last parameter of the block	UINT	Value returned by the drive at address xx

### Supported Class Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute

### Supported Instance Services

Service code	Service name	Description
0E hex	Get_Attribute_Single	Read one attribute
10 hex	Set_Attribute_Single	Write one attribute

## Base Energy Object (4E hex)

### Overview

The base energy object acts as an **Energy Supervisor** for CIP Energy implementations. It is responsible for providing a time base for energy values, provides energy mode services, and can provide aggregation services for aggregating energy values up through the various levels of an industrial facility. It also provides a standard format for reporting energy metering results.

### Class Code

Hexadecimal	Decimal
4E hex	78

### Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max instances	UINT	1	1 defined instance
3	Get	Number of instances	UINT	1	-

### Instance Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Energy/Resource Type	UINT	1	1 = Electrical
2	Get	Base Energy Object Capabilities	UINT	-	See definition in the following table
3	Get	Energy Accuracy	UINT	-	See definition in the following table
4	Get	Energy Accuracy Basis	UINT	-	See definition in the following table
7	Get	Consumed Energy Odometer	ODOMETER	-	The consumed energy value in kWh
8	Get	Generated Energy Odometer	ODOMETER	-	The generated energy value in kWh
9	Get	Net Energy Odometer	SIGNED_ODOMETER	-	The generated energy value in kWh

The following table provides the Odometer and Signed\_Odometer structure principle:

Data Type Structure		Description of Data Type Element	Semantics of Value
ODOMETER STRUCT of:	SIGNED_ODOMETER STRUCT of:	-	-
UINT	INT	$x10^n$	$\pm Unit1 \times 10^n$
UINT	INT	$x10^{n+3}$	$\pm Unit1 \times 10^{n+3}$
UINT	INT	$x10^{n+6}$	$\pm Unit1 \times 10^{n+6}$
UINT	INT	$x10^{n+9}$	$\pm Unit1 \times 10^{n+9}$
UINT	INT	$x10^{n+12}$	$\pm Unit1 \times 10^{n+12}$
The valid range of n shall be a SINT between 0 and -15.			

The following table provides the Odometer type in Kilowatt-hours units and n = -3:

$\times 10^{n+12}$	$\times 10^{n+9}$	$\times 10^{n+6}$	$\times 10^{n+3}$	$\times 10^n$
Terawatt-hours (kWh $\times 10^9$ )	Gigawatt-hours (kWh $\times 10^6$ )	Megawatt-hours (kWh $\times 10^3$ )	Kilowatt-hours (kWh)	Watt-hours (kWh $\times 10^{-3}$ )

**Attribute 1-Energy/Resource Type**

This attribute specifies the type of energy managed by this Base Energy Object instance. If this attribute value = 1 Electrical, then this instance of the Base Energy Object is associated with a corresponding instance of the Electrical Energy Object pointed to by attribute 12.

**Attribute 2-Base Energy Object Capabilities**

The value indicates how **Energy Odometer** values are generated and/or how **Energy Transfer Rates** are generated or specified.

Value	Name	Definition
0	Energy Measured	Indicates that the instance reports energy values that are directly measured by the device

**Attribute 3-Energy Accuracy**

This attribute specifies the accuracy of metering energy results. By default, it specifies the accuracy of energy metering results as 100 times the percentage of reading. A value of 500 indicates a device accuracy of 5% of reading.

**Attribute 4-Energy Accuracy Basis**

This optional attribute defines the basis of the Energy Accuracy attribute.

Value	Name	Definition
0	Per cent of reading	Error = (Energy Accuracy value / 100) * Delta Energy

**Attribute 7-Consumed Energy Odometer**

The Consumed Energy Odometer represents a range of 0 kWh to 999,999,999.999 kWh.

Section	Description
Consumed energy value in kWh	Odometer structure: 5x16 bits parameters give a value of consumed energy value in kWh.

**Attribute 8-Generated Energy Odometer**

The generated energy odometer represents a range of 0 kWh to 999,999,999.999 kWh.

Section	Description
Generated energy value in kWh	Odometer structure: 5x16 bits parameters give a value of generated energy value in kWh.

**Attribute 9-Net Energy Odometer**

The net energy odometer represents a range of -999,999,999.999 kWh to 999,999,999.999 kWh.

Section	Description
Total energy value in kWh	Signed odometer structure: 5x16 bits parameters give a value of total energy value in kWh.

## Electrical Energy Object (4F hex)

### Overview

This object is used to provide unified electrical energy reporting capability for CIP enabled devices and processes. Energy reporting is typically related to the measurement of various metering results. This object provides for the consistent reporting of electrical energy data. Electrical energy is assigned a separate object to accommodate its alternating and polyphase characteristics, which result in a collection of attributes that are unique among energy sources.

Each instance of the Electrical Energy Object shall be associated with an instance of the Base Energy Object (class code 0x4E). Instance attribute 41, **Associated Base Energy Object Path** is used to define this association.

### Class Code

Hexadecimal	Decimal
4F hex	79

### Class Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Revision	UINT	X	Revision index of the class
2	Get	Max instances	UINT	1	1 defined instance
3	Get	Number of instances	UINT	1	–

### Instance Attributes

Attribute ID	Access	Name	Data type	Value	Details
1	Get	Real Energy Consumed Odometer	ODOMETER	–	The total real energy consumed in kWh
2	Get	Real Energy Generated Odometer	ODOMETER	–	The total real energy generated in kWh
3	Get	Real Energy Net Odometer	SIGNED_ODOMETER	–	The running total of Real Energy Consumed minus Real Energy Generated in kWh
9	Get	Line Frequency	REAL	–	Line Frequency (0.1 Hertz) Available on Low harmonic drives
13	Get	Average Current	REAL	–	RMS line current of three-phase average (0.1 Amps) Available on Low harmonic drives
19	Get	L1-L2 Voltage	REAL	–	RMS L1 to L2 voltage (0.1 Volts)
20	Get	L2-L3 Voltage	REAL	–	RMS L2 to L3 voltage (0.1 Volts)
21	Get	L3-L1 Voltage	REAL	–	RMS L3 to L1 voltage (0.1 Volts)
22	Get	Average L-L Voltage	REAL	–	RMS line to line voltage three-phase average (0.1 Volts)
27	Get	Total Real Power	REAL	–	Total real power, signed to show direction (Watts)
31	Get	Total reactive power	REAL	–	Total reactive power, signed to show capacitive or inductive (Watts)
35	Get	Total apparent power	REAL	–	Apparent Input power estimation (Watts)
39	Get	Three phase true power factor	REAL	–	Signed input power factor (0.1%)
41	Get	Associated Base Energy Object Path	SRUCT of:	–	Path to associated Base Energy Object instance
		Path Size	UNIT	–	Size of path (in words)
		Path	Padded EPATH	–	This is an array of bytes whose contents convey the application path and other information of the request for this transaction

**Attribute 1-Real Energy Consumed Odometer**

The Real Energy Consumed Odometer represents a range of 0 kWh to 999,999,999,999.999 kWh.

Section	Description
Total real energy consumed value in kWh	Odometer structure: 5x16 bits parameters give a value of consumed energy value in kWh.

**Attribute 2-Real Energy Generated Odometer**

The Real Energy Generated Odometer represents a range of 0 kWh to 999,999,999,999.999 kWh.

Section	Description
Total real energy generated value in kWh	Odometer structure: parameters give a value of generated energy value in kWh.

**Attribute 3-Real Energy Net Odometer**

The Real Energy Net Odometer represents a range of -999,999,999,999.999 kWh to 999,999,999,999.999 kWh.

Section	Description
Total real energy net value in kWh	Signed odometer structure: 5x16 bits parameters give a value of total real energy net value in kWh.

**Attribute 27- Total Real Power**

This attribute expresses the time rate of energy transfer as a REAL value, expressed in engineering units of kilowatts (kW). A positive value indicates consumption of energy, while a negative value indicates generation of energy.

**Attribute 41- Associated Base Energy Object Path**

The Base Energy Object (class code 0x4E) acts as an **energy supervisor** for CIP Energy implementations.

---

# Chapter 3

## Hardware Setup

---

### What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Hardware Presentation	62
Firmware Version	62
Electrical Installation	63
Cable Routing Practice	64

## Hardware Presentation

### Ethernet Dual Port

The figure shows Ethernet adapter equipped with 2 RJ45 connectors

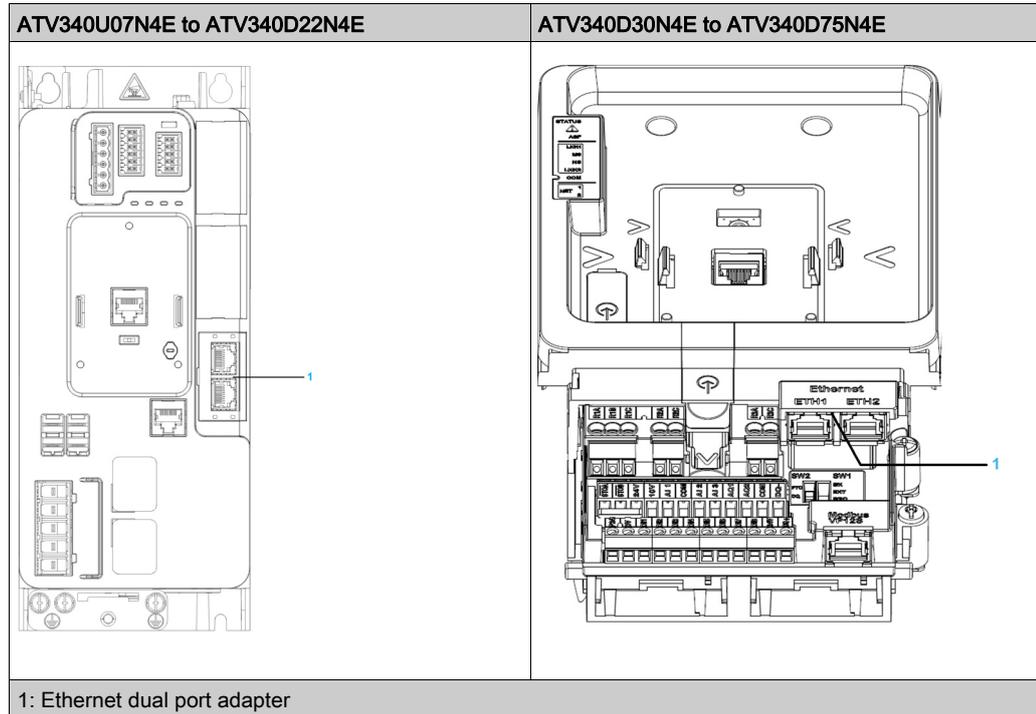

### Firmware Version


#### Compatibility

There is no specific firmware for the Ethernet adapter. The drive firmware embeds the Ethernet adapter firmware.

## Electrical Installation

### Pin Layout

The drive is equipped with 2 RJ45 female sockets for the Ethernet connection.

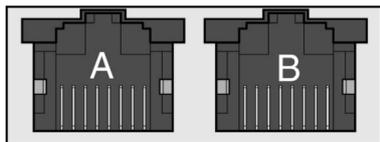

8 7 6 5 4 3 2 1 8 7 6 5 4 3 2 1

The table provides the pin out details of each RJ45 connector:

Pin	Signal	Meaning
1	Tx+	Ethernet transmit line +
2	Tx-	Ethernet transmit line -
3	Rx+	Ethernet receive line +
4	-	-
5	-	-
6	Rx-	Ethernet receive line -
7	-	-
8	-	-

### Cable Specification

Cable specifications are as follows:

- Minimum Cat 5e,
- Use equipotential bonding conductors (100 BASE-TX, category 5e or industrial Ethernet fast connect)
- Connector RJ45, no crossover cable
- Shield: both ends grounded
- Twisted-pair cable
- Verify that wiring, cables, and connected interfaces meet the PELV requirements.
- Maximum cable length per segment = 100 m (328 ft)


**NOTE:** RSTP function is not compatible with half duplex configuration. All devices involved in the RSTP topology shall be RSTP capable and configured.

## Cable Routing Practice

### Installation Topology


The Ethernet adapter enables several wiring solutions:

- Daisy chain and/or Star topology

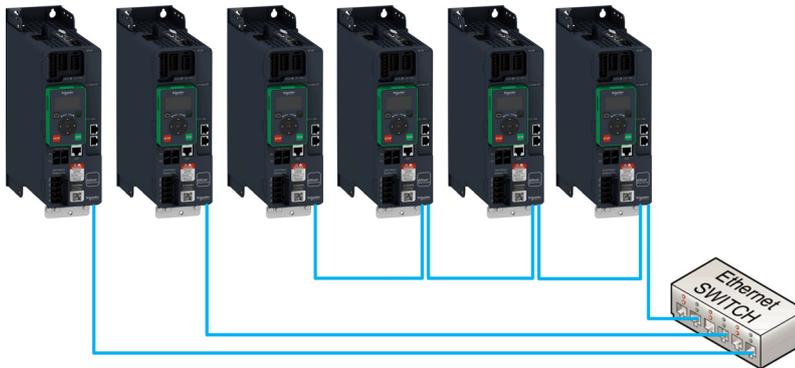


**NOTE:** In daisy chain topology, if one drive is turned off, an **[Embd Eth Com Interrupt] E E H F** error is triggered in the other drives connected to the same topology. To keep the integrity of Ethernet daisy chain network when one or more drives are powered off, add an external permanent 24Vdc supply to the control block of the drive.


- Redundant ring topology with RSTP (with an RSTP switch)

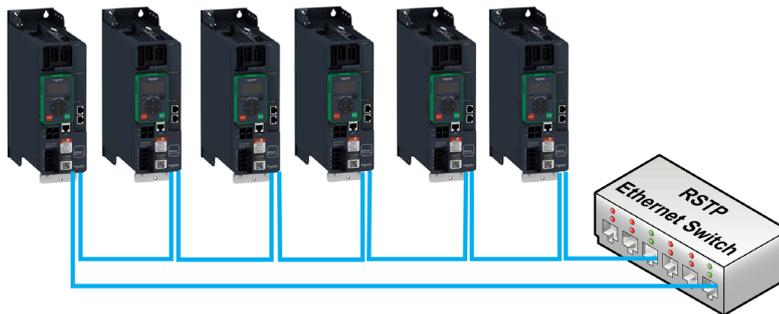

- Redundant ring topology with RSTP (with a RSTP PLC)

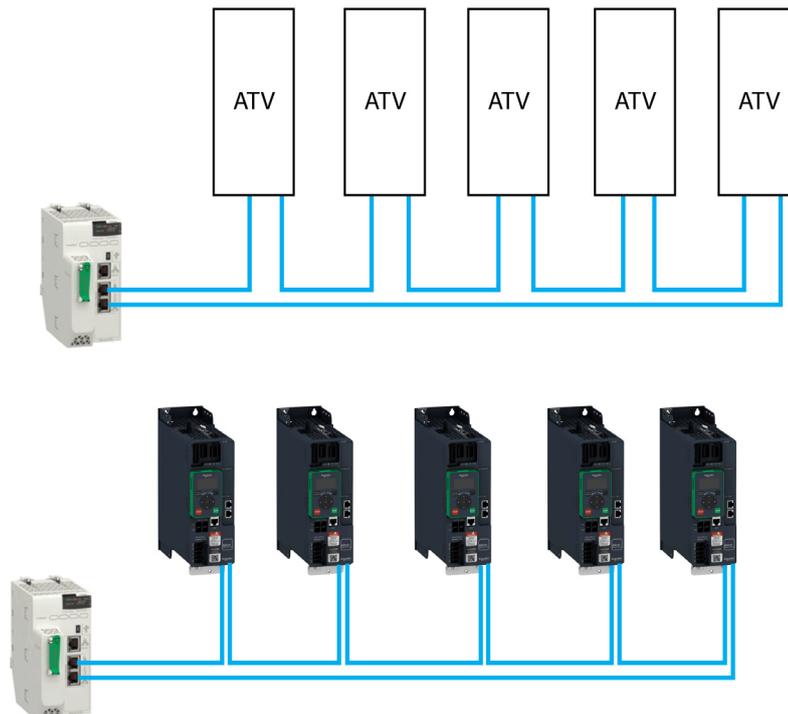

- Redundant star topology with RSTP

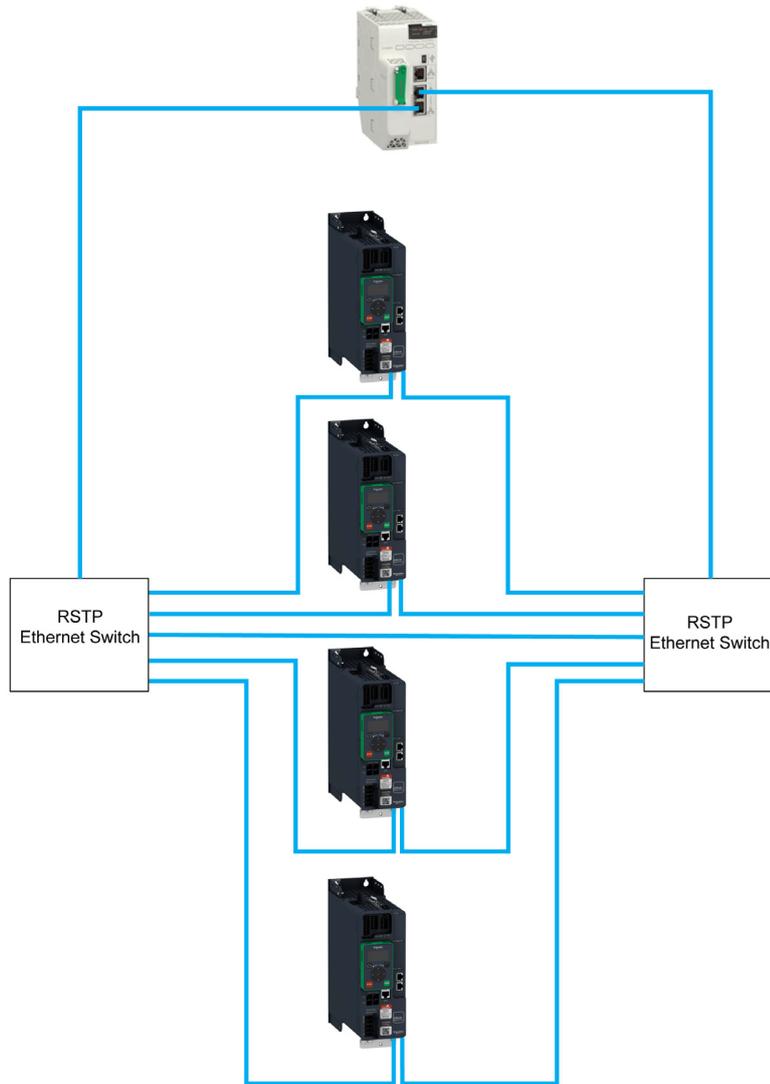

The following figure shows the direct connection between the drive and PC.





---

# Chapter 4

## Software Setup

---

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
4.1	Basic Settings	68
4.2	Additional Settings	78
4.3	Fast Device Replacement	87
4.4	Profile	94
4.5	Embedded Webserver	110
4.6	Software Setup with SoMachine (M251)	116
4.7	Software Setup with Allen-Bradley PLC	124

## Section 4.1

### Basic Settings

#### What Is in This Section?

This section contains the following topics:

Topic	Page
IP Parameter Settings	69
[Device Name] <i>P R n</i>	70
[IP mode Ether. Embd] <i>, n 0 0</i>	70
[IP address] <i>, c 0 1 , c 0 2 , c 0 3 , c 0 4</i>	71
[Mask] <i>, n 0 1 , n 0 2 , n 0 3 , n 0 4</i>	71
[Gateway] <i>, g 0 1 , g 0 2 , g 0 3 , g 0 4</i>	72
[Enable FDR] <i>F d v 0</i>	72
[FDR Action] <i>F d r 0</i>	73
[FDR Operating State] <i>F d s 0</i>	73
[FDR Error Status] <i>F d r 0</i>	74
[MAC @] <i>n r c a</i>	74
[ETH emb Rx frames] <i>E r x E</i>	75
[ETH emb Tx frames] <i>E t x E</i>	75
[ETH emb error frames] <i>E E r E</i>	75
[Ethernet Rate Data] <i>R r d E</i>	75
[Enable Webserver] <i>E w e E</i>	76
[Reset EmbWeb] <i>r w p E</i>	76
[Ethernet Embd cmd.] <i>C n d S</i>	76
[Ethernet Embd Ref Freq] <i>L F r S</i>	77
[Ethernet Timeout] <i>t t a b</i>	77

## IP Parameter Settings

### Assigning IP Parameters

If not using IPV6 functionalities for DPWS, following parameters shall be configured:

- The drive IP address.
- The subnet mask.
- The gateway IP address.

These IP addresses can be entered using the display terminal, the embedded webserver, or the DTM-based PC software.

They can be also provided by:

- A BOOTP server (correspondence between the MAC address and the IP addresses).
- Or a DHCP server (correspondence between device name **[DEVICE NAME] P A n** and the IP addresses).

If an IP address other than 0.0.0.0 has been entered manually, assignment using a server is disabled. Regardless of the type of IP address assignment, if the address is modified, then the IP address is effective the next time the drive is turned on (control voltage if a separate power supply is being used).

### Entering IP Parameters in the display terminal

In the **[Communication] C o n -**, **[Comm parameters] C n P -** menu and **[Embd Eth Config] E t E -** submenu, enter the following IP addresses:

- **[IP address]** , C 0 1. , C 0 2. , C 0 3. , C 0 4
- **[Mask]** , n 0 1. , n 0 2. , n 0 3. , n 0 4,
- **[Gateway]** , G 0 1. , G 0 2. , G 0 3. , G 0 4.

If this address is modified, the new IP address entered is displayed.

### Configuring BOOTP

The BOOTP service is used to assign IP addresses based on the MAC address. The MAC address consisting of 6 hexadecimal digits (MM-MM-MM-XX-XX-XX) must be entered in the BOOTP server. The MAC address appears on the fieldbus adapter dedicated menu on the display terminal.

In the **[Communication] C o n -**, **[Comm parameters] C n P -** menu and **[Embd Eth Config] E t E -** submenu:

- Leave the IP address . . . **[IP address]** , C 0 1. , C 0 2. , C 0 3. , C 0 4 at the value **[0.0.0.0] 0?0? 0?0.**
- Do not enable the FDR service.

### Configuring DHCP

The DHCP service is used to assign IP addresses and FDR configuration file path based on the device name **[DEVICE NAME] P A n**.

The device name consisting of an alphanumeric string must be entered in both the DHCP server and the drive.

In the **[Communication] C o n -**, **[Comm parameters] C n P -** menu and **[Embd Eth Config] E t E -** submenu, enter the **[DEVICE NAME] P A n**

## [Device Name] P R n

### About This Parameter

This parameter is used to set the device name.

### Access

This parameter is accessible via [Communication] C o n - , [Comm parameters] C n P - menu and submenu.

This is a read/write parameter

### Possible Settings

The FDR (Fast Device Replacement) service is based on identification of the device by a **Device Name**. In the case of the Altivar drive, this is represented by the [Device Name] P R n parameter. Verify that all the network devices have different **Device Name**.

**NOTE:** The [Device Name] P R n is common for both Ethernet interfaces.

## [IP mode Ether. Emdb ] , n o o

### About This Parameter

This parameter is used to select the IP address assignment method.

### Access

This parameter is accessible via [Communication] C o n - , [Comm parameters] C n P - menu and [Emdb Eth Config] E t E - submenu.

This is a read/write parameter

The parameter number is 64400.

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[Fixed]	n R n u	0	Manually set the IP address.
[BOOTP]	b o o t	1	Automatically gets the IP address from the Bootp or DHCP server using the MAC address.
[DHCP]	d H C P	2	Automatically gets the IP address from the DHCP server using the device name. <b>Factory setting:</b> DHCP

**[IP address] ,C01 ,C02 ,C03 ,C04****About This Parameter**

This parameter is used to set the IP address and can be edited only when the IP mode is set to fixed address.

The modification of the setting value is effective when you restart the drive

**Access**

This parameter is accessible via **[Communication] C 0 1 -** , **[Comm parameters] C 0 1 P -** menu and **[Embd Eth Config] E E E -** submenu.

This is a read/write parameter

The parameter number for IC01 is 64401

The parameter number for IC02 is 64402

The parameter number for IC03 is 64403

The parameter number for IC04 is 64404

**Possible Settings**

The table presents the parameter settings:

Settings	Code	Value	Description
[0.0.0.0]	0	0...255	First byte of IP address.
	0	0...255	Second byte of IP address.
	0	0...255	Third byte of IP address.
	0	0...255	Fourth byte of IP address.

**[Mask] ,M01 ,M02 ,M03 ,M04****About This Parameter**

This parameter is used to set the IP subnet mask and can be edited only when IP mode is set to fixed address.

The modification of the setting value is effective when you restart the drive.

**Access**

This parameter is accessible via **[Communication] C 0 1 -** , **[Comm parameters] C 0 1 P -** menu and **[Embd Eth Config] E E E -** submenu.

This is a read/write parameter

The parameter number for IM01 is 64405

The parameter number for IM02 is 64406

The parameter number for IM03 is 64407

The parameter number for IM04 is 64408

**Possible Settings**

The table presents the parameter settings:

Settings	Code	Value	Description
[255.255.255.0]	2 5 5	0...255	First byte of IP Mask .
	2 5 5	0...255	Second byte of IP Mask .
	2 5 5	0...255	Third byte of IP Mask .
	0	0...255	Fourth byte of IP Mask

**[Gateway] , G 0 1 , G 0 2 , G 0 3 , G 0 4**

**About This Parameter**

This parameter is used to set the default gateway address and can be edited only IP mode is set to fixed address.

The modification of the setting value is effective when you restart the drive.

**Access**

This parameter is accessible via **[Communication] C 0 1 -** , **[Comm parameters] C 1 1 P -** menu and **[Embd Eth Config] E 1 E -** submenu.

This is a read/write parameter

The parameter number for is 64409

The parameter number for is 64410

The parameter number for is 64411

The parameter number for is 64412

**Possible Settings**

The table presents the parameter settings:

Settings	Code	Value	Description
[0.0.0.0]	0	0...255	First byte of IP gateway.
	1	0...255	Second byte of IP gateway
	2	0...255	Third byte of IP gateway
	3	0...255	Fourth byte of IP gateway

**[Enable FDR] F d v 0**

**About This Parameter**

This parameter is used to enable or disable the FDR service.

**Access**

This parameter is accessible via **[Communication] C 0 1 -** , **[Comm parameters] C 1 1 P -** menu, **[Embd Eth Config] E 1 E -** submenu and **[Fast Device Replacement] F d r -** submenu.

This is a read/write parameter.

The parameter number is 64435

This parameter can be accessed if **[IP mode Ether. Embd] , 1 1 0 0** is set to **[DHCP] d H C P**

**Possible Settings**

The table presents the parameter settings:

Settings	Code	Value	Description
[No]	n o	0	No: FDR service disabled
[Yes]	y e s	1	Yes: FDR service enabled <b>Factory setting: No</b>

## [FDR Action] F d A D

### About This Parameter

This parameter is used to select the FDR action that needs to be performed.

### Access

This parameter is accessible via **[Communication] C o m -**, **[Comm parameters] C n P -** menu, **[Embd Eth Config] E t E -** submenu and **[Fast Device Replacement] F d r -** submenu.

This is a read/write parameter.

The parameter number is 64434

This parameter can be accessed if **[IP mode Ether. Embd] , n D D** is set to **[DHCP] d H C P**

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[NOT ACTIVE]	<i>i d L E</i>	0	Not active: No FDR action
[SAVE]	<i>S A V E</i>	1	Save: FDR save command
[REST]	<i>r E S T</i>	2	Restore: FDR restore command

## [FDR Operating State] F d S D

### About This Parameter

This parameter is used to display the FDR operating state.

### Access

This parameter is accessible via **[Communication] C o m -**, **[Comm parameters] C n P -** menu, **[Embd Eth Config] E t E -** submenu and **[Fast Device Replacement] F d r -** submenu.

This is a read-only parameter.

The parameter number is 64433

This parameter can be accessed if **[IP mode Ether. Embd] , n D D** is set to **[DHCP] d H C P**

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[Initialization]	<i>i n i t</i>	0	INIT: Initialization
[Not Active]	<i>i d L E</i>	1	IDLE: Function not active
[Operational]	<i>o P E</i>	2	OPE: Operational
[Ready]	<i>r d y</i>	4	RDY: Ready
[IP Configuration]	<i>i P C</i>	5	IPC: IP configuration
[Not Configured]	<i>u n C F</i>	7	UNCF: Function not configured
[Reading Configuration]	<i>G E T</i>	8	GET: Download the current configuration
[Writing Configuration]	<i>S E T</i>	9	SET: Save the current configuration
[Applying Configuration]	<i>A P P</i>	10	APP: Applying the configuration to the drive

## [FDR Error Status] *F d r D*

### About This Parameter

This parameter is used to display the FDR error status.

### Access

This parameter is accessible via **[Communication] *C o m -***, **[Comm parameters] *C n P -*** menu, **[Embd Eth Config] *E t E -*** submenu and **[Fast Device Replacement] *F d r -*** submenu.

This is a read-only parameter.

The parameter number is 64432

This parameter can be accessed if **[IP mode Ether. Embd] *i n D D*** is set to **[DHCP] *d H C P***

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[No Error]	<i>n o</i>	0	NO: No error
[Service Timeout]	<i>t o u t</i>	1	TOUT: Server timeout
[Server No File]	<i>S n F</i>	2	SNF: No file on server
[Server Corrupt File]	<i>C r P t</i>	3	CRPT: Corrupted file on server
[Server Empty File]	<i>E P t Y</i>	4	EPTY: Empty file on server
[Drive Invalid File]	<i>H i n V</i>	5	HINV: Invalid file on drive
[CRC Error]	<i>C r C</i>	6	CRC: CRC error
[Version Incompatibility]	<i>V r n</i>	7	VRM: Version incompatibility between drive and file
[Drive No File]	<i>H n F</i>	9	HNF: No file on drive
[Server Reading Size]	<i>S i Z E</i>	10	SIZE: File size reading error on server
[Drive Opening File]	<i>o P E n</i>	11	OPEN: Drive cannot open the file
[Drive Reading File]	<i>r E A d</i>	12	READ: Drive cannot read the file
[Incompatibility]	<i>S C n t</i>	13	SCNT: File incompatibility
[Drive Invalid Name]	<i>n i n V</i>	14	NINV: Drive name is invalid
[Server Incorrect File Size]	<i>F S i Z</i>	15	FSIZ: Incorrect file size on server
[Drive Writing File]	<i>H W F</i>	16	HWF: Drive cannot write the file
[Server Writing File]	<i>S W F</i>	17	SWF: Server cannot write the file

## [MAC @] *n n c o*

### About This Parameter

This parameter displays the MAC address of the device.

### Access

This parameter is accessible via **[Display] *n o n -***, **[Communication map] *C n n -*** menu and **[Ethernet Emb Diag] *n P E -*** submenu.

This is a read-only parameter

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[MM-MM-MM-XX-XX-XX]	<i>n n - n n - n n - x x - x x - x x</i>	MM-MM-MM-XX-XX-XX	MAC address

## [ETH emb Rx frames] *E r X E*

### About This Parameter

This parameter displays the Ethernet adapter received Rx frames counter

### Access

This parameter is accessible via **[Display] *Π ο η*** , **[Communication map] *ϸ Π Π*** - menu and **[Ethernet Emb Diag] *Π Ρ Ε*** - submenu.

This is a read-only parameter

The parameter number for ErXE is 64416

## [ETH emb Tx frames] *E t X E*

### About This Parameter

This parameter displays the Ethernet adapter transmitted Tx frames counter

### Access

This parameter is accessible via **[Display] *Π ο η*** , **[Communication map] *ϸ Π Π*** - menu and **[Ethernet Emb Diag] *Π Ρ Ε*** - submenu.

This is a read-only parameter

The parameter number for EtXE is 64418

## [ETH emb error frames] *E E r E*

### About This Parameter

This parameter displays the Ethernet adapter error frames counter

### Access

This parameter is accessible via **[Display] *Π ο η*** , **[Communication map] *ϸ Π Π*** - menu and **[Ethernet Emb Diag] *Π Ρ Ε*** - submenu.

This is a read-only parameter

The parameter numbers is 64420

## [Ethernet Rate Data] *R r d E*

### About This Parameter

This parameter displays the Ethernet adapter actual rate.

### Access

This parameter is accessible via **[Display] *Π ο η*** , **[Communication map] *ϸ Π Π*** - menu and **[Ethernet Emb Diag] *Π Ρ Ε*** - submenu.

This is a read-only parameter

The parameter numbers is 64413

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[Auto]	<i>R u t o</i>	Auto	Data rate is auto detected depending on the first data packet received.
[10M. full]	<i>1 0 F</i>	10 F	Data rate is set to 10 Mbit/s full duplex
[10M. half]	<i>1 0 H</i>	10 H	Data rate is set to 10 Mbit/s half duplex
[100M. full]	<i>1 0 0 F</i>	100 F	Data rate is set to 100 Mbit/s full duplex
[100M. half]	<i>1 0 0 H</i>	100 H	Data rate is set to 100 Mbit/s half duplex
			<b>Factory setting:</b> Auto

## [Enable Webserver] E W E E

### About This Parameter

This parameter is used to manage the fieldbus adapter Web services.

### Access

This parameter is accessible via **[My preferences] П У Р** - menu and **[Webserver] W B S** - submenu.

This is a read/write parameter

The parameter numbers is 64264

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[No]	н о	0	Web services disabled
[Yes]	у е с	1	Web services enabled <b>Factory setting:</b> Yes

## [Reset EmbWeb] Р W P E

### About This Parameter

This parameter is used to manage the set to factory value the Ethernet webserver settings, including the password.

### Access

This parameter is accessible via **[My preferences] П У Р** - menu and **[Webserver] W B S** - submenu.

This is a read/write parameter

### Possible Settings

The table presents the parameter settings:

Settings	Code	Value	Description
[No]	н о	0	Reset of the adapter webserver password not requested
[Yes]	у е с	1	Reset of the adapter webserver password requested <b>NOTE:</b> The parameter is set to <b>[No]</b> when the operation is done

## [Ethernet Embd cmd.] C П Д S

### About This Parameter

This parameter displays the command word built with Ethernet embedded source (same as CMD).

### Access

This parameter is accessible via **[Display] П о н** - , **[Communication map] C П П** - menu and **[Command word image] C W ,** - submenu.

This is a read-only parameter

The parameter numbers is 8515

## [Ethernet Embd Ref Freq] *L F r 5*

### About This Parameter

This parameter displays the reference frequency built with Ethernet embedded source (same as LFr).

### Access

This parameter is accessible via **[Display] *Π ο η*** , **[Communication map] *Ε Π Π*** - menu and **[Command word image] *Ε W ι*** - submenu.

This is a read-only parameter

The parameter numbers is 8525

## [Ethernet Timeout] *Ε Ε ο β*

### About This Parameter

This parameter is used to set the Ethernet timeout.

### Access

This parameter is accessible via fieldbus using the Modbus address.

This is a read/write parameter

The parameter number is 64415.

### Possible Settings

The table presents the parameter settings:

Settings	Description
0.1...30 sec	<b>Factory setting:</b> 10 sec

## Section 4.2

### Additional Settings

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
FDR Settings	79
RSTP Settings	80
Configuring I/O Scanning	82
DNS Settings	83
SNTP Settings	84
SNMP Settings	85

## FDR Settings

### Access

The parameters are accessible via the webserver or the DTM-based PC software

### FDR Configuration

The following figure shows FDR settings via webserver:

The table presents the **FDR Configuration** settings:

Parameter	Description	Settings
<b>FDR Activation</b>	This parameter is used to enable or disable the FDR service <b>NOTE:</b> You can enable FDR only if the <b>IP assignment mode</b> selected is DHCP.	<b>Enabled:</b> FDR service enabled <b>Disabled:</b> FDR service disabled. <b>Factory setting:</b> Enabled
<b>Control Configuration</b>	This parameter is used to select the server or local configuration.	<b>Served:</b> Transfers the configuration file from server to drive at power-up. <b>Stored:</b> uses the configuration stored in the drive at power-up. <b>Factory setting:</b> served
<b>Automatic Syncho Cycle (x 10 Sec)</b>	Allows you to select the interval for periodic synchronization of the drive with the FDR server. <b>NOTE:</b> You can configure automatic Syncho cycle only if <b>Synchronization mode</b> check box is selected.	10..655350 sec <b>Factory setting:</b> 2560 sec

## RSTP Settings

### Access

The parameters are accessible via the DTM-based PC software.

### Bridge Settings

The following figure shows the bridge settings using the DTM:



The table presents the **Bridge** configuration

Parameters	Description	Settings	
<b>Enable RSTP</b>	Allows you to enable or disable the RSTP	To enable RSTP, select the <b>Enable RSTP</b> check box.	
<b>Status</b>	Allows you to enable or disable the RSTP bridge.	<b>Enabled:</b> Enables the use of Rapid Spanning-Tree Protocol (RSTP). <b>Disabled:</b> Disables the use of Rapid Spanning-Tree Protocol (RSTP)	
<b>Bridge Priority</b>	The bridge priority is used to control which bridge is elected as the root bridge. Bridge with the smallest (lowest) bridge ID is elected as the root bridge. Bridge ID consists of the configurable priority and the MAC address of the bridge. To compare 2 bridge ids, bridge priorities are compared first. If the bridge priorities are equal, then the MAC addresses are compared. The bridge priority can be set only in increments of 4096	0 4096 8192 12288 16384 20480 24576 28672 32768 36864 40960 45056 49152 53248 57344 61440	0 hex 1000 hex 2000 hex 3000 hex 4000 hex 5000 hex 6000 hex 7000 hex 8000 hex 9000 hex A000 hex B000 hex C000 hex D000 hex E000 hex F000 hex
<b>Hello Time(S)</b>	The hello time parameter corresponds to the time interval at which the root bridge transmits configuration Bridge Protocol Data Units (BPDU)s.	1...10 sec	
<b>Max age time (6-40 s)</b>	The maximum age time correspond to the maximum expected arrival time of hello BPDUs. If the timer expires, the bridge detects a communication interruption to the root bridge and initiates a topology convergence. The maximum age timer should be longer than the configured hello time.	6...40 sec	

## Ports Configuration

The following figure shows the port settings:

— Ports —

Port 1 priority :	128
Port 1 path cost :	0
Port 1 select :	EdgePort
<hr/>	
Port 2 priority :	128
Port 2 path cost :	0
Port 2 select :	EdgePort

The table provides the **Ports** settings

Parameters	Description	Settings
<b>Port Priority</b>	Allows you to define the priority of the interface to the other going to same subnet.	0...240 <b>NOTE:</b> <ul style="list-style-type: none"> <li>The port priority can be set only in increments of 16</li> <li>Drive takes the value in account after a product restart.</li> </ul>
<b>Port Path Cost</b>	Allows you to define the cost of sending spanning tree traffic through the interface. RSTP uses path cost to determine the topology with the smallest total path cost between each point of the tree and the root bridge.	0...1,569,325,055 <b>NOTE:</b> If the port path cost is set to 0 (auto), the path cost is based on the port link speed maximum, for details see the following table.
<b>Port Select</b>	Allows you to select the type of ports. With the port types defined, RSTP can quickly reconfigure a network when a change in network topology is detected.	<b>RSTP Port</b> <b>Edge Port</b>

Table provides the value of the path cost based on the port link maximum speed

Port Link Maximum Speed	Automatic Path Cost
10 Gb/s (Not supported by the adapter)	2000
1 Gb/S (Not supported by the adapter)	20000
100 Mb/s	200000
10 Mb/s	2000000

## Configuring I/O Scanning

### Description

The drive I/O scanning service can be enabled or disabled with the DTM-based PC software.

It is not possible to modify the assignment of the I/O scanning periodic variables using the display terminal. To configure I/O scanning, use the DTM-based PC software.

## DNS Settings

### Description

The Domain Name System (DNS) is a distributed naming system for devices connected to the network. It translates domain names to IP addresses for locating the devices easily on the network.

### DNS Configuration

The DNS configuration can be done using the DTM-based PC software.

The following figure shows the DNS configuration window:

**- DNS Configuration**

---

**Parameters**

1  Obtain DNS server address automatically

Use the following DNS address:

2 Preferred DNS server

3 Alternate DNS server

The table presents the **DNS Configuration** settings:

Item	Description
1	<b>Obtain DNS Server address automatically:</b> When checked, the function is enabled and allows getting automatically the IP address from the DNS server.
2	<b>Preferred DNS server:</b> Enter the IP address of the preferred DNS server.
3	<b>Alternate DNS server:</b> Enter the IP address of the alternate DNS server. <b>NOTE:</b> The alternate IP address is used only if the first server is unavailable.

**NOTE:** The changes must be applied to the module configuration by clicking the  button.

## SNTP Settings

### Description

The Simple Network Time Protocol (SNTP) is networking protocol for clock synchronization of devices connected to the network.

### SNTP Configuration

The SNTP configuration can be done using the DTM-based PC software.

The following figure shows the SNTP Configuration window:

**— SNTP Configuration**

---

**— SNTP Settings**

1	SNTP	Enabled
2	Server 1 IP Address	0 . 0 . 0 . 0
3	Server 2 IP Address	0 . 0 . 0 . 0
4	Polling Interval	1 minute

---

**— Local Time**

a	Current Date	samedi 1 janvier 2000
b	Current Time	00:00:00

The **SNTP Configuration** window is divided in 2 zones:

- **SNTP Settings**
- **Local Time**

The table presents the **SNTP settings**:

Item	Description
1	<b>Enabled:</b> Enables SNTP service. <b>Disabled:</b> Disables SNTP service.
2	<b>Server 1 IP Address:</b> Enter the IP address of the first preferred SNTP server.
3	<b>Server 2 IP Address:</b> Enter the IP address of the second preferred SNTP server. <b>NOTE:</b> This IP address is used for SNTP only if the first server is unavailable.
4	<b>Polling Interval:</b> Allows you to select the scanning interval for checking the time change.

The table presents the **Local Time** settings:

Item	Description
a	<b>Current Date:</b> Allows you to enter the current date
b	<b>Current Time:</b> Allows you to select the current time

**NOTE:** The changes must be applied to the module configuration by clicking the  button.

## SNMP Settings

### Description

Simple Network Management Protocol (SNMP) is an internet-standard protocol used to manage devices on IP networks.

It is used for collecting and organizing information about the devices on the network.

### SNMP Configuration

The SNMP configuration can be done using the DTM-based PC software.

The following figure shows the SNTP Configuration window:

The screenshot shows the 'SNMP Configuration' window with the following sections:

- Manager's IP Address:** Contains two rows for '1a Manager 1' and '2a Manager 2', each with an IP address field set to '0 . 0 . 0 . 0'.
- Agent:** Contains three rows: '1b System Name' (empty), '2b System Location' (filled with 'My Location'), and '3b System Contact' (filled with 'Schneider Electric').
- Community Names:** Contains three rows: '1c Get' (filled with 'public'), '2c Set' (filled with 'private'), and '3c Trap' (filled with 'trap').
- Enabled Traps:** A list of four traps, each with a checked checkbox: '1d Cold Start Trap', '2d Link Down Trap', '3d Link Up Trap', and '4d Authentication Failure Trap'.

The **SNMP Configuration** window is divided in 4 zones:

- **Manager's IP Address**
- **Agent**
- **Community Names**
- **Enabled Traps**

### Manager's IP Address

SNMP manager is a central system used for monitoring and controlling the SNMP agents.

The table presents **Manager's IP Address** settings:

Item	Description
1a	<b>Manager 1:</b> SNMP manager is a central system, which is used for monitoring and controlling the SNMP agents.
2a	<b>Manager 2:</b> Enter the IP address of SNMP manager 2.

### Agents

Agents are the devices which are connected to the network. The SNMP manager monitors these devices.

The table presents the **Agents** settings:

Item	Description
1b	<b>System Name:</b> Enter the system name used by the drive.
2b	<b>System Location:</b> Enter the system location of the drive.
3b	<b>System Contact:</b> Contact point to get the information about the system. Enter the system contact of the drive.

### Community Names

Community names are used to identify the commands that can be performed by an SNMP manager on a device.

The table presents the **Community Names** settings:

Item	Description
1c	<b>Get:</b> Requests send from manager to agent to retrieve data.
2c	<b>Set:</b> Requests send from manager to agent to change data.
3c	<b>Trap:</b> Requests send from manager to agent to find the available data.

### Enabled Traps

Traps are used to inform the SNMP manager of specific events occurring on device.

The table presents the **Enabled Traps** settings:

Item	Description
1d	<b>Cold Start:</b> The agent reinitialized its configuration tables.
2d	<b>Link Down Trap:</b> A network interface card (NIC) on agent reinitializes.
3d	<b>Link Up Trap:</b> A network interface card (NIC) on agent stops responding.
4d	<b>Authentication Failure Trap:</b> SNMP agent gets a request from an unrecognized community name.

---

## Section 4.3

### Fast Device Replacement

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Presentation	88
Startup Detailed Behavior	89
FDR Operation Behavior	90
Local Configuration	91
Downloaded Configuration	92

## Presentation

### FDR Service

The FDR (Fast Device Replacement) service is used to simplify the maintenance of drives connected to an Ethernet network. In the event of a drive not working correctly, this service automatically reconfigures its replacement.

The new drive (FDR client) retrieves:

- Its IP addresses and the FDR file path from a DHCP server
- The FDR file from an FTP server if the drive is not configured in local configuration

In practice, the DHCP server and the FTP server are the same device (PAC M580, M340 PLC, M251MESE or dedicated PCs).

The FDR file contains:

- The Ethernet parameters (configuration of I/O scanning, FDR, and so on)
- The drive parameters (drive, functions, application, and so on)

The FDR service is based on identification of the device by a **Device Name**. In the case of the drive, this is represented by the **[DEVICE NAME] P R n** parameter.

The configuration of the FDR service is accessible via embedded webserver or DTM-based software or Graphic Display Terminal.

**NOTE:** Check that all the network devices have different **Device Name**.

The FDR server controls duplication of **Device Name** (it does not assign an IP address that has already been assigned and is active).


If the same IP address is supplied on 2 devices, the second should trigger an IP address duplication (network management detected error which triggers an **[External Error] E P F I** by default).

If the FDR service has been enabled, the Ethernet adapter attempts to restore its IP addresses on each power-up. Each time the procedure has detected error, the Ethernet adapter reiterates its FDR requests (DHCP).


After assigning the Ethernet adapter IP addresses, if the configuration is not downloaded successfully, the Ethernet adapter triggers a **[FDR1 Error] F d r I**.

## Startup Detailed Behavior

### Presentation

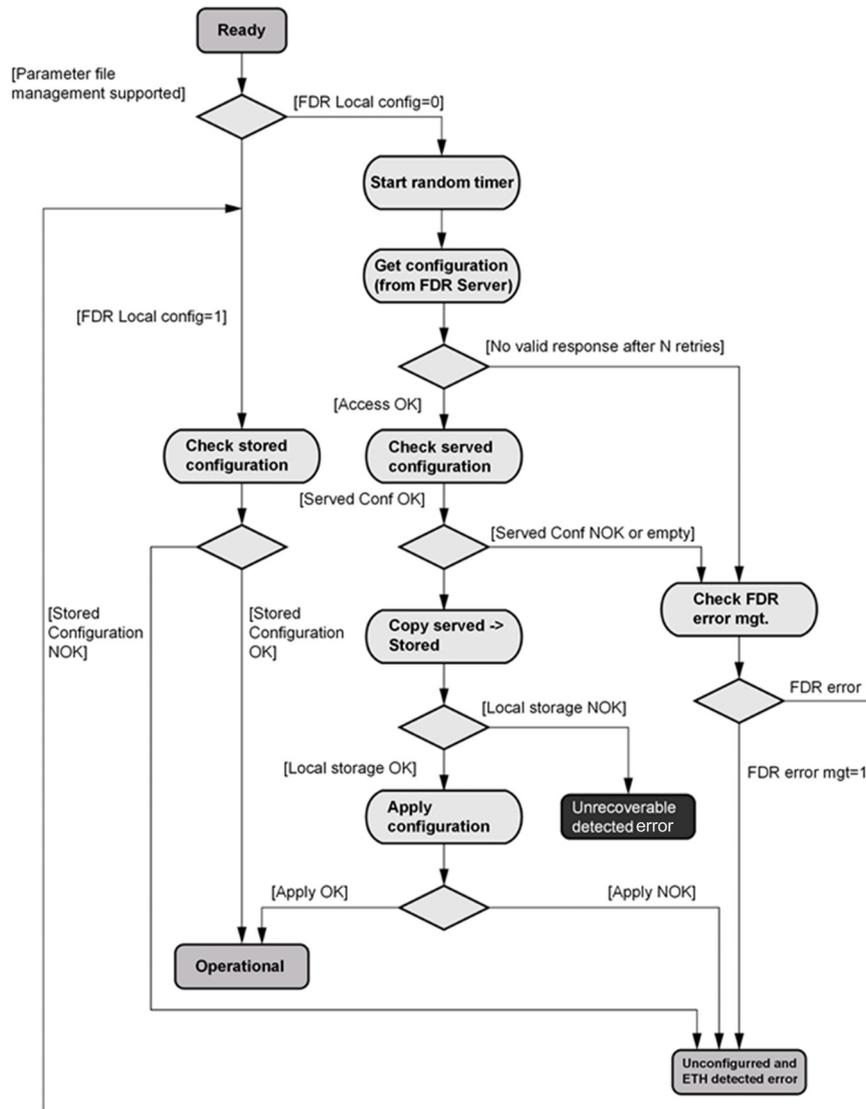


## FDR Operation Behavior

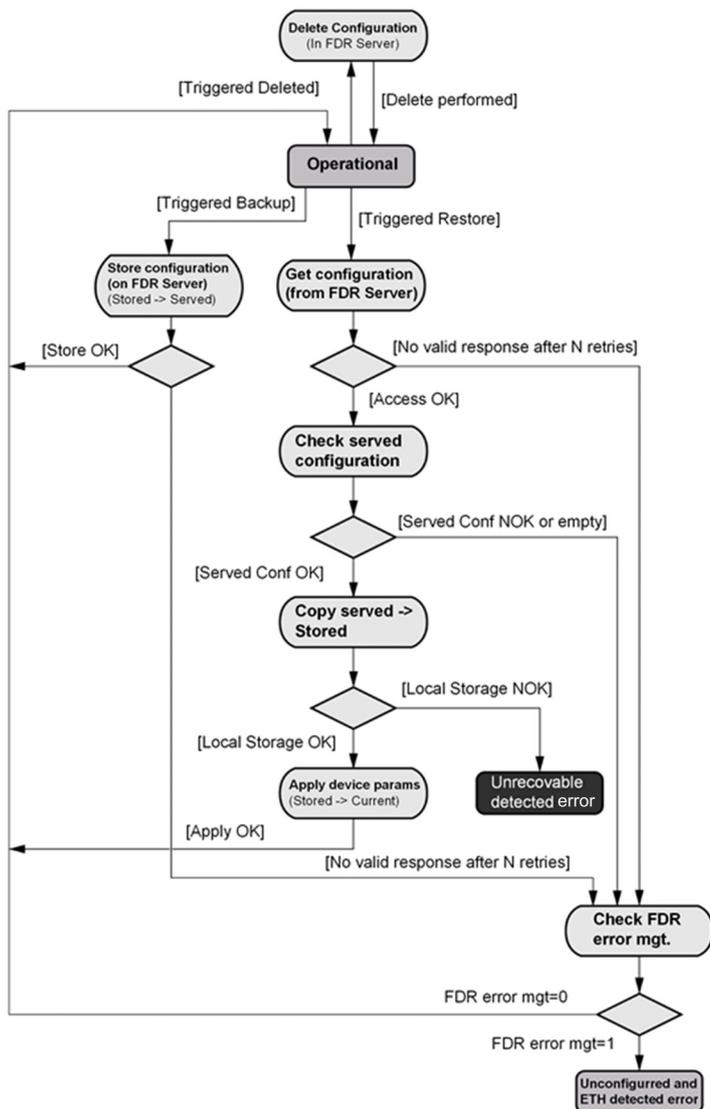

## Local Configuration

### Presentation

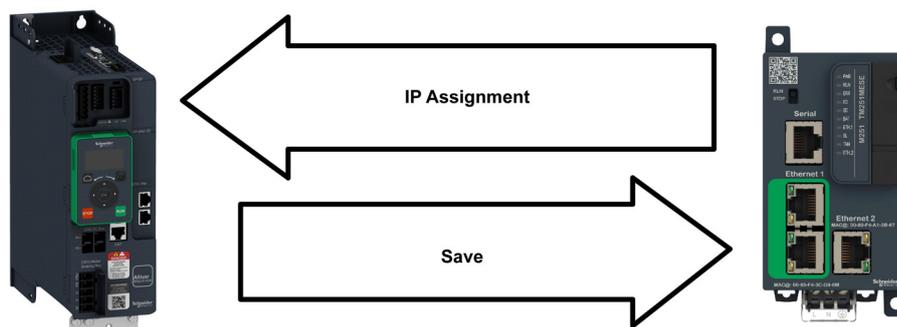

### IP Assignment Save

If the drive parameter configuration is local, the FDR server only assigns the following IP addresses:

- IP address,
- Subnet mask,
- Gateway IP address.


On connection to the network, the drive automatically saves its parameters in the FDR server.

### Drive Connection Procedure

Step	Action	Description
1	Configure the FDR server	See the PLC manual or the section on software setup using Unity
2	Configure the drive	In the <b>[Communication] C O P -</b> , <b>[Comm parameters] C P P -</b> menu, <b>[Embd Eth Config] E E E -</b> Configure = <b>[DHCP] d H C P</b> Enable the FDR service via webserver or DTM-based software or Graphic Display Terminal. Select local drive configuration with webserver or DTM-based software. Enter the device name, <b>DEVICE NAME</b> , in the <b>[Communication] C O P -</b> , <b>[Comm parameters] C P P -</b> menu, <b>[Embd Eth Config] E E E -</b> submenu.
3	Turn off the drive	Turn off the drive and then back on again (control voltage supply if a separate power supply is being used), otherwise the device name is not taken into account
4	Connect the drive to the network	Connect the drive and the FDR server (PLC) to the Ethernet network

## Downloaded Configuration

### Presentation

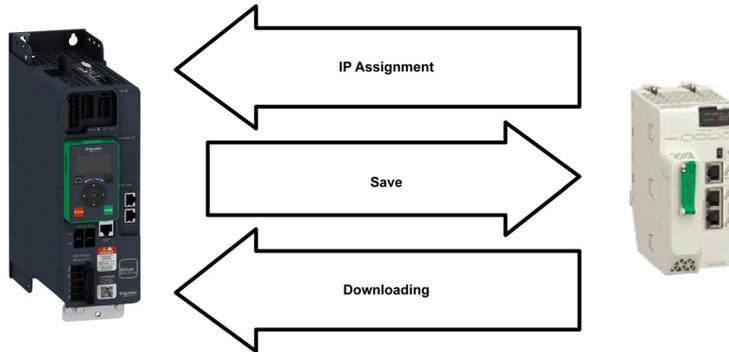

### IP Assignment Save

If the drive parameter configuration has been downloaded, the FDR server assigns the following addresses:

- IP address,
- Subnet mask,
- Gateway IP address,
- FDR server IP address.

### Periodic Saving

Periodic saving of the drive configuration can be configured on the FDR server in either local configuration or downloaded configuration mode

Using the embedded webserver or the DTM-based software:

- Set FDR synchronization to automatic mode
- Set the synchronization cycle time

**NOTE:** Saving too often overburden the fieldbus and adversely affects its performance (factory setting: 2.560 s.).

### Limitations

The FDR service is able to store the current configuration of the drive, but does not provide the possibility to store multi-parameters configurations.

## Drive Parameters (Configuration)

In the procedure described below, the configuration file is transferred to the FDR server, via the Ethernet network, using a manual save command.

Step	Action	Description
1	Configure the drive	<p>In the <b>[Communication] C o n -</b>, <b>[Comm parameters] C n P -</b> menu, <b>[Embd Eth Config] E t E -</b> submenu:</p> <ul style="list-style-type: none"> <li>Leave the IP address ... <b>[IP address] , C D 1. , C D 2. ? , C D 3?. , C D 4</b> at the value <b>[0.0.0.0] 0?0?0?0</b></li> </ul> <p>Using the embedded webserver or the DTM-based software:</p> <ul style="list-style-type: none"> <li>Set FDR synchronization to manual mode.</li> <li>Before the first connection, select local drive configuration. The drive needs first to push the configuration to the server.</li> </ul> <p>Enter the device name, <b>DEVICE NAME</b>, in the <b>[Communication] C o n -</b>, <b>[Comm parameters] C n P -</b> menu, <b>[Ethernet Eth Config] E t E -</b> submenu.</p>
2	Turn off the drive	Turn off the drive and then back on again (control voltage if a separate power supply is being used), otherwise the device name is not taken into account
3	Connect the drive to the fieldbus	Connect the drive and the FDR server (PLC) to the Ethernet fieldbus.
4	Configure the FDR server (see the PLC manual)	The server downloads the IP addresses to the Ethernet adapter . Check that the operation has proceeded correctly: you can also check, in the <b>[Communication] C o n -</b> , <b>[Comm parameters] C n P -</b> menu, <b>[Embd Eth Config] E t E -</b> submenu. Whether the ... <b>[IP address] , C D 1? , C D 2? , C D 3? , C D 4 , [Mask] , n D 1? , n D 2? , n D 3? , n D 4</b> and <b>[Gateway] , G D 1? , G D 2? , G D 3? , G D 4?</b> parameters have values other than <b>[0.0.0.0] 0?0?0?0</b>
5	Supply the FDR server with the configuration file	<p>Using the embedded webserver or the DTM-based software</p> <ul style="list-style-type: none"> <li>Specify that the drive configuration is downloaded from the FDR server on each power-up</li> <li>Send a save command to the FDR server.</li> </ul>
6	Check that the system is operational	If the save operation has not been successful, the adapter detects a communication error which, in factory settings mode, triggers a <b>[FDR1 Error] F d r 1</b>

## Replacing a Drive

For replacing a drive, it is necessary to follow the procedure below:

Step	Action	Action
1	Configure the drive	<p>In the <b>[Communication] C o n -</b>, <b>[Comm parameters] C n P -</b> menu, <b>[Embd Eth Config] E t E -</b> submenu:</p> <ul style="list-style-type: none"> <li>Leave the IP address <b>[IP address] , C D 1? , C D 2? , C D 3? , C D 4</b> at the value <b>[0.0.0.0] 0?0?0?0</b></li> </ul> <p>Using the embedded webserver or the DTM-based software:</p> <ul style="list-style-type: none"> <li>Set FDR synchronization to manual mode.</li> <li>Before the first connection, select served drive configuration. The drive needs first to transfer the configuration from the server.</li> </ul> <p>Enter the device name, <b>DEVICE NAME</b>, in the <b>[Communication] C o n -</b>, <b>[Comm parameters] C n P -</b> menu, <b>[Embd Eth Config] E t E -</b> submenu.</p>
2	Turn off the drive	Turn off the drive and then back on again (control voltage if a separate power supply is being used), otherwise the device name is not taken into account
3	Connect the drive to the fieldbus	Connect the drive and the FDR server (PLC) to the Ethernet fieldbus
4	Check that the drive is operational	<p>Check that the operation has proceeded correctly.</p> <p>If downloading has not been possible after a period of 2 min following assignment of the IP addresses, the adapter detects a communication error which, in factory settings mode, triggers an <b>[FDR1 Error] F d r 1</b></p>

## Section 4.4

### Profile

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Definition of a Profile	95
Functional Profiles Supported by the Drive	96
Functional Description	97
CIA402 Operating State Diagram	98
Description of Operating States	99
Summary	100
Cmd Register <i>C P d</i>	101
Stop Commands	102
Assigning Control Word Bits	103
[CIA402 State Reg] <i>E L R</i>	104
Starting Sequence	105
Starting Sequence for a Drive Powered by the Power Stage Supply	106
Starting Sequence for a Drive with Separate Control Stage	107
Starting Sequence for a Drive with Mains Contactor Control	109

## Definition of a Profile

### Types of Profiles

There are 3 types of profile:

- Communication profiles
- Functional profiles
- Application profiles

### Communication Profile

A communication profile describes the characteristics of a bus or network:

- Cables
- Connectors
- Electrical characteristics
- Access protocol
- Addressing system
- Periodic exchange service
- Messaging service
- ...

A communication profile is unique to a type of fieldbus (such as Modbus, PROFIBUS DP, and so on) and is used by different types of devices.

### Functional Profile

A functional profile describes the behavior of a type of device:

- Functions
- Parameters (such as name, format, unit, type, and so on.)
- Periodic I/O variables
- State chart
- ...

A functional profile is common to all members of a device family (such as variable speed drives, encoders, I/O modules, displays, and so on).

They can feature common or similar parts. The standardized (IEC 61800-7) functional profiles of variable speed drives are:

- CiA402
- PROFIDRIVE
- CIP AC Drive

CiA402 device profile for drives and motion control represents the next stage of this standard development and is now part of the IEC 61800-7 standard.

### Application Profile

Application profile defines the services to be provided by the devices on a machine. For example, CiA DSP 417-2 V 1.01 part 2: CANopen application profile for lift control systems - virtual device definitions.

### Interchangeability

The aim of communication and functional profiles is to achieve interchangeability of the devices connected via the fieldbus.

## Functional Profiles Supported by the Drive

### I/O Profile

Using the I/O profile simplifies PLC programming.

The I/O profile mirrors the use of the terminal strip for control by utilizing 1 bit to control a function.

The I/O profile for the drive can also be used when controlling via a fieldbus. The drive starts up as soon as the `run` command is sent. 15 bits of the control word (bits 1...15) can be assigned to a specific function.

This profile can be developed for simultaneous control of the drive via:

- The terminals
- The Modbus control word
- The CANopen control word
- Ethernet Modbus TCP embedded control word (for ATV340...N4E drives)
- The fieldbus module control word

The I/O profile is supported by the drive itself and therefore in turn by all the communication ports.

### CiA402 Profile

The drive only starts up following a command sequence.

The control word is standardized.

5 bits of the control word (bits 11...15) can be assigned to a function.

The CiA402 profile is supported by the drive itself and therefore by all the communication ports.

The drive supports the `velocity` mode of CiA402 profile.

In the CiA402 profile, there are two modes that are specific to the drive and characterize commands and references value management:

- Separate **[Separate] S E P**
- Not separate **[Not separ.] S , P,**

## Functional Description


### Introduction

Drive operation involves two main functions, which are illustrated in the diagrams below.


### CiA402

The main parameters are shown with their CiA402 name and their CiA402/Drivecom index (the values in brackets are the CANopen addresses of the parameter).

The following figure shows the control diagram for drive operation:

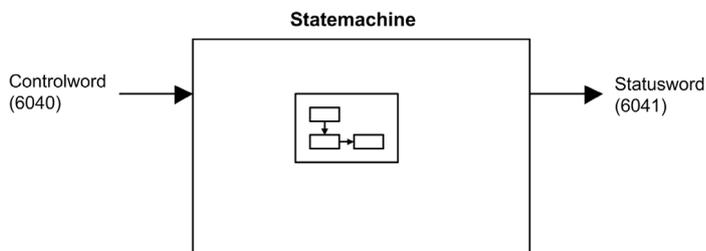


Simplified diagram for speed control in Velocity mode:

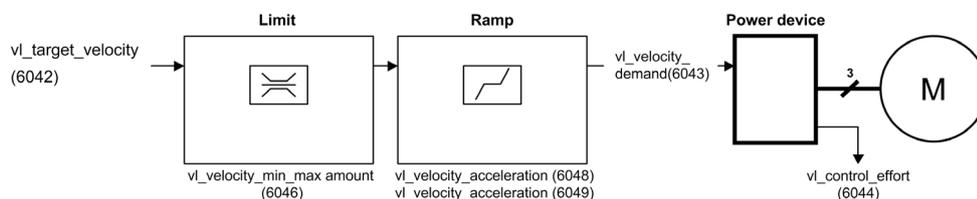


### Altivar Drive

These diagrams translate as follows for the Altivar drive.

The following figure shows the control diagram for drive operation:

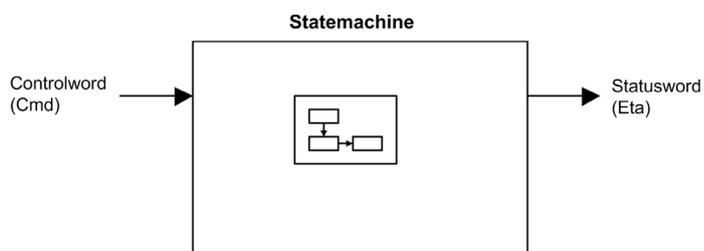

Simplified diagram for speed control in Velocity mode:

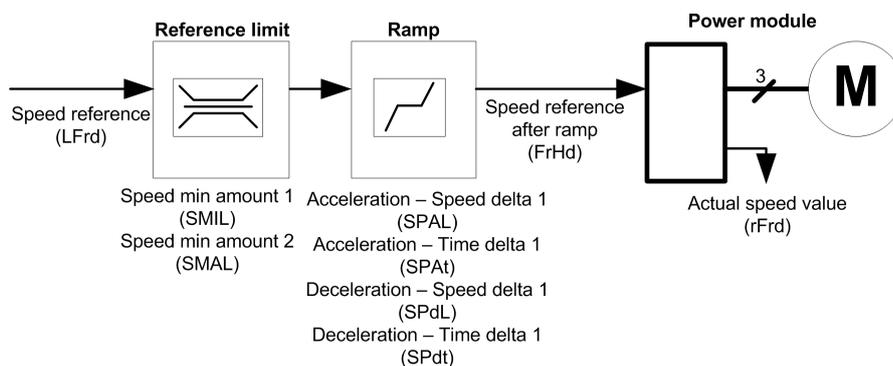


## CIA402 Operating State Diagram

### State Diagram

After switching on and when an operating mode is started, the product goes through a number of operating states.

The state diagram (state machine) shows the relationships between the operating states and the state transitions. The operating states are internally monitored and influenced by monitoring functions.

The following figure shows the CIA402 state diagram:

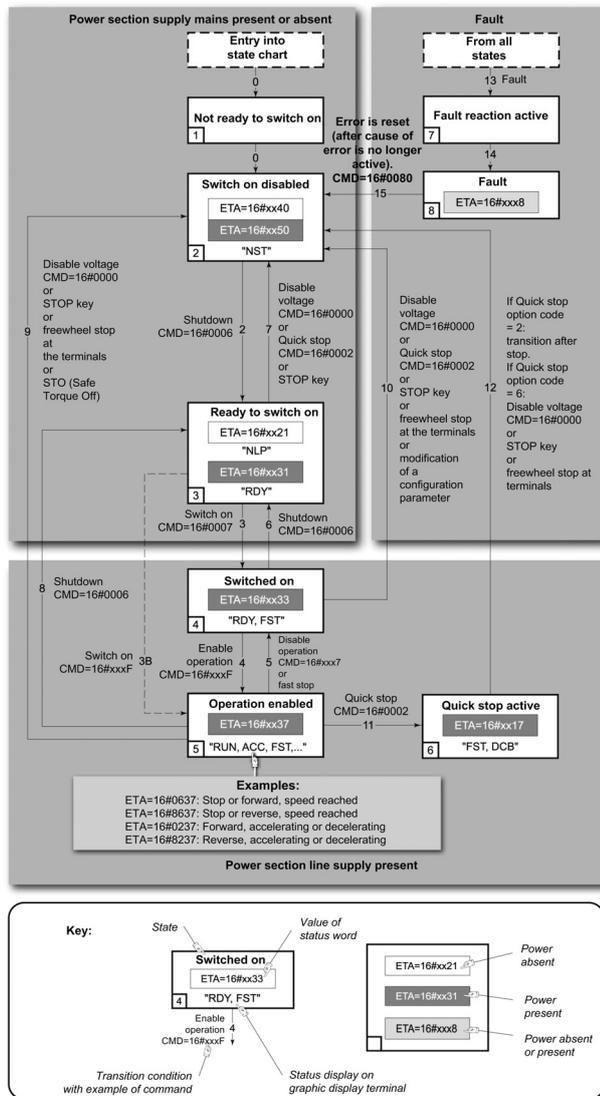

## Description of Operating States

### Drive Operating State

The operating state of the drive changes depending on whether the control word **[Cmd Register] C n d**, is sent or an event occurs (an error detection, for example).

The drive operating state can be identified by the value of the status word **[CIA402 State Reg] E L R**.

Operating State	Description
1 - Not ready to switch on	Initialization starts. This is a transient state invisible to the communication network.
2 - Switch on disabled	The power stage is not ready to switch on. The drive is locked, no power is supplied to the motor. For a separate control stage, it is not necessary to supply the power. For a separate control stage with mains contactor, the contactor is not closed. The configuration and adjustment parameters can be modified.
3 - Ready to switch on	The power stage is ready to switch on and awaiting power stage supply mains. For a separate control stage, it is not necessary to supply the power stage, but the system expects it in order to change to state 4 - Switched on. For a separate control stage with mains contactor, the contactor is not closed. The drive is locked, no power is supplied to the motor. The configuration and adjustment parameters can be modified.
4 - Switched on	Power stage is switched on. For a separate control stage, the power stage must be supplied. For a separate control stage with mains contactor, the contactor is closed. The drive is locked, no power is supplied to the motor. The power stage of the drive is ready to operate, but voltage has not yet been applied to the output. The adjustment parameters can be modified. If a configuration parameter is modified, the drive returns to the state 2 - Switch on disabled.
5 - Operation enabled	Power stage is enabled. The drive is in running state For a separate control stage, the power stage must be supplied. For a separate control stage with mains contactor, the contactor is closed. The drive is unlocked, power is supplied to the motor. The drive functions are activated and voltage is applied to the motor terminals. If the reference value is zero or the <b>Halt</b> command is applied, no power is supplied to the motor and no torque is applied. To perform <b>[Auto tuning] E u n</b> , the drive must be in state 5 - Operation enabled. The adjustment parameters can be modified. The configuration parameters cannot be modified.  <b>NOTE:</b> The command 4 - Enable operation must be taken into consideration only if the channel is valid. In particular, if the channel is involved in the command and the reference value, transition 4 is possible only after the reference value has been received once.  The reaction of the drive to a <b>Disable operation</b> command depends on the value of the <b>[SwitchOnDisable Stp] d o E d</b> parameter: <ul style="list-style-type: none"> <li>• If the <b>[SwitchOnDisable Stp] d o E d</b> parameter is set to 0, the drive changes to operating state 4 - Switched on and stops in freewheel stop.</li> <li>• If the <b>[SwitchOnDisable Stp] d o E d</b> parameter is set to 1, the drive stops on ramp and then changes to operating state 4 - Switched on.</li> </ul>
6 - Quick stop active	The drive performs a fast stop and remains locked in the operating state 6-Quick stop active. Before restarting the motor, it is required to go to the operating state 2-switch on disabled. During fast stop, the drive is unlocked and power is supplied to the motor. The configuration parameters cannot be modified. The condition for transition 12 to state 2 - Switch on disabled depends on the value of the parameter <b>[Quick stop Mode] q s E d</b> : If the <b>Quick stop</b> mode parameter has the value <b>F 5 E 2</b> , the drive stops according to the fast stop ramp and then changes to state 2 - Switch on disabled. If the <b>Quick stop</b> mode parameter has the value <b>F 5 E 6</b> , the drive stops according to the fast stop ramp and then remains in state 6 - Quick stop active until: <ul style="list-style-type: none"> <li>• A <b>Disable</b> voltage command is received or</li> <li>• The <b>STOP</b> key is pressed or</li> <li>• A freewheel stop command via the digital input of the terminal.</li> </ul>
7 - Fault reaction active	Transient state during which the drive performs an action corresponding to the selected error response.
8 - Fault	Error response terminated. Power stage is disabled. The drive is locked, no power is supplied to the motor.

## Summary

### Device Status Summary

Operating State	Power Stage Supply for Separate Control Stage	Power Supplied to Motor	Modification of Configuration Parameters
1 - Not ready to switch on	Not required	No	Yes
2 - Switch on disabled	Not required	No	Yes
3 - Ready to switch on	Not required	No	Yes
4 - Switched on	Required	No	Yes, return to 2 - Switch on disabled operating state
5 - Operation enabled	Required	Yes	No
6 - Quick stop active	Required	Yes, during fast stop	No
7 - Fault reaction active	Depends on error response configuration	Depends on error response configuration	-
8 - Fault	Not required	No	Yes

**NOTE:**

- Configuration parameters are described in communication parameter file as R/WS access type parameters. Other parameters can be accessed whatever the operating state.
- A Setting parameter can be accessed in all operating state of the drive.

## Cmd Register [ Π ]

### Bit Mapping of the Control Word

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Fault reset	Reserved (=0)	Reserved (=0)	Reserved (=0)	Enable operation	Quick stop	Enable voltage	Switch on
0 to 1 transition = Error is reset (after cause of error is no longer active)				1 = Run command	0 = Quick stop active	Authorization to supply AC power	Mains contactor control

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Manufacturer specific assignable	Manufacturer specific assignable	Manufacturer specific assignable	Manufacturer specific assignable	Manufacturer specific	Reserved (=0)	Reserved (=0)	Halt
				0 = Forward direction asked 1 = Reverse direction asked			0 = run asked 1 = stop asked

Command	State Transition	Final Operating State	Bit 7	Bit 3	Bit 2	Bit 1	Bit 0	Example Value
			Fault Reset	Enable Operation	Quick Stop	Enable Voltage	Switch On	
Shutdown	2, 6, 8	3 - Ready to switch on	X	X	1	1	0	0006 hex
Switch on	3	4 - Switched on	X	X	1	1	1	0007 hex
Enable operation	4	5 - Operation enabled	X	1	1	1	1	000F hex
Disable operation	5	4 - Switched on	X	0	1	1	1	0007 hex
Disable voltage	7, 9, 10, 12	2 - Switch on disabled	X	X	X	0	X	0000 hex
Quick stop	11	6 - Quick stop active	X	X	0	1	X	0002 hex
	7, 10	2 - Switch on disabled						
Fault reset	15	2 - Switch on disabled	0 → 1	X	X	X	X	0080 hex
X: Value is of no significance for this command. 0→1: Command on rising edge.								

## Stop Commands

### Halt Command

The `Halt` command enables movement to be interrupted without having to leave the `5 - Operation enabled` state. The stop is performed in accordance with the `[Type of stop] 5 L L` parameter.

If the `Halt` command is active, no power is supplied to the motor and no torque is applied.

Regardless of the assignment of the `[Type of stop] 5 L L` parameter `[Fast stop] F 5 L`, `[On Ramp] r P P`, `[Freewheel Stop] n 5 L`, or `[DC Injection] d C i`, the drive remains in the `5 - Operation enabled` state.

### Fast Stop Command

A `Fast Stop` command at the terminals or using a bit of the control word assigned to `Fast Stop` causes a modification to the operating state `4 - Switched on`.

### Freewheel Command

A `Freewheel Stop` command using a digital input of the terminal or a bit of the control word assigned to `Freewheel Stop` causes a change to operating state `2 - Switch on disabled`.

## Assigning Control Word Bits

### Function Codes

In the CiA402 profile, fixed assignment of a function input is possible using the following codes:

Bit	Ethernet Embedded
Bit 11	C511
Bit 12	C512
Bit 13	C513
Bit 14	C514
Bit 15	C515

For example, to assign the DC injection braking to bit13 of the fieldbus adapter, simply configure the **[DC Injection Assign]** parameter with the **[C513]** value.

Bit 11 is assigned by default to the operating direction command **[Reverse Assign]**.

[CIA402 State Reg] E L F

Bit Mapping of the Status Word

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Warning	Switch on disabled	Quick stop	Voltage enabled	Fault	Operation enabled	Switched on	Ready to switch on
A warning is active	Power stage supply disabled	0 = Quick stop is active	Power stage supply present	Error detected	Running	Ready	1 = Awaiting power Stage supply

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
Manufacturer-specific Direction of rotation	Manufacturer-specific Stop via STOP key	Reserved (=0)	Reserved (=0)	Internal limit active	Target reached	Remote	Reserved (=0)
				Reference value outside limits	Reference value reached	Command or reference value via fieldbus	

Operating State	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	ETA Masked by 006F H <sup>(1)</sup>
	Switch On Disabled	Quick Stop	Voltage Enabled	Fault	Operation Enabled	Switched On	Ready to Switch On	
1 -Not ready to switch on	0	X	X	0	0	0	0	-
2 -Switch on disabled	1	X	X	0	0	0	0	0040 hex
3 -Ready to switch on	0	1	X	0	0	0	1	0021 hex
4 - Switched on	0	1	1	0	0	1	1	0023 hex
5 - Operation enabled	0	1	1	0	1	1	1	0027 hex
6 -Quick stop active	0	0	1	0	1	1	1	0007 hex
7 -Fault reaction active	0	X	X	1	1	1	1	002F hex
8 -Fault	0	X	X	1	0	0	0	0008 hex <sup>(2)</sup> .. .0028 hex




<sup>(1)</sup> This mask can be used by the PLC program to test the diagram state.  
<sup>(2)</sup> detected error following operating state 6 - Quick stop active.  
X: In this state, the value of the bit can be 0 or 1.

## Starting Sequence

### Description

The command sequence in the state diagram depends on how power is being supplied to the drive.

There are 3 possible scenarios:

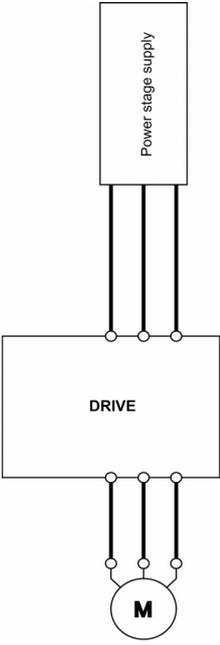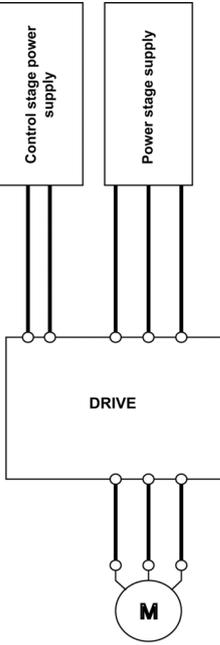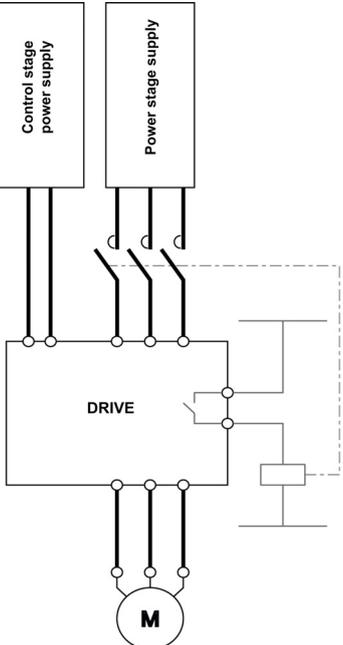			
<b>Power stage supply</b>	Direct	Direct	Mains contactor controlled by the drive
<b>Control stage supply</b>	Not separate <sup>(1)</sup>	Separate	Separate
<sup>(1)</sup> The power stage supplies the control stage.			


## Starting Sequence for a Drive Powered by the Power Stage Supply

### Description

Both the power and control stages are powered by the power stage supply.  
 If power is supplied to the control stage, it has to be supplied to the power stage as well.  
 The following sequence must be applied:


### Step 1

Apply the 2 - Shut down command

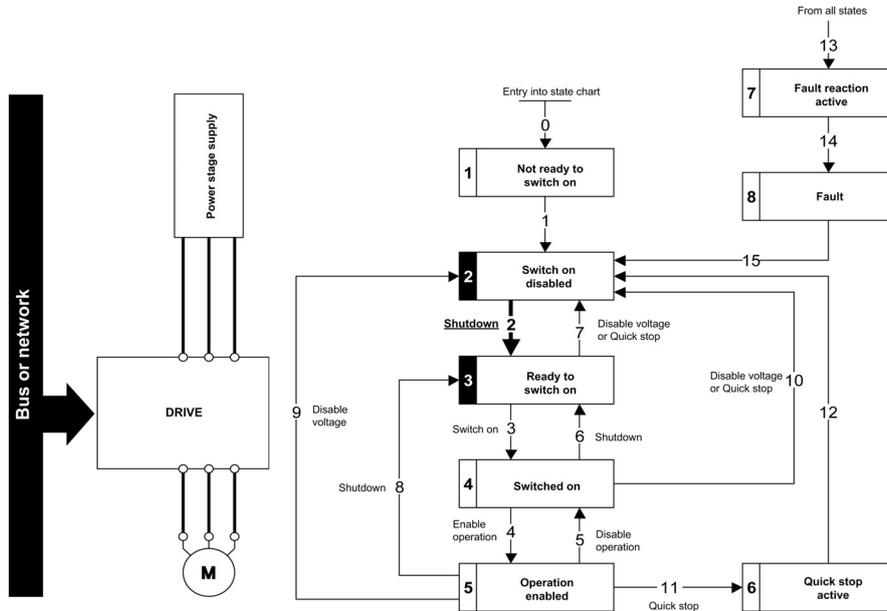

### Step 2

- Check that the drive is in the operating state 3 - Ready to switch on.
- Then apply the 4 - Enable operation command.
- The motor can be controlled (send a reference value not equal to zero).

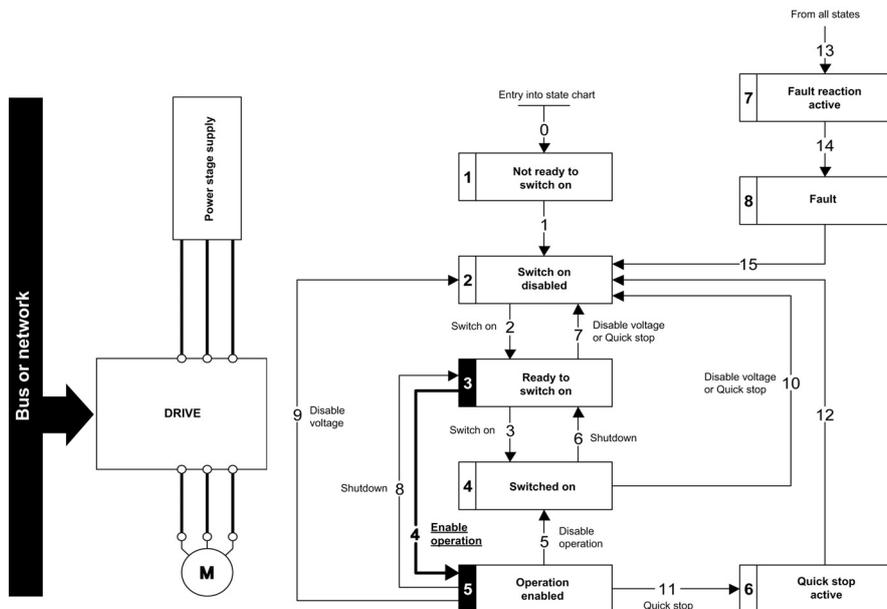

**NOTE:** It is possible, but not necessary to apply the 3 - Switch on command followed by the 4 - Enable Operation command to switch successively into the operating states 3 - Ready to Switch on, 4 - Switched on and then 5 - Operation Enabled. The 4 - Enable operation command is sufficient.

## Starting Sequence for a Drive with Separate Control Stage

### Description


Power is supplied separately to the power and control stages.

If power is supplied to the control stage, it does not have to be supplied to the power stage as well.

The following sequence must be applied:

### Step 1

- The power stage supply is not necessarily present.
- Apply the 2 - Shut down command

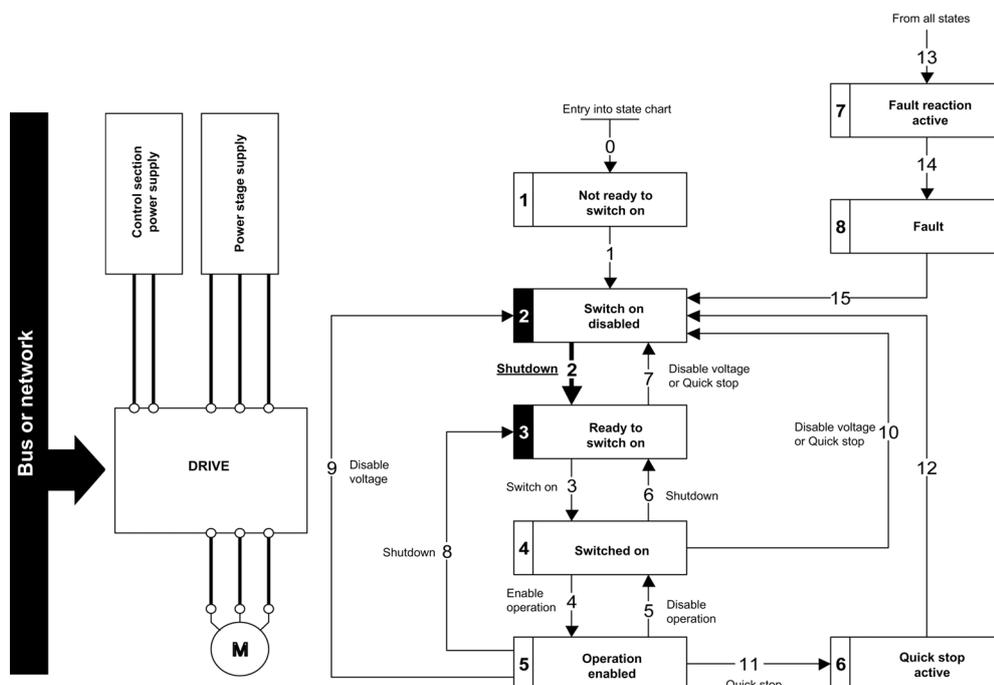


### Step 2

- Check that the drive is in the operating state 3 - Ready to switch on.
- Check that the power stage supply is present (Voltage enabled of the status word).


Power Stage Supply	Terminal Display	Status Word
Not present	<i>n L P</i>	21 hex
Present	<i>r d Y</i>	31 hex

- Apply the 3 - Switch on command

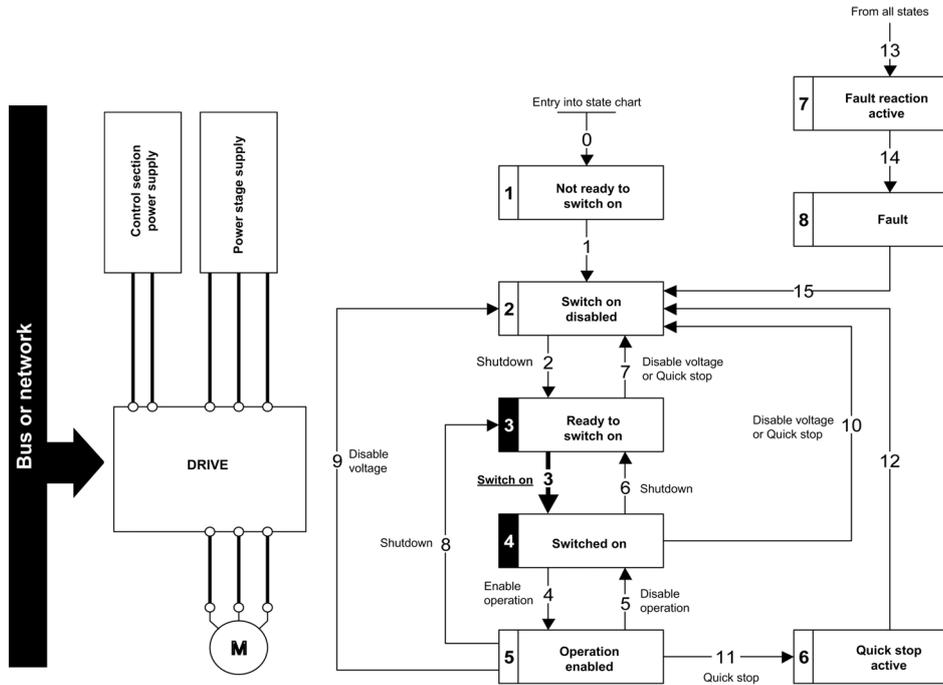

Step 3

- Check that the drive is in the operating state 4 - Switched on.
- Then apply the 4 - Enable operation command.
- The motor can be controlled (send a reference value not equal to zero).
- If the power stage supply is still not present in the operating state 4 - Switched on after a time delay [Mains V. time out] L C E , the drive triggers an error [Input Contactor] L C F .

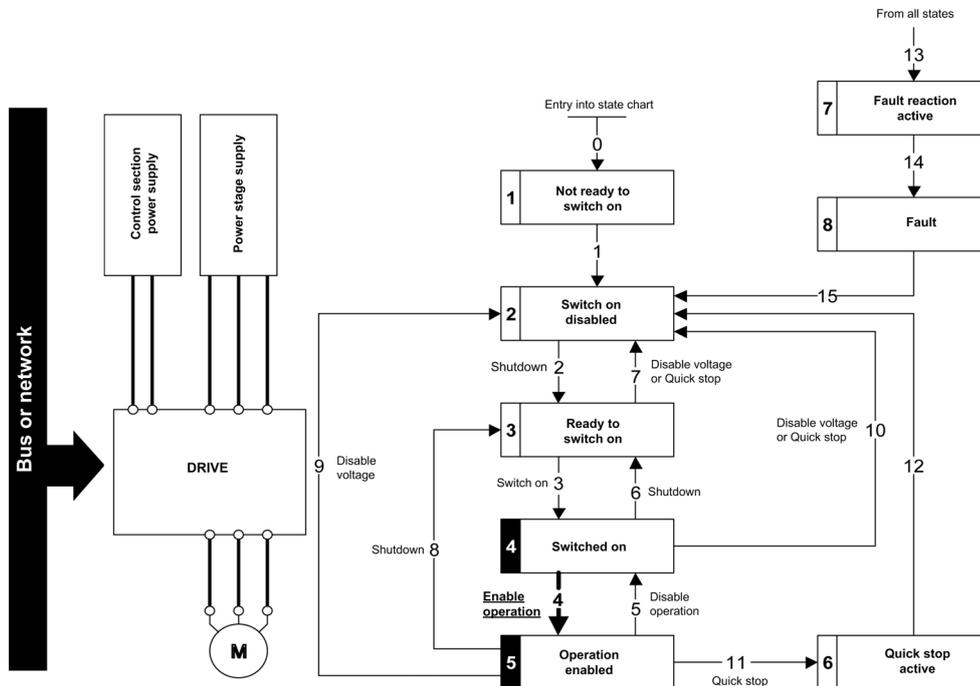

## Starting Sequence for a Drive with Mains Contactor Control

### Description


Power is supplied separately to the power and control stages.

If power is supplied to the control stage, it does not have to be supplied to the power stage as well. The drive controls the mains contactor.

The following sequence must be applied:


### Step 1

- The power stage supply is not present as the mains contactor is not being controlled.
- Apply the 2 - Shutdown command.

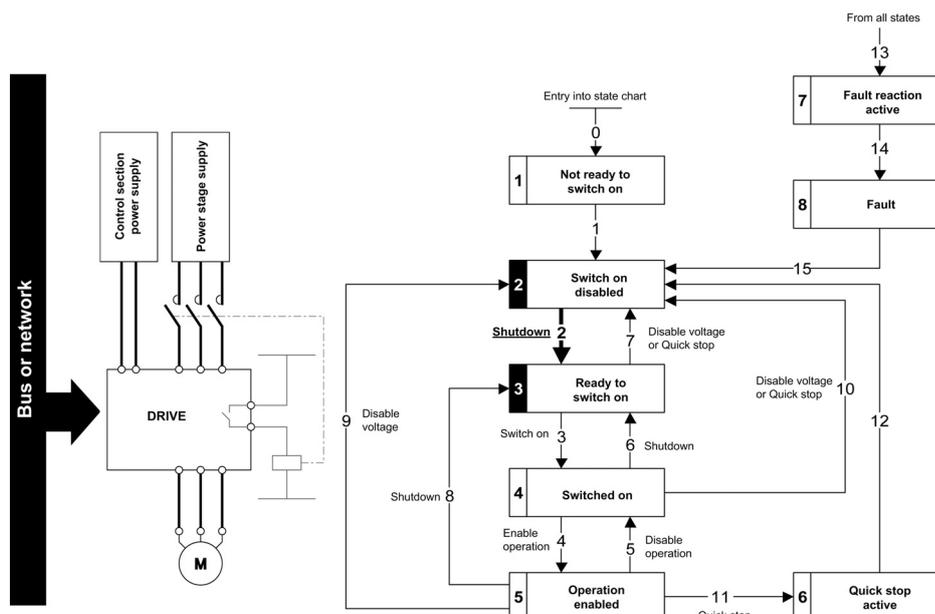

### Step 2

- Check that the drive is in the operating state 3 - Ready to switch on.
- Apply the 3 - Switch on command, which closes the mains contactor and switch on the power stage supply.

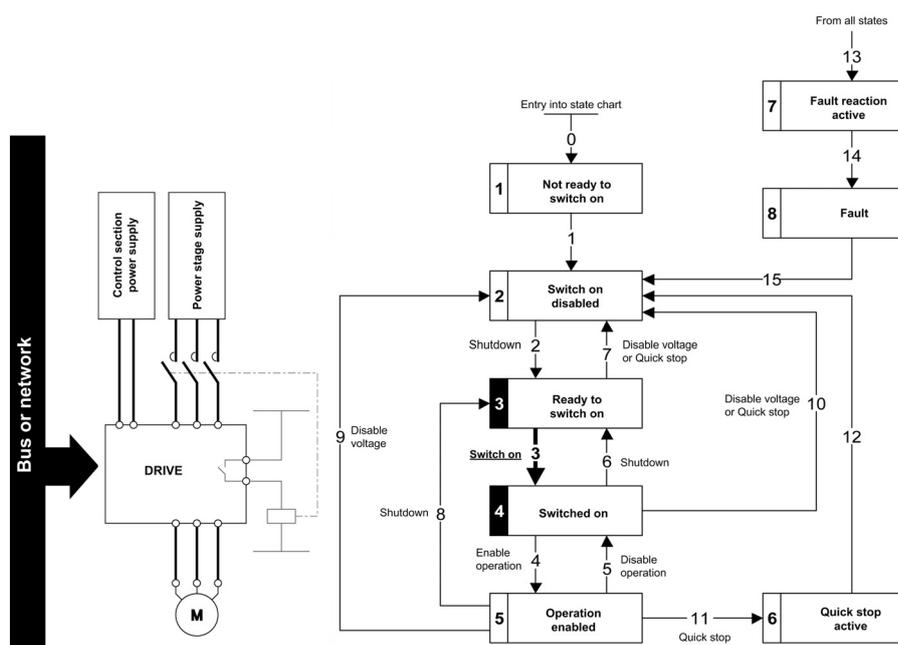

## Section 4.5

### Embedded Webserver

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Overview	111
Connection to the Webserver	112
My Dashboard	113
Display - Drive	114
Setup - My Preference	115

## Overview

### Webserver

The Ethernet adapter provides an integrated Web server (in six languages) which allows several functions like: display, parameter settings, and diagnostics. This chapter describes the services provided by this webservice.

The webservice can be accessed from standard browsers like Internet Explorer, Chrome, Safari, or Firefox.

## Connection to the Webserver

### Access

The webserver can be accessed from standard browsers.

In the following example, the drive has received the IP address 10.0.0.5:



First connect the computer to the drive by typing `http://` followed by the drive IP address.

You are asked to first enter a **User Name** and a **Password**.

By default the user name is ADMIN. If you are connecting to the webserver for the first time, the password is available from the Graphic Display Terminal of the drive in the **[Main Menu] / [My preference] / [Webserver] Web S - / [Webserver default password] Web P** menu. Once logged in you are asked to change the default connection ID (User Name and Password), according to the default security access rule. Access rules can be modified in the Setup/Access Management web page.

Once connected, the webserver home page is displayed.

Using IPV6 network discovery service, there is no need to set IP parameters. The drive appears automatically in the network explorer of the PC while physically connected.

The drive is identified as `ATV340*****-MMMM` where MMMM is the two last bytes of the MAC address.

Right-click and select **Display device web page** to open the webserver.

### Web Server Site Map

The descriptions of the Web server pages are shown in the following table

Page	Menu	Description
<b>My Dashboard</b>		This page can be customized, adding or removing Widgets that are designed for a quick overview of the drive data.
<b>Display</b>	Drive	Drive parameters are displayed in data tables. Customized tables can be created.
	Energy Dashboard	Trends show information about the energy consumption of the drive.
	Chart Viewer	Drive parameters are displayed in charts. Customized charts can be created.
<b>Diagnostics</b>	Drive	Drive diagnostics are displayed.
	Fieldbus	Communication diagnostics are displayed.
<b>Drive</b>	Drive Parameter	Drives settings can be modified.
	Drive Communication	Communication settings can be modified.
<b>Setup</b>	Fieldbus	Drive Ethernet settings can be modified.
	File Transfer	Drive configuration and reports can be downloaded or loaded between a computer and the drive.
	My Preferences	Webserver access and appearance can be handled.


## My Dashboard

### Overview

The following table provides the procedure to add the widget to this page:

Step	Action
1	Click the <b>add a widget</b> button.
2	Drag a widget to the desired location.

The following figure shows the widgets that can be added. Various widgets of a same category are available.

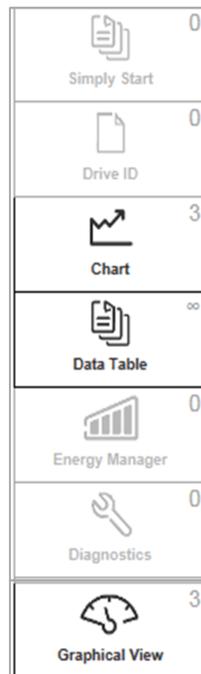

## Display - Drive

### Data Table

The following table provides the procedure to create data tables of drive parameters.

Step	Action
1	Type the name of the table. Spaces are not allowed in this field.
2	Select a parameter by clicking the top of the parameter or typing the code and clicking the  button. To delete a parameter while creating the table click the parameter.
3	Click the <b>Add Table</b> button. To remove a table click the  button, only visible when the table is selected.

### Chart Viewer

The following table provides the procedure to create a chart viewer.

Step	Action
1	Type the name of the chart. Spaces are not allowed in this field.
2	Select the plot frequency.
3	Select the plot frequency unit.
4	Select the number of plot points.
5	Select a parameter by clicking the top of the parameter or typing the code and clicking the  button. To delete a parameter while creating the chart click the parameter. Maximum of five parameters can be selected.
6	Click the <b>Create Chart</b> button, To remove a chart click the  button, only visible when chart is selected.

## Setup - My Preference

### User Access

In this menu, the access to the Web server can be managed by users with administrator rights. These users can add, remove, block, unblock, and modify the access rights of other users.

The following table shows the description of the buttons located in this menu:

Button	Description
	Add a new user, typing the name of the user; the password and the access rights.
	Block and unblock the access of a user to the webserver
	Change the password. The administrator can change the password of other users.

### Themes

In this menu, the aspect of the Web server can be changed. Predefined themes are available, which can be customized.

The following table provides the procedure for creating new themes

Step	Action
1	Click the  button.
2	Type the name of the theme. Spaces are not allowed in this field.
3	Type the description of the theme.
4	Upload a logo by clicking the  button.
5	Type name of the website.
6	Click the <b>Save</b> button.

### Access Management

Select if login credentials are required or not to access to the web server. The password policy can be changed.

The following table describes the different actions that can be set to enforce the password policy.

Action	Description
<b>Enforce Password Policy</b>	Enable or disable the password enforcement
<b>Password History</b>	Limits the number of failed attempts to access before locking the user account, it can be set to disable or three and even five attempts.
<b>Special Character Required</b>	If enabled, a special character is mandatory when creating a password for a user account.
<b>Numeric Character</b>	If enabled, a numeric character is mandatory when creating a password for a user account.
<b>Alphabetic Character</b>	If enabled, an alphabetical character is mandatory when creating a password for a user account.
<b>Minimum Password Length</b>	If enabled, a preset number of characters is mandatory when creating a password for a user account.

## Section 4.6

### Software Setup with SoMachine (M251)

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Introduction	117
Drive Configuration	118
Ethernet Master Configuration	119


## Introduction

### Overview

In the following example

- Drive is connected to the M251MESE
- Communication protocol used is EtherNet/IP
- You can control the drive directly via SoMachine

**NOTE:** The version of SoMachine used is V 4.2

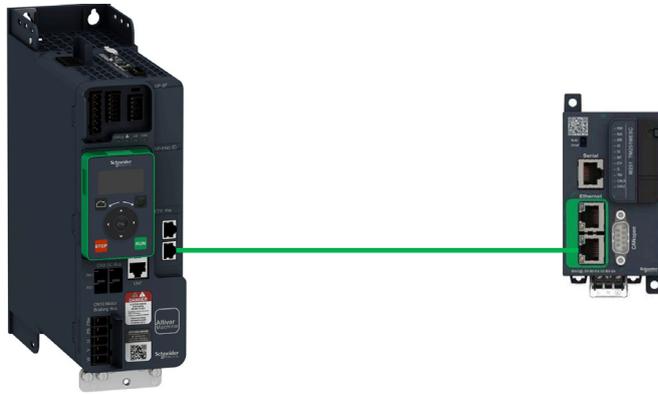


## Drive Configuration

### Overview

In the following example, the drive configuration must be done as follows in-order to establish communication between the drive and the PLC.

You can configure the drive using the

- Graphical Display Terminal
- DTM via the SoMachine container

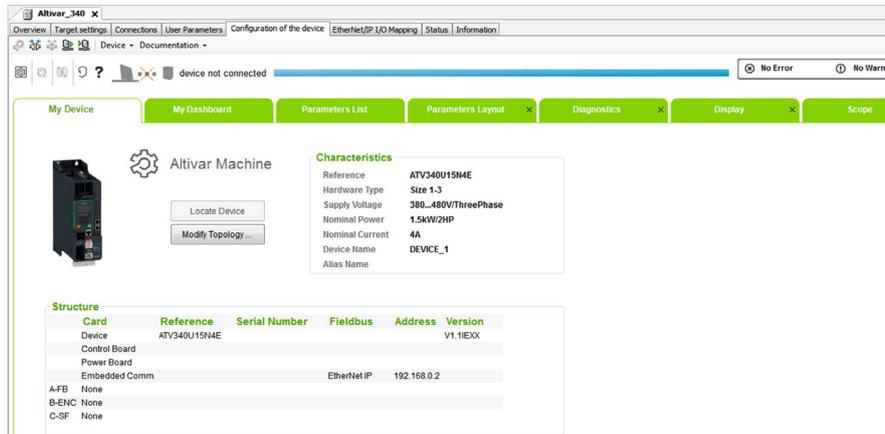

### Factory Settings

Before configuring the drive, make sure that you reset the drive to factory setting

Go to

- **[File Management] F N E** - menu
- **[Factory settings] F C S** - submenu

Then configure the following parameters

- **[Parameters group list] F r Y** - to **[All] R L L**
- **[Go to Factory Settings] G F S** to OK

### Command Configuration

To control the drive with an Ethernet master, select Ethernet as active command channel

Go to

- **[Complete Settings] C S E** - menu
- **[Command and Reference] C r P** - menu

Then configure

- **[Ref Freq 1 Config] F r 1** parameter to **[Embedded Ethernet] E E H** value

### Communication Configuration

To set the Ethernet address of the drive, go to:

- **[Communication] C o M** - menu
- **[Comm parameters] C P P** - submenu
- **[Embd Eth Config] E E E** - submenu

Then configure

- **[IP Mode Ether. Embd] , P O O** to value **[Fixed] P R N U**
- **[IP address] , C O** to value 192.168.0.2
- **[Mask] , P O** to value 255.255.255.0

You must restart the device to take into account the modified Ethernet related parameters.


## Ethernet Master Configuration

### Overview

In the following example, Ethernet master is configured via SoMachine.

### Master Configuration

To access the master configuration window, double click **Ethernet\_2 (Device Network)**

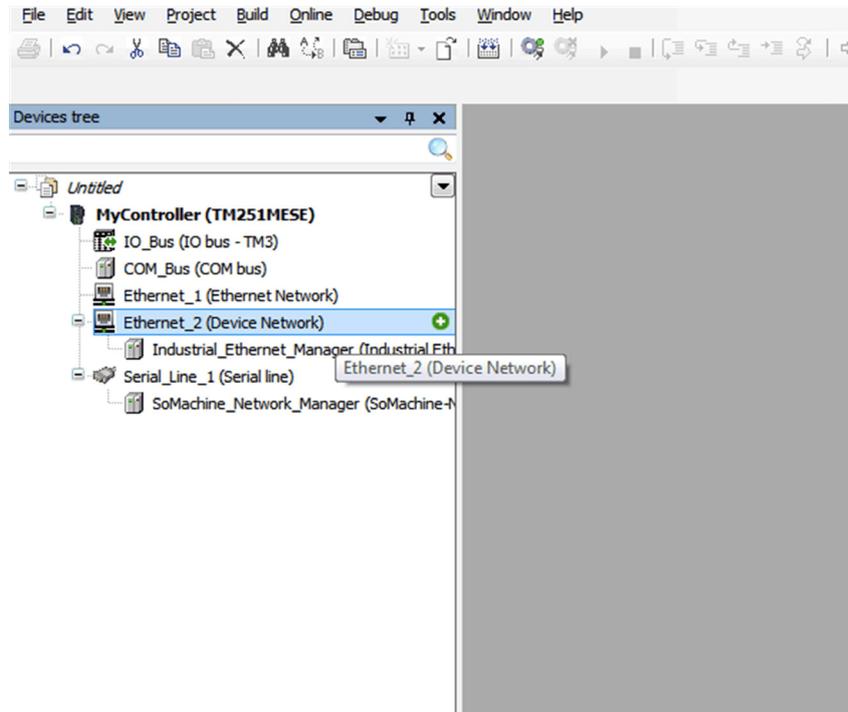

In the **Configuration** window, do the following to configure the master:

- Select **Fixed IP Address**
- In the **IP Address** box, enter 192.168.0.1 as the IP address of the master
- In the **Subnet Mask** box, enter 255.255.255.0 as the subnet mask of the master

**NOTE:** Other parameters are linked to Cyber Security parameters. For more information, refer to the M251MESE documentation.

**Ethernet\_2** x

Configuration

Configured Parameters

Interface Name

Network Name

IP Address by DHCP

IP Address by BOOTP

fixed IP Address

IP Address

Subnet Mask

Gateway Address

Ethernet Protocol

Transfer Rate

Security Parameters

SoMachine protocol active

Modbus Server active

Web Server active

FTP Server active

Discovery protocol active

SNMP protocol active

WebVisualisation protocol active


Slave device identification

[DHCP Server active](#)


When active, each device that will be added to the fieldbus, can be configured in order to be identified by its name or MAC Address, instead of its IP Address.

## Add ATV340 Device

Right-click **Industrial\_Ethernet\_Manager** and then click **Add Device**

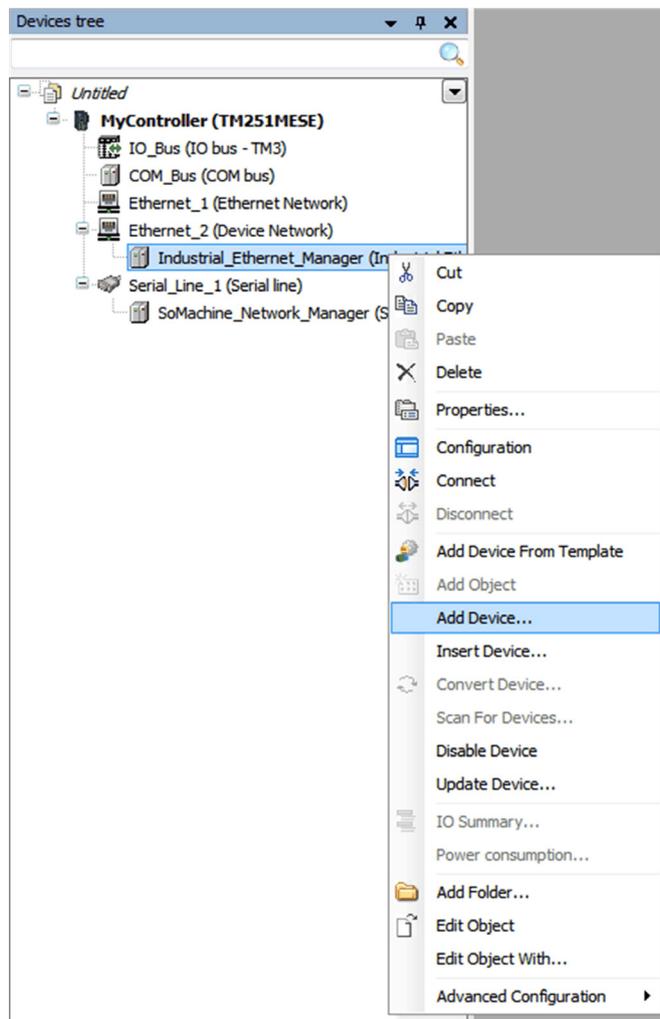


In the **Add Device** dialog box, under **Name**, select **Altivar 340**, and then click the **Add Device** button.

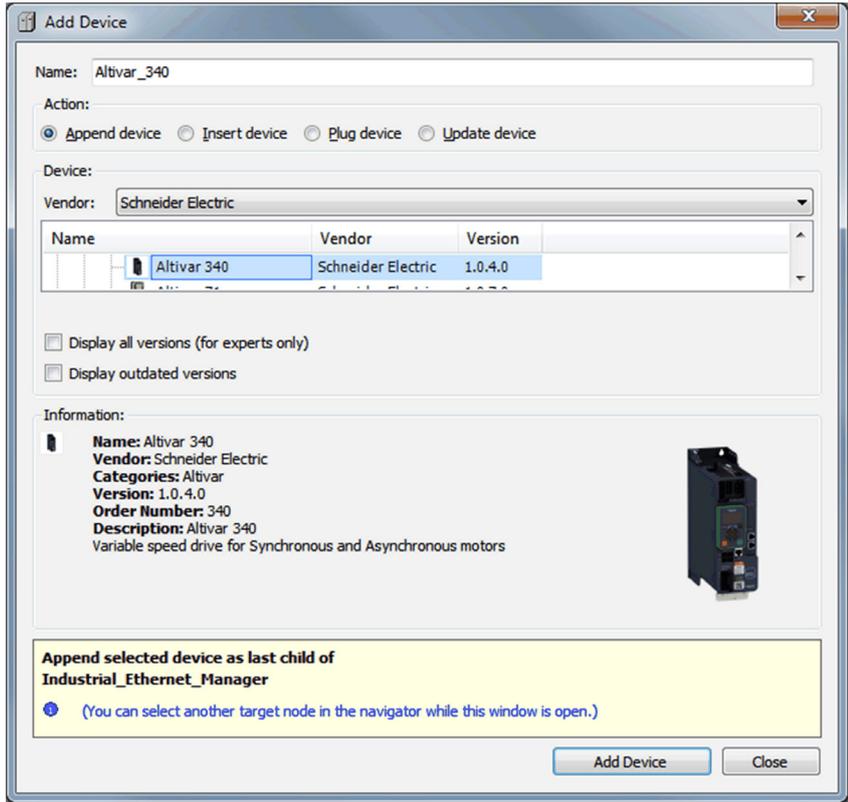

**ATV340 Configuration**

Double-click ATV340

In the **Target settings** tab, configure the IP address of the device as shown in the figure.

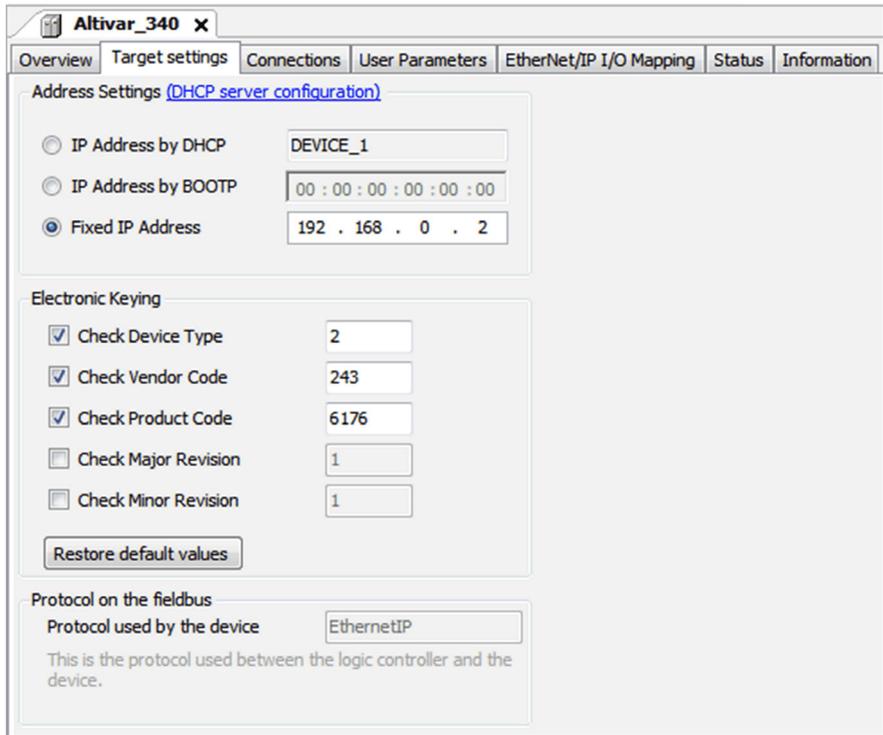

In the **Ethernet/IP I/O Mapping** Tab, inputs/output are automatically created depending on the selected assemblies (for example: assemblies 100/101)

You can give variable names and descriptions to these variables to use them in your PLC program.

The figure shows the input mapping for the selected assemblies

Altivar_340 x							
Overview   Target settings   Connections   User Parameters   Configuration of the device   EtherNet/IP I/O Mapping   Status   Information							
Channels							
Variable	Mapping	Channel	Address	Type	Default Value	Unit	Description
Inputs							
Input Nati...		Input Nati...	%IW5	ARRAY [0..31] OF WORD			Input Native Drive Profile
ETA		Input Nati...	%IW5	WORD			ETA: DRIVECOM Status word
RFRD		Input Nati...	%IW6	WORD			RFRD: Actual Speed Value
		Input Nati...	%IW7	WORD			Input Native Drive Profile
		Input Nati...	%IW8	WORD			Input Native Drive Profile
		Input Nati...	%IW9	WORD			Input Native Drive Profile
		Input Nati...	%IW10	WORD			Input Native Drive Profile
		Input Nati...	%IW11	WORD			Input Native Drive Profile
		Input Nati...	%IW12	WORD			Input Native Drive Profile

The figure shows the output mapping for the selected assemblies

Altivar_340 x							
Overview   Target settings   Connections   User Parameters   Configuration of the device   EtherNet/IP I/O Mapping   Status   Information							
Channels							
Variable	Mapping	Channel	Address	Type	Default Value	Unit	Description
Inputs							
Outputs							
Output Na...		Output Na...	%QW0	ARRAY [0..31] OF WORD			Output Native Drive Profile
CMD		Output Na...	%QW0	WORD			CMD: DRIVECOM command register
LFRD		Output Na...	%QW1	WORD			LFRD: DRIVECOM target speed value
		Output Na...	%QW2	WORD			Output Native Drive Profile
		Output Na...	%QW3	WORD			Output Native Drive Profile
		Output Na...	%QW4	WORD			Output Native Drive Profile
		Output Na...	%QW5	WORD			Output Native Drive Profile
		Output Na...	%QW6	WORD			Output Native Drive Profile

## Section 4.7

### Software Setup with Allen-Bradley PLC

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Introduction	125
Drive Configuration	126
PLC Configuration	129

## Introduction

### Overview

In the following example:

- Drive is connected to an Allen-Bradley Control Logix PLC.
- Communication protocol used is EtherNet/IP with assemblies 100/101.
- Drive can be controlled through the PLC.

PC with:

- SoMove + DTM
- RSLogix5000

IP: 192.168.0.20



IP: 192.168.0.5



IP: 192.168.0.1



Ethernet/IP

## Drive Configuration

### Overview

In the following example, the drive configuration must be done as follows in-order to establish communication between the drive and the PLC.


The drive configuration is done using the drive DTM with SoMove software.

### Factory Settings

Before configuring the drive, make sure that you reset the drive to factory settings.

- On the menu bar, select **Device** → **Factory Settings** → **Execute**.

**Result:** Following window is displayed:

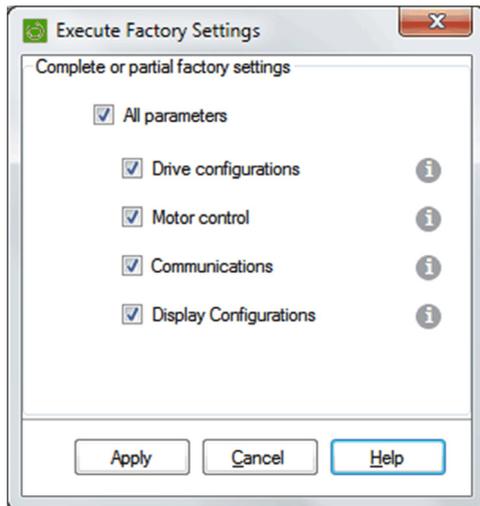

- Select **All parameters**, then click on **Apply**

**Result:** The factory setting is applied to the drive configuration

### Command and Reference Configuration

To control the drive with an Ethernet master, select Ethernet as active command and reference channel.

Go to:

- Parameters List** tab
- Click on **Command & Reference** part

**Result:** Following window is displayed:

Code	Long Label	Current Value	Default Value
FR1	Configuration reference frequency 1	AI1 Analog input	AI1 Analog input
FR1B	Configuration ref. 1B	Not configured	Not configured
RCB	Select switching (1 to 1B)	Reference frequency channel 1	Reference frequency channel 1
RIN	Reverse direction disable	No	No
CHCF	Control mode configuration	Combined channel mode	Combined channel mode
CCS	Command switching	Command channel 1	Command channel 1
CD1	Command channel 1 assign	Terminal block	Terminal block
CD2	Command channel 2 assign	Modbus communication	Modbus communication
RFC	Freq Switching Assignment	Reference frequency channel 1	Reference frequency channel 1
FR2	Configuration reference frequency 2	Not configured	Not configured
COP	Copy Ch. 1-Ch. 2	No copy	No copy
FLOC	Forced Local frequency assignment	Not configured	Not configured
FLOT	Time-out forc. local	10 s	10 s
FLO	Forced local assignment	Not assigned	Not assigned
RRS	Reverse assignment	Digital Input 2	Digital Input 2
TOC	2/3-wire control	2-wire control	2-wire control
TCT	Type of 2-wire control	Transition	Transition
PST	Stop key enable	Yes	Yes
BMP	HMI command	Disabled	Disabled

- Configure **[Ref Freq 1 Config] FR1** parameter to **[Embedded Ethernet] ETH** value.

## Ethernet Configuration

To set the Ethernet address of the drive, go to:

- **Communication, Port - Modbus TCP/EthernetIP, Generic Settings.**

**Result:** Following window is displayed:

**Generic Ethernet Settings**

*i* In Schneider Electric M580/BME NOC-based architectures, the Ethernet Option adapter must be connected to the PLC.

*i* The updated IP settings will become active following a device restart.

— IP Address —

Device name:	<input type="text"/>	
IP assignment mode:	<b>DHCP</b>	Select the IP address assignment method
IP Address:	0 . 0 . 0 . 0	
Subnet Mask:	0 . 0 . 0 . 0	
Gateway address:	0 . 0 . 0 . 0	
Rate setting:	Auto detected	Rate and data setting
Rate setting:	Auto detected	Rate and data setting
Storm protection:	1 (Highest)	
Swap word order	Modbus Word Order ON	

Perform the configuration according to the network settings. In this example, the drive is configured with following data:

- Fixed IP
- IP address: 192.168.0.5
- Mask: 255.255.255.0

**Result:** After setting the previous data, following configuration is entered:

— IP Address —

Device name:	<input type="text"/>	
IP assignment mode:	<b>Fixed address</b>	Select the IP address assignment method
IP Address:	192 . 168 . 0 . 5	
Subnet Mask:	255 . 255 . 255 . 0	
Gateway address:	0 . 0 . 0 . 0	
Rate setting:	Auto detected	Rate and data setting
Rate setting:	Auto detected	Rate and data setting
Storm protection:	1 (Highest)	
Swap word order	Modbus Word Order ON	

## Assemblies Configuration

To configure the assemblies used for Ethernet/IP fieldbus, go to:

- **Communication, Port - Modbus TCP/EthernetIP, Protocol & Drive Profiles.**

Perform the configuration according to the assemblies used in the application. In this example, assemblies used are 100 and 101.

**Result:** Following window is displayed:

**Protocols & Drive Profiles**

Protocol

EtherNet Protocol :  Modbus TCP  
 EtherNet / IP

---

**EtherNet / IP**

IO Connection Profile: 100/101 Generic Altivar

Fallback Mode: Freewheel stop

Modification of the IO Profile will be taken into account only if the IO scanner is stopped (use the IO scanner control bits in the M580 or BME NOC Device DDT, or use a PLC STOP if the IO scanner is the CPU).

---

**Drive I/O Profile**

Inputs (Drive to Controller)				Outputs (Controller to Drive)			
Channel	Code	Description	Logical address	Channel	Code	Description	Logical address
1	ETA	CI402 State Register	3201	1	CMD	Command register	8501
2	RFRD	DRIVECOM : Actual speed value	8504	2	LFRD	DRIVECOM : Nominal speed value	8602
3				3			
4				4			
5				5			
6				6			

Click on **Apply** button to validate the configuration then restart the drive.

## PLC Configuration

### Overview

In the following example, the PLC is configured to use both types of exchanges available through Ethernet/IP fieldbus:

- Explicit data exchange
- Implicit data exchange


### Adding Ethernet Module

On RSLogix, insert the Ethernet module matching with the hardware configuration.

In this example, the module used is: 1756-ENBT.


Make a right click on the Backplane and click on **New Module**.

**Result:** Following window is displayed:

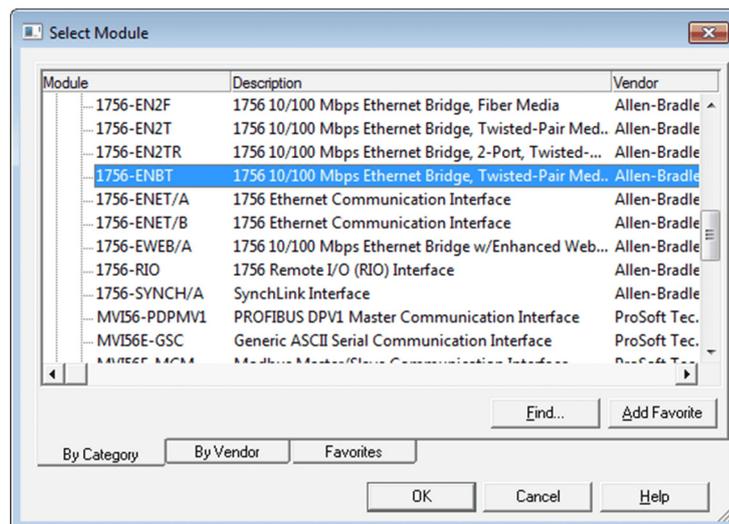

Select the corresponding Ethernet module and click on **Create**.

**Result:** Following window is displayed:

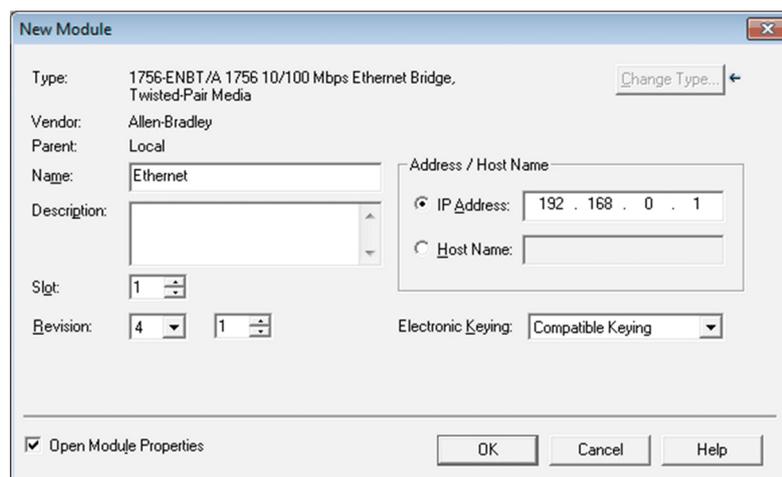


Enter IP address of the module.

### Adding Drive

Make a right click on Ethernet and click on **New Module**.


**Result:** Following window is displayed:

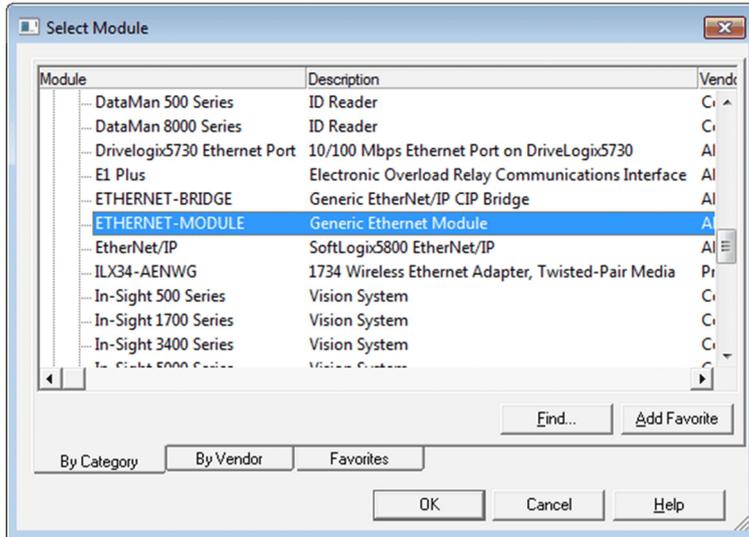

Select a Generic Ethernet Module and enter the following information:

- Name: **ATV**
- IP address: **192.168.0.5**
- Input assembly instance: **101**, size: **32 words**
- Output assembly instance: **100**, size: **32 words**
- Configuration instance: **6**

**Result:** Following window is displayed:

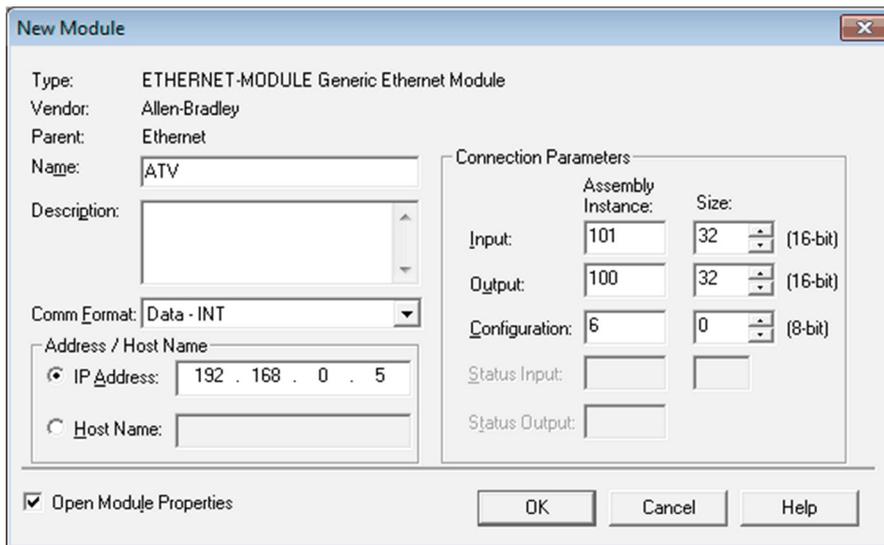


Connect online to the PLC, download the program and run it.

## Explicit Data Exchange

It is possible to verify that explicit data exchange is working by clicking on **Controller Tags**.

The values are refreshed and drive can be controlled

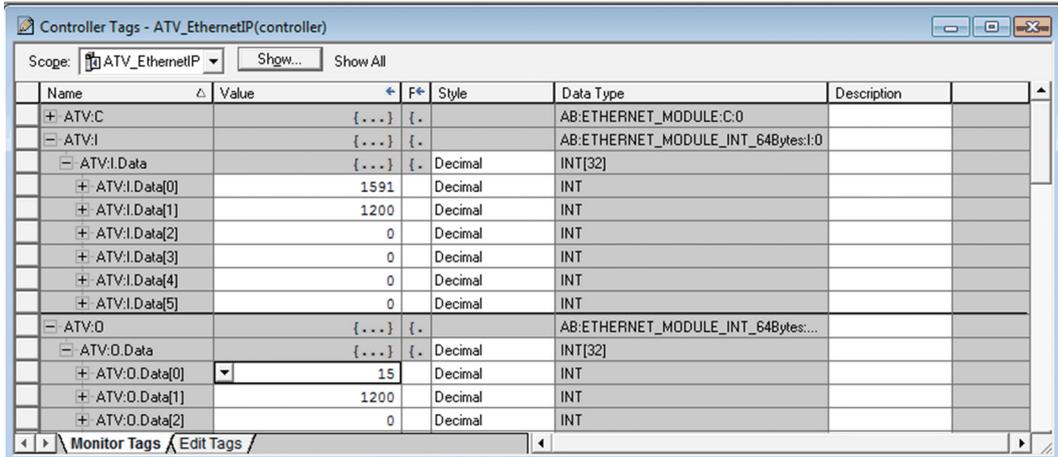

Name	Value	Style	Data Type	Description
ATV:C	{...}	{.}	AB:ETHERNET_MODULE:C:0	
ATV:I	{...}	{.}	AB:ETHERNET_MODULE_INT_64Bytes:1:0	
ATV:I.Data	{...}	{.}	Decimal	INT[32]
ATV:I.Data[0]	1591	Decimal	INT	
ATV:I.Data[1]	1200	Decimal	INT	
ATV:I.Data[2]	0	Decimal	INT	
ATV:I.Data[3]	0	Decimal	INT	
ATV:I.Data[4]	0	Decimal	INT	
ATV:I.Data[5]	0	Decimal	INT	
ATV:O	{...}	{.}	AB:ETHERNET_MODULE_INT_64Bytes:...	
ATV:O.Data	{...}	{.}	Decimal	INT[32]
ATV:O.Data[0]	15	Decimal	INT	
ATV:O.Data[1]	1200	Decimal	INT	
ATV:O.Data[2]	0	Decimal	INT	

## Implicit Data Exchange

To configure the implicit data exchange, insert a MSG block inside a routine.

The following procedure describe how to read and write the value of parameter *R C C*.

- Create a Routine and do the following program:




The Read Boolean will trigger the Read\_Function to read the *R C C* parameter.

The Write Boolean will trigger the Write\_Function to write the *R C C* parameter.


**Configuration of Read\_Function:**

- Click on the "..." button of Read\_Function block and do the following configuration:
  - On the Configuration tab:
    - Enter the CIP address of *R C C* parameter: 16#8E/1/2.
    - The value of the parameter will be stored in the variable Read\_ACC.

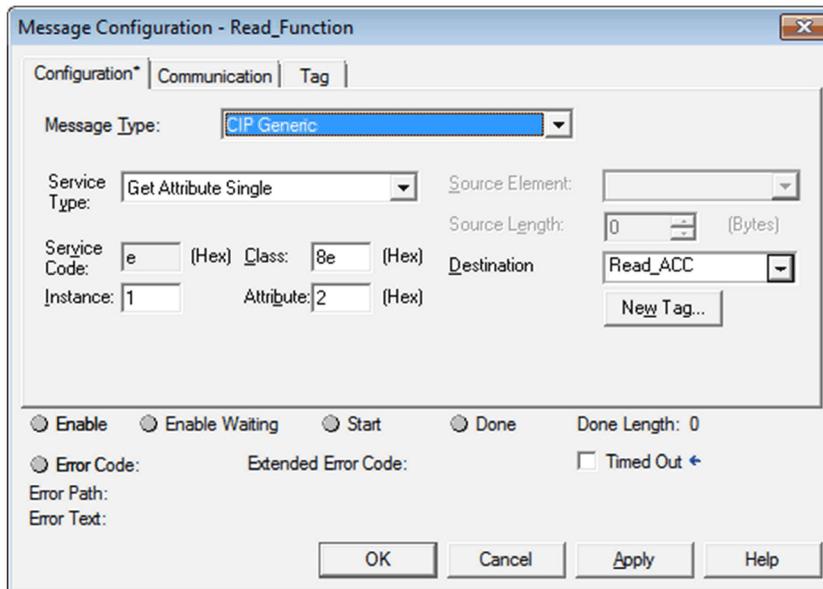


On the Communication tab:

- Configure the Path of the device by clicking on **Browse** button.

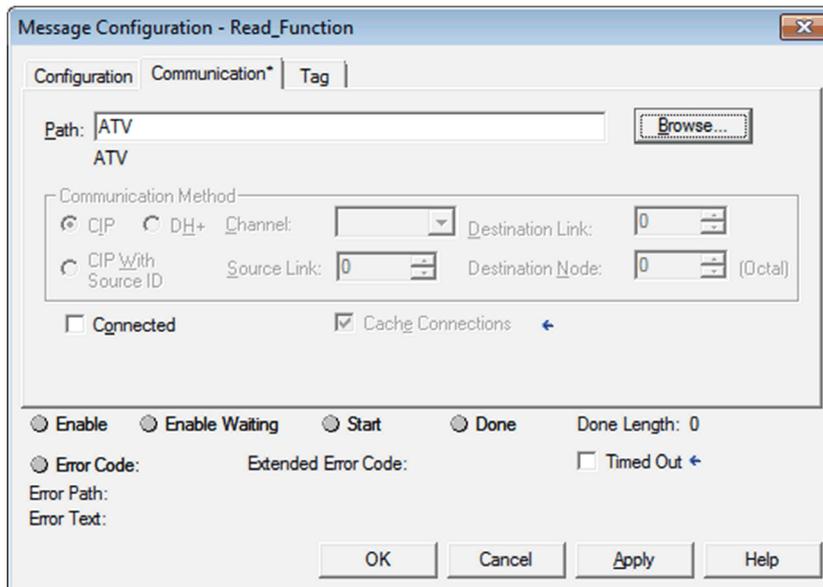


**Configuration of Write\_Function:**

- Click on the "..." button of Write\_Function block and do the following configuration:
  - On the Configuration tab:
    - Enter the CIP address of **RCC** parameter: 16#8E/1/2.
    - Enter the variable where the value to write will be stored (here: ACC\_to\_Write)

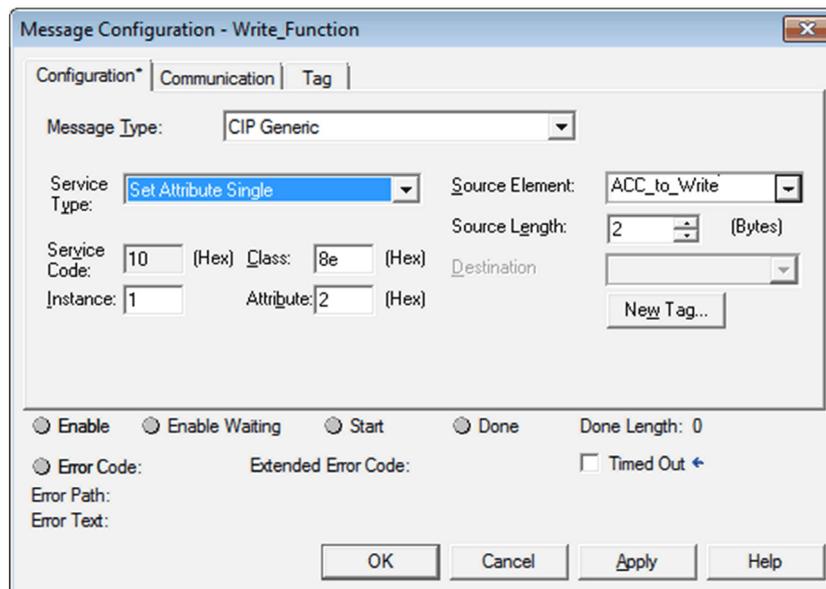

On the Communication tab:

- Configure the Path of the device by clicking on **Browse** button.

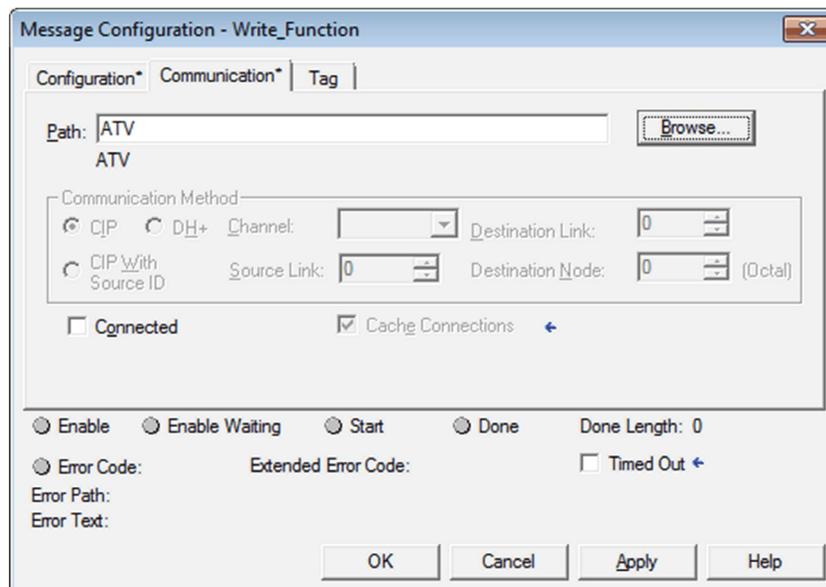

It is possible to read or write the *ACC* parameter by toggling the Read or Write bits.

Name	Value	Style	Data Type	Description
+ ATV:C	{...}	{.}	AB:ETHERNET_MODULE:C:0	
+ ATV:I	{...}	{.}	AB:ETHERNET_MODULE_INT_64Bytes:I:0	
+ ATV:O	{...}	{.}	AB:ETHERNET_MODULE_INT_64Bytes:...	
+ Read_ACC	300	Decimal	INT	
+ Read_Function	{...}	{.}	MESSAGE	
+ Write_Function	{...}	{.}	MESSAGE	
+ ACC_to_Write	300	Decimal	INT	
read	0	Decimal	BOOL	
write	0	Decimal	BOOL	



---

# Chapter 5

## Operations

---

### What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
5.1	Operating States	136
5.2	Operating Modes	138

## Section 5.1 Operating States

### Configuring Communication Error Response

#### Description

The response of the drive in the event of an Ethernet communication interruption can be configured. Configuration can be performed using the display terminal from the **[Complete settings] C 5 E -**, **[Error/Warning handling] C 5 W Π -** menu, **[Embedded modbus TCP] E Π E C -** via the **[Eth Error Response] E E H L** parameter.

The values of the **[Eth Error Response] E E H L** parameter, which triggers a transition to the operating state fault are:

Value	Meaning
<b>[Freewheel Stop] ʒ E 5</b>	Freewheel stop (factory setting)
<b>[Ramp stop] r Π P</b>	Stop on ramp
<b>[Fast stop] ? F 5 E</b>	Fast stop
<b>[DC injection] d C ,</b>	DC injection stop

The values of the **[Eth Error Response] E E H L** parameter, which does not trigger a transition to the operating state fault are:

Value	Meaning
<b>[Ignore] n a</b>	Detected error ignored
<b>[Per STT] 5 E E</b>	Stop according to configuration of <b>[Type of stop] 5 E E</b>
<b>[Fallback Speed] L F F</b>	Reference frequency modified to fallback speed, maintained as long as the detected error persists and the run command has not been removed
<b>[Speed maintained] r L 5</b>	The drive maintains the speed at the time the detected error occurred, as long as the detected error persists, and the run command has not been removed

The fallback speed can be configured in the **[Complete settings] C 5 E -**, **[Error/Warning handling] C 5 W Π -** menu, **[Fallback speed] L F F -** submenu, using the **[FallbackSpeed] L F F** parameter.

### **WARNING**

#### **LOSS OF CONTROL**

If this parameter is set to **n a**, Ethernet communication monitoring is disabled.

- Only use this setting after a thorough risk assessment in compliance with all regulations and standards that apply to the device and to the application.
- Only use this setting for tests during commissioning.
- Verify that communication monitoring has been re-enabled before completing the commissioning procedure and performing the final commissioning test.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

## Error Code

Parameter	Description	Possible Values	Terminal Display
Written to the device	This parameter is used to indicate that fieldbus error has been detected. When the detected error is active, the value corresponds to the cause of the error. When the cause of the error is no longer active, the value is reset to 0.	1: Modbus TCP timeout	[1] /
	–	1: Invalid IP address 2: Duplicate IP address	[1] / [2] 2
[FDR 1 Error] <i>F d r 1</i>	This parameter is used to indicate that an error has been detected during FDR procedure. Details about this error are provided using FDR0 parameter.	0: No error 1: Server timeout 2: No file on server 3: Corrupted file on server 4: Empty file on server 5: Invalid file on drive 6: CRC error 7: Version incompatibility between drive and file. 9: No file on drive 10: File size reading error on server 11: Drive cannot open the file 12: Drive cannot read the file 13: File incompatibility 14: Drive name is invalid 15: Incorrect file size on server 16: Drive cannot write the file 17: Server cannot write the file	[No error] [Server Timeout] [Server No File] [Server Corrupt File] [Server Empty File] [Drive Invalid File] [CRC Error] [Version Incompatibility]  [Drive No File] [Server Reading Size] [Drive Opening File] [Drive Reading File] [Incompatibility] [Drive Invalid Name] [Server Incorrect File Size] [Drive Writing File] [Server Writing File]

---

## Section 5.2

### Operating Modes

---

#### What Is in This Section?

This section contains the following topics:

Topic	Page
Configuring the Control Channel	139
Configuration of the Drive for Operation in I/O Profile	139
Configuration of the Drive for Operation with CiA 402 Profile in Combined Mode	140
Configuration of the Drive for Operation with CiA 402 Profile in Separate Mode	141

## Configuring the Control Channel

### Overview


This chapter explains how to configure the drive for operation from the communication network through three following examples.

- I/O mode - a simple command word (based on forward, reverse, and reset binary commands).
- Combined mode (with native profile CiA 402) - Both reference value and command word come from the communication network.
- Separate (with native profile CiA 402) - reference value and command word come from separate sources: for example, the command word (in CiA 402) comes from the communication network and the reference value from the HMI.

## Configuration of the Drive for Operation in I/O Profile

### Description

For the I/O profile, here is a simple example, which can be extended with additional features. The command word is made of run forward (bit 0 of CMD), run reverse (bit 1 of CMD), and the function fault reset (bit 7 of CMD). Reference frequency is given by analog input 1.

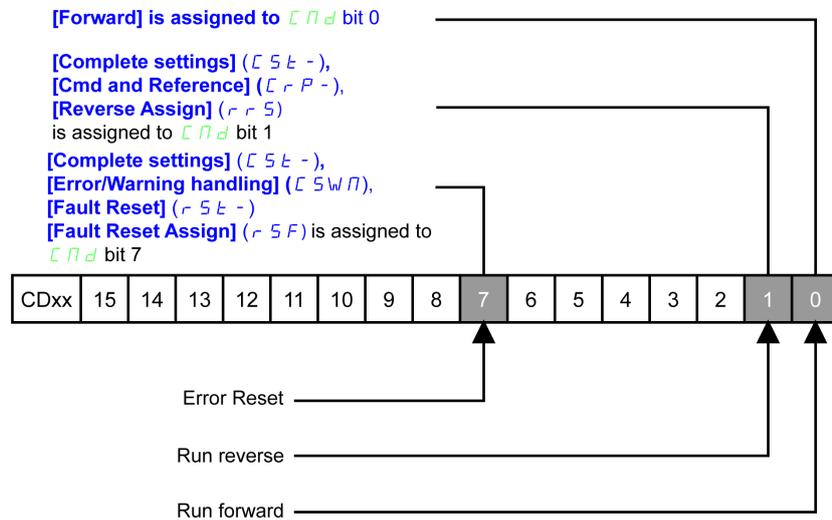

The settings are the following:

[Ref Freq 1 Config] F r I	[AI1] A 1 I
[Control Mode] C H C F	[I/O profile] I O
[Command switching] C C S	[Cmd Channel 1] C d I
[Cmd channel 1] C d I	[Ethernet] E t H

The bits of the command word can now be configured.

In the [Command and Reference] CRP - menu configure:

[Reverse Assign] r r S	[CD01] C d D 1
------------------------	----------------

In the [Error/Warning handling] CSWP - menu, [Fault Reset] RSE - ?submenu, configure:

[Fault Reset Assign] r S F	[CD07] C d D 7
----------------------------	----------------

## Configuration of the Drive for Operation with CiA 402 Profile in Combined Mode

### Description

This section describes how to configure the settings of the drive if it is controlled in CiA 402 mode. The example focuses on the not separate mode. Additional modes are detailed in the drive programming manual.

In the **[Complete settings] C 5 E - ?** menu, **[Command and reference] C r P -** submenu

- **[Ref Freq Channel 1] F r 1**: is set on according to the communication source you can choose in the following table:

Origin of the Control	Ref1 Channel Setting
Ethernet embedded	<b>[Embedded Ethernet] E E H</b>

- **[Freq Switch Assign] r F C** is set to default value (**[Ref Freq Channel 1] F r 1**).
- **[Control Mode] C H C F**: defines if the drive operates in combined mode (reference and command from the same channel).

For the current example, **[Control Mode] C H C F** is adjusted to **[Not separ.] 5 , 11** as reference and control are originated from the communication network.

Profile	Ref1 Channel setting
CiA 402 combined mode	<b>[Not separ.] 5 , 11</b>
CiA 402 separate mode	<b>[Separate] 5 E P</b>
I/O profile	<b>[I/O profile] , 0</b>

## Configuration of the Drive for Operation with CiA 402 Profile in Separate Mode

### Description

Alternate combinations are possible, see the drive programming manual for the list of possible settings.  
For example:



The drive is controlled from the communication but the frequency reference value is adjusted with analog input 1. The control word comes from the controller and is written according to CiA 402 profile.

The settings are as shown in the table:

[Ref Freq 1 Config] <i>F r I</i>	[AI1] <i>R , I</i>
[Control Mode] <i>L H C F</i>	[Separate] <i>S E P</i>
[Cmd channel 1] <i>L d I</i>	[Ethernet] <i>E t H</i>
[Freq Switch Assign] <i>r F C</i>	[Ref Freq Channel 1] <i>F r I</i>



---

# Chapter 6

## Diagnostic and Troubleshooting

---

### What Is in This Chapter?


This chapter contains the following topics:

Topic	Page
Fieldbus Status LEDs	144
Connection for Fieldbus Mode	146
Fieldbus Functions Test	147
Control-Signal Diagnostics	149

## Fieldbus Status LEDs

### LED Indicators

The following figure describes the LEDs status for fieldbus monitoring:

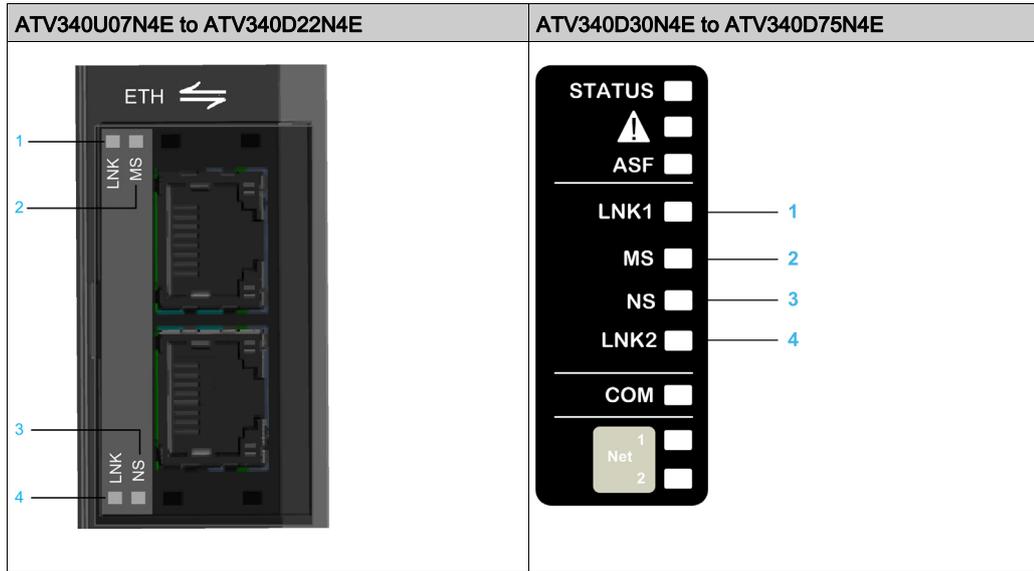

### LED Description

Item	LED	Description
1	LNK1	Indicates port A activity.
2	MS	Indicates status.
3	NS	Indicates network status.
4	LNK2	Indicates port B activity.

### LNK1 and LNK2

These LEDs indicate the status of the Ethernet adapter ports:

Color & status	Description
OFF	No link
Blinking Green/Yellow	Power on testing
Green ON	Link established at 100 Mbit/s
Yellow ON	Link established at 10 Mbit/s
Blinking Green	Fieldbus activity at 100 Mbit/s
Blinking Yellow	Fieldbus activity at 10 Mbit/s

### NS: Network Status

This LED indicates the status of the fieldbus


Color & status	Description
OFF	The device does not have an IP address or powered off
Blinking Green/Red	Power on testing
Green ON	A connection is established to control the command word.
Blinking Green	Device has a valid IP, but no command word connection.
Red ON	Duplicated IP
Blinking Red	An established connection to control the command word is closed or timed out

**MS: Module Status**

This LED indicates the status of the adapter

Color & status	Description
OFF	No power is supplied to the device
Blinking Green/Red	Power on testing
Green ON	The device is operating correctly.
Blinking Green	Device has not been configured.
Blinking red	The device has detected a recoverable minor detected error.
Red ON	The device has detected a non-recoverable major detected error.

**LED Behavior**

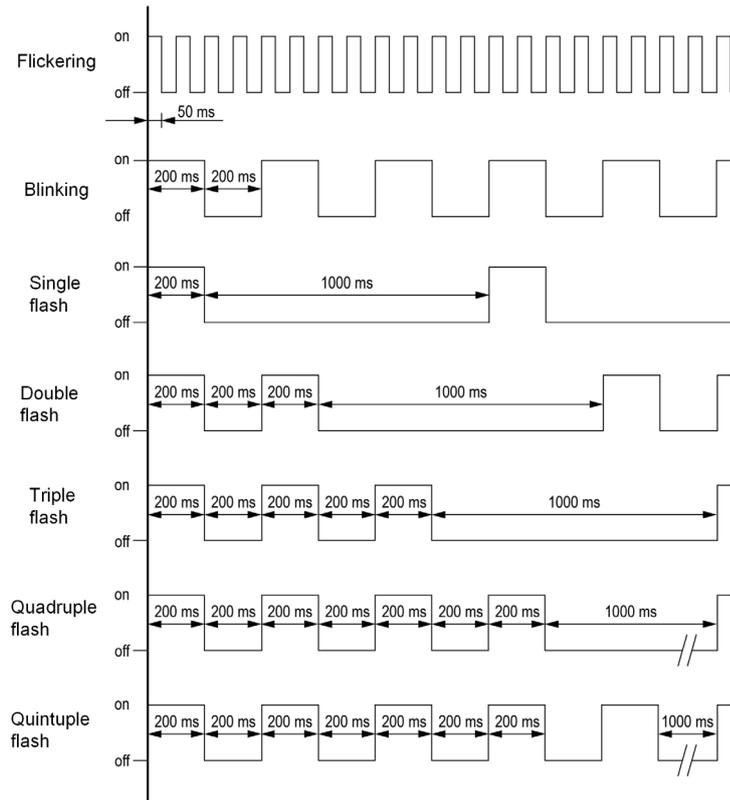

## Connection for Fieldbus Mode

### Description

If the product cannot be addressed via the fieldbus, first check the connections. The product manuals contains the technical data of the device and information on fieldbus and device installation.

Verify the following:

- Power connections to the device
- Fieldbus cable and fieldbus wiring
- Fieldbus connection to the device

## Fieldbus Functions Test

### Channels for Commands and Reference Values

All the drive commands and reference value parameters are managed on a channel-by-channel basis.

Parameter Name	Parameter Code				
	Taken Into Account by the Drive	Modbus Serial	CANopen	Fieldbus Module	Ethernet Embedded
Control word	<i>CNd</i>	<i>CNd1</i>	<i>CNd2</i>	<i>CNd3</i>	<i>CNd5</i>
Extended control word	<i>CNi</i>	<i>CNi1</i>	<i>CNi2</i>	<i>CNi3</i>	<i>CNi5</i>
Reference speed (rpm)	<i>LFr d</i>	<i>LFr d1</i>	<i>LFr d2</i>	<i>LFr d3</i>	<i>LFr d5</i>
Reference frequency (0.1 Hz)	<i>LFr</i>	<i>LFr1</i>	<i>LFr2</i>	<i>LFr3</i>	<i>LFr5</i>
Reference value for torque control mode (0.1% of the nominal torque) <sup>(1)</sup>	<i>Ltr</i>	<i>Ltr1</i>	<i>Ltr2</i>	<i>Ltr3</i>	<i>Ltr5</i>
Reference value supplied by PI controller	<i>PiSP</i>	<i>Pir1</i>	<i>Pir2</i>	<i>Pir3</i>	<i>Pir5</i>
Reference value supplied by analog multiplier function	<i>PFr</i>	<i>PFr1</i>	<i>PFr2</i>	<i>PFr3</i>	<i>PFr5</i>

(1): If available

### Fieldbus Monitoring Criteria

The fieldbus is monitored according to the protocol-specific criteria.

Protocol	Criteria	Related Detected Error
Ethernet Embedded	FDR detected error IP address duplication detected error Adjustable time-out for received control word (I/O scanning or messaging) Fieldbus overload	<b>[External Error] E P F 1</b> <b>[FDR 1 Error] F d r 1</b> <b>[Embd Eth Com Interrupt] E L H F</b>

### Monitoring of Communication Channels

Product software versions below or equal to V1.1IE03 do not provide a communication monitoring function to detect communication interruptions when function code 6 is used (write single register with messaging service).

Higher product software versions provide a communication monitoring function to help detect communication interruptions when function code 6 is used.

## ⚠ WARNING

### LOSS OF CONTROL

- Do not use function code 6 (write single register) to control the drive with product software versions up to V1.1IE03.
- If your product software version is below or equal to V1.1IE03 and your PLC supports only function code 6, contact your local Schneider Electric sales office to update the firmware of your product.

**Failure to follow these instructions can result in death, serious injury, or equipment damage.**

If the drive is in remote mode and the **[Sercos Com Phase] 5 3 P H** has reached the communication phase **[CP4] C P 4**, the communication channels are monitored.

**NOTE:** Separate mode (reference value and command word come from separate sources) must not be used with Sercos III.

Refer to the manual of the PLC for information on selecting function codes.

Communication channels are monitored if they are involved in one of the following parameters:

- The control word (**[Cmd Register] L P d**) from the active command channel
- The control word containing the command switch (bit configured on **[Cmd switching] L L 5**)
- The control word containing the switch for reference value 1'1B (bit configured on **[Ref 1B switching] r L b**)
- The control word containing the switch for reference value 1'2 (bit configured on **[Freq Switch Assign] r F C**)
- The reference frequency or reference speed (**[Ref Frequency] L F r** or LFRD: Nominal speed value) from the active channel for reference value
- Summing reference frequency or reference speed (**[Ref Frequency] L F r** or LFRD: Nominal speed value) 2 (assigned to **[Summing Input 2] S A 2**)
- Summing reference frequency or reference speed (**[Ref Frequency] L F r** or LFRD: Nominal speed value) 3 (assigned to **[Summing Input 3] S A 3**)
- Subtracting reference frequency or reference speed (**[Ref Frequency] L F r** or LFRD: Nominal speed value) 2 (assigned to **[Subtract Ref Freq 2] d A 2**)
- Subtracting reference frequency or reference speed (**[Ref Frequency] L F r** or LFRD: Nominal speed value) 3 (assigned to **[Subtract Ref Freq 3] d A 3**)
- The reference value given by the PID controller (PISP)
- The PID controller feedback (**[AI Virtual 1] A I u l**)
- The multiplication coefficient of the reference values (**[Multiplying coeff.] P F r**) 2 (assigned to **[Ref Freq 2 Multiply] P A 2**)
- The multiplication coefficient of the reference values (**[Multiplying coeff.] P F r**) 3 (assigned to **[Ref Freq 3 Multiply] P A 3**)

As soon as one of these parameters has been written once to a communication channel, it activates monitoring for that channel.

If a communication warning is sent (in accordance with the protocol criteria) by a monitored port or fieldbus module, the drive triggers a communication interruption.

The drive reacts according to the communication interruption configuration (operating state Fault, maintenance, fallback, and so on)

If a communication warning occurs on a channel that is not being monitored, the drive does not trigger a communication interruption.

### Enabling of Communication Channels

A communication channel is enabled once all the parameters involved have been written at least one time. The drive is only able to start if all channels involved in command and reference value are enabled.

For example:

A drive in DSP402 profile is connected to an active communication channel.

It is mandatory to write at least 1 time the reference value and the command in order to switch from 4-Switched on to 5-Operation enabled state.

A communication channel is disabled:

- In the event of a communication warning.
- In forced local mode.
  - NOTE:** On exiting forced local mode:
    - The drive copies the run commands, the direction, and the forced local reference value to the active channel (maintained).
    - Monitoring of the active channels for the command and reference value resumes following a time delay **[Time-out forc. local] F L o t**.
    - Drive control only takes effect once the drive has received the reference and the command from the active channels.

## Control-Signal Diagnostics

### Introduction

On the display terminal, the **[Display] P o n -**, **[Communication map] C P P -** submenu can be used to display control-signal diagnostic information between the drive and the controller:

- Active command channel **[Command Channel] C P d C**
- Value of the control word **[Cmd Register] C P d** from the active command channel **[Command Channel] C P d C**
- Active reference frequency channel **[Ref Freq Channel] r F C C**
- Value of the reference frequency **[Pre-Ramp Ref Freq] F r H** from the active target channel **[Ref Freq Channel] r F C C**
- Value of the operating state word **[CIA402 State Reg] E L H**
- Specific data for all available fieldbuses are in dedicated submenus.
- In the **[Command word image] C W i -** submenu: control words from all channels
- In the **[Freq. ref. word map] r W i -** submenu: reference frequency values produced by all channels

### Control Word Display

The **[Command Channel] C P d C** parameter indicates the active command channel.

The **[Cmd Register] C P d** parameter indicates the hexadecimal value of the control word (CMD) used to control the drive.

The **[Command word image] C W i -** submenu (**[Ethernet Emdbd cmd.] C P d 5**) parameter is used to display the hexadecimal value of the control word from the fieldbus .

### Reference Frequency Display

The **[Ref Freq Channel] r F C C** parameter indicates the active channel for reference frequency.

The **[Ref Frequency] L F r** parameter indicates the value (in 0.1 Hz units) of the reference frequency used to control the drive.

The **[Freq. ref. word map] r W i -** submenu (**[Ethernet Emdbd Ref Freq] L F r 5**) parameter is used to display the value (in 0.1 Hz units) of the reference frequency from the fieldbus.

### Operating State Word Display

The **[CIA402 State Reg] E L H** parameter gives the value of the operating state word (ETA).

This parameter is the internal state of the drive.

The table provides the bit details of **E L H** parameter for CiA402:

Bit	Description
DRIVECOM	Status word
Bit0 = 1	Ready to switch on
Bit1 = 1	Switched on
Bit2 = 1	Operation enabled
Bit3 = 1	Operating state fault
Bit4 = 1	Power stage is switched on
Bit5 = 0	Quick stop
Bit6 = 1	Switch on disabled
Bit7 = 1	Warning
Bit8 = 1	Drivecom reserved
Bit9 = 0	Forced local mode in progress
Bit10 = 1	Reference value reached (steady state)
Bit11 = 1	Reference value exceeded (< LSP or > HSP)
Bit12	Reserved
Bit13	Reserved
Bit14 = 1	Stop imposed via <b>STOP</b> key
Bit15 = 0	Motor rotation in forward direction (or stopped)





## A

### Abbreviations

Req. = Required

Opt. = Optional

## C

### CAN

Controller Area Network is an internally standardized serial bus system

### COB

Communication Object. A unit of transportation in a CAN network. Data must be sent across a CAN Network inside a COB. There are 2048 different COB's in a CAN network. A COB can contain at most 8 bytes of data.

### COB ID

Each COB is uniquely identified in a CAN network by a number called the COB Identifier (COB-ID).

### CPx

CP0 up to CP4: Sercos III Communication phases

## D

### DP

Decentralized Periphery

### DPWS

Device Profile for Web Service

## E

### Error

Discrepancy between a detected (computed, measured, or signaled) value or condition and the specified or theoretically correct value or condition.

## F

### Factory setting

Default configuration of the product.

### Fault

Fault is an operating state. If the monitoring functions detect an error, a transition to this operating state is triggered, depending on the error class. A "Fault reset" is required to exit this operating state after the cause of the detected error has been removed. Further information can be found in the pertinent standards such as IEC 61800-7, ODVA Common Industrial Protocol (CIP).

### Fault Reset

A function used to restore the drive to an operational state after a detected error is cleared by removing the cause of the error so that the error is no longer active.

## L

### LSB

Least Significant Byte

**M****MEI**

Modbus Encapsulated Interface

**Monitoring function**

Monitoring functions acquire a value continuously or cyclically (for example, by measuring) in order to check whether it is within permissible limits. Monitoring functions are used for error detection.

**MS0, MS1**

Number of a master in the network.

**MSB**

Most Significant Byte

**N****NMT**

Network Management. One of the service elements of the application layer in the CAN Reference Model. The NMT serves to configure, initialize, and handle detected errors in a CAN network.

**P****Parameter**

Device data and values that can be read and set (to a certain extent) by the user.

**PDO**

Process Data Object

**PELV**

Protective Extra Low Voltage, low voltage with isolation. For more information: IEC 60364-4-41

**PLC**

Programmable logic controller

**PNO**

PROFIBUS Nutzerorganisation e.V. (PROFIBUS User organization).

**Power stage**

The power stage controls the motor. The power stage generates current for controlling the motor.

**Q****QoS**

Quality of Service

**Quick Stop**

The quick Stop function can be used for fast deceleration of a movement as a response to a detected error or via a command.

**R****R/WS**

Read and write (write only possible when the drive is not in RUN mode). It is not possible to write these parameters in "5-Operation enabled" or "6-Quick stop active" states. If the parameter is written in the "4-Switched on" state, transition to "2-Switch on disabled" is activated.

**RPDO**

Receive PDO

**S****SNMP**

Simple Network Management Protocol

**SNTP**

Simple Network Time Protocol

---

**SYNC**

Synchronization Object

**T****TPDO**

Transmit PDO

**V****VSD**

Variable Speed Drive

**W****Warning**

If the term is used outside the context of safety instructions, a warning alerts to a potential problem that was detected by a monitoring function. A warning does not cause a transition of the operating state.

**Z****Zone of operation**

This term is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.





