

Easergy T200 – Option alimentation auxiliaire 24V/48V

Raccordement de l'option alimentation auxiliaire 24V/48V


Le T200 offre la possibilité d'alimenter des équipements auxiliaires en 24V ou 48V continu à condition que la puissance d'alimentation de ces équipements n'excède pas 25 W.

Cette option est généralement installée en usine si commandée avec l'équipement.


Si cette option doit être ajoutée ultérieurement sur un coffret existant, il convient d'effectuer les opérations suivantes :

- **Pour le T200E** : Installer les éléments de l'option fournis à l'intérieur du coffret sur le rail DIN se trouvant sous le rack.
- **Pour le T200I** : Installer les éléments de l'option fournis à l'intérieur du coffret sur la plaque ajourée se trouvant sur la droite du rack.
- Raccorder le connecteur 4 points mâle fourni avec l'option alimentation auxiliaire, sur le connecteur 4 points femelle correspondant sur la droite du rack.
- Enlever le connecteur des entrées digitales se trouvant actuellement sur la carte interface et le remplacer par le connecteur 12 points livré avec l'option alimentation auxiliaire.


Consulter la notice d'utilisation du T200 I/T200E (NT00114-FR-EN-ES) pour les consignes d'utilisation de cette option.

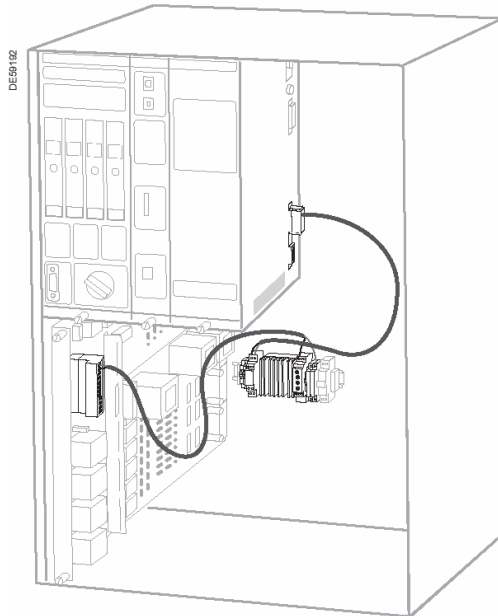

T200E Série 3

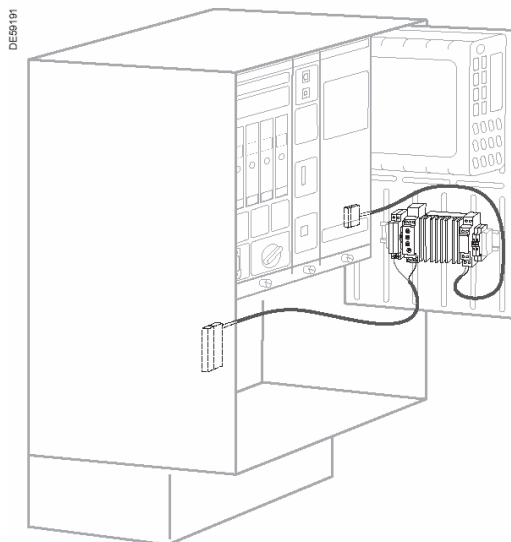

T200I Série 3

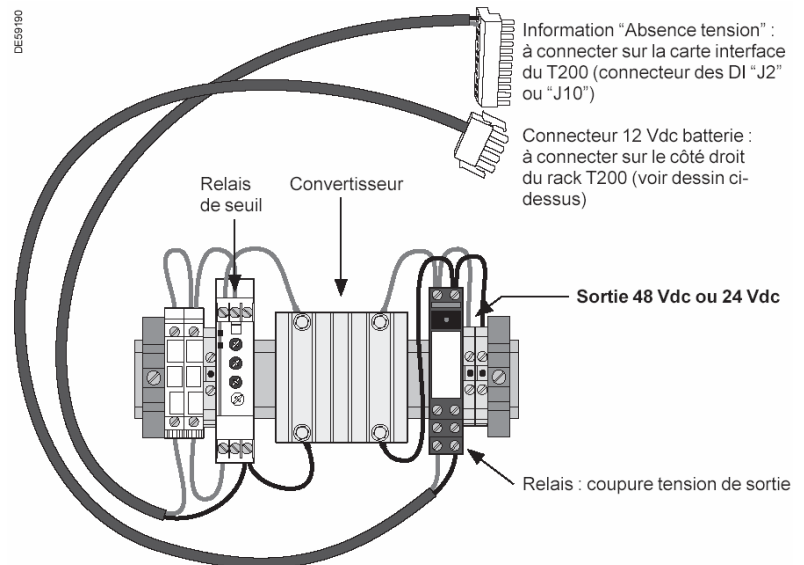

Schneider Electric Industries SAS

Schneider Electric Telecontrol
839 chemin des Batterses
Z.I. Ouest
01700 St Maurice de Beynost
Tel : +33 (0)4 78 55 13 13
Fax : +33 (0)4 78 55 50 00
<http://www.schneider-electric.com>
E-mail : telecontrol@schneider-electric.com

En raison de l'évolution des normes et du matériel, les caractéristiques indiquées par les textes et les images de ce document ne nous engagent qu'après confirmation par nos services.

Easergy T200 – 24V/48V auxiliary power supply option


Connecting the 24 V/48 V auxiliary power supply option

The T200 offers the possibility of supplying auxiliaries with 24V or 48Vdc provided that the supply power of these devices does not exceed 25 W. This option is generally factory installed if ordered with the equipment.


If this option has to be added later to an existing enclosure, proceed as follows:

- **For T200E** : Install the elements for the option inside the enclosure on the perforated plate on the right-hand side of the rack.
- **For T200I** : Install the elements for the option inside the enclosure on the DIN rail located under the rack.
- Connect the male 4-point connector supplied with the auxiliary power supply option to the female 4-point connector on the right-hand side of the rack.
- Remove the digital input connector currently located on the interface card and replace it with the 12-point connector supplied with the auxiliary power supply option.


See the T200 I/T200E user's manual (NT00114-FR-EN-ES) for instructions on the use of this option.

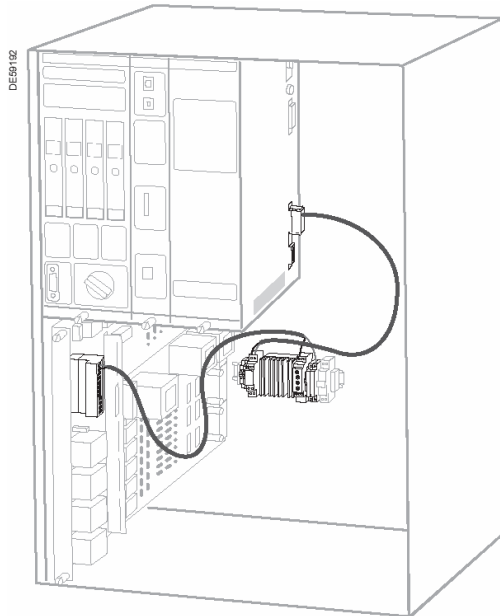

T200E Series 3

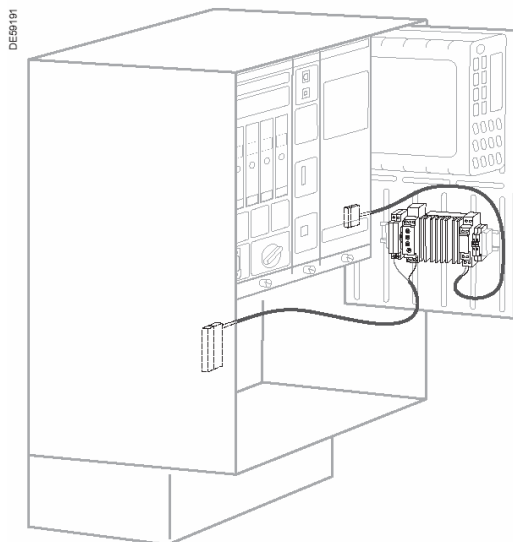

T200I Series 3

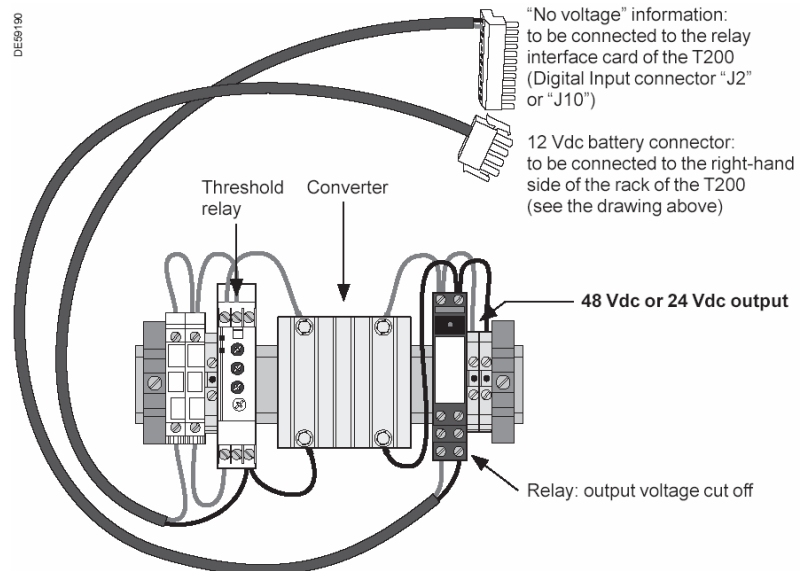

Schneider Electric Industries SAS

Schneider Electric Telecontrol
839 chemin des Batterses
Z.I. Ouest
01700 St Maurice de Beynost
Tel : +33 (0)4 78 55 13 13
Fax : +33 (0)4 78 55 50 00

<http://www.schneider-electric.com>
E-mail : telecontrol@schneider-electric.com

As standards, specifications and designs change from time to time, please ask for confirmation of the information given in this publication.