


**Class 9049 Type A52 Mounting Bracket Kit  
for Class 9013 Type GHG/GSG Pressure Switches**  
**INSTALLATION**

*NOTE: The bracket can be oriented with the angle up or down. Do not substitute screws that are longer than those supplied in this kit.*

1. Remove the four screws from the flange.
2. Install the bracket using the 8-32 x 7/16" screw assemblies supplied with this kit.
3. Torque the flange screws to 10–18 lb-in.



**SQUARE D**

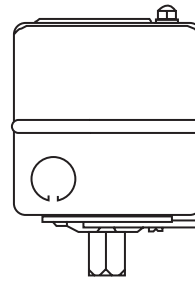

65013-003-84A