


AS/NZS3012 Compliant Tie Bar and Extension Lead Entry

230DRAQTP

Installation Instructions

CLIPSAL[®]

by **Schneider Electric**

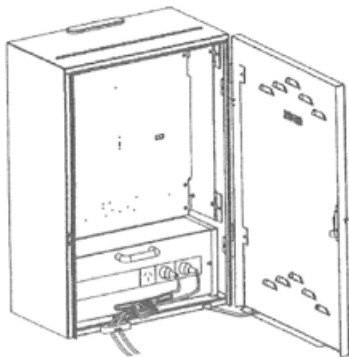

1. Pass leads through bottom cable protection opening and tie off before plugging into socket outlet.
2. Ensure door is closed after the installation.

Clipsal Australia Pty Ltd A member of Schneider Electric

Contact us: clipsal.com/feedback

National Customer Care Enquiries:

Tel 1300 2025 25 Fax 1300 2025 56

230DRAQTP

© Clipsal Australia Pty Ltd.

clipsal.com

CLIPCOM21200 July 2010