




Cat 903 Plug

SIDE ENTRY WITH HOOK GRIP

Recommended for use with 0.75mm² to 1.5mm²

PVC insulated ordinary duty 3 core circular flexible cords

STRIPPING
DETAIL
(FULL SIZE)

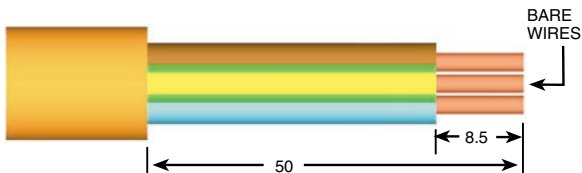

WIRING INSTRUCTIONS


1. Strip insulation as illustrated and twist bare conductor strands.
2. Connect the Earth wire (Green/Yellow or Green) to the terminal marked '⏏'.
3. Connect the Active (Live) wire (Brown or Red) to the terminal marked 'L'.
4. Connect the Neutral wire (Blue or Black) to the terminal marked 'N'.
5. Tighten cord clamp around outer sheath of flexible cord.
6. **Check the wires are in their correct position as illustrated and the terminal screws are tight.**
7. Put plug cover into place and ensure the fixing screws are fully tightened.

Note: Fit Adapter Piece (located between phase and neutral terminals) to cord clamp when using 2 core (0.75mm) flexible cord.

BROWN
(OR RED)
TO
TERMINAL
L

BLUE
(OR BLACK)
TO TERMINAL
N

⏏
GREEN TO
TERMINAL

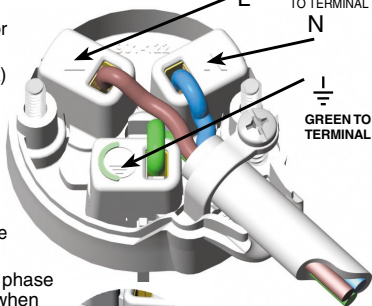

Configuration
for use with 2
core flex



PDL

New Zealand Head Office: PO Box 15 355, Auckland, New Zealand
Telephone +64-9-829 0490, Fax +64-9-829 0491
www.schneider-electric.co.nz

Australia Head Office: Locked Bag 5500, Baulkham Hills Business Centre,
NSW 2153, Australia
Telephone +61-2-9851 2800, Fax +61-2-9629 8340
www.schneider-electric.com.au

