


Suspension Switched Socket

SS15 Series

Installation Instructions

Recommended Flexible Cord Stripping Detail

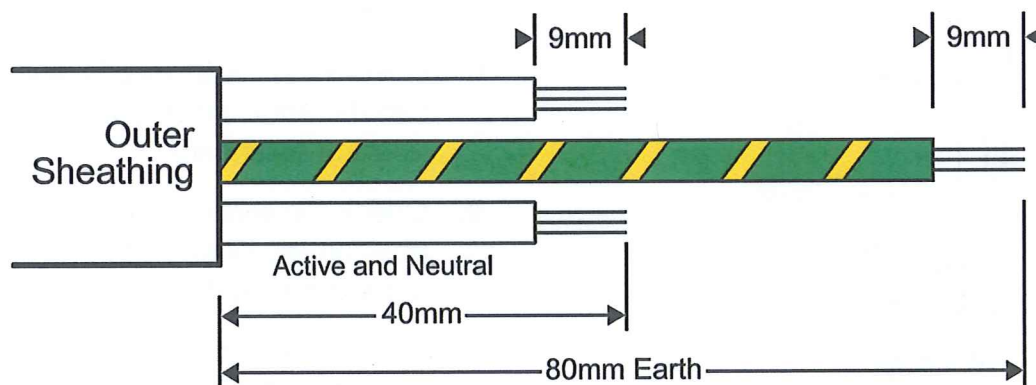


(Stripping lengths shown actual size in mm)

For easy access to Earth Terminal screw, unclip socket mechanism.

Recommended for up to 1.5mm² heavy duty three core flexible cord.

Wiring Instructions

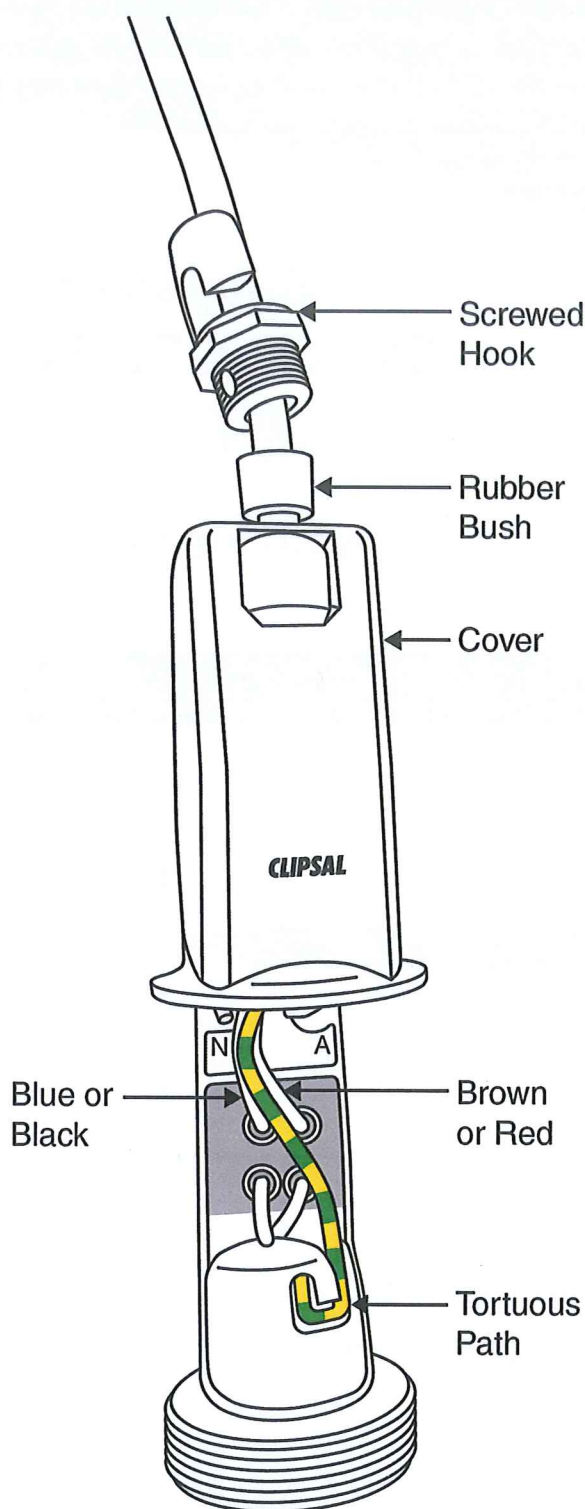

NOTE: Earth wire is connected directly to the socket and Active/Neutral are connected directly to the switch.

1. Strip cable insulation as illustrated above.
2. Pass cable through the screwed hook.
3. Pass cable through rubber bush.
4. Pass cable through cover.
5. Connect EARTH wire (Green/Yellow or Green) to the socket terminal marked 'E'.
6. Connect the Active wire (Brown or Red) to the switch terminal marked 'A'.
7. Connect the Neutral wire (Blue or Black) to the switch terminal marked 'N'.
8. Ensure the Earth wire is placed into the socket tortuous path position as shown.
9. Check the wires are in the correct position (as illustrated) and terminal screws are tight.
10. Slide cover into position, ensure outer sheath of cable overlaps the internal cover rib.
11. Clip cover to socket assembly and ensure fixing screws are fully tightened.
12. Slide rubber bush and screwed hook down cable and securely screw the hook fully into position.

Schneider Electric (Australia) Pty Ltd

Contact us: clipsal.com/feedback

National Customer Care Enquiries:

Tel 1300 2025 25

Fax 1300 2025 56

clipsal.com

Schneider Electric (Australia) Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© 2013 Schneider Electric. All Rights Reserved.
Trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.